KOBELCO

SHOP MANUAL

HYDRAULIC EXCAVATOR
OPTIONAL EQUIPMENT - NIBBLER AND BREAKER

SK200-3
SK200LC-3

S3YN7106-01 NA

Issued 02-1996

SK200-3 . . . . . YN023301~
SK200LC-3 . . . . . YQ002801~

MidWestTech | Kobelco SK200-3, SK200LC-3 Mounting Breaker & Nibbler Hydraulic Excavator Service Manual | Publication S3YN7106-01

Order the manual at mid-west-tech.com >

96.5.28

Book code No. S6YN1306E

KOBELCO

SHOP MANUAL

SK200V
SK200LCV

YN13

MOUNTING THE BREAKER AND NIBBLER & BREAKER

TABLE OF CONTENTS

1. SUMMARY
- 1.1 General Precautions 1
- 1.2 Basic Disposition to be Taken when Mounting ... 1
- 1.3 Laying of Piping 2
- 1.4 Modification Item 3
- 1.5 Follow the Precautions Below when Mounting Hoses, Piping, and Joints 4
- 1.6 Handling of the O ring Seal and Joint 4
- 1.7 Tightening the Torque of Joints and Hydraulic Hose 5
- 1.8 ORS blind plug (O ring seal type) 5

2. HYDRAULIC CIRCUIT DIAGRAM
- 2.1 Function 6
- 2.2 Hydraulic Components 12

3. MODIFICATION PROCEDURE BREAKER
- 3.1 Floor Mat 15
- 3.2 Modification of the Upper Frame 15
- 3.3 Hydraulic Piping for Upper (Breaker) 16
- 3.4 Remote Control Piping (Breaker) 19
- 3.5 Upper Harness Ass'y 22
- 3.6 Modification of the Attachments 23

4. MODIFICATION PROCEDURE FOR NIBBLER & BREAKER
- 4.1 Floor Mat 31
- 4.2 Modification of the Upper Frame 31
- 4.3 Install of the Valve (Nibbler & Breaker) 31
- 4.4 Hydraulic Piping for Upper (Nibbler & Breaker) 32
- 4.5 Remote Control Piping (Nibbler & Breaker) 38
- 4.6 Upper Harness Ass'y 43
- 4.7 Reinforcing the Arm and the Idler Link 44


5. REMINDERS ON THE USE OF BREAKERS
- 5.1 Changing Over the Selector Valve 55
- 5.2 Flushing Method 56
- 5.3 Replacing Hydraulic Oil and Return Filter 56
- 5.4 The Work Mode 57


6. PRECAUTIONS TO BE EXERCISED ON BREAKERS OF DIFFERENT MANUFACTURERS 58


7. REFERENCE 60


KOBE STEEL, LTD.

MidWestTech | Kobelco SK200-3, SK200LC-3 Mounting Breaker & Nibbler Hydraulic Excava... Order the manual at mid-west-tech.com >

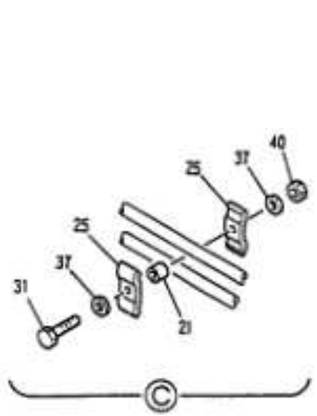


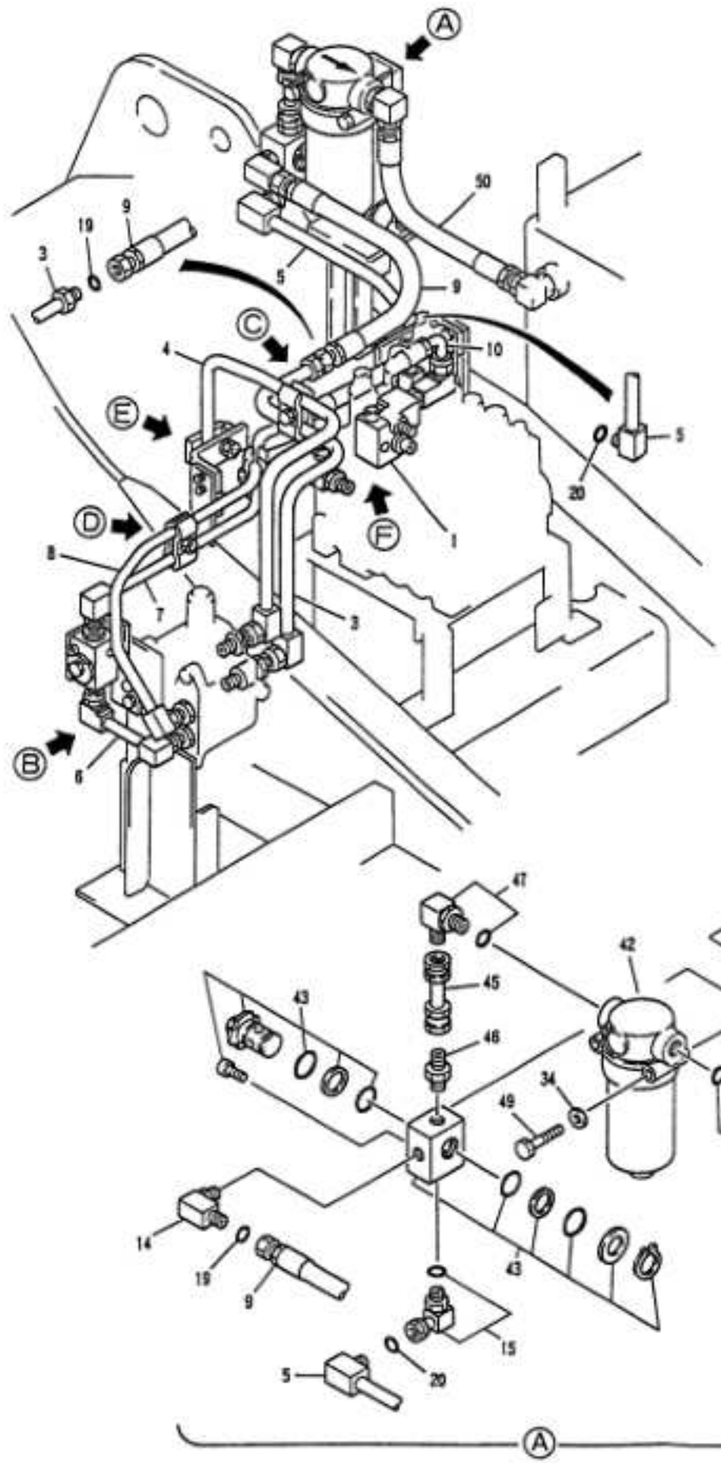

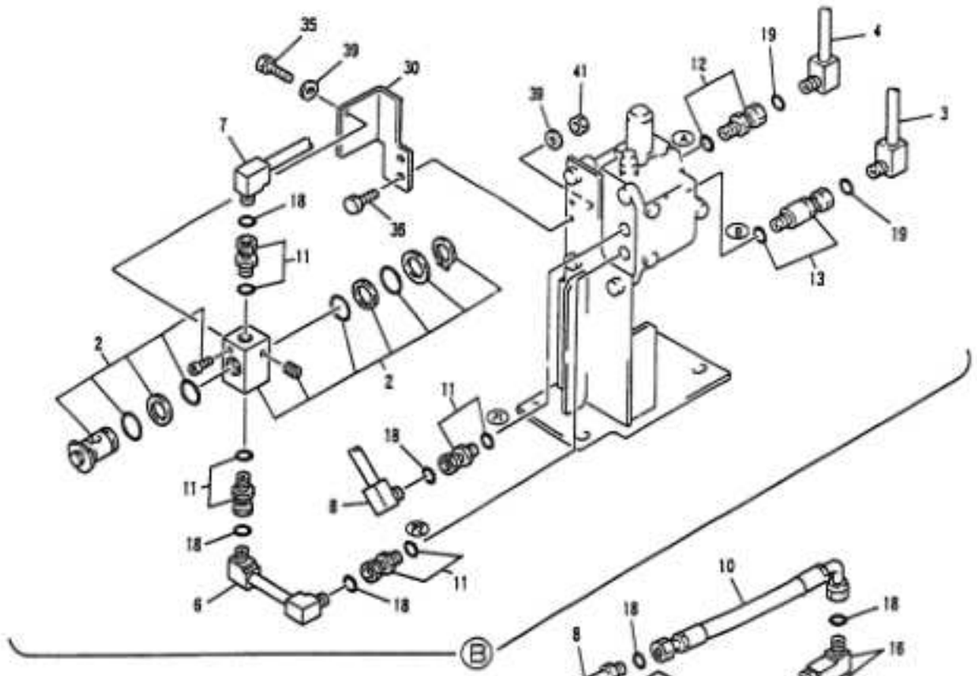

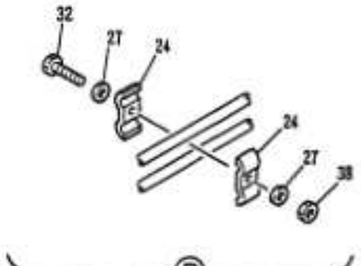

NOTE Tightening Torque for ORS Coupling Nuts		
Size	Spanner mm	Tightening torque kgf·m (ft·lbs)
1-14	30	14±1.4 (101±10)
	32	
1-3/16-12	36	18±1.8 (130±13)
	41	
1-7/16-12	41	21±2.1 (152±15)
	46	

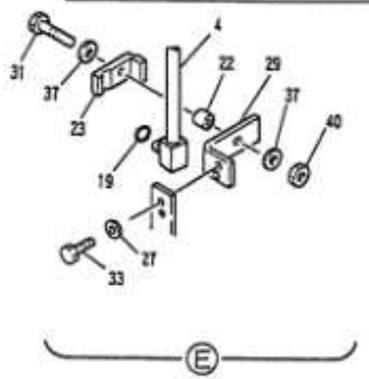



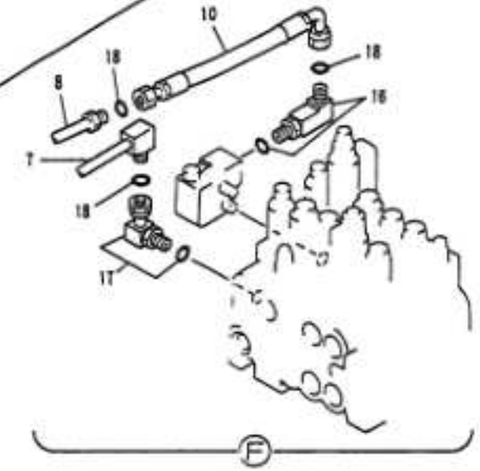


Fig. 33 Hydraulic piping for upper (Nibbler & Breaker)

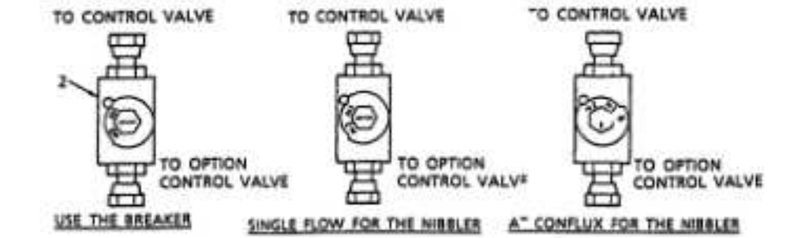

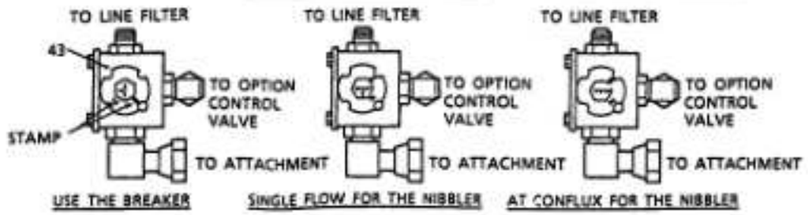

SELECTION VALVE SWITCHING POINTS

MidWestTech | Kobelco SK200-3, SK200LC-3 Mounting Breaker & Nibbler Hydraulic Excavator Service Manual | Publication S3YN7106-01

Order the manual at mid-west-tech.com >