Drott 35B, 40B, 50B Crawler Excavator

Service Manual

S406173M2

CASE CONSTRUCTION

MidWestTech | Case Drott 35B, 40B, 50B Crawler Excavator Service Manual | Publication S406173M2

Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

DROTT. CRAWLER

GENERAL

Table of Contents 1, 1A, 1B
Safety Precautions 2, 2A, 2B
Nomenclature 3
Introduction 4
Safety Symbols 4
Directional Reference 5
Parts and Service 5

SCHEDULED MAINTENANCE

Introduction 6
Cleaning Soundproofing Insulation 6
Spark Arrestors 6
Lubricant and Fluid Recommendations 6
Hydraulic Oil Recommendations 6
Component Lubricants and Fluid Specifications 7
Hydraulic System Operating Pressures 7
Preventive Maintenance Schedule 8, 9
Lubrication and Service Chart 10, 11
Pictorial Listing of Grease Fitting Locations 11, 12, 13
Itemized Maintenance Instructions
- Hydraulic Oil Filters 14, 15
- Hydraulic Reservoir 15-17
- Hydraulic Oil Filter Screen (in-tank) 17
- Swing Reduction Gearbox 17
- Final Drive Transmissions 17
- Turntable Open Gear 18
- Engine 18
- Engine Coolant 18
- Oil Cooler 18
- Batteries 18, 19
- Air Cleaner 19-21
- Fuel Tank 21

CRAWLER UNDERCARRIAGE

General Description 22
Frames 23
Track Shoes 23-25
Track Rollers 25, 26
Track Drive Motors 26
Track Drive Brake
- Adjustment 27
- Removal 27
- Disassembly 28
- Inspection and Repair 28
- Mounting Track Brake to Final Drive Transmission 28B, 28C

Final Drive Transmission
- Trouble Shooting 29
- Removal 29, 30
- Disassembly, Inspection and Re-assembly 30-46
- Disassembly, Inspection and Re-assembly (40LC only) 46A-46F
- Scheduled Maintenance (40LC only) 46F

MidWestTech | Case Drott 35B, 40B, 50B Crawler Excavator Service Manual | Publication... Order the manual at mid-west-tech.com >

CRAWLER UNDERCARRIAGE — Continued

Track Adjustment Cylinder 47, 48
Idler Wheel 48-50
Carbody and Carbody Leveler 50
Carbody Leveler Cylinder 50-52
Trouble Shooting - Tracks 52-53

UPPERSTRUCTURE

Replacing the Turntable Bearing 54
Removing the Upper 54
Checking Bearing Mounting Surface 54
Installing Bearing to Upper 54A
Installing Upper to Lower 54A
Torquing Procedure 54B, 54C
Turntable Bearing Noise 54D
Replacing Turntable on Machine without Machined Bearing Mounting Surface 54D
Swing Mechanism
Brake 59-61
Reduction Gearbox (2 piece output shaft) 61-65
Reduction Gearbox (1 piece output shaft) 65-72
Motor 72
Reduction Gearbox 72
Shimming the Gearbox 72
Disassembly and Repair 72A-72E
Installation 72E

HYDRAULIC SYSTEM AND COMPONENTS

Introduction to Hydraulics 73
Troubleshooting 73A, 73B
Flushing Procedure 73B, 73C
Basic System Flow Diagrams 74
Main Tandem Pump
Description 75
Checking Gallonage Output 76
Removal 76
Disassembly, Inspection and Reassembly for:
Main Pump (used on 35 Crawlers 76-86
Main Pump (used on 40 and 50 Crawlers) 86-98
Swing Motors 99
Installation of Pump Drive 99A
Pump Breakin Procedure 99B
Track Drive Motor (40BLC and 50LC)
Removal and Repair 99B-99F
Clam Rotary Actuator (270°) 99F-99H
Hydraulic Swivel 100-105
Valve Banks
Description 106
Removal 106
Power Beyond Plug 106A
Deviation of Valve Body 106A
Series Spool - Seal Replacement 107, 108
Parallel Spool - Seal Replacement 109, 110

MidWestTech | Case Drott 35B, 40B, 50B Crawler Excavator Service Manual | Publication... Order the manual at mid-west-tech.com >

HYDRAULIC SYSTEM AND COMPONENTS — Continued
Valve Banks — Continued
Main Relief Valve 110, 111
Relief Cartridge in Leveler Valve 111A
Disassembly of Main Relief 111A-113
Port Relief Valve 113-116
Swing Cross-Over Relief Valve 116-118
Track Brake Valve 118
Check Valves 119-121
Flow Regulators 121
Hydraulic Cylinders 122-127E
Trouble Shooting Guides 128-134
Oil Flow Diagrams for:
Tool Cylinder Circuit 135
Crowd Cylinder Circuit 136
Hoist Cylinder Circuit 137
Leveler Cylinder Circuit 138
Swing Circuit 139
Track Drive Circuit 140
Track Brake and Drain Circuit 141
Feller/Buncher Circuit 141A
Feller/Buncher Collector Circuit 141B

ELECTRICAL
General Description 142
Battery Care 142-145
General Trouble Shooting 145,145A
Trouble Shooting Guide 146-148

LOGGER
General Description 149
Feller/Buncher Maintenance 150, 151
Feller/Buncher Collector 152, 153
Rotary Cutter ..... 154 - 177

MISCELLANEOUS
Torque Charts 178, 179
Hydraulic Schematic 180, 181, 182
Electrical Schematic 183

MidWestTech | Case Drott 35B, 40B, 50B Crawler Excavator Service Manual | Publication... Order the manual at mid-west-tech.com >

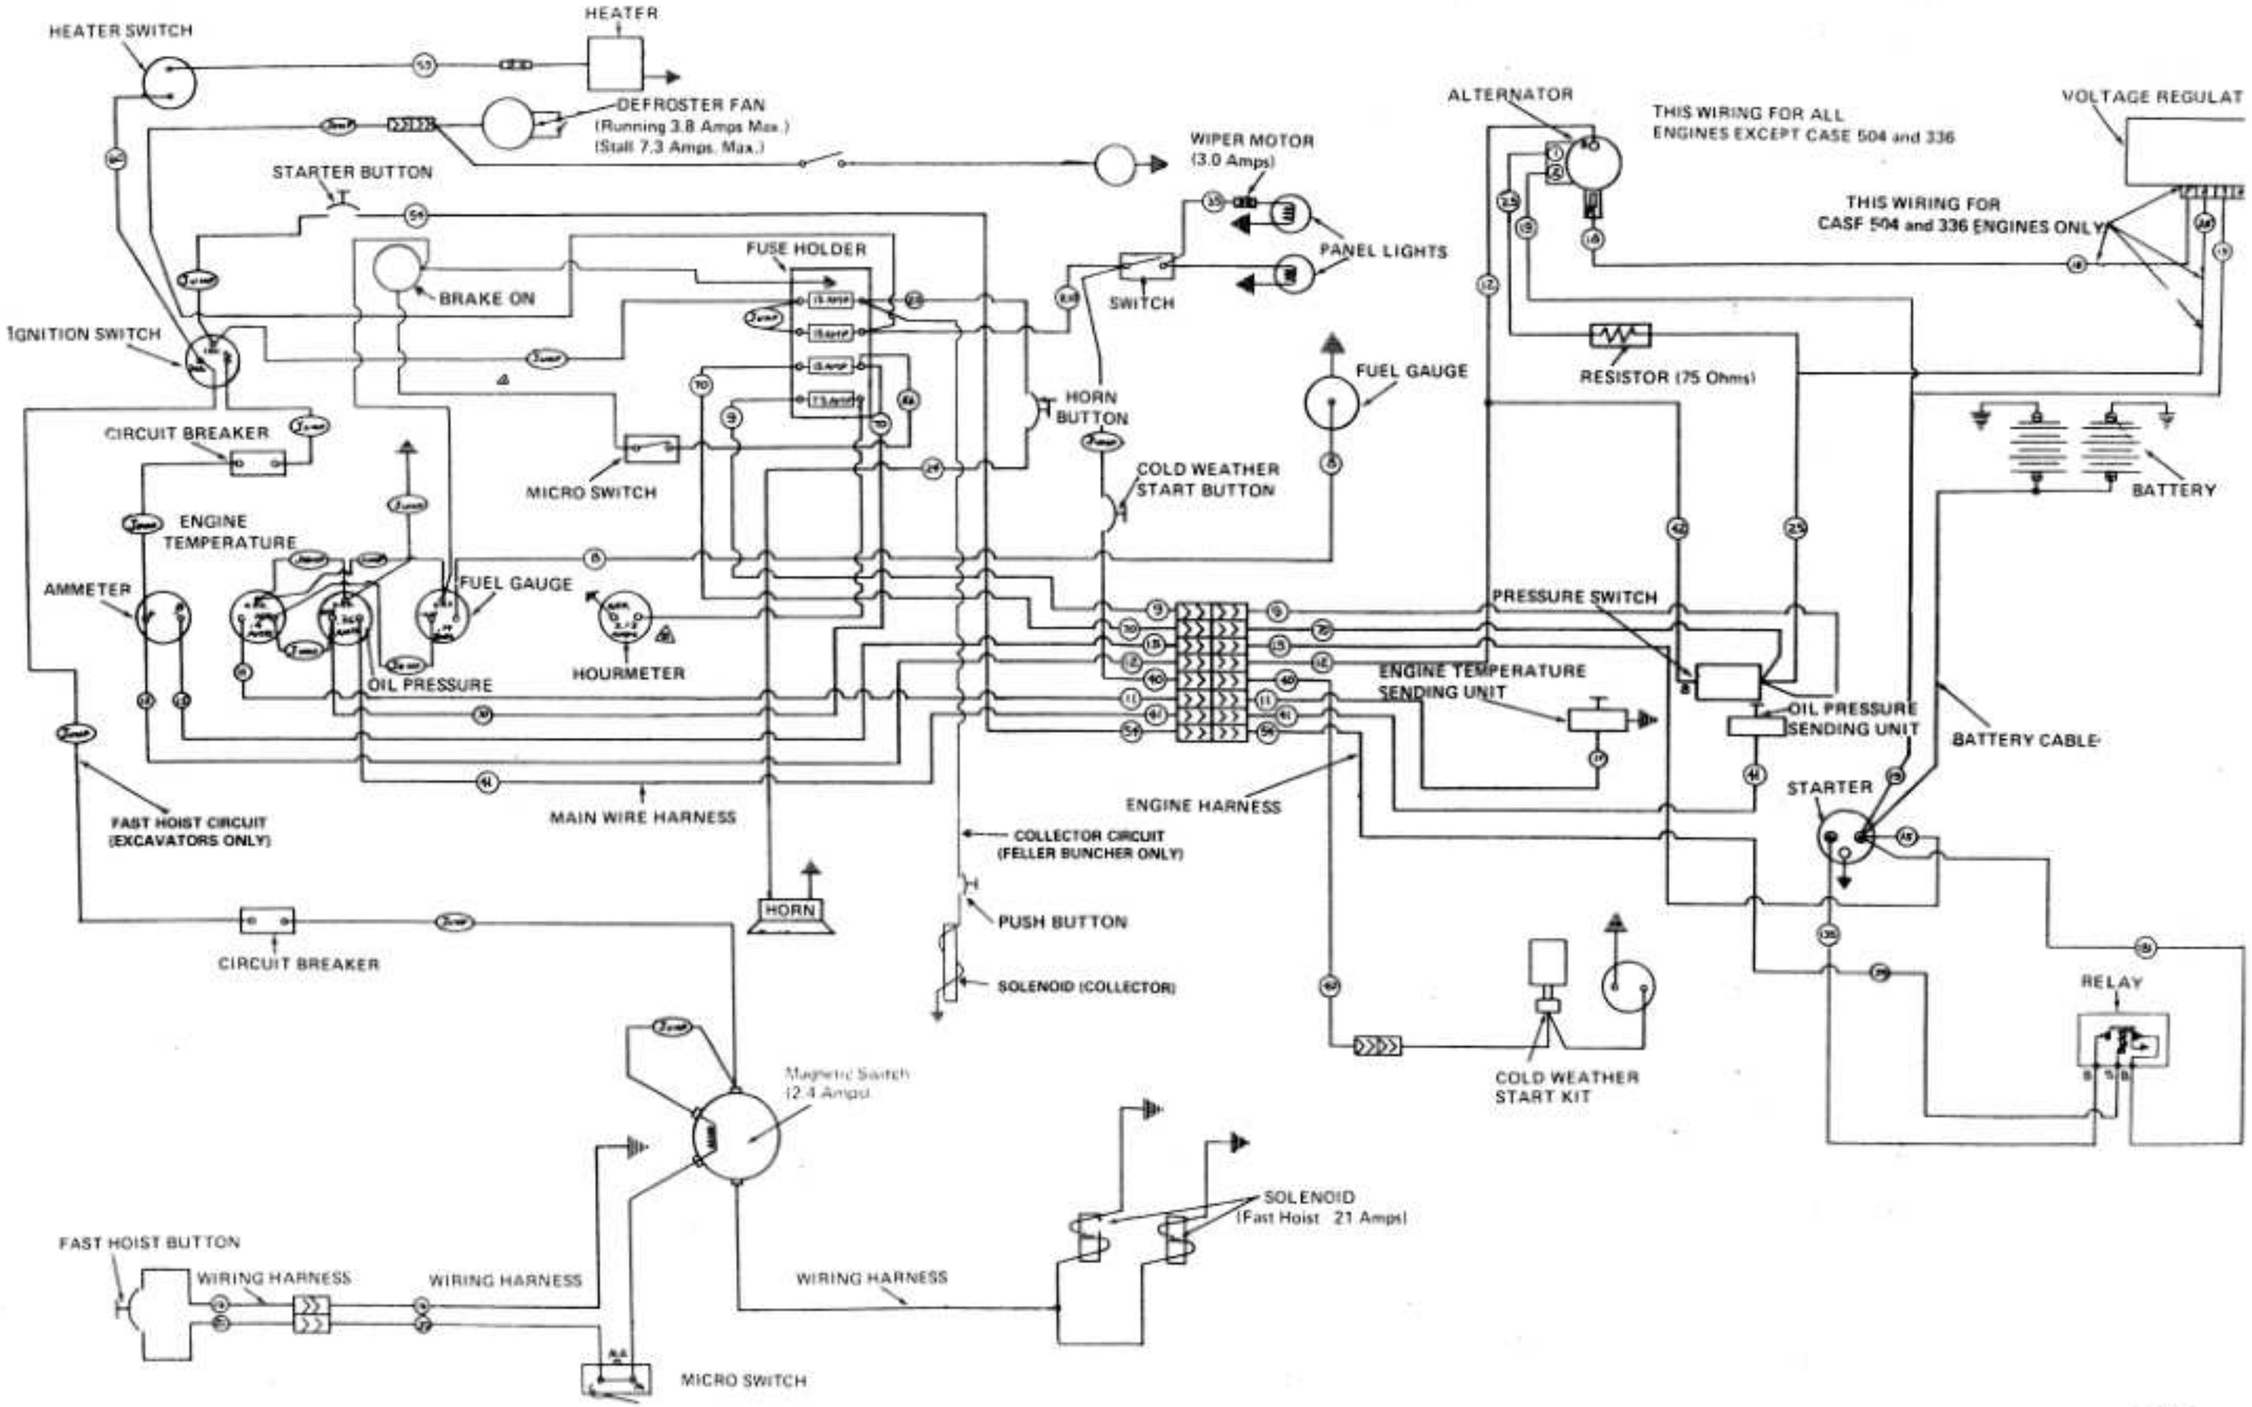


Figure 271. Electrical Schematic

MidWestTech | Case Drott 35B, 40B, 50B Crawler Excavator Service Manual | Publication S406173M2

Order the manual at mid-west-tech.com >