Drott 40 Cruz-Air Series "B" Crawler Excavator

Service Manual

S406179M1

CASE CONSTRUCTION

MidWestTech | Case Drott 40B Cruz-Air Crawler Excavator Service Manual | Publication S406179m1

Order the manual at mid-west-tech.com >

CONTENTS

GENERAL

Safety Precautions 3
Nomenclature 4
Introduction 5
Directional Reference 6
Parts and Service 6

SECTION 1 – SCHEDULED PREVENTIVE MAINTENANCE

Introduction 7
Lubricant and Fluid Recommendations 8
Component Capacities 8
Hydraulic System Operating Pressures 8
Preventive Maintenance Schedule 9
Service Chart . . . . . 10 thru 12
Pictorial Listing of Lubrication Fittings 13,14

SECTION 2 – THE MECHANICAL SYSTEM

Description, Maintenance and Troubleshooting . . . . . 15 thru 41
Engine maintenance 15
Engine Cooling System 15,16
Engine Air Cleaner 16,17
Engine Performance 18
Throttle Linkage . . . . . 18 thru 20
Torque Converter and Forward-Reverse Unit . . . . . 21 thru 28
Drop Box Transmission . . . . . 28 thru 30
Axles . . . . . 31 thru 36
Turntable Swing . . . . . 37 thru 40
Booms and Attachments 41
Disassembly and Repair . . . . . 42 thru 94
General Cleaning Instructions 42
Accelerator Master Cylinder 43
Accelerator Slave Cylinder 44
Torque Converter and Revers-O-Matic . . . . . 44 thru 53
Drop Box Transmission . . . . . 53 thru 59
Single Reduction Drives (Differentials) . . . . . 59 thru 66
Planetary Hubs . . . . . 66 thru 71
Brakes 72,73
Drive Shafts 74,75
House Brake 75,76
Swing Gearbox . . . . . 76 thru 84
Turntable Bearing Replacement . . . . . 84 thru 89
Center Swivel 89,90
Boom and Attachments . . . . . 91 thru 94

SECTION 3 – THE AIR SYSTEM

Description, Maintenance and Troubleshooting . . . . . 95 thru 102
Disassembly and Repair of System Components . . . . . 103 thru 112

MidWestTech | Case Drott 40B Cruz-Air Crawler Excavator Service Manual | Publication S... Order the manual at mid-west-tech.com >

CONTENTS

SECTION 4 – THE ELECTRICAL SYSTEM

Description, Maintenance and Troubleshooting . . . . . 113 thru 126
- Introduction 113,114
- The Charging Circuit . . . . . 114 thru 118
- Control Circuits . . . . . 118 thru 123
- Lights and Instrument Circuits . . . . . 123 thru 125
- Collector Ring 125,126
- Disassembly and Repair of System Components 127,128

SECTION 5 – THE HYDRAULIC SYSTEM

Description, Maintenance and Troubleshooting . . . . . 129 thru 158
- Introduction 129,130
- Hydraulic System Scheduled Maintenance . . . . . 130 thru 132
- Hydraulic System Flushing Procedure 132,133
- Hydraulic System Troubleshooting Techniques 133,134
- Main Hydraulic System . . . . . 135 thru 144
- Power Steering System . . . . . 145 thru 148
- Outrigger Hydraulics 149, 150
- Swing Hydraulics . . . . . 151 thru 153
- Hoist Hydraulics 153,154
- Crowd Hydraulics 155
- Tool Hydraulics 156
- Auxiliary Hydraulics 157,158

Disassembly and Repair . . . . . 159 thru 185
- Main Pumps . . . . . 159 thru 165
- Main Control Valves . . . . . 166 thru 168
- Main Reliefs 169,170
- Swing Motor . . . . . 171 thru 173
- Swing Cushion Valve 173
- Steering Orbitrol 174,175
- Steering Reversal Valve 175
- Hydraulic Cylinders . . . . . 176 thru 180
- Hydraulic Swivel 181,182
- Clam Rotary Actuator . . . . . 183 thru 185

TORQUE CHARTS AND SCHEMATICS . . . . . 186 THRU 192

MidWestTech | Case Drott 40B Cruz-Air Crawler Excavator Service Manual | Publication S... Order the manual at mid-west-tech.com >

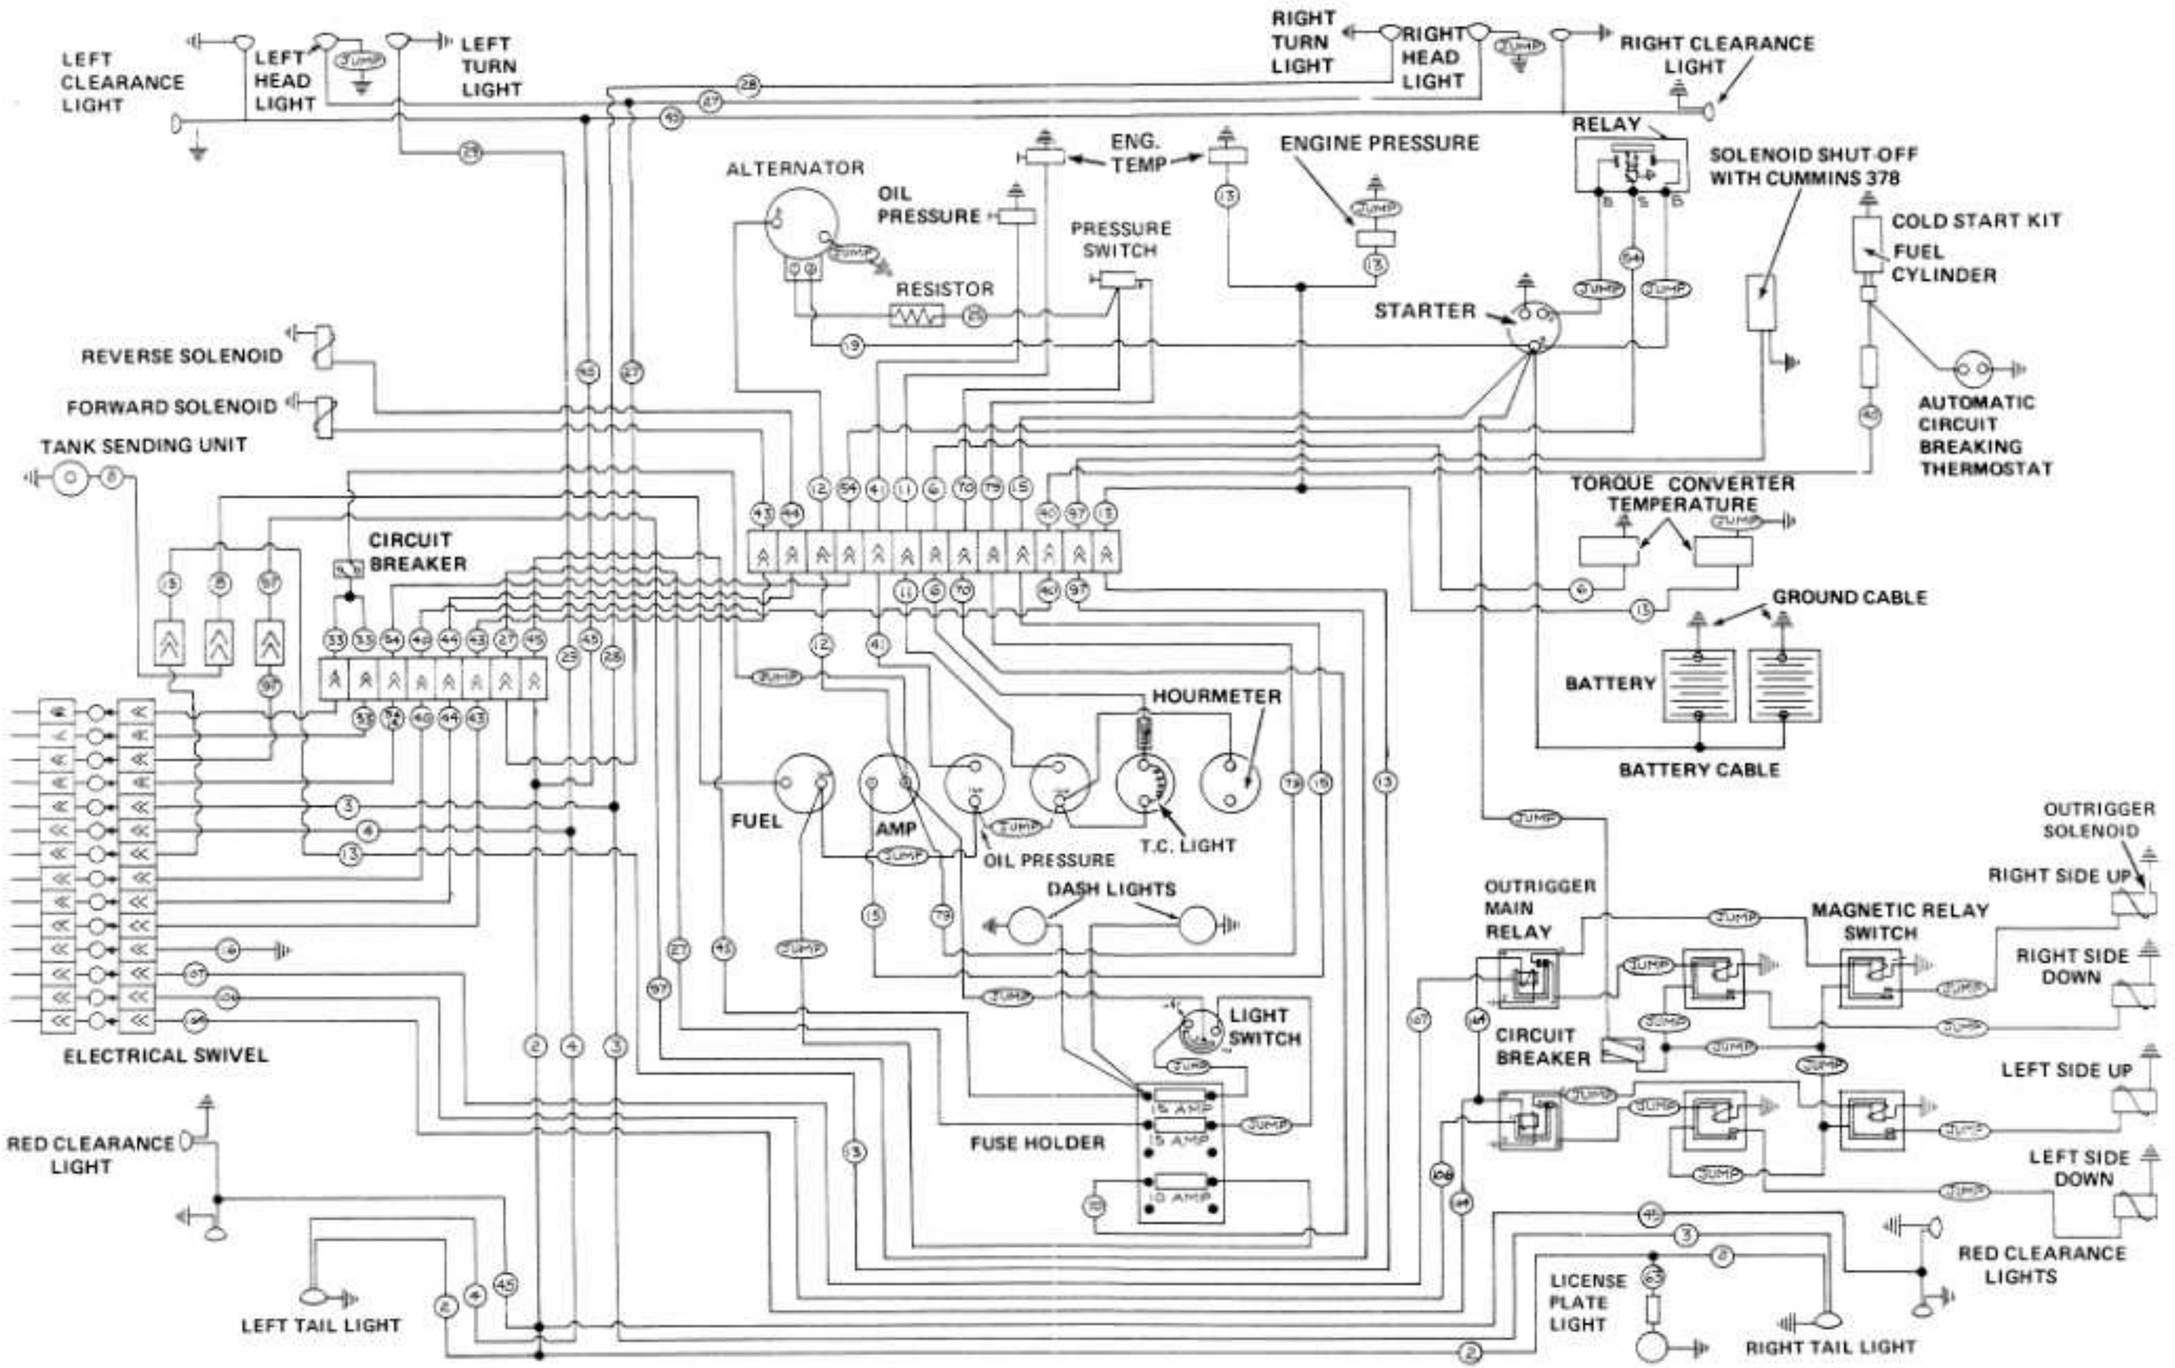


Figure 177. Electrical Schematic

MidWestTech | Case Drott 40B Cruz-Air Crawler Excavator Service Manual | Publication S406179m1

Order the manual at mid-west-tech.com >