85RM2
Carrydeck Crane

Service Manual

S406205M2

CASE CONSTRUCTION

Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

GENERAL . . . . . 1 thru 4
- Safety Precautions 3,4
- Nomenclature 5

SCHEDULED MAINTENANCE . . . . . 6 thru 9
- Hydraulic Oil Recommendations 6
- Maintenance Schedule 7
- Lubricants and Fluids 8
- Pictorial Listing of Grease Fittings 9

ENGINE 10,11
- Engine Performance Check 10
- Air Cleaner Maintenance 11

DRIVE TRAIN . . . . . 12 thru 63
- Forward and Reverse Transmission
  - Description and Operation 12,13
  - Maintenance 14
  - Trouble Shooting 15,16
  - Disassembly and Repair . . . . . 16 thru 25
- Three Speed Transmission
  - Description and Operation . . . . . 26 thru 28
  - Maintenance 28,29
  - Disassembly and Repair . . . . . 29 thru 44
- Torque Converter . . . . . 45 thru 47
- Trouble Analysis Charts . . . . . 47 thru 50
- Drive Shafts 51
- Drive Axle and Differential
  - Maintenance 51
  - Disassembly and Repair . . . . . 51 thru 57
  - NoSPIN Differential . . . . . 58 thru 61
- Drive Wheel Bearings 61,62
- Steering Axle Wheel Bearings 62,63

BRAKES . . . . . 64 thru 67
- General Description 64
- Brake Master Cylinder 64,65
- Bleeding Procedure 65
- Wheel Brakes . . . . . 65 thru 67
- Parking Brake 67

STEERING . . . . . 68 thru 70
- General Description 68
- Trouble Shooting 68,69
- Steering Actuator (Orbitrol) 69,70
- Steering Linkage 70
- Wheel Alignment 70

MidWestTech | Case 85RM2 Carrydeck Crane Service Manual | Publication S406205M2 Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

BOOM AND MAST . . . . . 71 thru 80
- Boom Maintenance 71
- Removal of Sequencing Boom and Crowd Cylinder . . . . . 71 thru 74
- Boom Disassembly and Repair 74,75
- Mast Bearing Removal 76
- Swing Mechanism . . . . . 76 thru 78
- Winch Assembly 78,79
- Winch Cable Maintenance and Replacement 80
- Two-Blocking Damage Preventive Feature (optional) 80A
- Weigh Load Device (optional) . . . . . 80B thru 80D

HYDRAULIC SYSTEM AND COMPONENTS . . . . . 81 thru 122
- Introduction 81
- Maintenance 82,83
- Main Hydraulic Pump . . . . . 84 thru 92
- Swing and Winch Motors . . . . . 93 thru 99B
- Auxiliary Winch Motor 99B
- Main Control Valves
  - Description and Operation 100,101
  - Maintenance 101,102
  - Checking Main Relief Settings 102,103
  - Disassembly and Repair 103,104
- Hydraulic Cylinders
  - General Trouble Shooting 104-105
  - Crowd Cylinder . . . . . 105 thru 108
  - Lift Cylinder . . . . . 108 thru 110
  - Outrigger Cylinders 110
  - Steering Cylinder . . . . . 110 thru 112
- Hydraulic Swivel . . . . . 112 thru 116
- Hoist and Crowd Counterbalance Valves 117
- Hydraulic System Trouble Shooting . . . . . 118 thru 122

ELECTRICAL . . . . . 123 thru 129
- Introduction 123,124
- Electrical Circuit Protection 124
- Charging System . . . . . 124 thru 127
- Control Circuits 128
- Lights and Instrumentation Circuits 128
- Troubleshooting 128,129

CHARTS & SCHEMATICS . . . . . 130 thru 134
- Torque Value Charts 130,131
- Hydraulic Schematic 132
- Electrical Schematic (Gas Engine) 133
- Electrical Schematic (Diesel Engine) 134

MidWestTech | Case 85RM2 Carrydeck Crane Service Manual | Publication S406205M2 Order the manual at mid-west-tech.com >

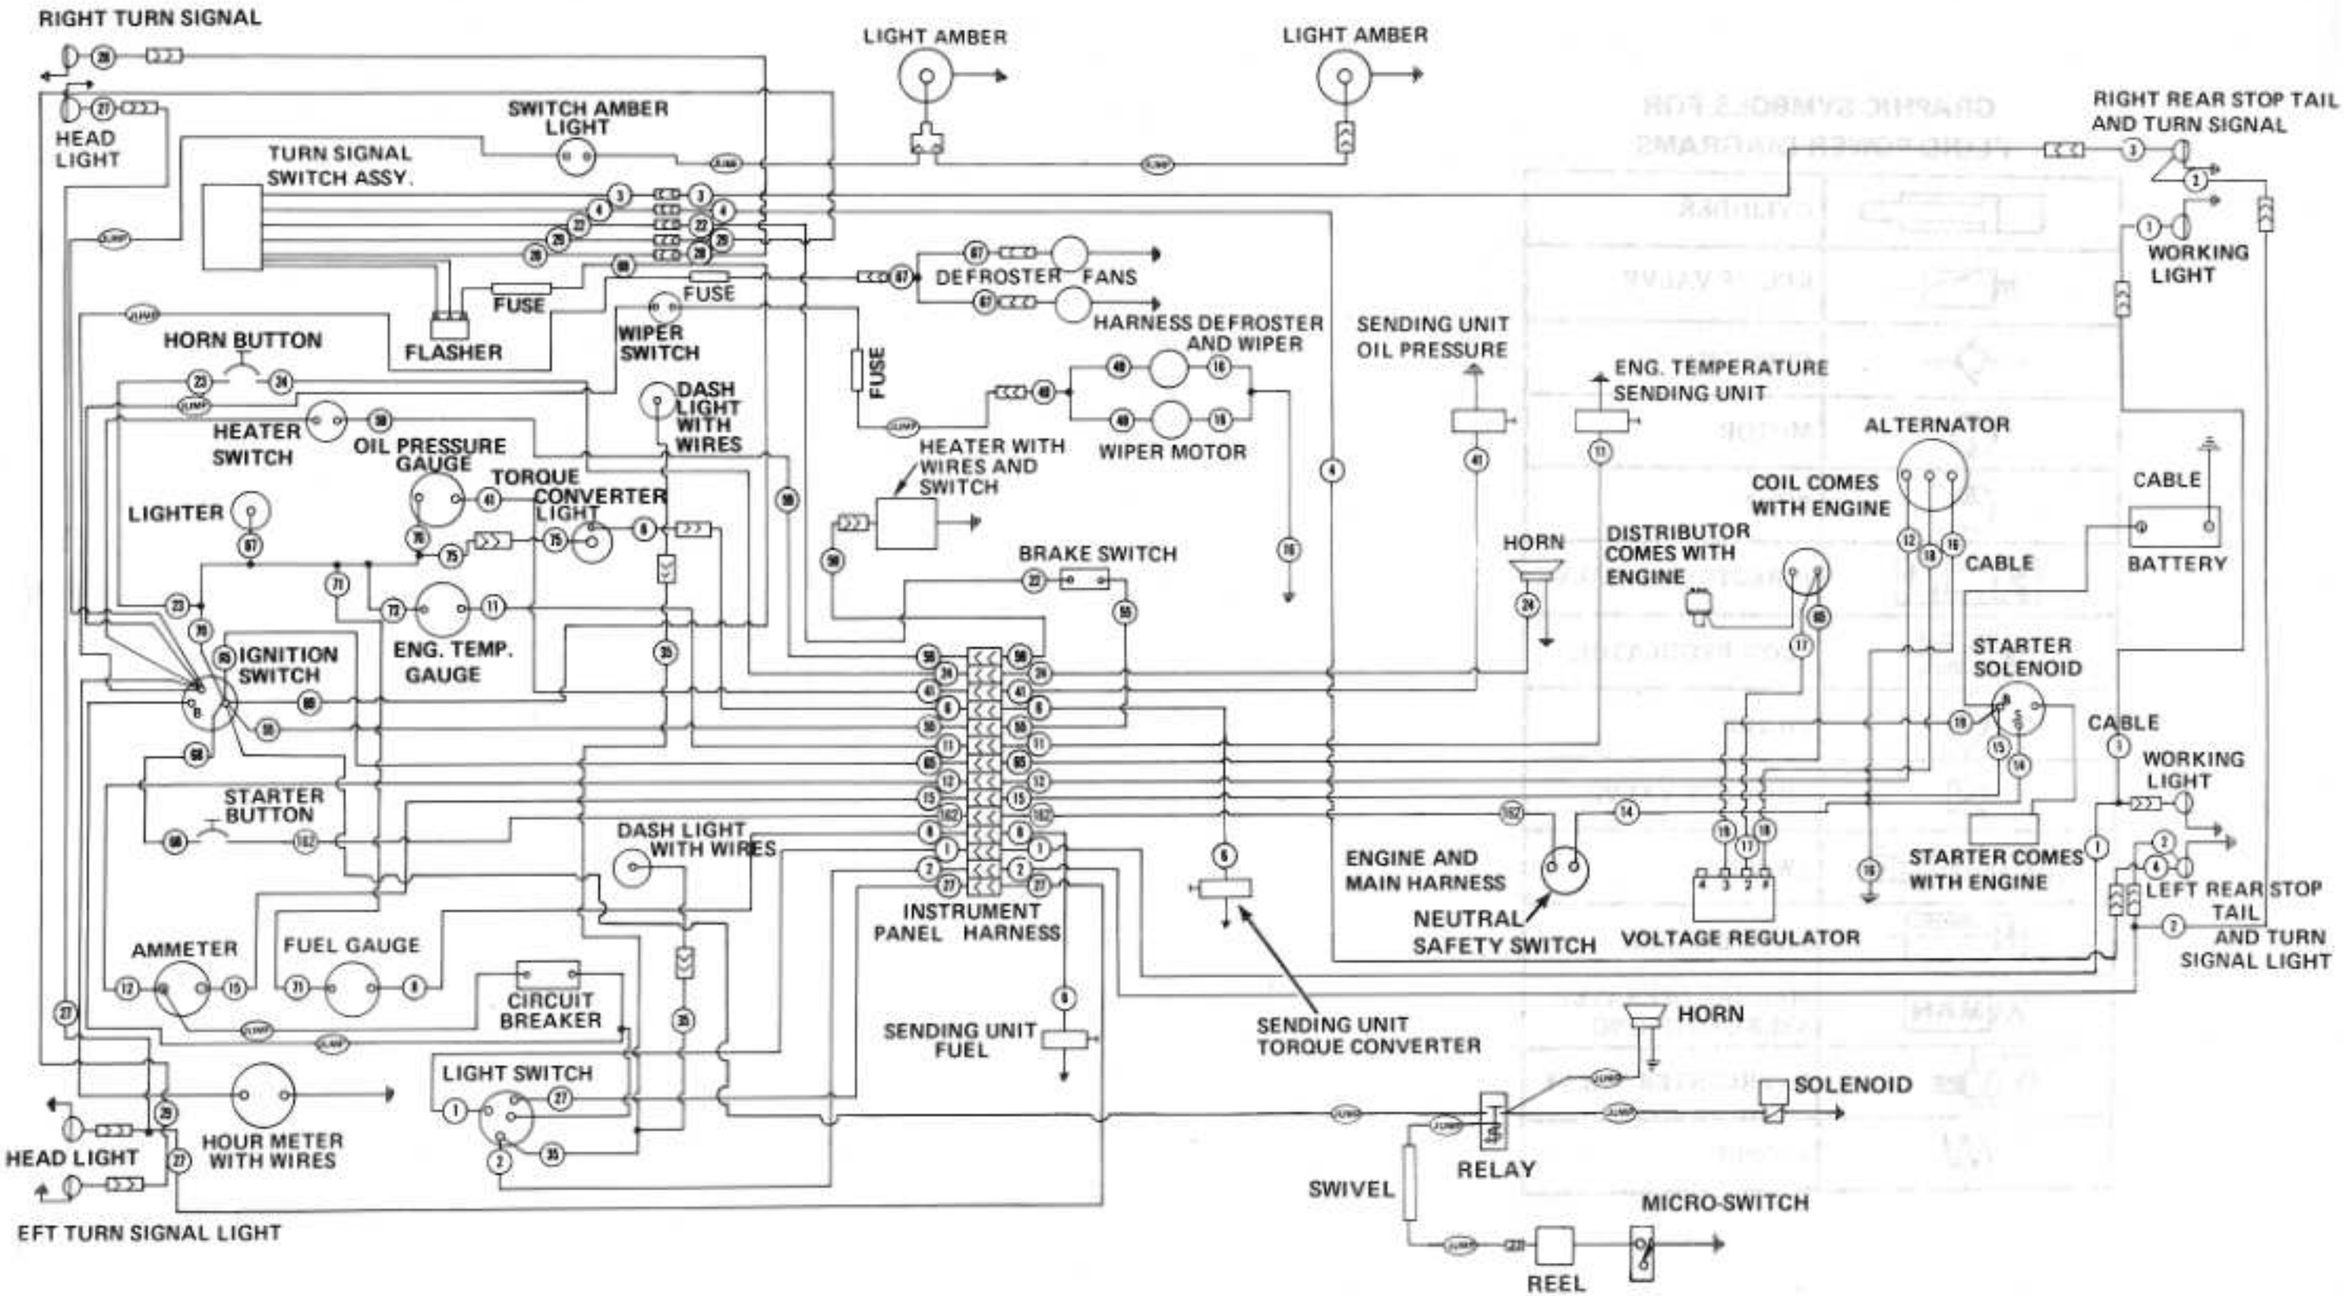


Fig. 126. Electrical Schematic for Gas and L.P. Engines

MidWestTech | Case 85RM2 Carrydeck Crane Service Manual | Publication S406205M2

Order the manual at mid-west-tech.com >