40 Cruz-Air Series D

Service Manual

S406259M2

CASE CONSTRUCTION

Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

GENERAL

Safety Precautions 3
Nomenclature 4
Introduction 5
Directional Reference 5
Parts and Service 5

SECTION 1 - SCHEDULED PREVENTIVE MAINTENANCE

Introduction 6
Lubricant and Fluid Recommendations 7
Component Capacities 7
Hydraulic System Operating Pressures 7
Tire Pressures ..... (See page 34)
Maintenance Chart ..... 8 thru 10
Pictorial Listing of Lubrication Fittings 11, 12

SECTION 2 - THE MECHANICAL SYSTEM

Description, Maintenance and Troubleshooting ..... 13 thru 41
- Engine Maintenance 13
- Engine Cooling System 13, 14
- Engine Air Cleaner 14, 15
- Engine Performance 16
- Throttle Linkage ..... 16 thru 18
- Torque Converter and Forward-Reverse Unit ..... 19 thru 27
- Drop Box Transmission ..... 27 thru 30
- Axles ..... 31 thru 36
- Turntable Swing ..... 37 thru 40
- Booms and Attachments 41

Disassembly and Repair ..... 42 thru 94
- General Cleaning Instructions 42
- Accelerator Master Cylinder 43
- Accelerator Slave Cylinder 44
- Torque Converter and Revers-O-Matic ..... 44 thru 53
- Drop Box Transmission ..... 53 thru 59
- Single Reduction Drives (Differentials) ..... 59 thru 66
- Planetary Hubs ..... 66 thru 71
- Brakes 72, 73
- Drive Shafts 74, 75
- House Brake 75, 76
- Swing Gearbox ..... 76 thru 84
- Turntable Bearing Replacement ..... 84 thru 89
- Center Swivel 89, 90
- Boom and Attachments ..... 91 thru 94

SECTION 3 - THE AIR SYSTEM

Machines Before PIN 6292805 ..... 95 thru 102
Machines PIN 6292805 and After ..... 103 thru 110
Disassembly and Repair of Components ..... 111 thru 124

MidWestTech | Case 40D Cruz-Air Excavator Service Manual | Publication S406259M2 Order the manual at mid-west-tech.com >

TABLE OF CONTENTS (CON'T.)

SECTION 4 - THE ELECTRICAL SYSTEM

12/24 Volt System (Machines Before PIN 6292805) ..... 115 thru 148
24 Volt System (Machines PIN 6292805 and After) ..... 149 thru 168
Disassembly and Repair of System Components ..... 169 thru 174

SECTION 5 - THE HYDRAULIC SYSTEM

Description, Maintenance and Troubleshooting ..... 175 thru 204
Introduction 175
Hydraulic System Scheduled Maintenance 176
Hydraulic System Flushing Procedure 178
Hydraulic System Troubleshooting Techniques 179
Main Hydraulic System ..... 180 thru 190
Power Steering System ..... 191 thru 194
Outrigger Hydraulics 195, 196
Swing Hydraulics ..... 197 thru 199
Hoist Hydraulics 199, 200
Crowd Hydraulics 201
Tool Hydraulics 202
Auxiliary Hydraulics 203, 204
Disassembly and Repair ..... 205 thru 231
Main Pumps ..... 205 thru 211
Main Control Valves ..... 212 thru 214
Main Reliefs 215, 216
Swing Motor ..... 217 thru 219
Swing Cushion Valve 219
Steering Orbitrol 220, 221
Steering Reversal Valve 221
Hydraulic Cylinders ..... 222 thru 225
Hydraulic Swivel ..... 226 thru 228
Clam Rotary Actuator ..... 229 thru 231

TORQUE CHARTS AND SCHEMATICS ..... 232 thru 242

IMPORTANT: Always install new decals whenever the old decals are destroyed, lost, painted over, or illegible. When individual parts are replaced that have decals attached, be sure to install a new decal with the new part. Replacement decals are available from your DROTT dealer.

Information in this manual was current at time of printing. DROTT reserves the right to make improvements in design or changes in specifications without incurring any obligation relating to such changes.

MidWestTech | Case 40D Cruz-Air Excavator Service Manual | Publication S406259M2 Order the manual at mid-west-tech.com >

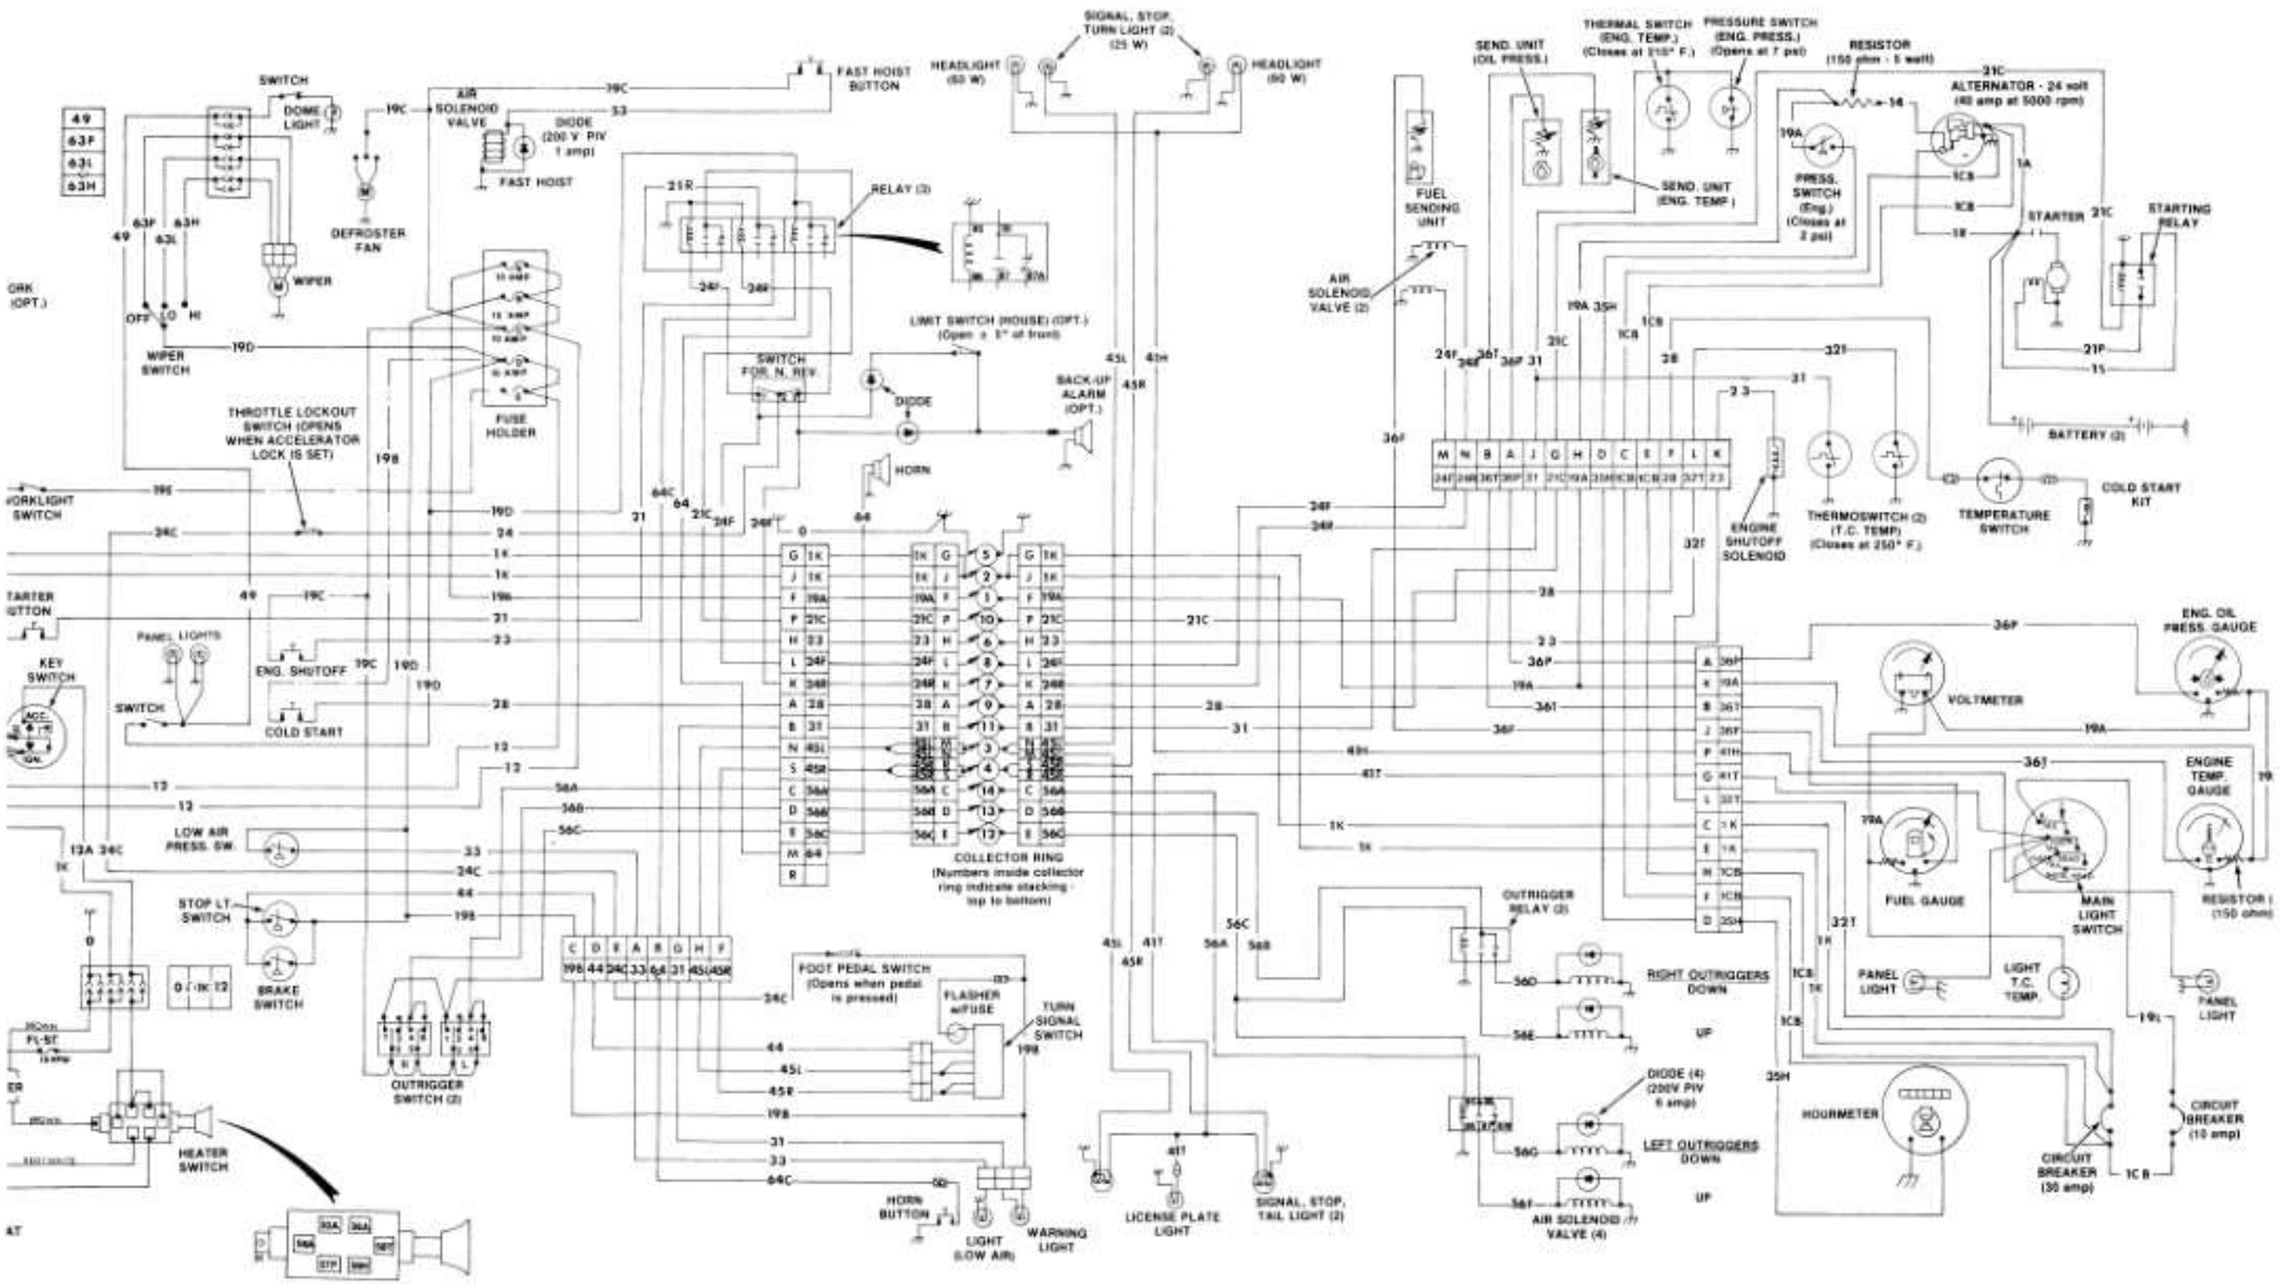


Figure 197A. Electrical Schematic - (24 Volt System) (Machines PIN 6292805 and After)

MidWestTech | Case 40D Cruz-Air Excavator Service Manual | Publication S406259M2

Order the manual at mid-west-tech.com >