45
Cruz - Air
Excavator

Service Manual

S406267M1

MidWestTech | Case 45 Cruz-Air Excavator Service Manual | Publication S406267M1

Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

GENERAL

Index 2
Safety 3, 4
Introduction 5
Nomenclature, Description and Specifications 6-10

SECTION 1 - PREVENTIVE MAINTENANCE

Introduction 11
Hydraulic System Operating Pressures 12
Capacities, Lubricants and Fluids 12, 13
Maintenance Chart 14-16
List of Grease Fittings 17-19

SECTION 2 - THE MECHANICAL SYSTEM

Engine and Related Systems 20-25
Torque Converter and Transmission 26-35
Axles 36-41
Turntable Swing 42-45
Boom and Attachments 46, 47

SECTION 3 - THE AIR SYSTEM

Introduction 48
Air Supply System 49-52
Service Brake System 53, 54
Parking Brake 54
Outrigger and Fast Hoist Control 55
Troubleshooting 56, 57

SECTION 4 - THE ELECTRICAL SYSTEM

Introduction 58
Dual Voltage System (Machines Before PIN 6295126) 59-83
24 Volt System (Machines PIN 6295126 and After) 84-105

SECTION 5 - THE HYDRAULIC SYSTEM

Introduction 106
System Maintenance and Troubleshooting 107-113
Main Hydraulic System 114-138
Power Steering System 139-143
Trouble Charts 144-150

SECTION 6 - DISASSEMBLY AND REPAIR

General Cleaning Instructions 151
Repair of Components 152-297

TORQUE CHARTS AND SCHEMATICS

Torque Charts 298, 299
Air Schematic 300
Electrical Schematic - 12/24 Volt System 301
Electrical Schematic - 24 Volt System 302
Hydraulic Schematic - Excavator Units 303
Hydraulic Schematic - Logger Units 304

MidWestTech | Case 45 Cruz-Air Excavator Service Manual | Publication S406267M1 Order the manual at mid-west-tech.com >

INDEX

A

Accelerator Lock 23, 70, 97
Accelerator Master Cylinder 23, 152
Accelerator Slave Cylinder 24, 153
Air Cleaner 21
Air System Components
- Actuator, service brake 53, 154
- Brake Chamber, parking 54, 160
- Compressor 49, 162
- Control Valve, service brake 53, 156
- Dryer 49, 170
- Relay Valve 49, 172
- Reservoir 49
- Solenoid Valve 55, 174
- Swivel, 3-port 52, 175

Air System Pressure 10
Alternator 62, 84, 87
Alternator Belt, adjustment 93
Ammeter 60
Axle 37, 176
Axle Oscillation Lock 40

B

Battery 62, 99
Bearing, turntable 42, 292
Boom 46, 194
Brake
- Parking 54
- Service 37, 53, 190
- Swing (House) 43

Brake Master Cylinder 53, 154
Bucket Cutting Edge 198
Bucket Teeth 202

C

Cab Insulation 11
Capacities, Lubricants, Fluids 13
Center Swivel 33, 210
Circuit Breaker 59, 86
Collector Ring 80, 104, 212
Converter Stall rpm 12
Coolant Recommendations 13, 21
Cooling System, engine 20
Crossover Relief, swing 131, 271
Cylinders, hydraulic 225

D

Differentials 36, 176
Drive Shafts 40, 216
Drum, brake 192
Dryer, air 49, 170
Dual Voltage Control (DUVAC) 62

E

E-boom 46, 195
Electrical System 58-105
Engine 20

F

Fast Hoist 69, 96, 132
Filters
- Air 21, 49
- Hydraulic 108

Fuel Tank 13, 15

G

Gauges 78, 102
Gearbox, swing 42, 218
Grapple 47, 208
Grease Fitting Locations 17

H

Heater 72, 1
Hourmeter 11, 78, 102
Hydraulic Circuits
- Auxiliary 136
- Crowd 134
- Hoist 132
- Main 14
- Outriggers 128
- Steering 139
- Swing 130
- Tool 135
- Utility 138

Hydraulic Filters 108
Hydraulic Oil Tank 108, 235
Hydraulic Swivel, 8-port 126, 259

M

Main Reliefs 12, 123, 266
Maintenance Chart 14, 15
Motors, hydraulic 246, 252

O

Oil Cooler 115
Orbitrol, steering 139, 269
Outriggers 55, 128

P

Parking Brake 54, 178
Planetary Hubs 37, 176
Port Reliefs 119, 131, 264
Power Sensing Valve 122, 267
Pressure Settings, hydraulic 12
Pumps, hydraulic
- Main 116, 236
- Steering 140, 242

R

Radiator 20
Relief Valves 119, 123, 143
Reservoir, air 49
Restriction Indicator, air 21

S

Solenoids, air actuated 69, 174
Steering 139
Steering Diverter Valve 141, 270
Swing 130
Swivel, hydraulic 8-port 126, 259

T

Throttle Linkage 23
Tire Pressure 10
Torque Charts 298, 299
Torque Converter 26, 272
Transmission 26, 284
Turntable Bearing
- Alignment of Swing Gearbox 295
- Capscrews, torquing of 43
- Lubrication 43
- Replacement 292

V

Valves, hydraulic
- Diverter, steering 141, 270
- Main Control 117, 261
- Main Relief 123, 26
- Port Relief 119, 26
- Swing Cushion 131, 271

Voltage Regulator 62, 87
Voltmeter 100

MidWestTech | Case 45 Cruz-Air Excavator Service Manual | Publication S406267M1 Order the manual at mid-west-tech.com >

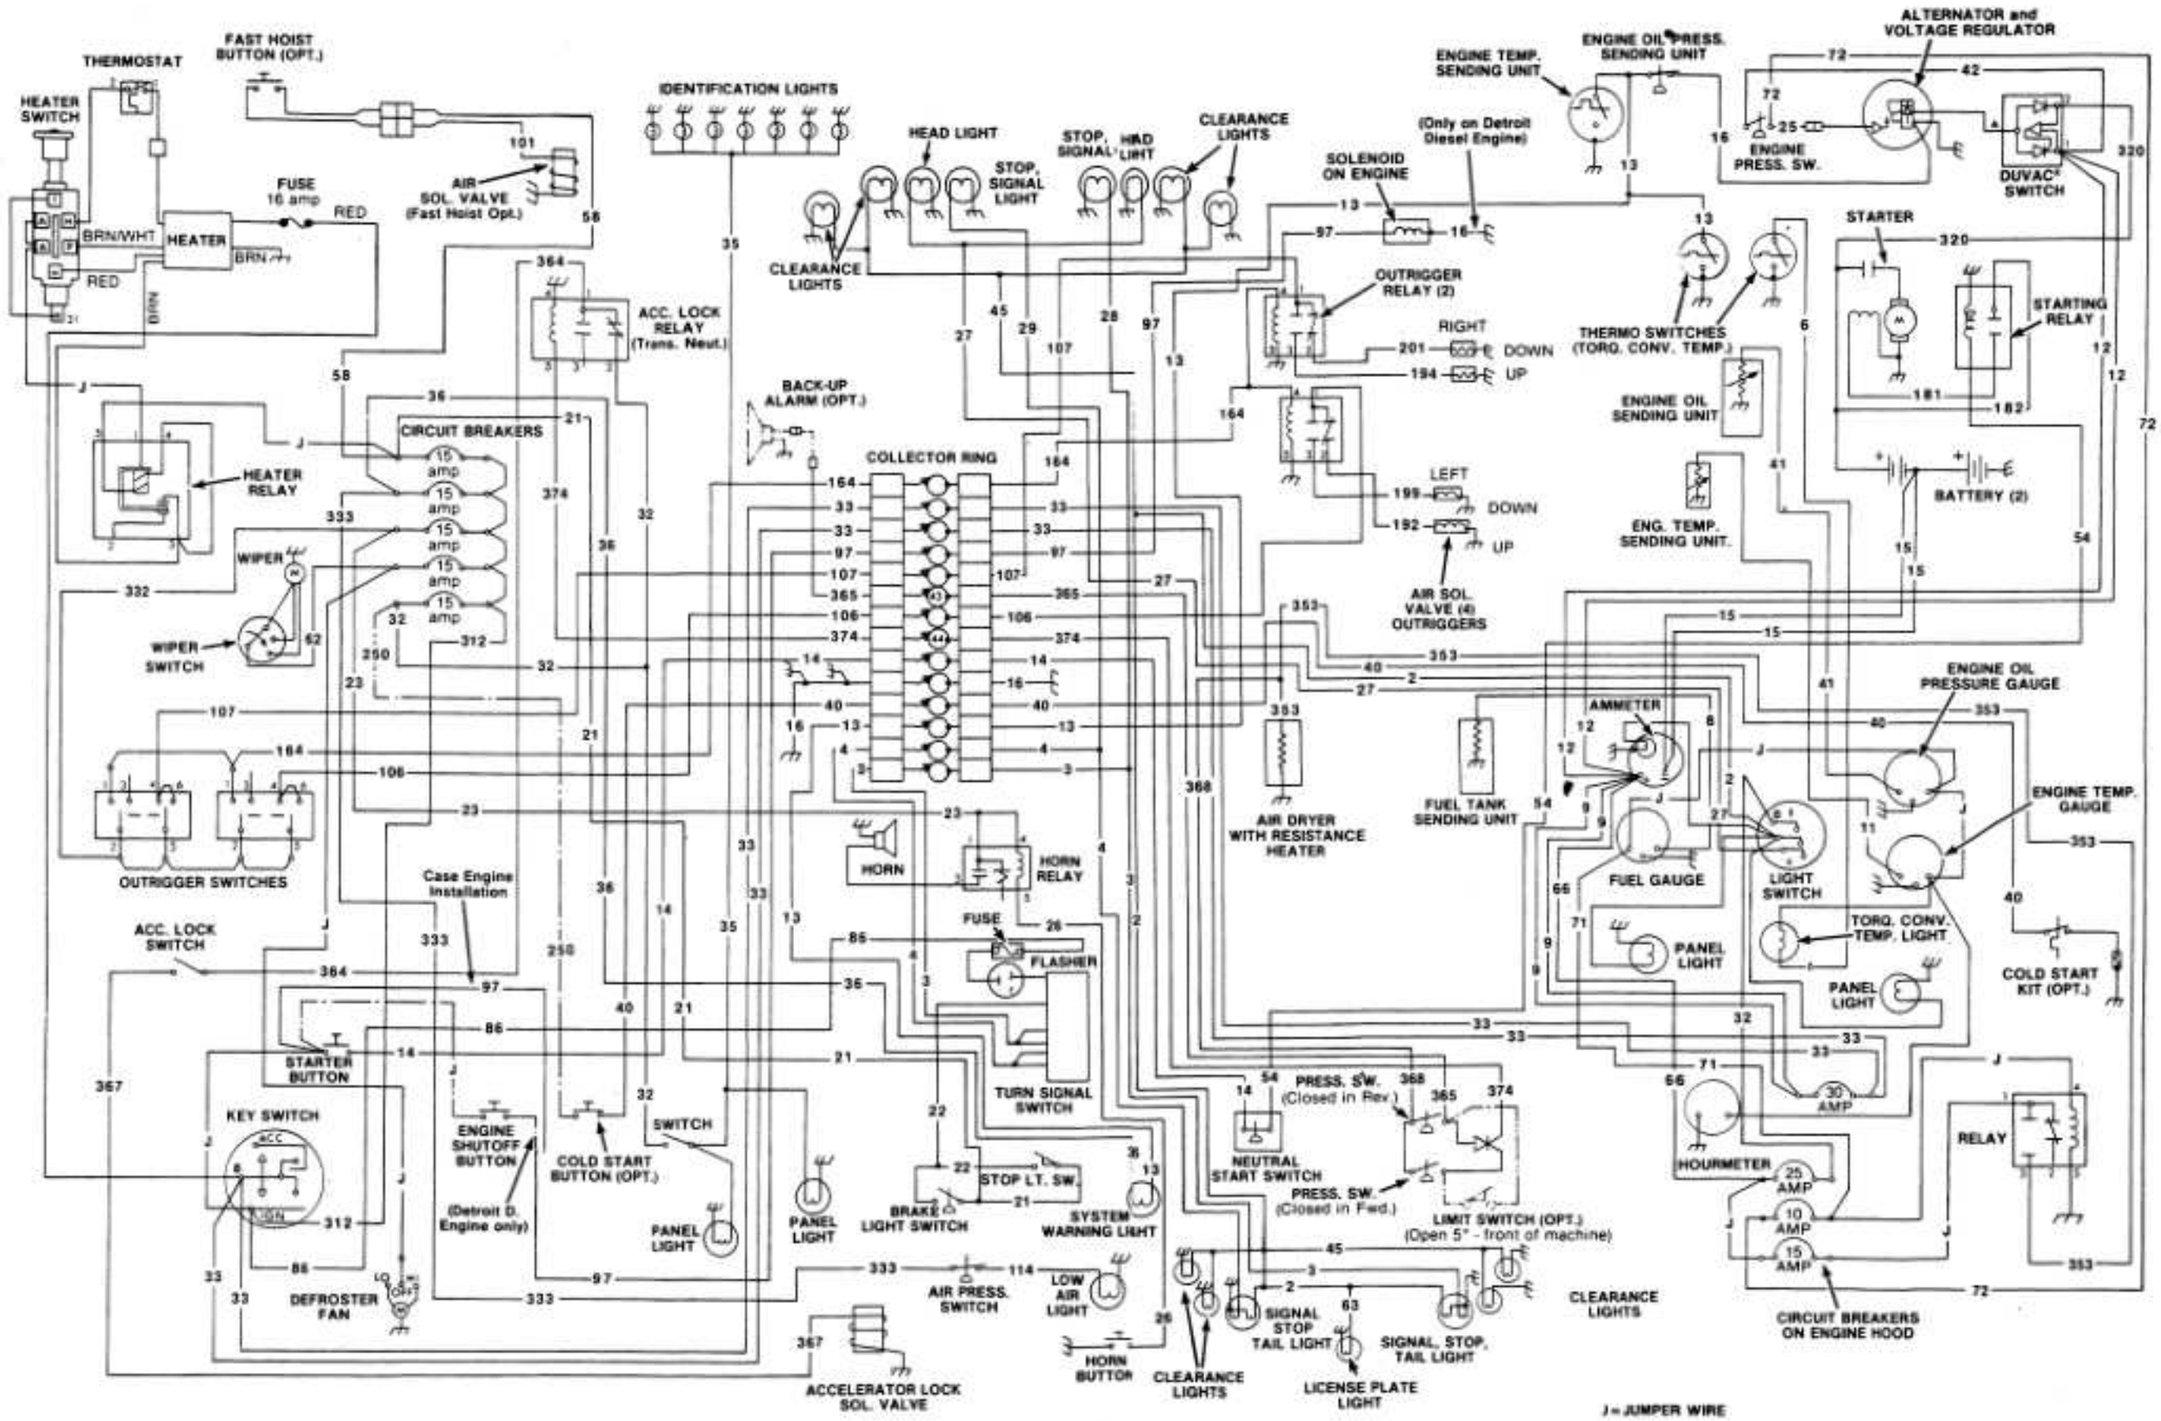


Figure 295. Electrical Schematic
(12/24 Volt System – Machines Before PIN 6295126)

MidWestTech | Case 45 Cruz-Air Excavator Service Manual | Publication S406267M1

Order the manual at mid-west-tech.com >