KOBELCO

PARTS CATALOG

HYDRAULIC EXCAVATOR

SK35SR

Applicable: SK35SR PX06501~06977

S4PX1011-01 06/02

MidWestTech | Kobelco SK35SR Hydraulic Excavator Parts Catalog | Publication S4PX1011-01

Order the manual at mid-west-tech.com >

目　次
CONTENTS



1 一般整備品 GENERAL MAINTENANCE ITEMS



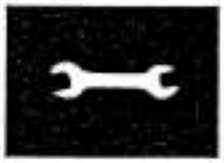
2 上部旋回体 SUPERSTRUCTURE



3 下部走行体 UNDERCARRIAGE



4 アタッチメント ATTACHMENTS



5 工具及び予備品 TOOLS AND SPARE PARTS

OP

6 オプショナルパーツ OPTIONAL PARTS



7 ネームプレート NAME-PLATE



8 索引 PARTS INDEX



9 油圧機器 HYDRAULIC COMPONENTS



10 エンジン機器 ENGINE COMPONENTS

MidWestTech | Kobelco SK35SR Hydraulic Excavator Parts Catalog | Publication S4PX101... Order the manual at mid-west-tech.com >

目　次
CONTENTS

NAME OF COMPONENTS ..... Page

Location

BRACKET ASSY, SWING ..... FIG 013-01



COUNTERWEIGHT INSTALLATION ... FIG 015-01





一 般 整 備 品
GENERAL MAINTENANCE ITEMS

FILTER LIST ..... FIG 004-01
NUT & SLEEVE LIST ..... FIG 005-01
PAINT COLOR LIST ..... FIG 005-01

ENGINE ASSY ..... FIG 024-01



CONTROL ASSY, ENGINE ..... FIG 026-01





上 部 旋 回 体
SUPERSTRUCTURE

FRAME ASSY, UPPER ..... FIG 010-01



ENGINE INSTALLATION ..... FIG 029-28



MidWestTech | Kobelco SK35SR Hydraulic Excavator Parts Catalog | Publication S4PX101... Order the manual at mid-west-tech.com >

目　次
CONTENTS

RADIATOR INSTALLATION ····· FIG 033-28



TANK ASSY, FUEL ····· FIG 056-01



RADIATOR ASSY ····· FIG 036-28



TANK ASSY, HYD ····· FIG 061-01



CLEANER ASSY, AIR ····· FIG 042-01



POWER TAKE-OFF ASSY ····· FIG 066-01



MUFFLER ASSY ····· FIG 047-01



MOTER INSTAL, SLEWING ····· FIG 070-01




FUEL LINES ····· FIG 051-01








VALVE INSTALLATION ····· FIG 079-01



MidWestTech | Kobelco SK35SR Hydraulic Excavator Parts Catalog | Publication S4PX101... Order the manual at mid-west-tech.com >

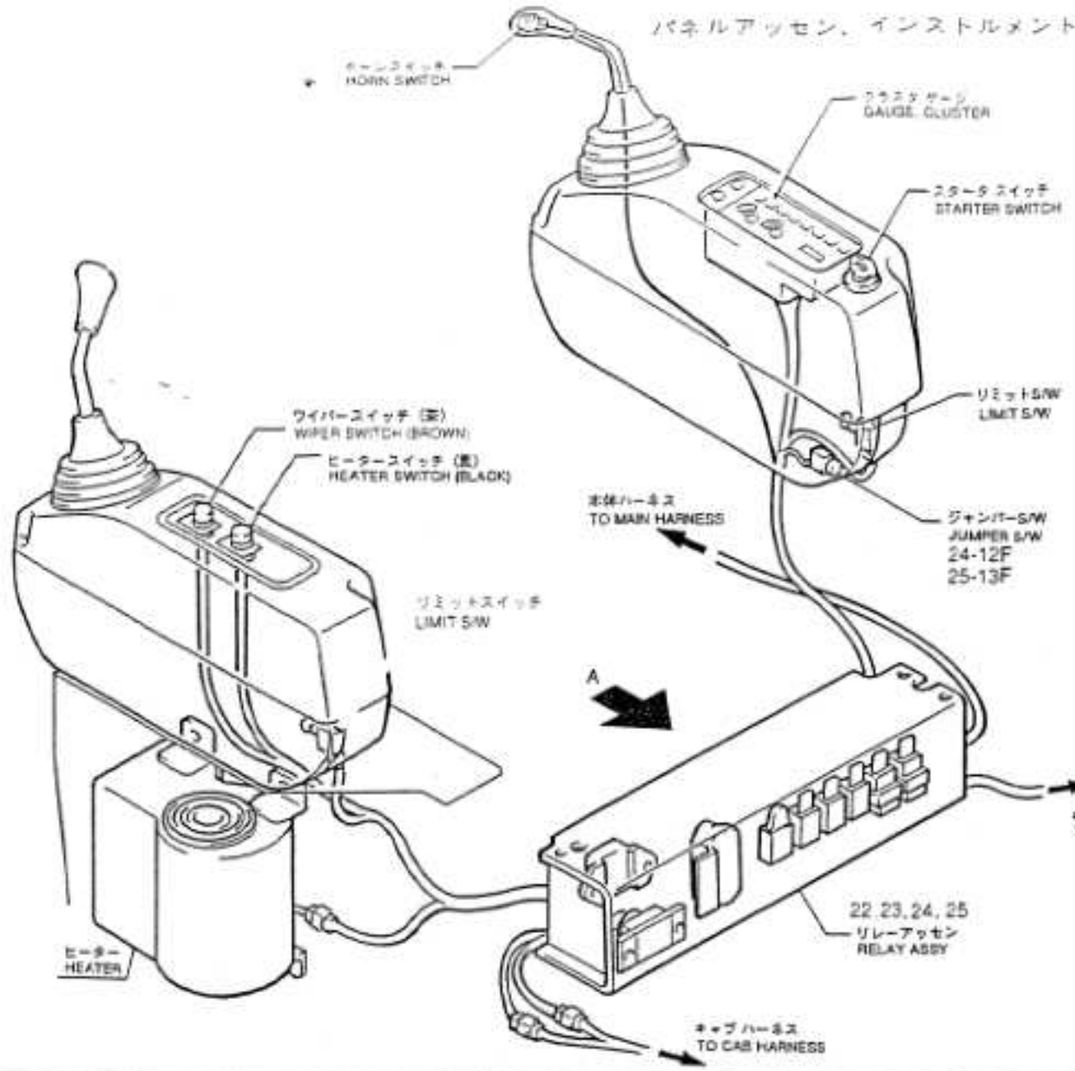

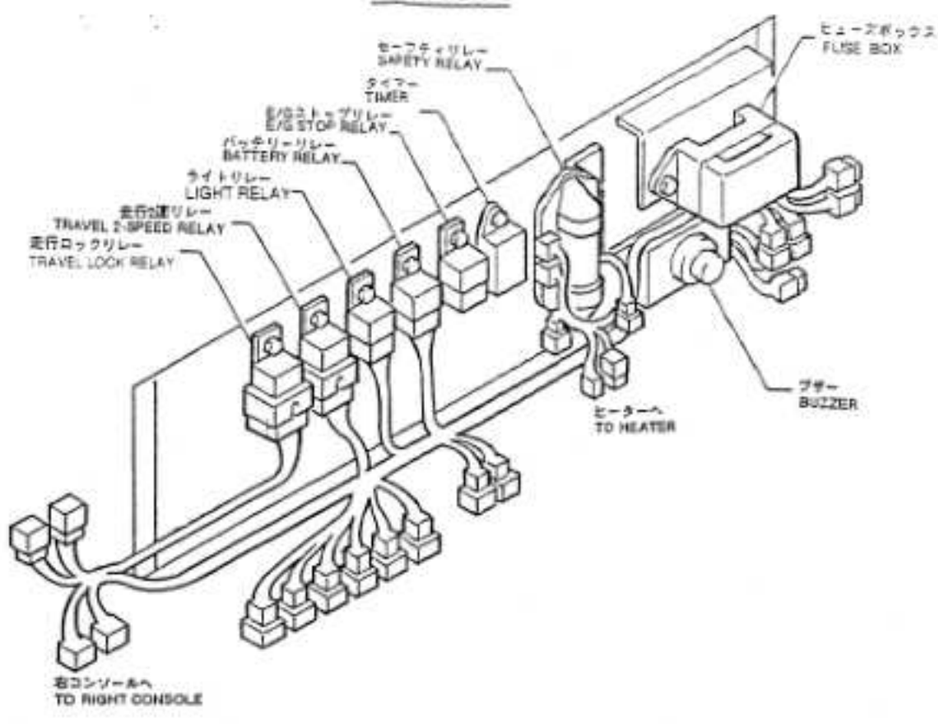

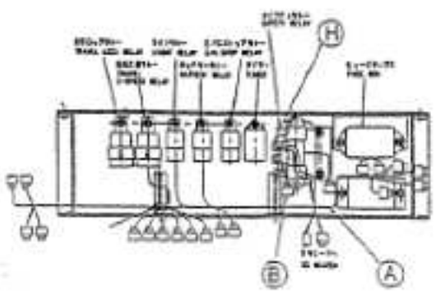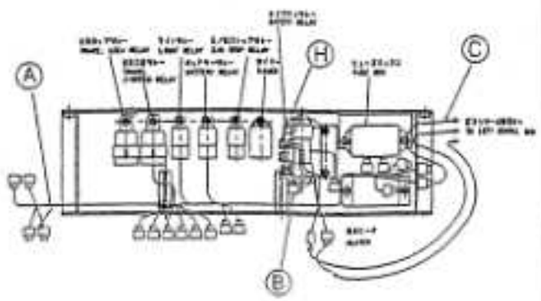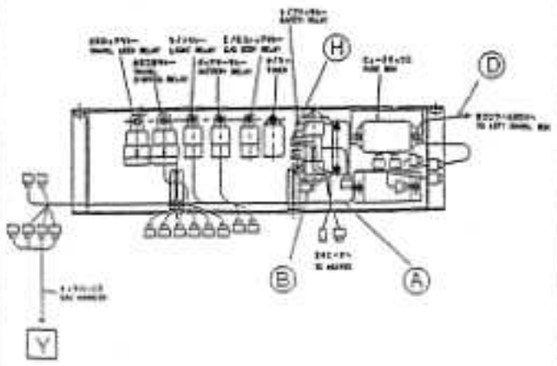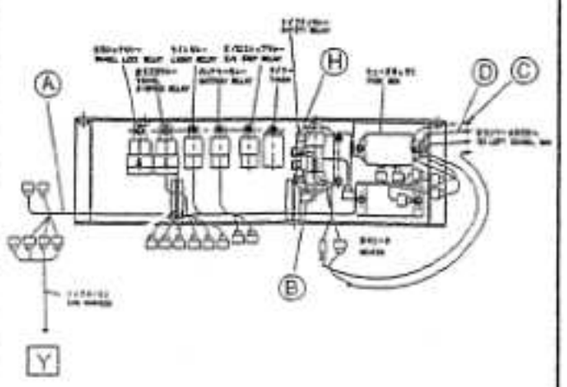22-10 スタンダード仕様	23-11 ヒータ仕様	24-12 キャブ仕様	25-13 ヒータ・キャブ仕様
			

(03)

FIG 230-25-2(1)

Order the manual at mid-west-tech.com >