KOBELCO

PARTS CATALOG

HYDRAULIC EXCAVATOR

SK100


Applicable: SK100 YW02801~

S4YW1507-00 10/90

MidWestTech | Kobelco SK100 Hydraulic Excavator Parts Catalog | Publication S4YW1507

Order the manual at mid-west-tech.com >

YW02601~

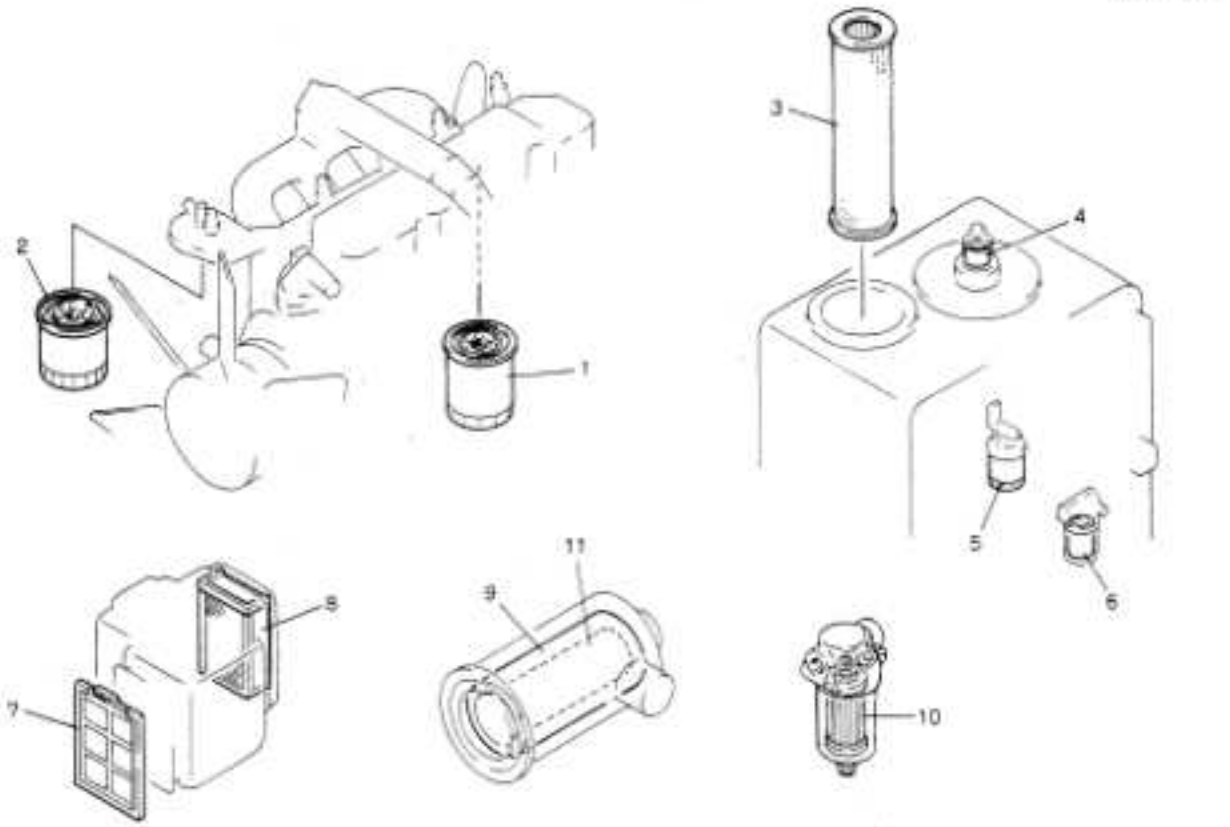


＜注記＞いすゞエンジン付属品については最寄りのいすゞ販売店に御用命ください。
＜NOTE＞FOR ISUZU ENGINE PART, PLEASE ORDER TO ISUZU ENGINE DEALER.

ITEM	PART NO.	メイショウ	DESCRIPTION	REMARKS	QTY	APPLICABLE
1	894321-2190	E/G OIL フィルタ エレメントキット, 1次	ELEMENT KIT,FILTER-PRIMART,E/G OIL	ISUZU ENGINE PART	1	
2	894453-7381	E/G フュエルフィルタ エレメントキット, 1次	ELEMENT KIT,FUEL-FILTER-PRIMART,E/G	ISUZU ENGINE PART	1	
3	2446R147	作動油フィルタエレメント	FILTER-ELEMENT,HYDR	ELEMENT KIT 24046Z15	1	
4	2446U26052	作動油タンクブリーザ フィルタエレメント	FILTER-ELEMENT,HYDR.TANK BREATHER		1	
5	2446U215S5	ドレンフィルタ カートリッジ	CARTRIDGE,DRAIN-FILTER		1	
6	R36P0019	フィルタエレメント	FILTER-ELEMENT		1	
7	2410001176510	エアーコンディショナ フィルタエレメント	FILTER-ELEMENT, AIR-CONDITIONER		1	
8	2410001189S8	エアコンケース フィルタエレメント	FILTER-ELEMENT, AIR-CON CASE		1	
9	2446U26452	エアクリーナ エレメント	ELEMENT,AIR-CLEANER		1	
10	2446U23352	ライン フィルタエレメント	FILTER ELEMENT, LINES	油圧ブレーカ HYDR BREAKER	1	
11	2446U16252	インナー エレメント	ELEMENT,INNER		1	

MidWestTech | Kobelco SK100 Hydraulic Excavator Parts Catalog | Publication S4YW1507 Order the manual at mid-west-tech.com >

デンキ ハイセン アッセン-WIRING ASSY ELEC
24100J13002F3

YW02801-

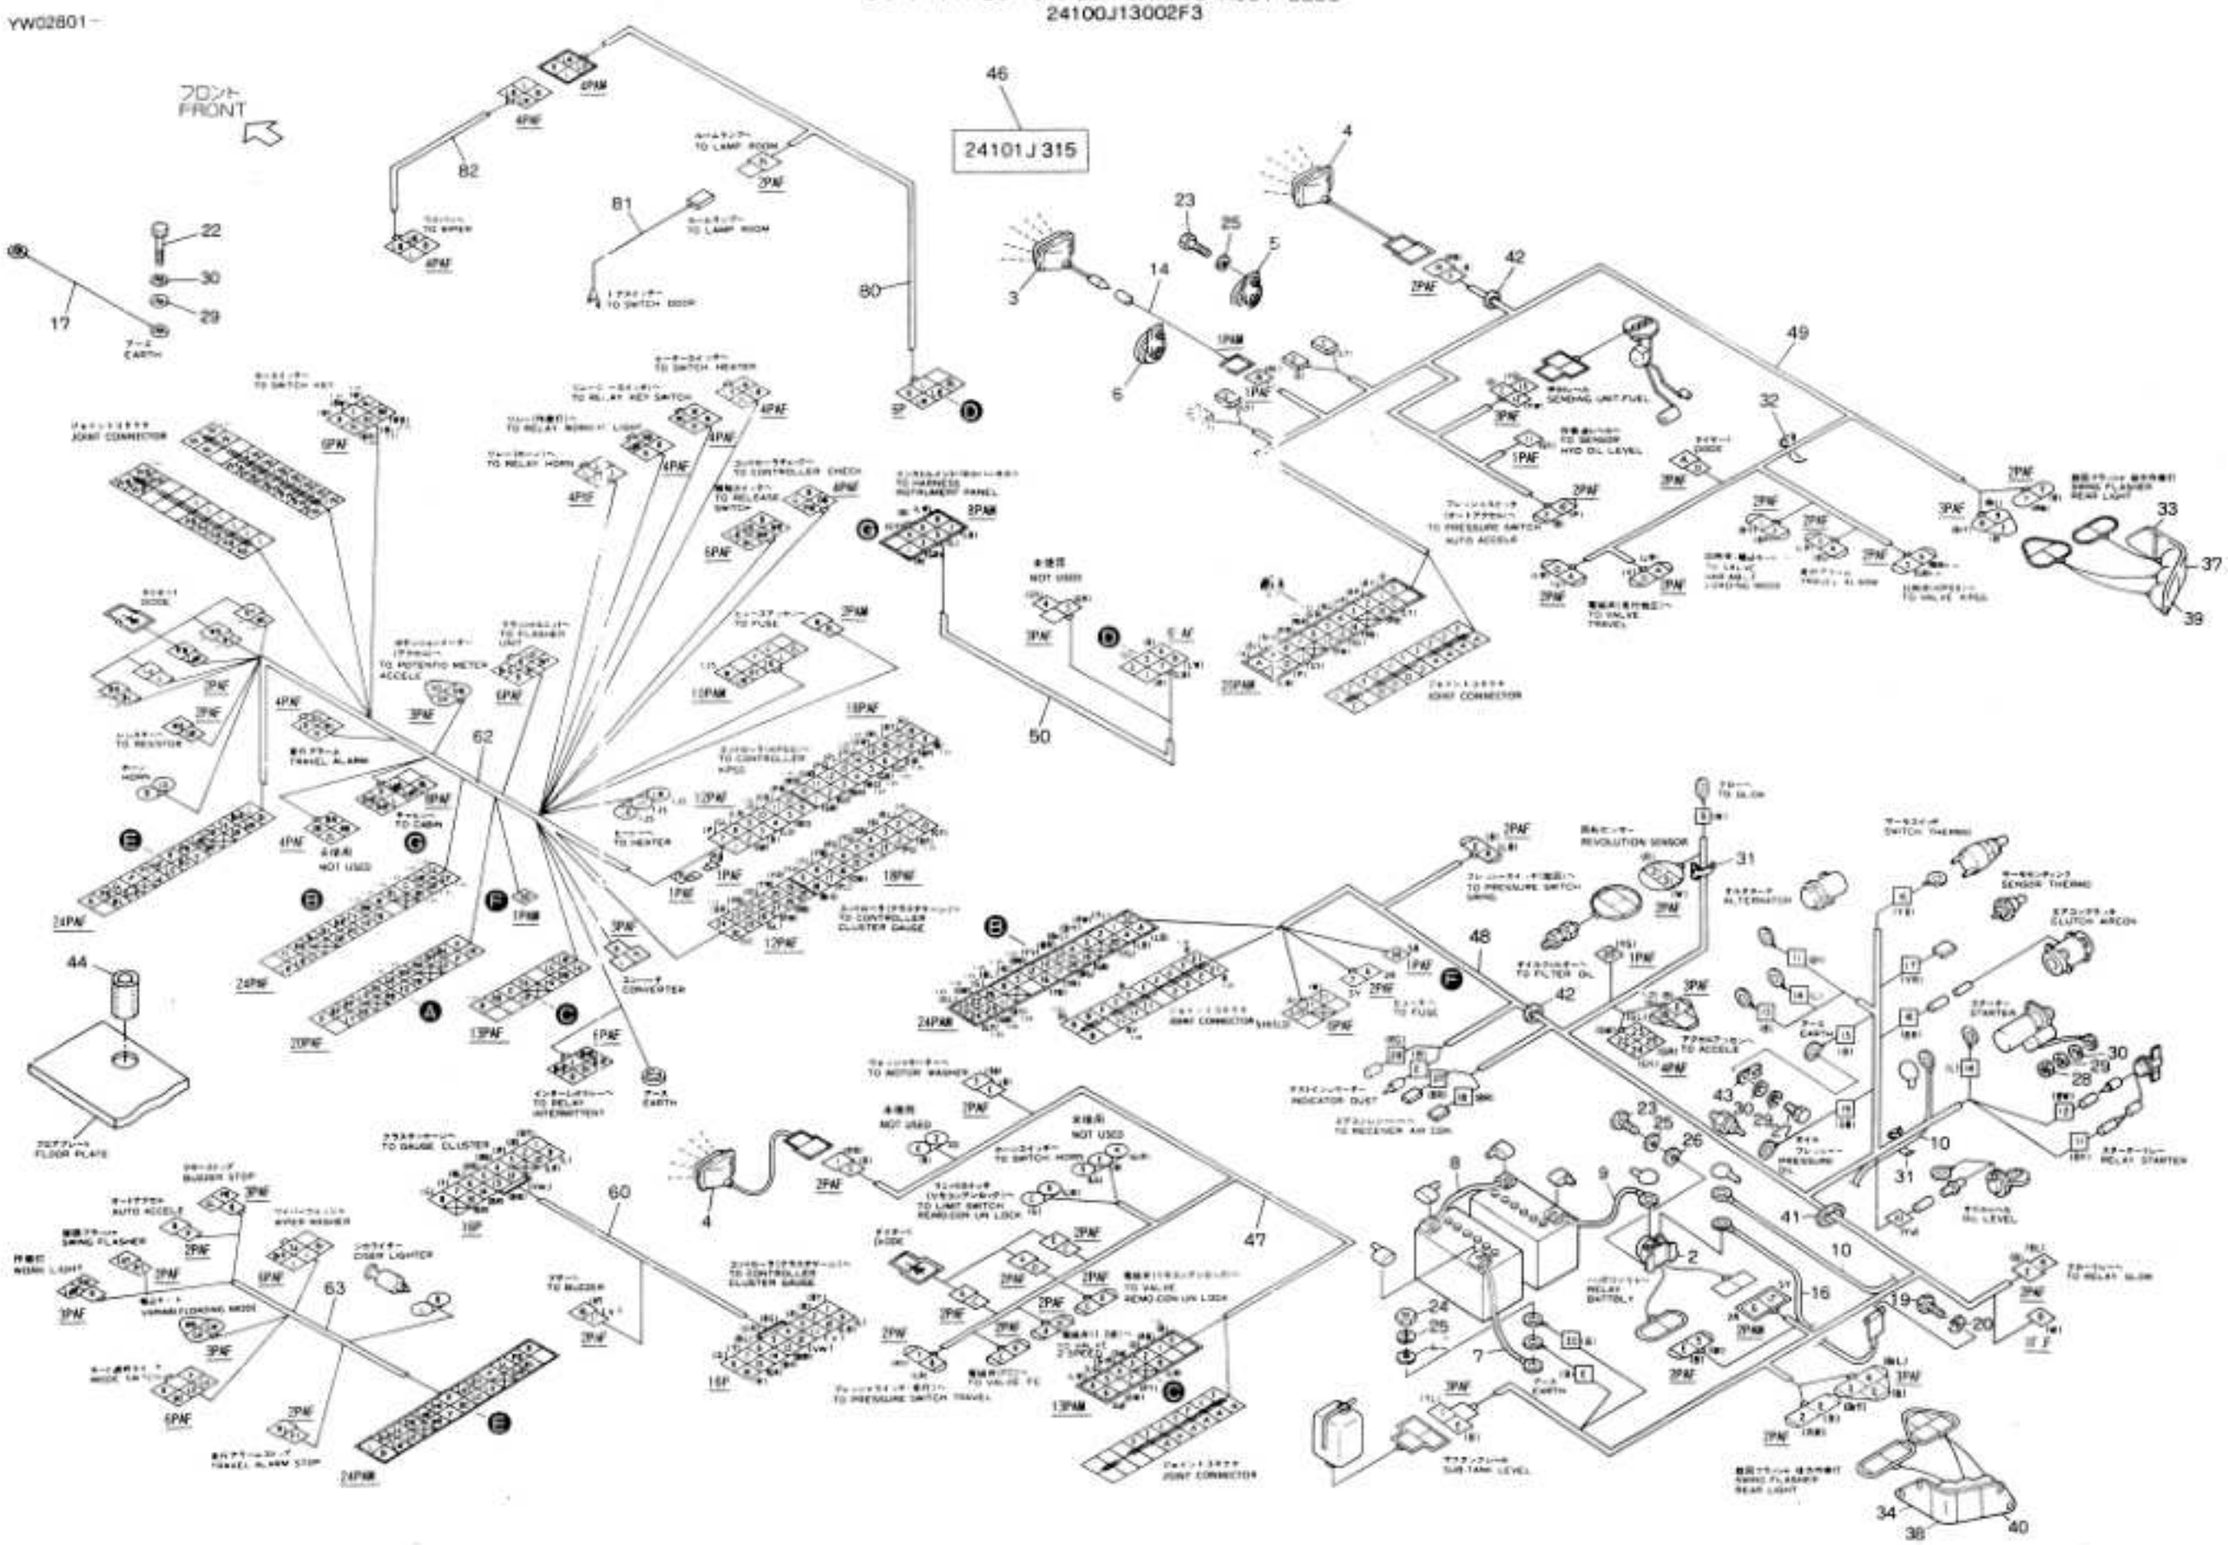
フロント
FRONT
24101J315
TO LAMP ROOM
TO SWITCH DOOR
TO WIPER
TO SWITCH HEATER
TO RELAY KEY SWITCH
TO RELAY MONI'T LIGHT
TO RELAY HORN
TO CONTROLLER CHECK
TO RELEASE SWITCH
TO HARNESS INSTRUMENT PANEL
JOINT CONNECTOR
TO FUSE
TO POTENTIO METER ACCELE
TO FLASHER LIGHT
TO RESISTOR
TO CABIN
TO CONTROLLER KPSS
TO HEATER
TO CONTROLLER CLUSTER GAUGE
TO CONVERTER
TO DELAY INTERMITTENT
EARTH
NOT USED
TO SWITCH KEY
TO SWITCH HORN
TO LIGHT SWITCH REMO-CON UN LOCK
TO VALVE REMO-CON UN LOCK
TO PRESSURE SWITCH TRAVEL
TO GAUGE CLUSTER
TO MOTOR WASHER
TO BUZZER
TO CONTROLLER CLUSTER GAUGE
TO PRESSURE SWITCH AUTO ACCELE
SENDING UNIT FUEL
TO SENSOR HYD OIL LEVEL
TO VALVE TRAVEL
REAR LIGHT
TO REVOLUTION SENSOR
TO ALTERNATOR
TO FILTER OIL
TO ACCELE
TO RECEIVER AIR CON
TO VALVE KNOB
TO RELAY STARTER
TO SUB TANK LEVEL
TO RELAY GLOW
FLOOR PLATE
BUZZER STOP
AUTO ACCELE
WIPER WASHER
SWING FLASHER
CIGAR LIGHTER
TRAVEL ALARM STOP
TRAVEL ALARM
HORN
WORK LIGHT
RELAY BATTERY
SWITCH THERMO
SENSOR THERMO
STARTER
CLUTCH AIRCON
INDICATOR DUST
1PAF
2PAF
3PAF
4PAF
6PAF
8PAF
10PAF
12PAF
13PAM
15P
18PAF
20PAF
24PAF
1PAM
2PAM
3PAM
4PAM
6PAM
8P
10P
1PAW
2PAW
3PAW
4PAW
1PAF
2PAF
3PAF
4PAF
4PAM
6PAM