SERVICE MANUAL

E55Bx Tier 4

Compact Hydraulic Excavator

PIN NETN55001 - PS04-10001 and above

Part number S5HS0013E01
1st edition English
April 2014

NEW HOLLAND CONSTRUCTION

MidWestTech | New Holland E55Bx Tier 4 Compact Hydraulic Excavator Service Manual |... Order the manual at mid-west-tech.com >

1. OUTLINE

TABLE OF CONTENTS

1.1 GENERAL PRECAUTIONS FOR REPAIRS 1-3
1.1.1 PREPARATION BEFORE DISASSEMBLING 1-3
1.1.2 SAFETY IN DISASSEMBLING AND ASSEMBLING 1-3
1.1.3 DISASSEMBLING AND ASSEMBLING HYDRAULIC EQUIPMENT 1-4
1.1.4 ELECTRICAL EQUIPMENT 1-6
1.1.5 HYDRAULIC PARTS 1-7
1.1.6 WELDING REPAIR 1-7
1.1.7 ENVIRONMENTAL MEASURE 1-7
1.2 INTERNATIONAL UNIT CONVERSION SYSTEM (Based on MARKS' STANDARD HANDBOOK FOR MECHANICAL ENGINEERS) 1-8

Book Code No. **S5PA0105E01**

MidWestTech | New Holland E55Bx Tier 4 Compact Hydraulic Excavator Service Manual |... Order the manual at mid-west-tech.com >

2. SPECIFICATIONS

TABLE OF CONTENTS

2.1 COMPONENTS NAME 2-3
2.2 MACHINE DIMENSIONS 2-4
2.3 SPECIFICATIONS AND PERFORMANCE 2-5
2.4 MACHINE & COMPONENTS MASS (DRY) 2-7
2.5 TRANSPORTATION 2-9
2.6 TYPE OF CRAWLER SHOES 2-12
2.7 TYPE OF BUCKET 2-13
2.8 ENGINE SPECIFICATIONS 2-14
2.8.1 SPECIFICATIONS 2-14
2.8.2 ENGINE PERFORMANCE CURVE 2-15

Book Code No. **S5PS0213E01**

MidWestTech | New Holland E55Bx Tier 4 Compact Hydraulic Excavator Service Manual |... Order the manual at mid-west-tech.com >

3. ATTACHMENT DIMENSIONS

TABLE OF CONTENTS


3.1 BOOM 3-3
3.1.1 BOOM DIMENSIONAL DRAWINGS 3-3
3.1.2 BOOM MAINTENANCE STANDARDS 3-4
3.2 ARM 3-8
3.2.1 ARM DIMENSIONAL DRAWINGS (1/2) 3-8
3.2.2 ARM DIMENSIONAL DRAWINGS (2/2) 3-10
3.2.3 ARM MAINTENANCE STANDARDS 3-11
3.3 BUCKET 3-14
3.3.1 BUCKET DIMENSIONAL DRAWINGS 3-14
3.3.2 DETAIL DIMENSIONAL DRAWINGS OF LUG SECTION 3-15
3.3.3 DETAIL DIMENSIONAL DRAWINGS OF BOSS SECTION 3-15
3.4 DOZER 3-17
3.4.1 DOZER DIMENSIONAL DRAWINGS 3-17
3.4.2 DOZER MAINTENANCE STANDARDS 3-18
3.5 BOOM SWING 3-20
3.5.1 BOOM SWING BRACKET DIMENSIONAL DRAWINGS 3-20
3.5.2 BOOM SWING PORTION MAINTENANCE STANDARDS 3-21

Book Code No. **S5PS0313E01**


MidWestTech | New Holland E55Bx Tier 4 Compact Hydraulic Excavator Service Manual |... Order the manual at mid-west-tech.com >

23.3.11.7 HARNESS (2/2) : PS11E01017P2
23.3.11.8 HARNESS : PS11E01043P1

HARNESS (2/2) : PS11E01017P2

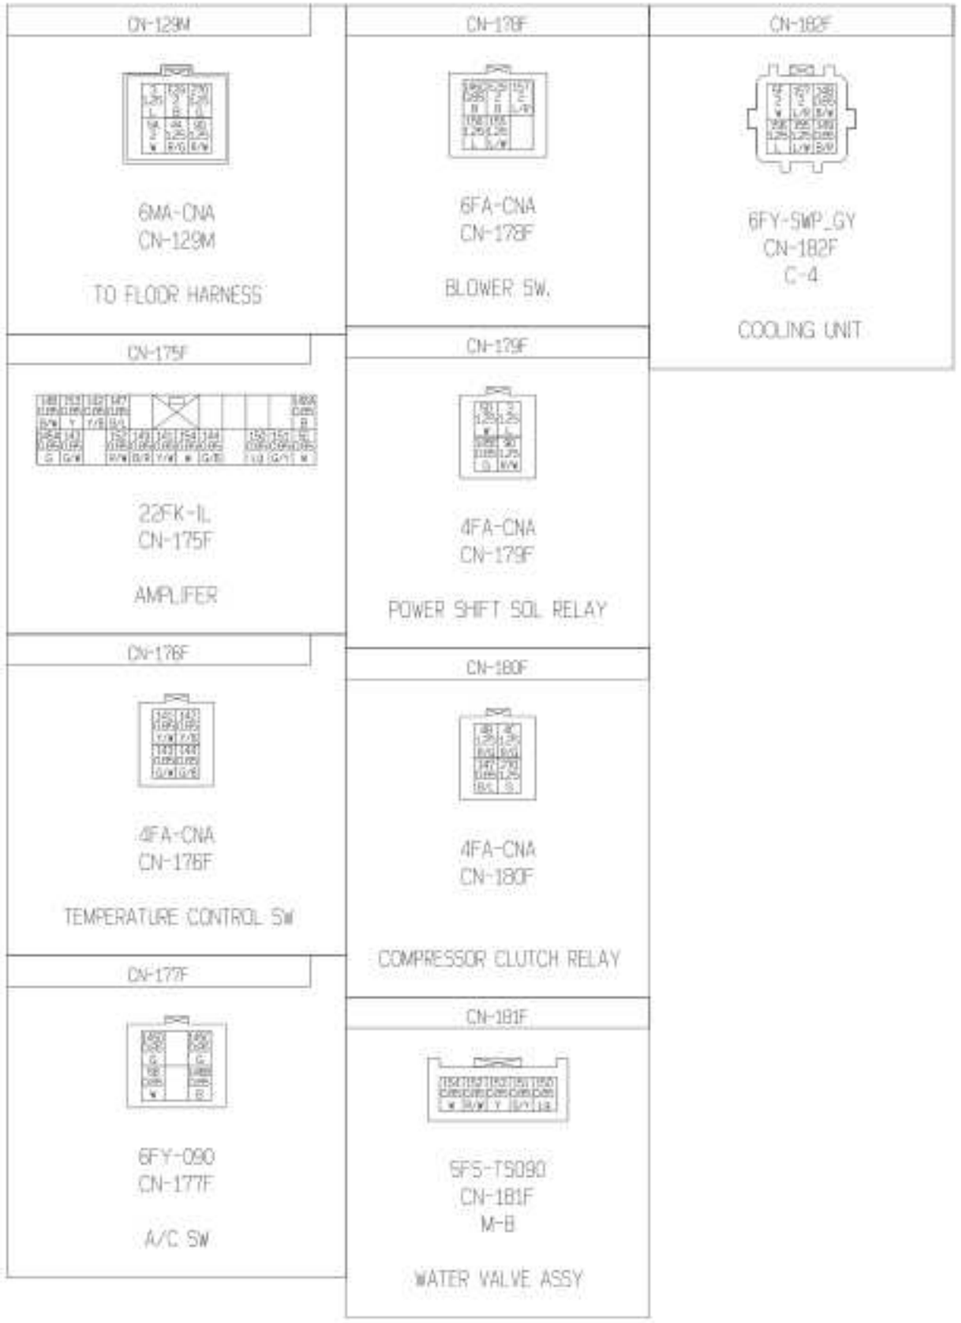

HARNESS : PS11E01043P1

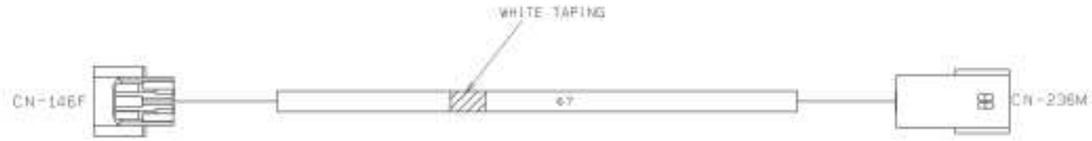








CONNECTORS SELECTION TABLE

CONNECTER NAME (PIN NUM.)	MANUFAC.	PART NUMBER	
		HOUSING	TERMINAL
2MA-JM2	AMP	174354-2	171661-1
2FS-D090	SUMITOMO	6189-0094	1500-0110

WIRE NO.	WIRE COLOR	WIRE SIZE (mm²)	FROM	CONNECTION	TO
93	L	AVSS1.25	CN-146F	———	CN-236M
270	G	AVSS1.25	CN-146F	———	CN-236M

Order the manual at mid-west-tech.com >

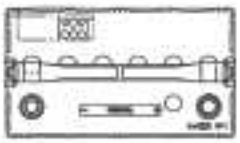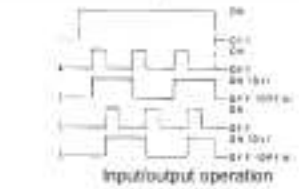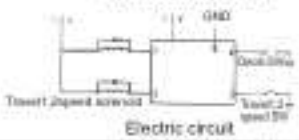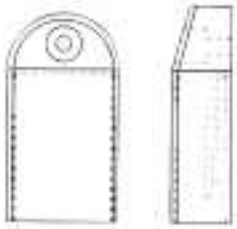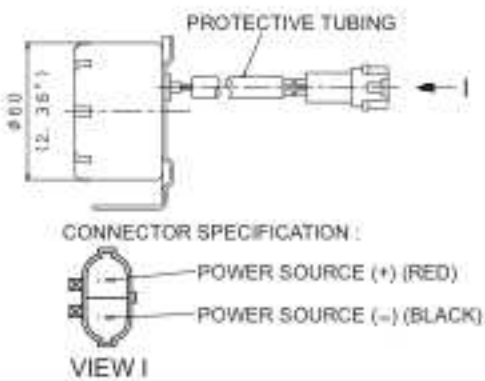Code No. Parts Name Parts No. Use Applicable Machine	Specifications	Description
E-10 Tuner YN54S00045P2 Radio (OPT) PS02-00101~ PS04-10001~	Part name: AM/FM radio	
E-13 Battery PH72S00007P1 Power source PS04-10001~	Type: 115D31L Rated voltage: DC12V Capacity: 72Ah/5HR Weight: Approx. 21.4kg (47 lb)	 
E-14 Relay PA24S00002P3 Sequence (Holding circuit) PJ06-08001~ PJ06-08890~ PJ06-09807~ PS02-00101~ PS04-10001~	Rated voltage: DC12V  Input/output operation  Electric circuit	  Pin arrangement
E-20 Travel alarm PW53S00002F1 Warning sound PJ06-08001~ PJ06-08890~ PJ06-09807~ PS02-00101~ PS04-10001~	Maker's Part No.: MAZIMA BA-102-12V Rated voltage: DC12V (Usage range): 9~15V Rated current: Max 0.3A at rated voltage Sound pressure at rated voltage: 102 ± 4dB (Distance 1 m) AMP ECONO SEAL MARK II WATER PROOF HOUSING : 174354-2 TERMINAL : 171661-1 HARNESS SEAL : 176886-2 RETAINER : 1-174355-1	 PROTECTIVE TUBING CONNECTOR SPECIFICATION : POWER SOURCE (+) (RED) POWER SOURCE (–) (BLACK) VIEW I

MidWestTech | New Holland E55Bx Tier 4 Compact Hydraulic Excavator Service Manual |... Order the manual at mid-west-tech.com >

46. TROUBLE SHOOTING (OPT.) (BY ERROR CODES)


TABLE OF CONTENTS

46.1 CHECKING THE SITE AND ACTUAL THING 46-3
46.2 FAILURE CLASSIFICATION AND TROUBLESHOOTING PROCEDURES 46-4
46.3 BLOWN FUSE OF MECHATRO CONTROLLER 46-5
46.4 TROUBLESHOOTING BY ERROR CODES 46-6

Book Code No. **S5PS4613E01**

MidWestTech | New Holland E55Bx Tier 4 Compact Hydraulic Excavator Service Manual |... Order the manual at mid-west-tech.com >

3. The O-ring of seal ring was extremely stretched at the installation, insert the piston subassembly from the taper side of reforming jig (D) to reform the ring.

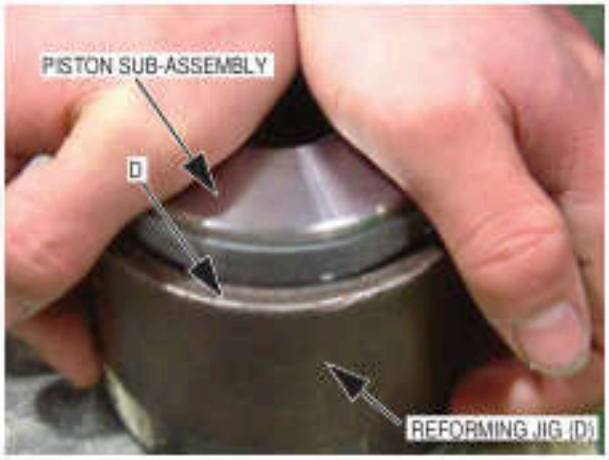

(4) Assembly of piston rod

1. Keep clevis of piston rod (2) horizontal, and install the head sub-assembly.
   -Apply hydraulic oil to seal slightly.
   -Take care not to hit the seal against the thread of piston rod.



2. Face the slit of seal ring (12) to the thread, and install the seal ring into groove of piston rod.
   Install the cushion bearing (5) on the rod from taper side as shown in the photo.
   -Take care of the direction of seal ring and cushion bearing.
   If the direction is mistaken, the cushion effect is not obtained.






MidWestTech | New Holland E55Bx Tier 4 Compact Hydraulic Excavator Service Manual |... Order the manual at mid-west-tech.com >

(7) Gauge Cluster Display Details

The screen for the operator is displayed on the multi-display following the logo mark display, after the key is turned on. The multi-display has the following functions.



1. Display function for operator ----- Normally, this is displayed during operation.
 1.1 Time display ----- Displays the current time.
 1.2 Self-diagnosis display ----- If a failure is detected in the mechatronic system such as a sensor, the machine status and error code are displayed on the upper part, and the instruction is displayed on the lower part.
 1.3 Warning display ----- When the machine is in an unsafe condition or a failure occurs, the warning information is displayed with the symbol and text.

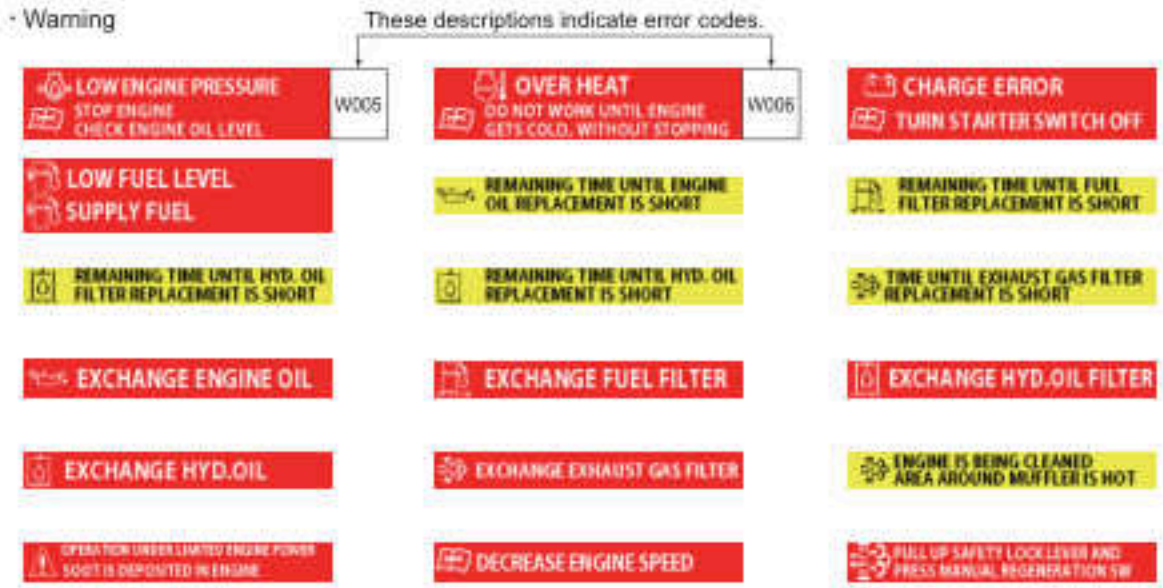

Notice

Error codes are stored as a failure history, and are displayed by the failure history display function on the multi-display.


1.4 Shovel status display ----- Displays the shovel operating status.

2. Maintenance display function ----- The remaining time to the replacement time of the following maintenance items is displayed by pressing the menu switch and selecting "MAINTENANCE" from the user menu.
(1) Engine oil (2) Fuel filter (3) Hydraulic oil filter (4) Hydraulic oil (5) Exhaust gas filter (Only Tier4 machine)

3. Failure history display ----- Displays the stored past failures of mechatro system in the reverse chronological order by operating the starter key switch and buzzer stop switch.

4. Service diagnosis display ----- Displays information from the mechatro controller such as a value detected with the pressure sensor by operating the starter key switch and buzzer stop switch.

MidWestTech | New Holland E55Bx Tier 4 Compact Hydraulic Excavator Service Manual |... Order the manual at mid-west-tech.com >

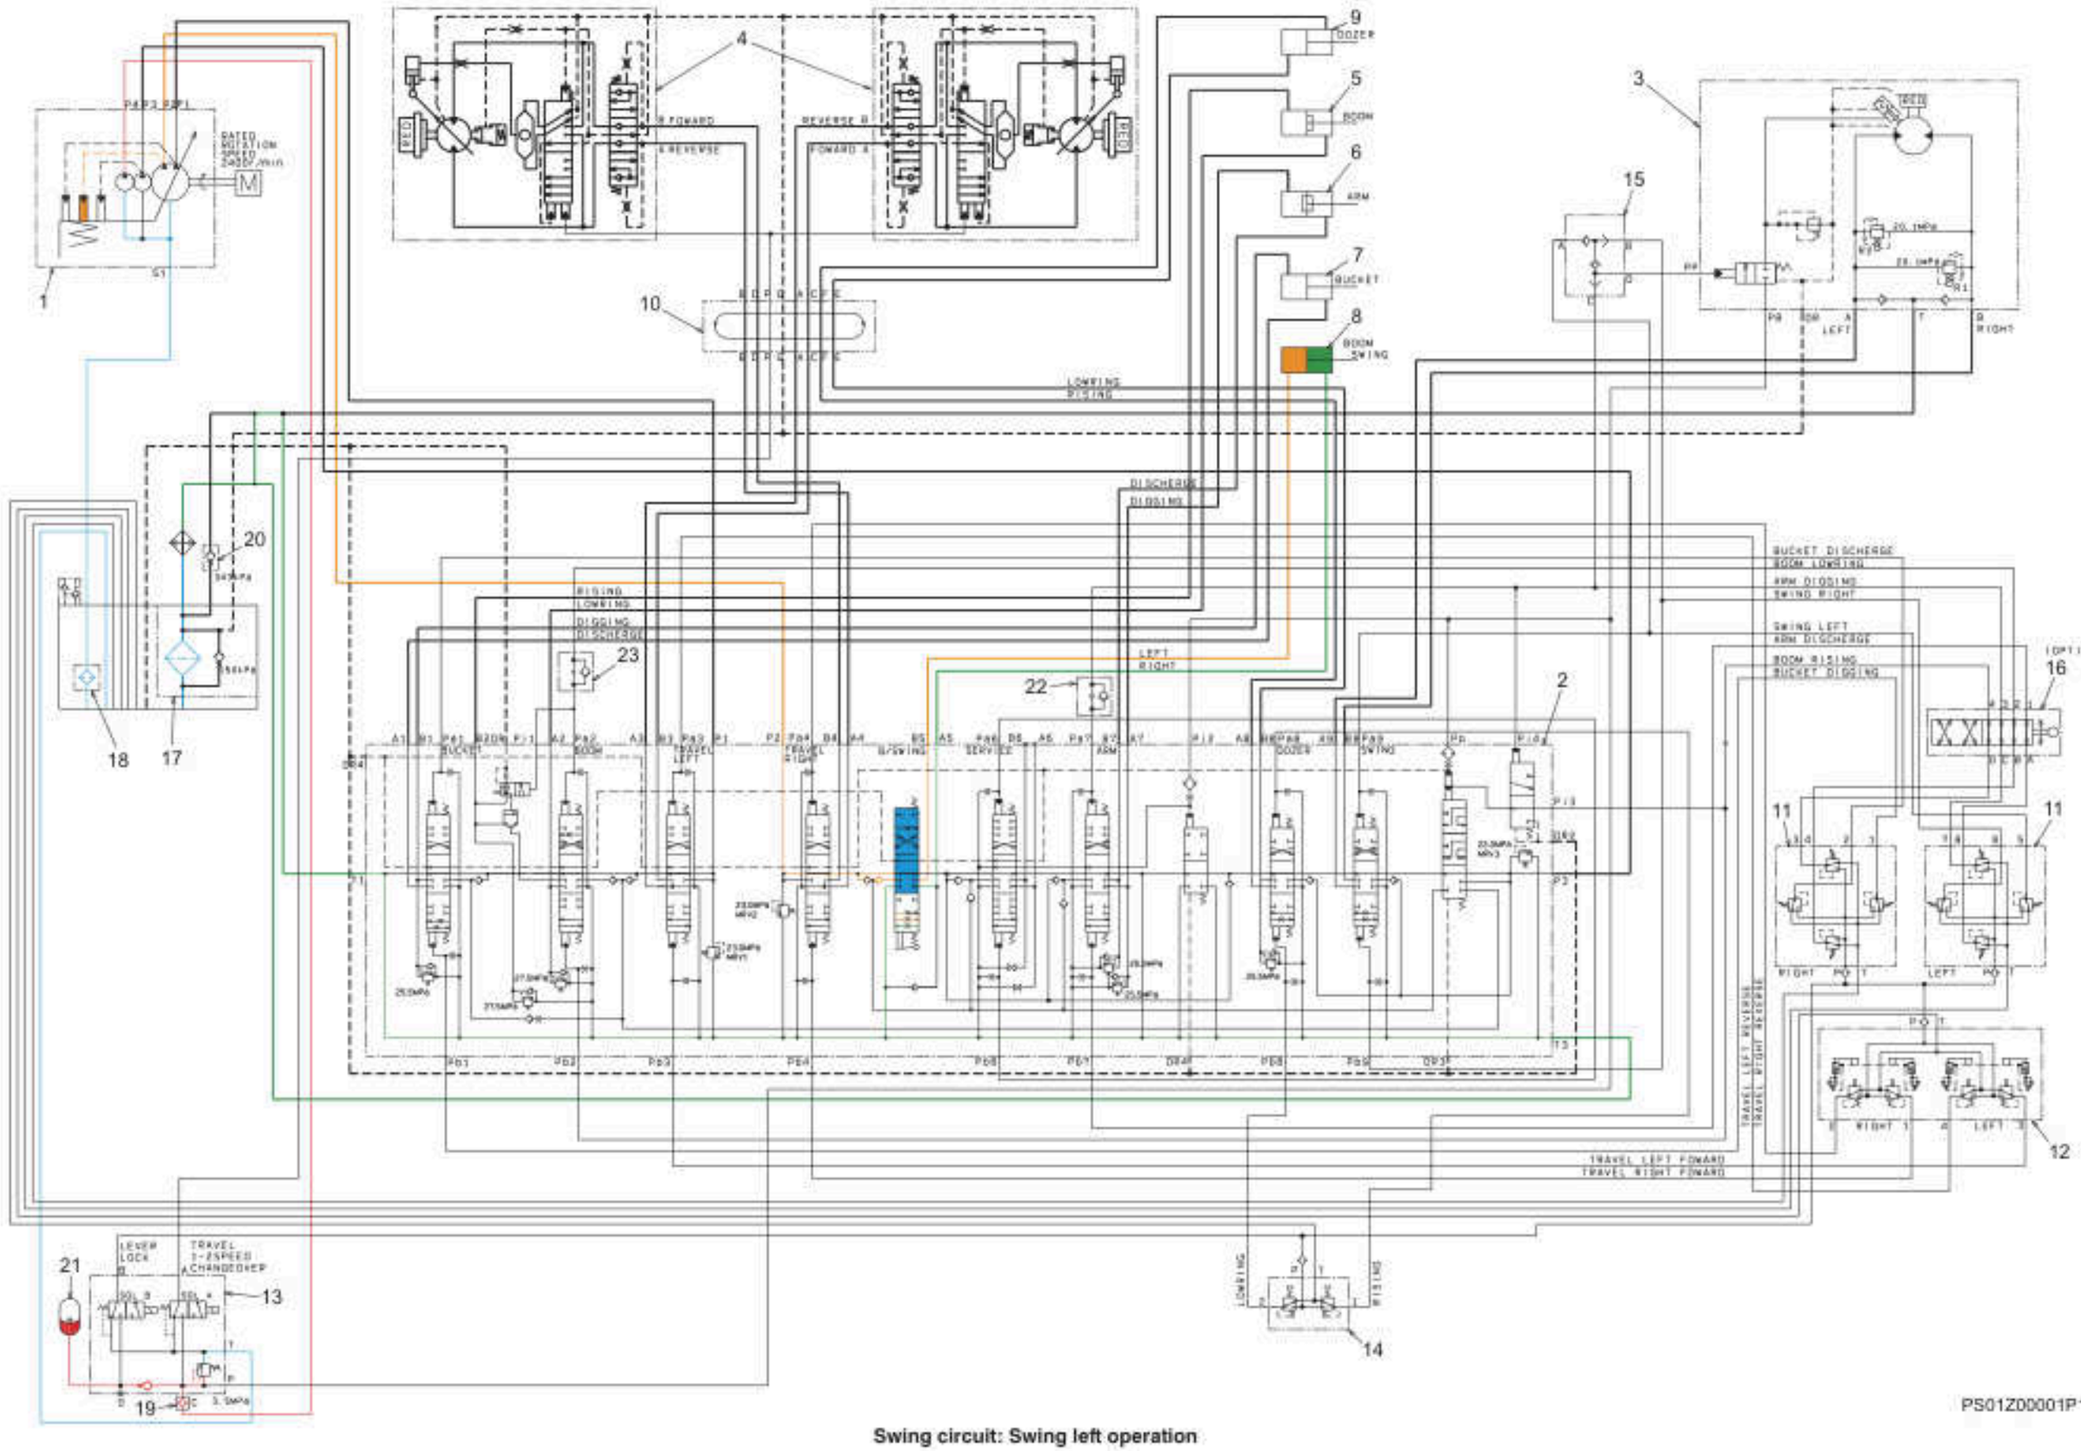

PS01Z00001P1 03

Swing circuit: Swing left operation

MidWestTech | New Holland E55Bx Tier 4 Compact Hydraulic Excavator Service Manual | Publication S5HS0013E01

Order the manual at mid-west-tech.com >