KOBELCO

SERVICE MANUAL

HYDRAULIC EXCAVATOR

SK310 III

SK310LC III

S5LC0005E


APPLICABLE:
LC03801~
YC01101~

Issued: March, 1995


MidWestTech | Kobelco SK310 III, SK310LC III Hydraulic Excavator Service Manual | Publication S5LC0005E_gb

Order the manual at mid-west-tech.com >


(7) Unit : ton

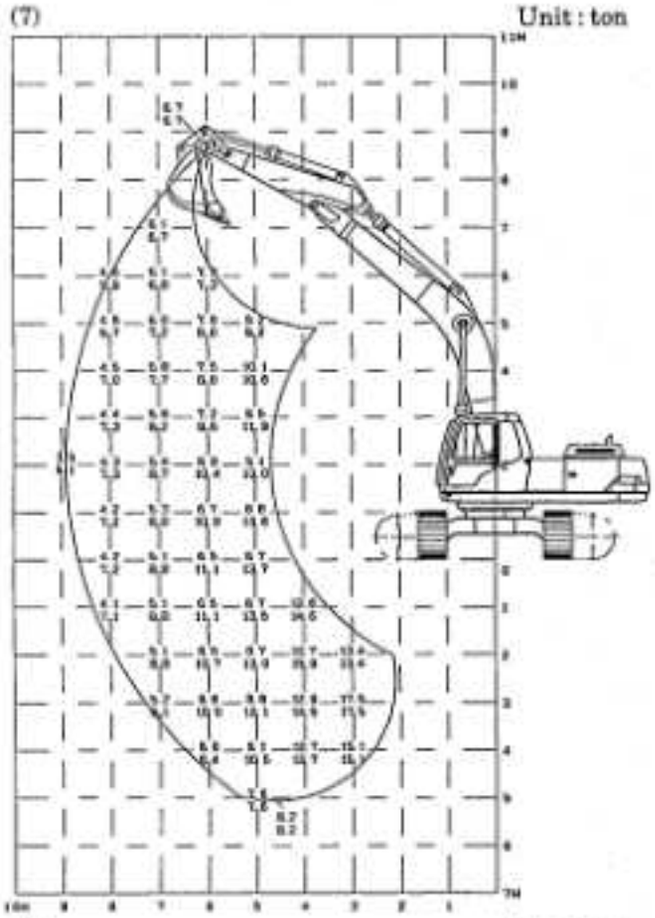


(9) Unit : ton

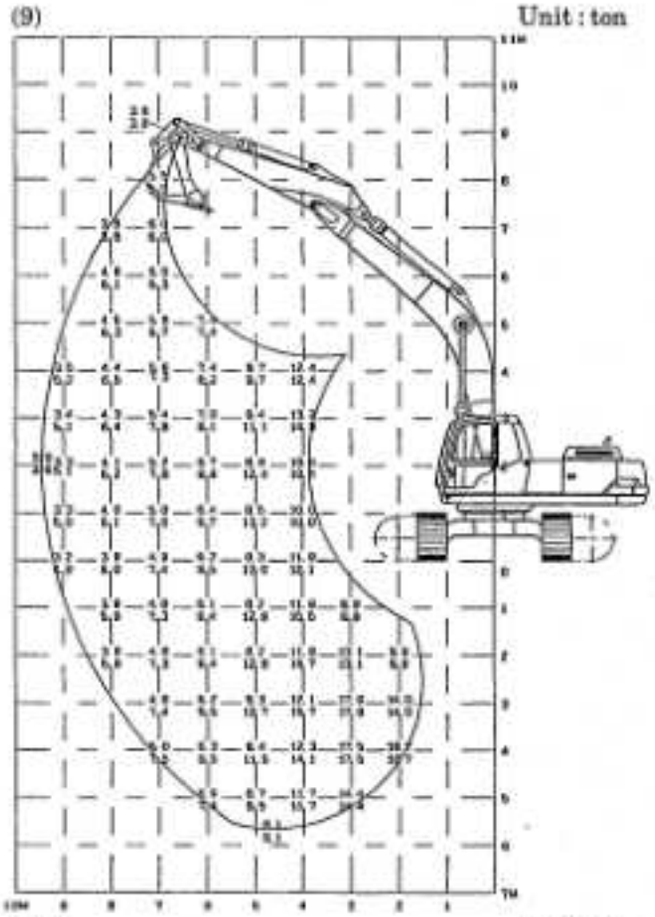

(8) Unit : ton

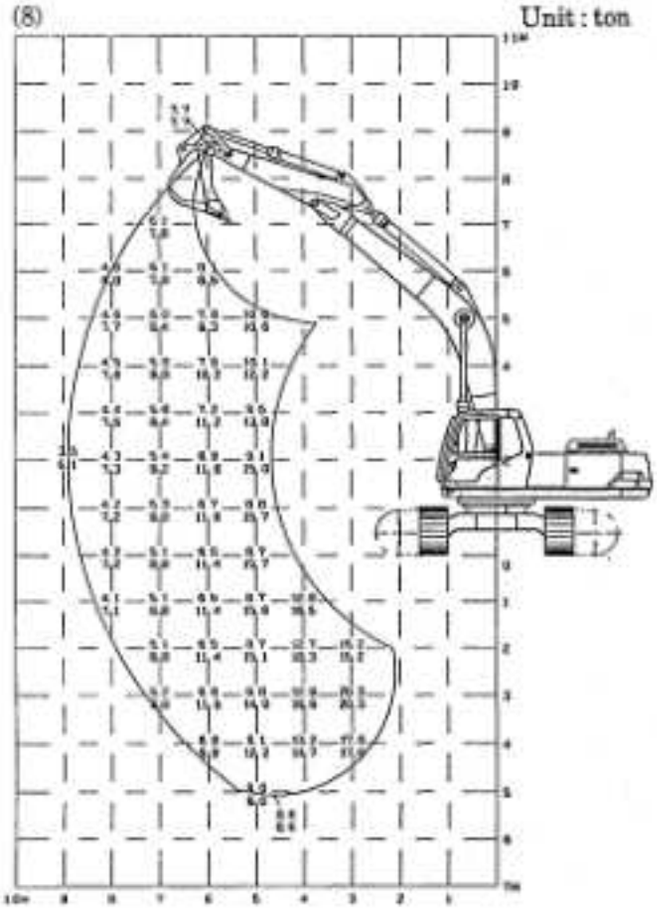


(10) Unit : ton

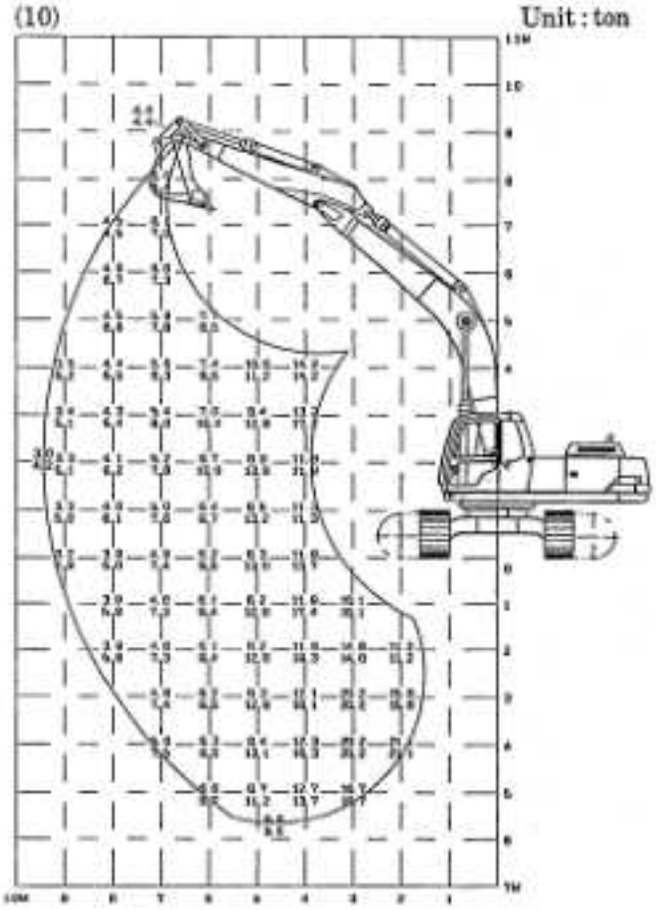


MidWestTech | Kobelco SK310 III, SK310LC III Hydraulic Excavator Service Manual | P... Order the manual at mid-west-tech.com >


(11) Unit : ton

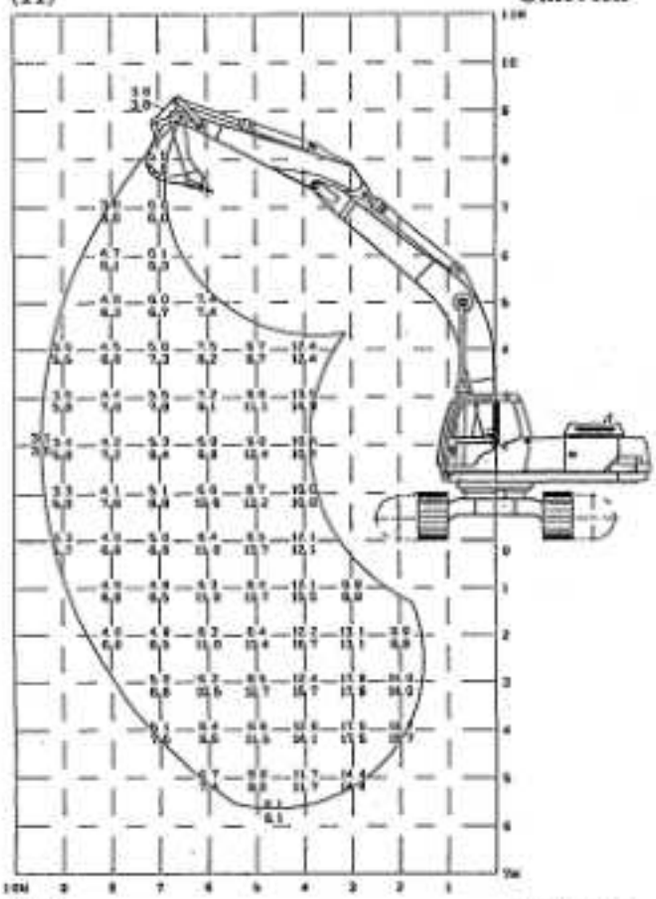


(13) Unit : ton

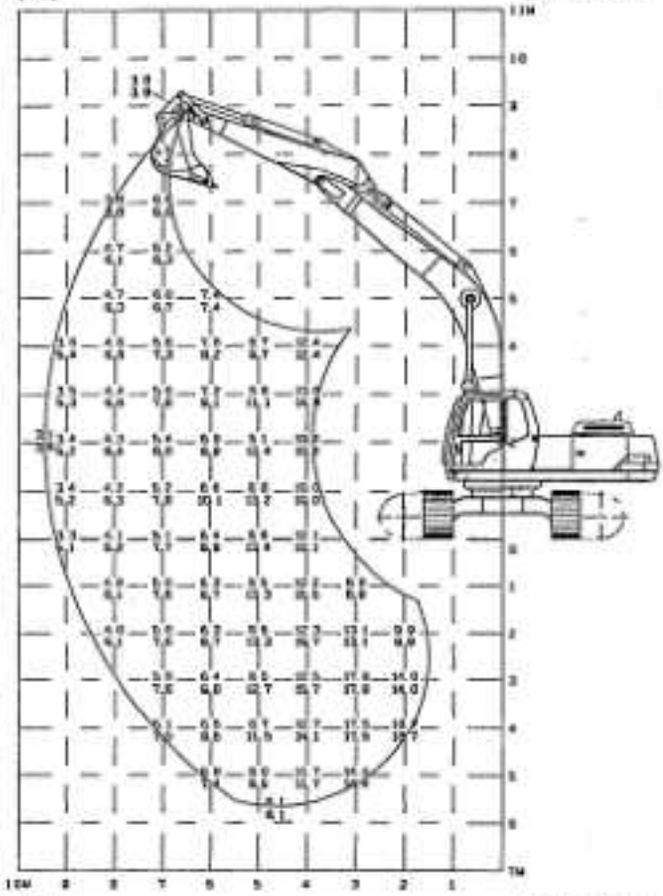

(12) Unit : ton

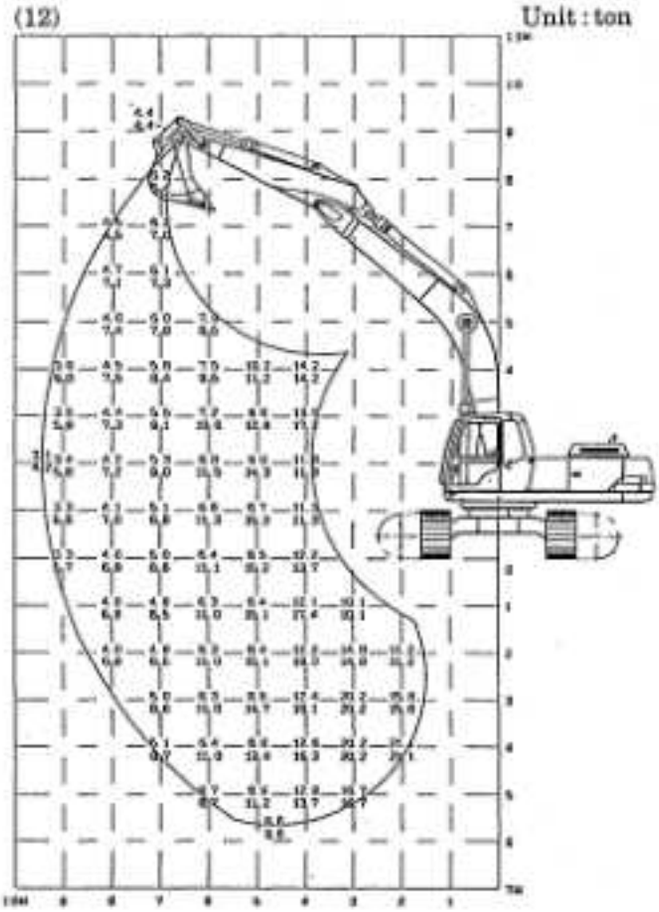


(14) Unit : ton

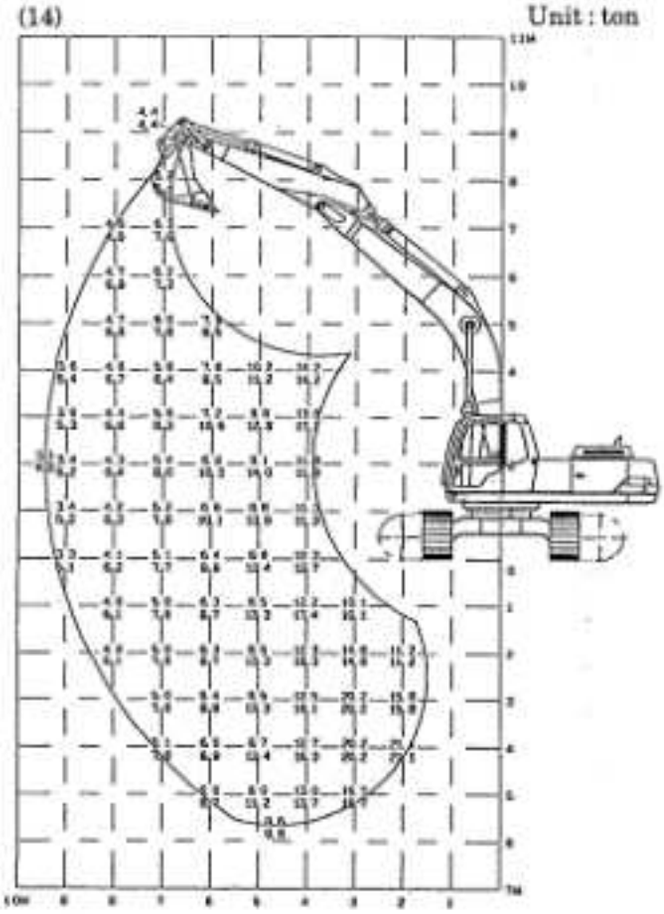


MidWestTech | Kobelco SK310 III, SK310LC III Hydraulic Excavator Service Manual | P... Order the manual at mid-west-tech.com >


(15) Unit : ton

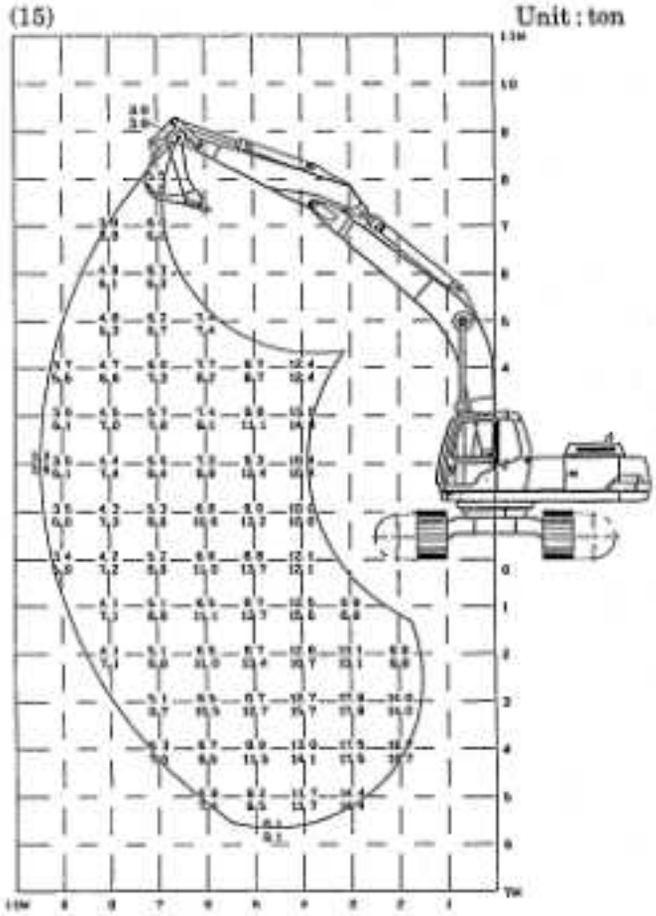


(17) Unit : ton

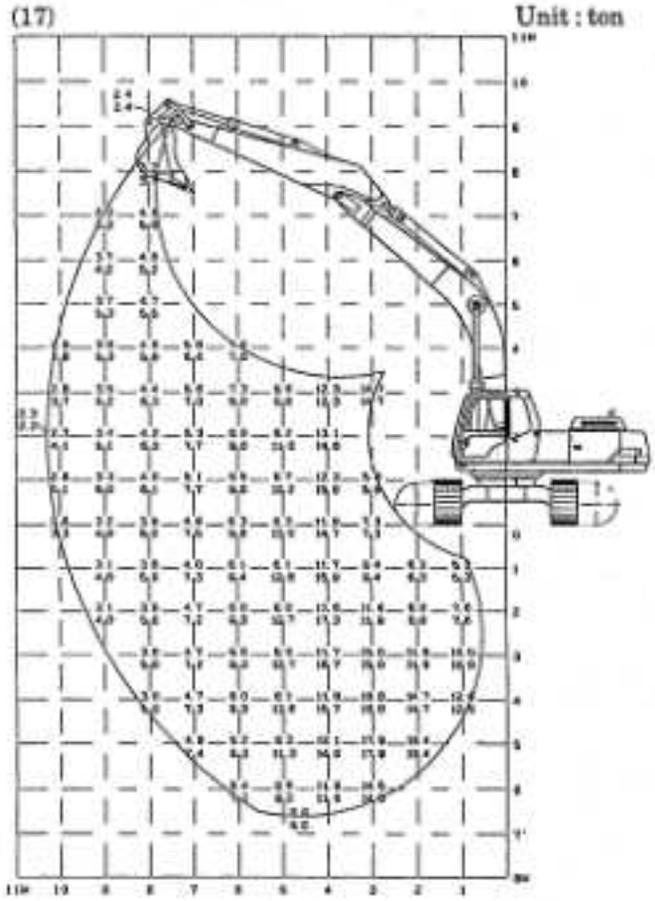

(16) Unit : ton

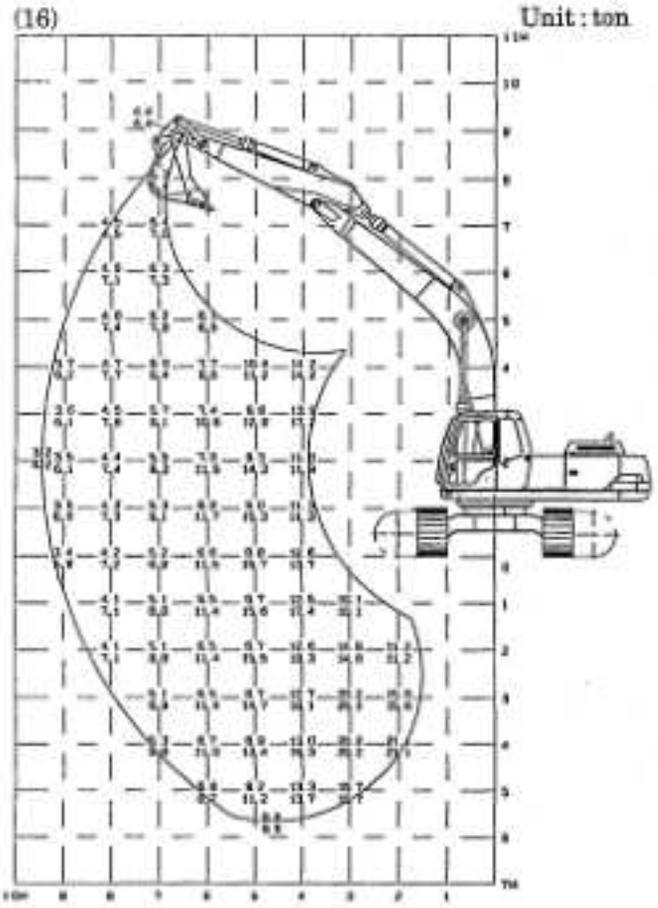


(18) Unit : ton

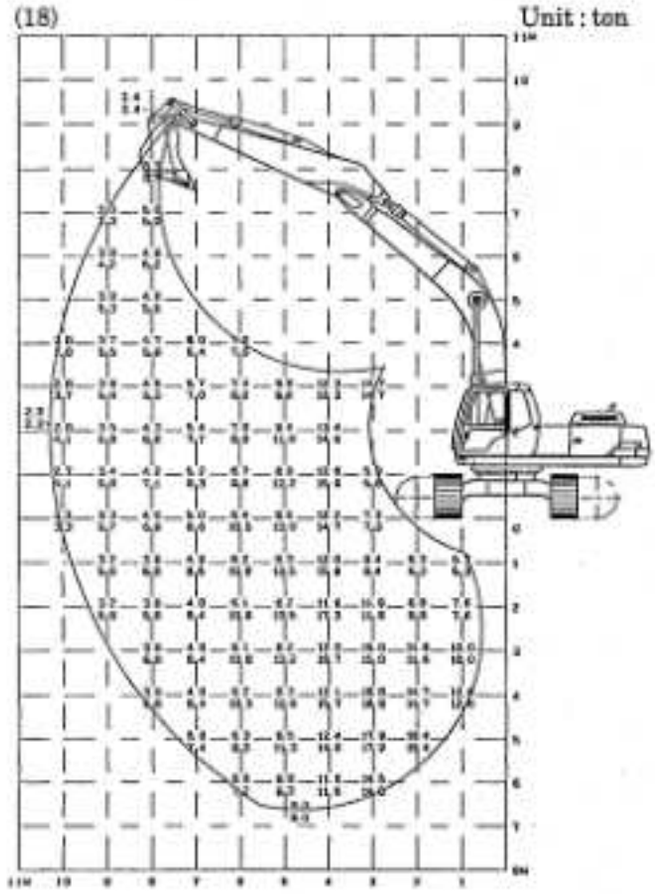


MidWestTech | Kobelco SK310 III, SK310LC III Hydraulic Excavator Service Manual | P... Order the manual at mid-west-tech.com >


3PAM-HD



3PAF

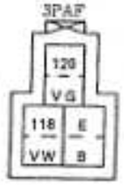


3PAF




3PAF-090



4PAF

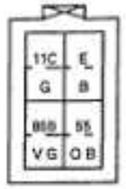


D−1 D−2




4PAF-DIODE

D−3 D−4




4PAF-DIODE

D−7 D−8

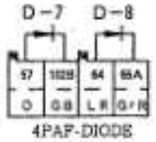


4PAF-DIODE


5PAF - AMP

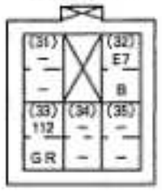


5PAF

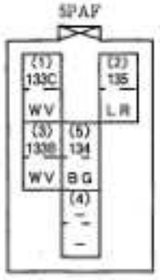


5PAF

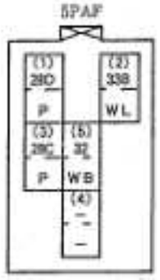


5PAF

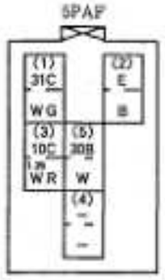

6PAF

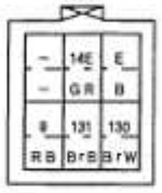


D−9 D−10

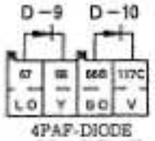


4PAF-DIODE


6PAF

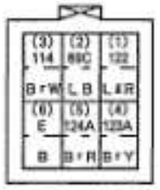


6PAF

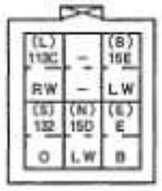


6PAF

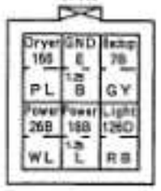


6PAF

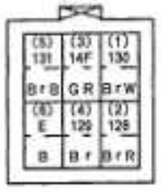


6PAF

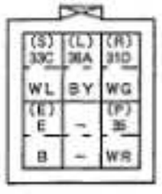


6PAM-HD

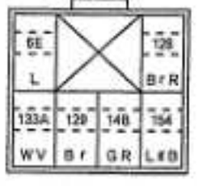


7PAF - HD

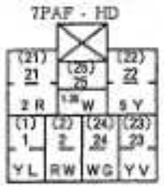


8PAM-HD

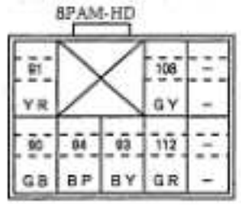


9PAF

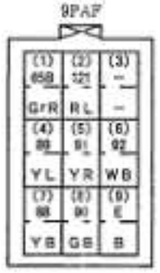


10PAM-HD

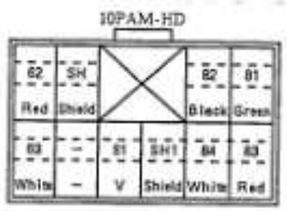


10PAF-J/B

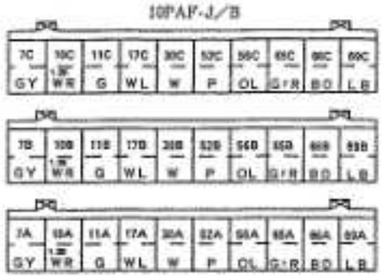


11PAF-GND

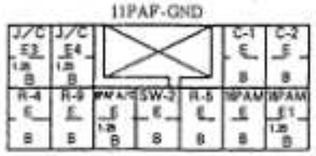


12PAM-HD

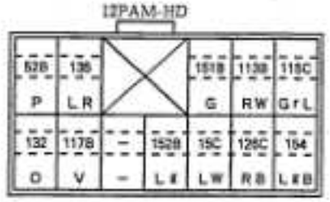


12PAF-AMP

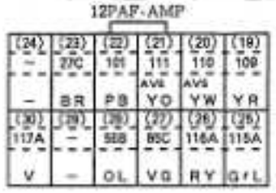

12PAF-AMP

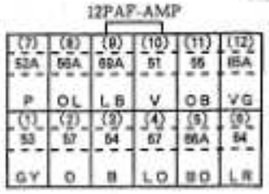

13PAM-DS

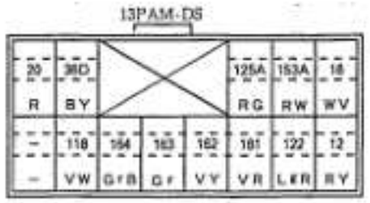


14PAF-HD




14PAM-HD




14PAM-HD

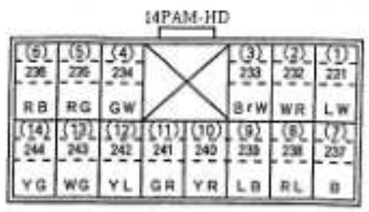


15PAF-J/B

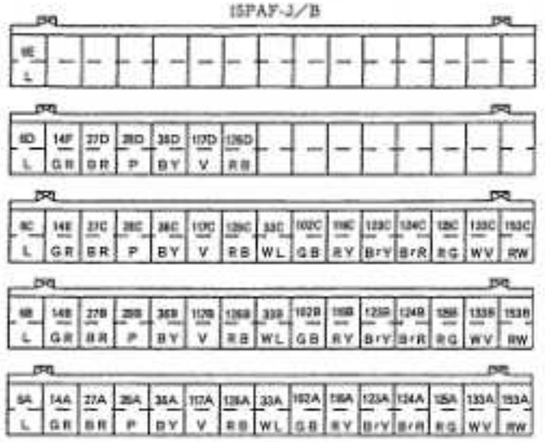


16PAM - TS

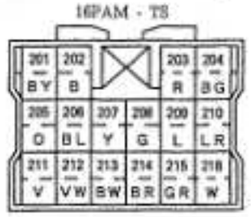


16PAF-040

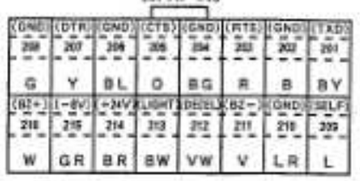


16PAM-HD

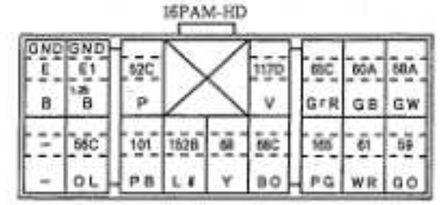


17PAF-PA

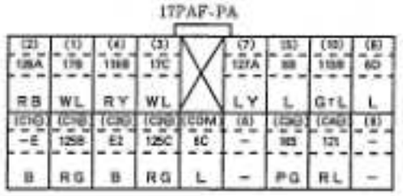

18PAM-HD

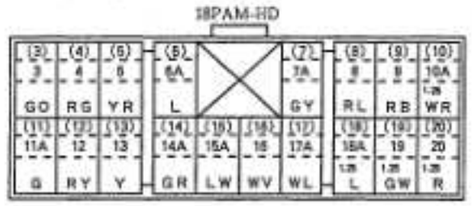

N 18PAM-HD

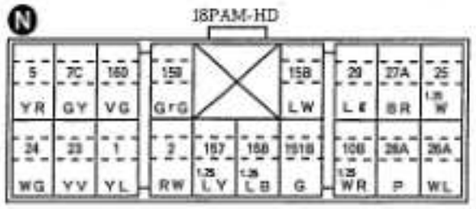

18PAF-AMP → C−2

18PAF-AMP → C−1

20PAM-HD

J/C-ORANGE

J/C-GRAY

J/C-GRAY

MidWestTech | Kobelco SK310 III, SK310LC III Hydraulic Excavator Service Manual | Publication S5LC0005E_gb

Order the manual at mid-west-tech.com >