KOBELCO

SERVICE MANUAL

HYDRAULIC EXCAVATOR

SK330 VI

SK330LC VI

SK330NLC VI

S5LC0007E

APPLICABLE:
LC06-05501~
YC06-02501~

Issued: March, 2000

MidWestTech | Kobelco SK330 VI, SK330LC VI, SK330NLC VI Hydraulic Excavator Service Manual | Publication S5LC0007E_gb

Order the manual at mid-west-tech.com >

KOBELCO

Book code No. S5LC01 07E

SHOP MANUAL

SK330 VI
SK330 LC VI
SK330 NLC VI

LC01


OUTLINE

TABLE OF CONTENTS

1. GENERAL PRECAUTIONS FOR MAKING REPAIRS 1
2. ESCAPING PROCEDURE IN CASE OF EMERGENCY 4
3. INTERNATIONAL UNIT CONVERSION SYSTEM 5

KOBELCO CONSTRUCTION MACHINERY CO., LTD.

MidWestTech | Kobelco SK330 VI, SK330LC VI, SK330NLC VI Hydraulic Excavator Serv... Order the manual at mid-west-tech.com >

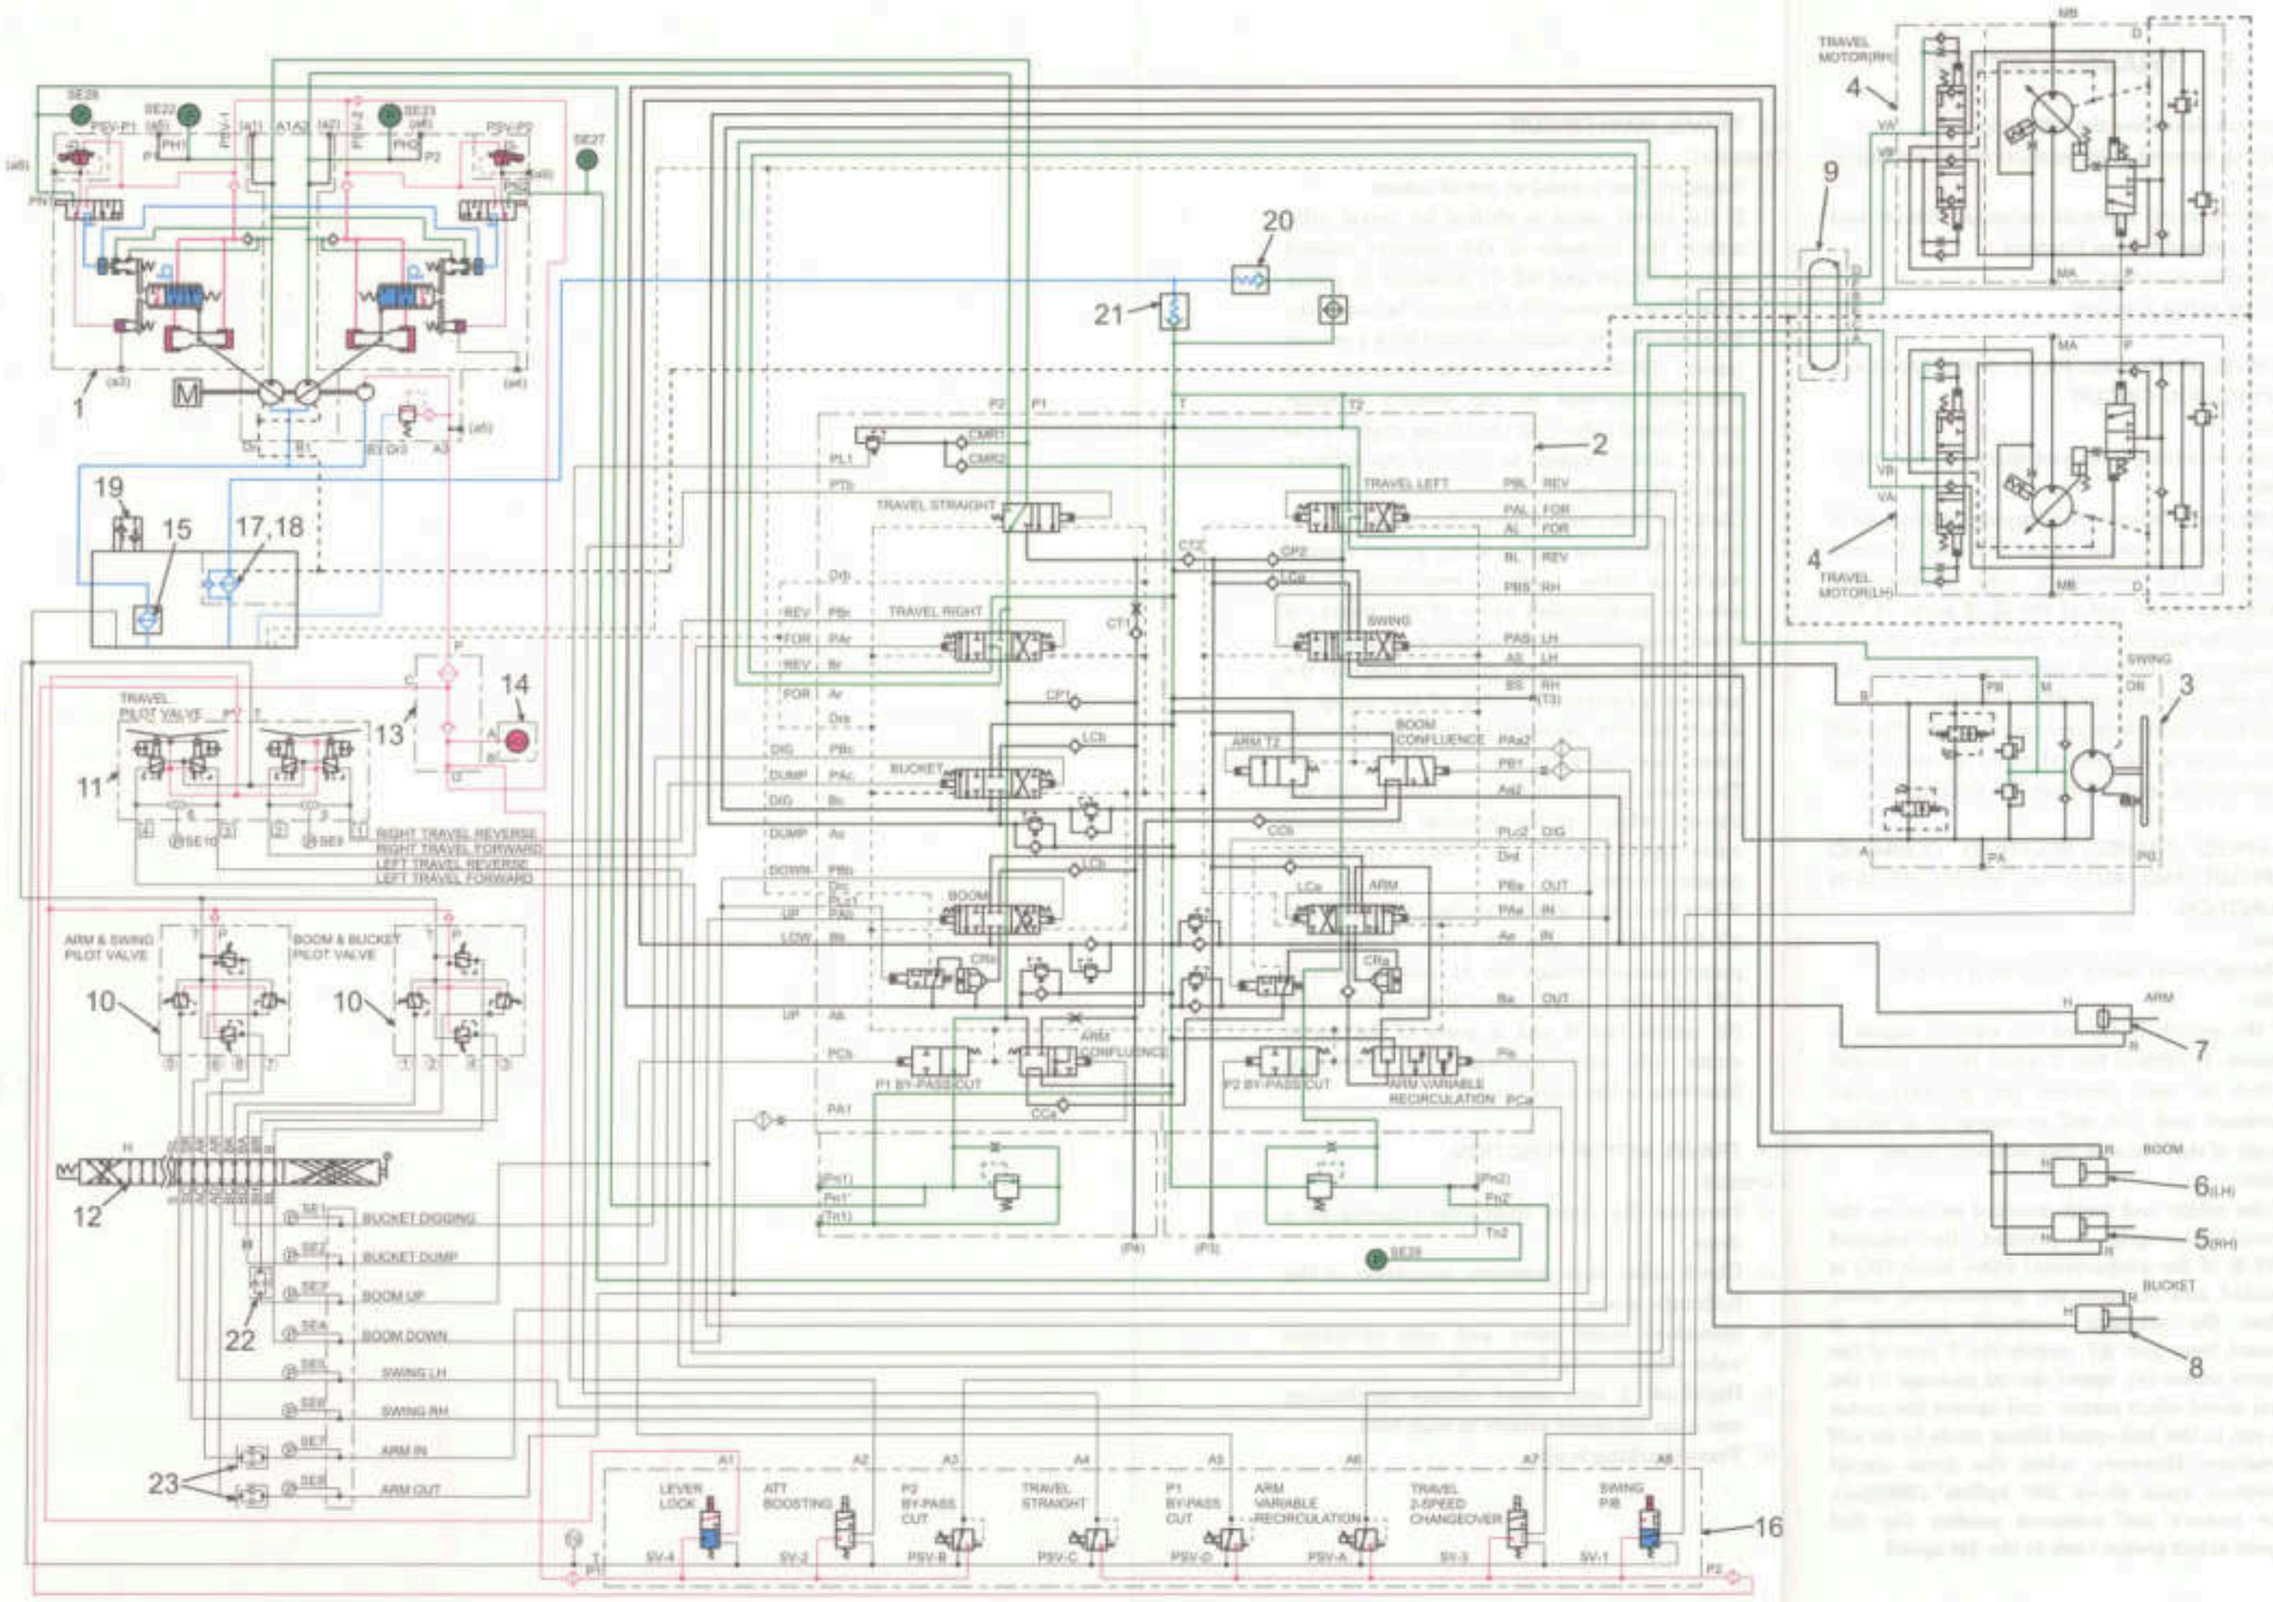

NEUTRAL CIRCUIT : NEGA-CON function at safety lock lever ON(Down:Unlocked position)

Order the manual at mid-west-tech.com >