KOBELCO

SERVICE MANUAL

HYDRAULIC EXCAVATOR

SK330LC-6E

SK330NLC-6E

S5LC0109E 01

Issued: November, 2003

APPLICABLE:
LC08-06201~
YC08-03001~
LC09-06323~
YC09-03088~

MidWestTech | Kobelco SK330LC-6E, SK330NLC-6E Hydraulic Excavator Service Manual | Publication S5LC0009E_gb

Order the manual at mid-west-tech.com >

KOBELCO

Book code No. S5LC01 09E①

SHOP MANUAL

SK330(LC)-6E
SK330NLC-6E
LC01


OUTLINE

TABLE OF CONTENTS

1. GENERAL PRECAUTIONS FOR MAKING REPAIRS 1
2. INTERNATIONAL UNIT CONVERSION SYSTEM 4

KOBELCO CONSTRUCTION MACHINERY CO., LTD.

MidWestTech | Kobelco SK330LC-6E, SK330NLC-6E Hydraulic Excavator Service Man... Order the manual at mid-west-tech.com >

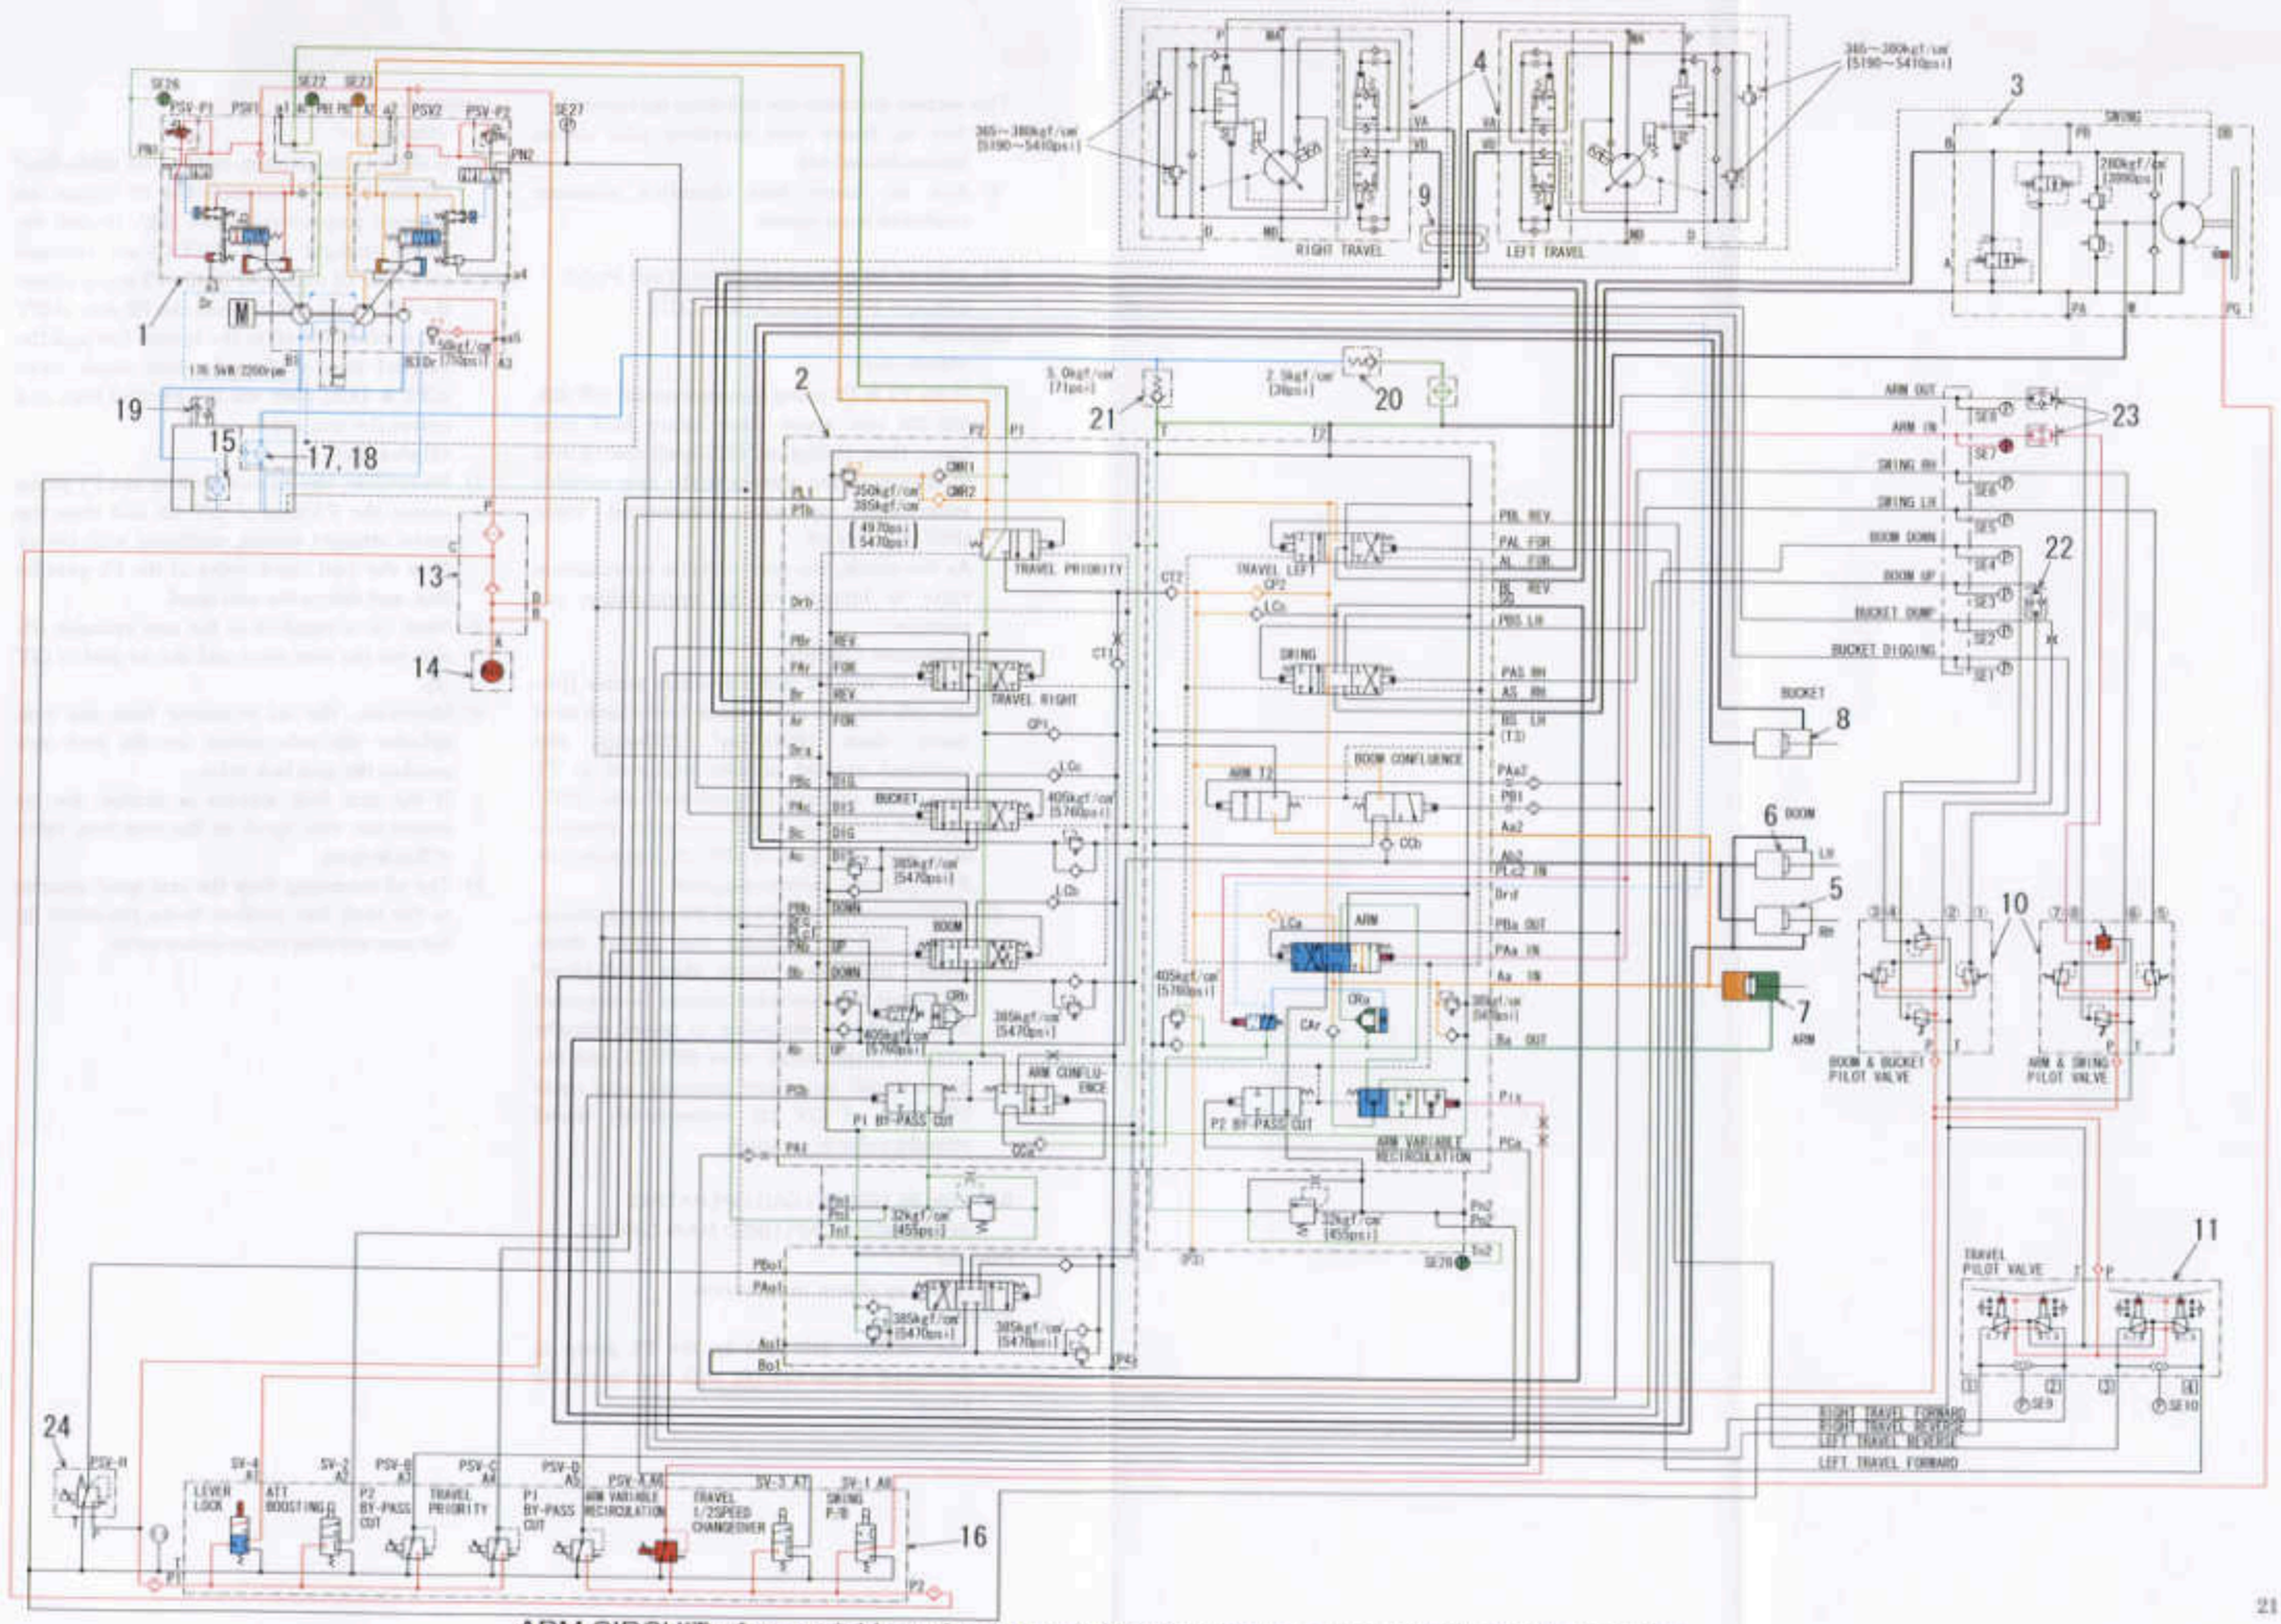

ARM CIRCUIT : Arm variable recirculation & Anti-cavitation at Arm in (Light load) operation

MidWestTech | Kobelco SK330LC-6E, SK330NLC-6E Hydraulic Excavator Service Manual | Publication S5LC0009E_gb

Order the manual at mid-west-tech.com >