KOBELCO

SERVICE MANUAL

HYDRAULIC EXCAVATOR

K916

K916LC

S5LS0001E-02 12/87

MidWestTech | Kobelco K916, K916LC Hydraulic Excavator Service Manual | Publication S5LS0001E

Order the manual at mid-west-tech.com >

Book code No. S5YS04-02E

KOBELCO

SHOP MANUAL K916LC

MAINTENANCE STANDARDS AND TEST PROCEDURES


TABLE OF CONTENTS

1. GENERAL 1
2. PRESSURE MEASUREMENT AND ADJUSTMENT
   - 2.1 Standard Measuring Condition 2
   - 2.2 Main Pressure Gauge Locations 2
   - 2.3 Pilot Pressure Gauge Location 3
   - 2.4 Checking and Regulating the Pressure 3
   - 2.5 Checking Heavy Life Pressure (Optional) 4
   - 2.6 Inspection Standards for Performance 4
3. CYLINDER SPEED 6
4. CYLINDER OIL-TIGHTNESS 7
5. SWING PERFORMANCE 8
6. TRAVEL PERFORMANCE 9
7. OIL DRAIN FROM MOTORS 10
8. PLAY OF SWING BEARING 11

KOBE STEEL, LTD.

MidWestTech | Kobelco K916, K916LC Hydraulic Excavator Service Manual | Publication S... Order the manual at mid-west-tech.com >

3.2 OPTION (HEAVY LIFT)

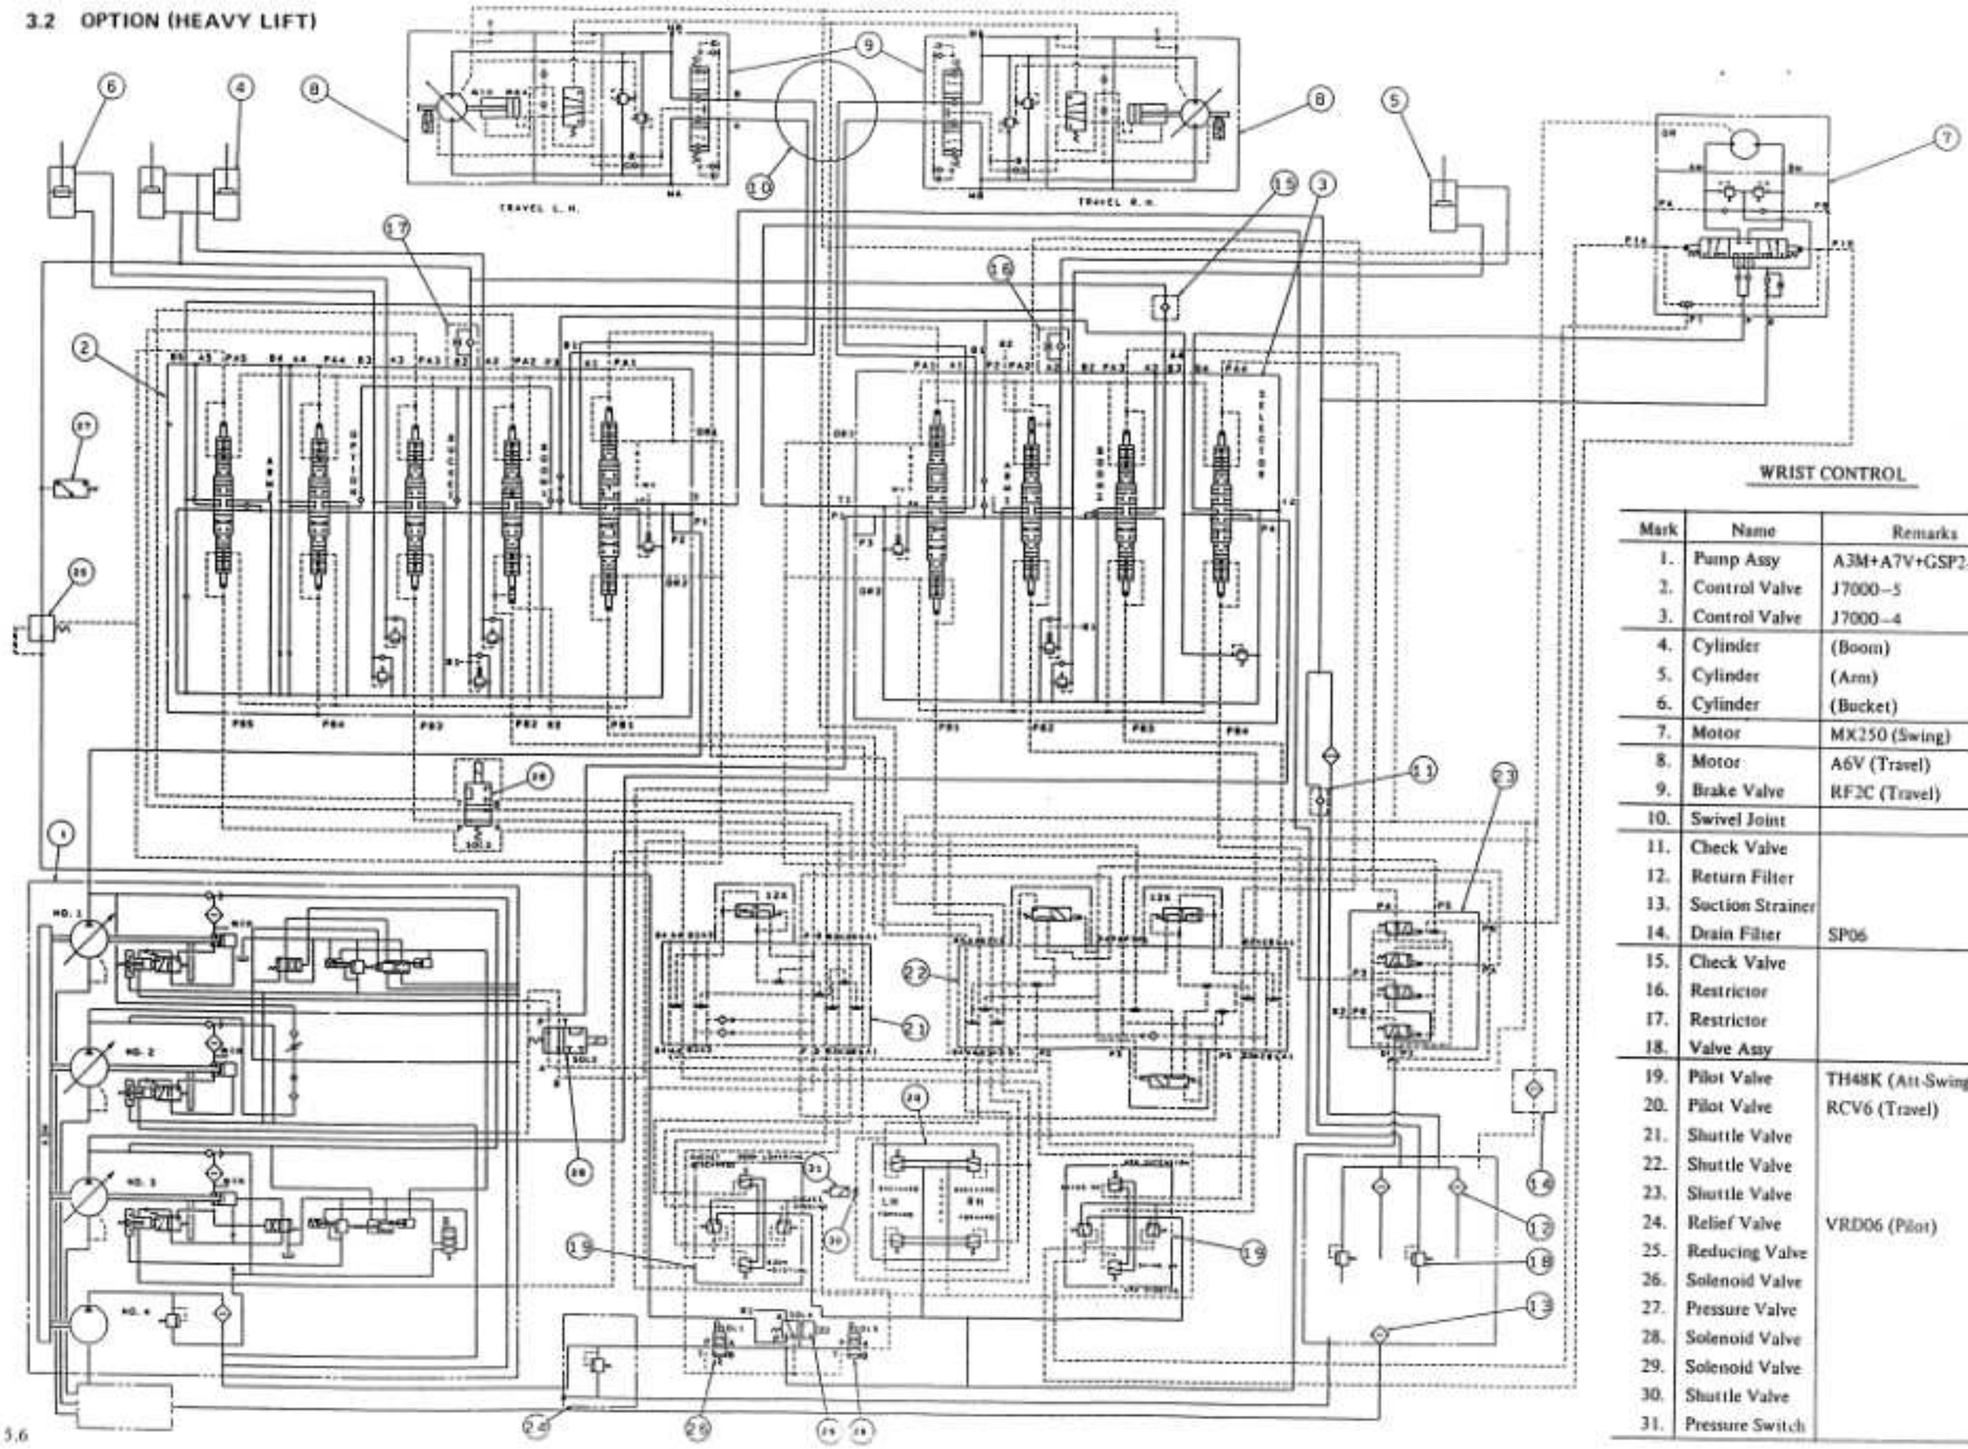

WRIST CONTROL

Mark	Name	Remarks
1.	Pump Assy	A3M+A7V+GSP2-985-0
2.	Control Valve	J7000--5
3.	Control Valve	J7000--4
4.	Cylinder	(Boom)
5.	Cylinder	(Arm)
6.	Cylinder	(Bucket)
7.	Motor	MX250 (Swing)
8.	Motor	A6V (Travel)
9.	Brake Valve	RF2C (Travel)
10.	Swivel Joint	
11.	Check Valve	
12.	Return Filter	
13.	Suction Strainer	
14.	Drain Filter	SP06
15.	Check Valve	
16.	Restrictor	
17.	Restrictor	
18.	Valve Assy	
19.	Pilot Valve	TH48K (Att-Swing)
20.	Pilot Valve	RCV6 (Travel)
21.	Shuttle Valve	
22.	Shuttle Valve	
23.	Shuttle Valve	
24.	Relief Valve	VRD06 (Pilot)
25.	Reducing Valve	
26.	Solenoid Valve	
27.	Pressure Valve	
28.	Solenoid Valve	
29.	Solenoid Valve	
30.	Shuttle Valve	
31.	Pressure Switch	

MidWestTech | Kobelco K916, K916LC Hydraulic Excavator Service Manual | Publication S5LS0001E

Order the manual at mid-west-tech.com >