KOBELCO

# SERVICE MANUAL

# HYDRAULIC EXCAVATOR

# K916 II

# K916LC II

S5LS0002E-1

APPLICABLE:
K916 II LS-0201~
K916LC II YS-0201~

Issued: 08/88

MidWestTech | Kobelco K916 II, K916LC II Hydraulic Excavator Service Manual | Publication S5LS0002E

Order the manual at mid-west-tech.com >

# SHOP MANUAL model K916-II K916LC-II

TABLE OF CONTENTS


1. SPECIFICATION ..... LS01
2. OPERATION AND CONTROLS (Refer to Operators Manual)
3. LOCATION AND WEIGHT OF COMPONENTS ..... LS03
4. MAINTENANCE STANDARDS AND TEST PROCEDURES ..... LS04
5. TROUBLESHOOTING ..... LS05
6. PREVENTIVE MAINTENANCE (Refer to Operators Manual)
7. WORKING STANDARDS ..... LS07


○ How to Index each Shop Manual Section
The GENERAL of this shop manual consists of 7 headings as shown above. Each section can be easily referred to by indexes appended to the margin of the page as indicated on the right. Please use the indexes for speedy reference.



KOBELCO

# GENERAL

MidWestTech | Kobelco K916 II, K916LC II Hydraulic Excavator Service Manual | Publicatio... Order the manual at mid-west-tech.com >

(5) Designatio of control circuits and valve name

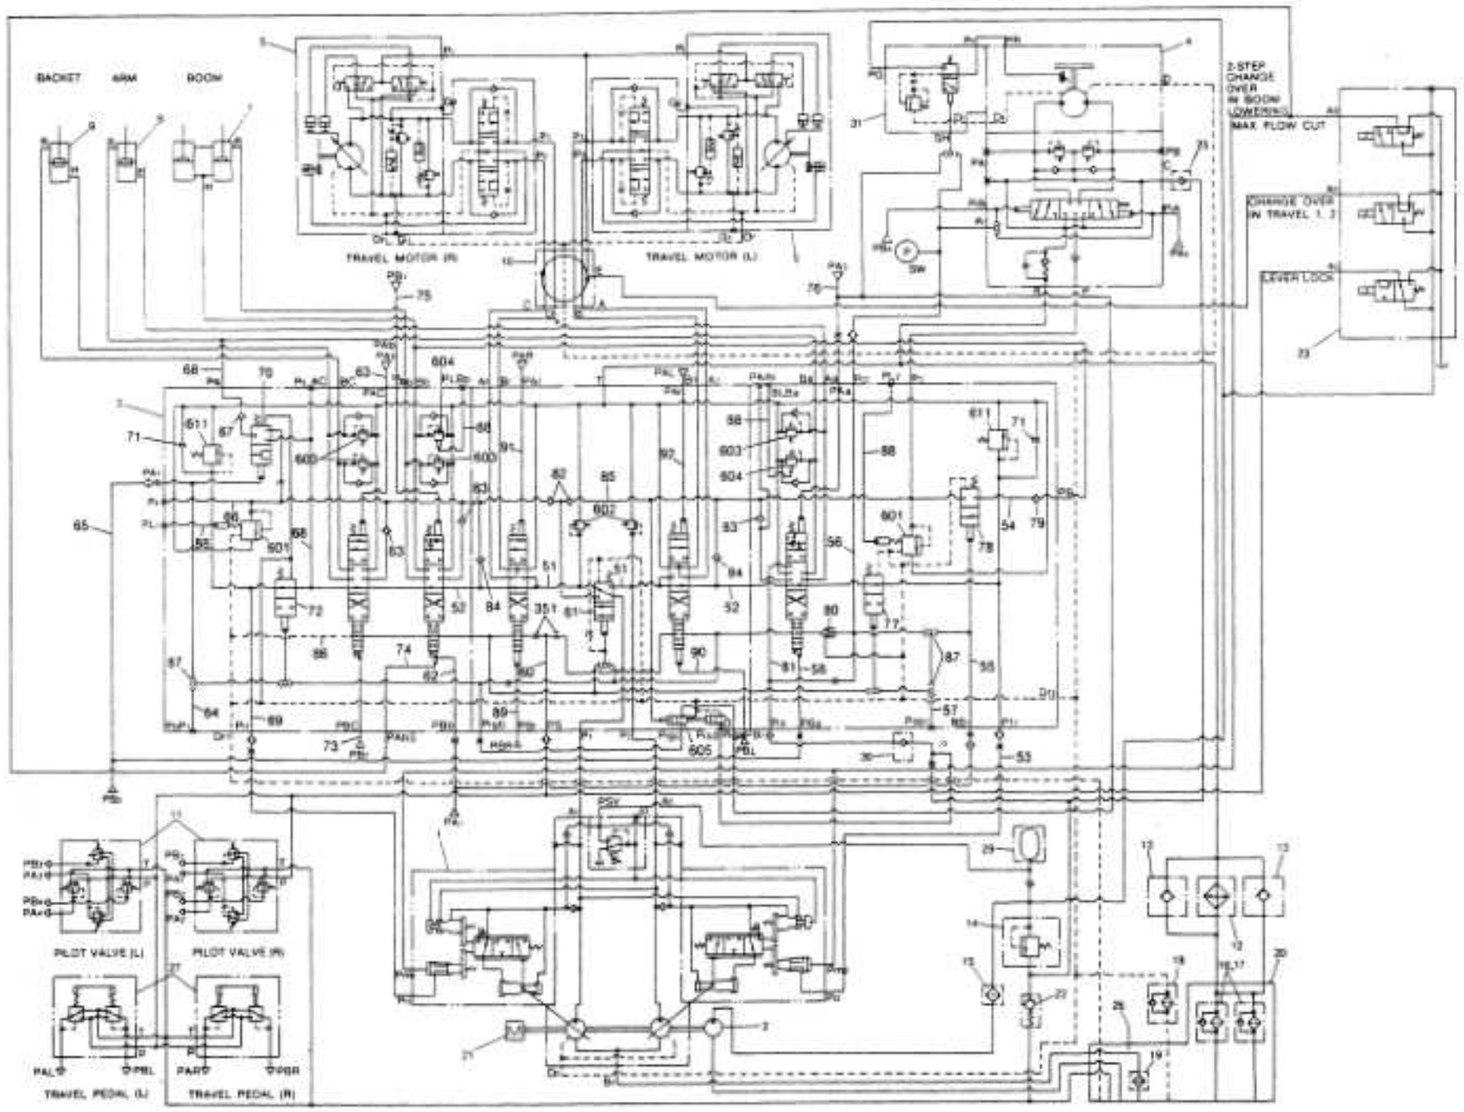



Fig. 10

| No. | Name | No. | Name |
|---|---|---|---|
| 1. | PUMP | 62. | BOOM HOISTING PILOT LINE |
| 2. | PUMP GEAR | 63. | BUCKET DIGGING PILOT LINE |
| 3. | VALVE CONTROL | 64. | OPTION PILOT LINE (RH) |
| 4. | MOTOR ASSY | 65. | CONFLUENT SIGNAL LINE (RH) |
| 5. | MOROR | 66. | OPTION FOR BREAKER LINE |
| 7. | CYLINDER | 67. | ARM CONFLUENT FLOW CHECK VALVE |
| 8. | CYLINDER | 68. | ARM CONFLUENT FLOW CIRCUIT |
| 9. | CYLINDER | 69. | NAGATIVE CONTROL SIGNAL LINE (RH) |
| 10. | JOINT SWIVEL | 70. | ARM CONFLUENT FLOW CHANGEOVER VALVE |
| 11. | VALVE PILOT | 71. | NAGATIVE ORIFICE |
| 12. | OIL COOLER | 72. | NEUTRAL CUT VALVE (RH) |
| 13. | VALVE CHECK | 73. | BUCKET DAMPING PILOT LINE |
| 14. | VALVE RELIEF | 74. | BOOM LOWERING 2-STEP CHANGEOVER PILOT LINE |
| 15. | FILTER LINE | 75. | BOOM LOWERING PILOT LINE |
| 16. | ELEMENT FILTER | 76. | ARM DIGGING PILOT LINE |
| 17. | VALVE ASSY | 77. | NEUTRAL CUT VALVE (LH) |
| 18. | FILTER DRAIN | 78. | BOOM CONFLUENT FLOW CHANGEOVER VALVE |
| 19. | SUCTION STRAINER | 79. | BOOM CONFLUENT FLOW CHECK VALVE |
| 20. | TANK ASSY HYDR | 80. | LOGIC VALVE |
| 21. | ENGINE ASSY | 81. | ARM REGENERATION PILOT LINE |
| 22. | VALVE CHECK | 82. | CHECK VALVE |
| 23. | VALVE SOLENOID | 83. | LOAD CHECK VALVE |
| 25. | VALVE CHECK | 84. | CHECK VALVE |
| 26. | SOHATIC AIR LINE | 85. | PARALLEL LINE |
| 27. | VALVE PILOT | 86. | SIDE BYPASS LINE |
| 29. | ACCUMULATOR | 87. | SHUTTLE VALVE |
| 30. | VALVE RESTRICTOR | 88. | HEAVY LIFT BOOST PRESSURE (O.P.T) |
| 31. | VALVE REDUCING | 89. | TRAVEL RH RETREAT P.L |
| 51. | MAIN PATH | 90. | TRAVEL LH RETREAT P.L |
| 52. | BYPASS PATH | 91. | TRAVEL RH ADVANCE P.L |
| 53. | NAGATIVE CONTROL SIGNAL LINE | 92. | TRAVEL LH ADVANCE P.L |
| 54. | BOOM CONFLUENT FLOW LINE | 351. | ORIFICE |
| 55. | CONFLUENT SIGNAL LINE (LH) | 601. | MAIN RELIEF VALVE |
| 56. | SWING PILOT LINE | 602. | TRAVEL RELIEF VALVE |
| 57. | OPTION PILOT LINE (LH) | 603. | PORT RELIEF VALVE |
| 58. | ARM EXTRUSION PILOT LINE | 604. | PORT RELIEF VALVE |
| 60. | SERVO PRESSURE CIRCUIT | 605. | ARM CONFLUENT FLOW & REGENERATION CUT SEQUENCE VALVE |
| 61. | TRAVEL PREFERENTIAL CHAGEOVER | 611. | LOW-PRESSURE RELIEF VALVE |



MidWestTech | Kobelco K916 II, K916LC II Hydraulic Excavator Service Manual | Publication S5LS0002E
Order the manual at mid-west-tech.com >