SERVICE MANUAL

E50B

Hydraulic Excavator

PIN number PJ06 - and higher

Part number S5PJ0033E01
English
July 2010

NEW HOLLAND CONSTRUCTION

MidWestTech | New Holland E50B Hydraulic Excavator Service Manual | Publication S5PJ... Order the manual at mid-west-tech.com >

1. OUTLINE

TABLE OF CONTENTS

1.1 GENERAL PRECAUTIONS FOR REPAIRS 1-3
1.1.1 PREPARATION BEFORE DISASSEMBLING 1-3
1.1.2 SAFETY IN DISASSEMBLING AND ASSEMBLING 1-3
1.1.3 DISASSEMBLING AND ASSEMBLING HYDRAULIC EQUIPMENT 1-4
1.1.4 ELECTRICAL EQUIPMENT 1-6
1.1.5 HYDRAULIC PARTS 1-7
1.1.6 WELDING REPAIR 1-7
1.1.7 ENVIRONMENTAL MEASURE 1-7
1.2 INTERNATIONAL UNIT CONVERSION SYSTEM (Based on MARKS' STANDARD HANDBOOK FOR MECHANICAL ENGINEERS) 1-8

Book Code No. **S5PA0105E01**

MidWestTech | New Holland E50B Hydraulic Excavator Service Manual | Publication S... Order the manual at mid-west-tech.com >

2. SPECIFICATIONS

TABLE OF CONTENTS

2.1 COMPONENTS NAME 2-3
2.2 MACHINE DIMENSIONS 2-4
2.3 SPECIFICATIONS AND PERFORMANCE 2-5
2.4 MACHINE & COMPONENTS WEIGHT (DRY) 2-7
2.5 TRANSPORTATION 2-9
2.6 TYPE OF CRAWLER SHOES 2-12
2.7 TYPE OF BUCKET 2-13
2.8 ENGINE SPECIFICATIONS 2-14
2.8.1 SPECIFICATIONS 2-14
2.8.2 ENGINE PERFORMANCE CURVE 2-15

Book Code No. **S5PJ0233E01**

MidWestTech | New Holland E50B Hydraulic Excavator Service Manual | Publication S... Order the manual at mid-west-tech.com >

3. ATTACHMENT DIMENSIONS

TABLE OF CONTENTS

3.1 BOOM 3-3
3.1.1 BOOM DIMENSIONAL DRAWINGS 3-3
3.1.2 BOOM MAINTENANCE STANDARDS 3-4
3.2 ARM 3-8
3.2.1 ARM DIMENSIONAL DRAWINGS 3-8
3.2.2 ARM MAINTENANCE STANDARDS 3-10
3.3 BUCKET 3-14
3.3.1 BUCKET DIMENSIONAL DRAWINGS 3-14
3.3.2 DETAIL DIMENSIONAL DRAWINGS OF LUG SECTION 3-15
3.3.3 DETAIL DIMENSIONAL DRAWINGS OF BOSS SECTION 3-15
3.4 DOZER 3-17
3.4.1 DOZER DIMENSIONAL DRAWINGS 3-17
3.4.2 DOZER MAINTENANCE STANDARDS 3-18
3.5 SWING 3-20
3.5.1 SWING BRACKET DIMENSIONAL DRAWINGS 3-20
3.5.2 SWING PORTION MAINTENANCE STANDARDS 3-21


Book Code No. **S5PJ0333E01**

MidWestTech | New Holland E50B Hydraulic Excavator Service Manual | Publication S... Order the manual at mid-west-tech.com >

23.1 HOW TO READ CIRCUIT DIAGRAM AND HARNESS CONNECTION

23.1.1 ELECTRIC CIRCUIT DIAGRAM

(1) In the diagram, the number, size and color of wires are shown on the wiring line.
The size of the wire is to be 0.75 sq (square mm = mm^2) unless otherwise specified.

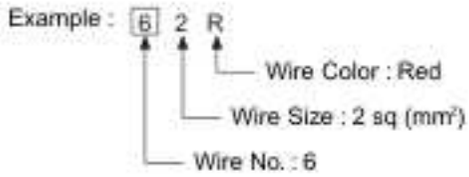


WIRING COLOR TABLE

Symbol	Color	Symbol	Color	Symbol	Color
B	BLACK	Y	YELLOW	Gr	GRAY
G	GREEN	P	PINK	Sb	SKY BLUE
L	BLUE	O	ORANGE	V	VIOLET
R	RED	Br	BROWN		
W	WHITE	Lg	LIGHT GREEN		

23.1.2 HARNESS CONNECTION

(1) Indication for Connector

1. The figure for the connector pin arrangement is shown by putting the lock (nail) to upper portion, and looking from the fitting face.
2. The numbers in the connector show the wire No., and alphabetical letters show the wire color.
3. On the side face of connector, the connector name and serial number of the connector No. are indicated.
4. At the place indicated as "DOUBLE SPLICE", two wires are connected to one place.

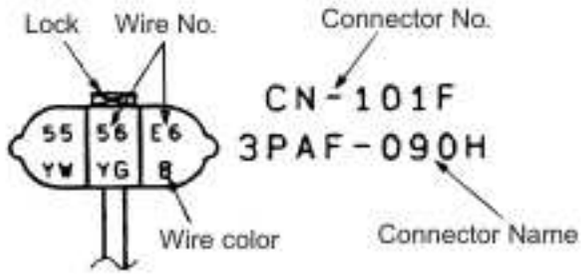

(2) The connector is to be connected with engaging the male (M) and female (F) connectors of the same number.
Example : CN-101M and CN-101F
Where : M means for Male, and F for Female.

(3) The mark shown the right figure means the connector with diode. The direction for diode is shown by the arrow.



(4) The AVSS wires are to be used for the size between 0.75 sq and 2 sq. AVS wires between 3 sq and 5 sq and others are AV wires, unless otherwise specified.
(5) The wire size is 0.75 sq, unless otherwise specified.
(6) The treatment for the harness end is to be as follows :

1) ——— : After roughly applying harness taping, wires are installed in a corrugated tube.
2) ——— : Harness taping by two plies.
3) ——— : No harness treatment for connection.

(7) The length for the above (6)-3) is to be 30±10 mm. (1.2±0.4 in), and the length includes in the total length of wire shown in the diagram.

MidWestTech | New Holland E50B Hydraulic Excavator Service Manual | Publication S... Order the manual at mid-west-tech.com >

32.2.1.8 POSSIBLE CAUSES FOR TROUBLE AND REMEDY

Trouble Conditions	Major Possible Causes	Remedy
Oil leakage from sliding face of piston rod. (A ring shape oil is formed on piston rod and enlarged resulting dripping down of oil)	Foreign matter is caught by U-ring or wiper ring at its inside periphery.	Remove foreign matter.
	Scuffing or fault on U-ring or wiper ring at its inside periphery.	Replace each part with new one.
	Scuffing on sliding face of piston rod.	Grind sliding face with a fine oil stone. (less than 1.6S)
		If leakage is not stopped by grinding, replace seals such as U-ring, etc. with new ones.
		If leakage is not stopped by replacing seals, replace piston rod.
	Peeling off of hard chrome plating.	Re-plating of hard chrome on piston rod.
Oil leakage from outer periphery of cylinder head.	Damages on O-ring.	Replace.
	Damages on back-up ring.	Replace.
Oil leakage from welded portion.	Damages on welded portion on tube.	Replace.
Piston movement due to leakage. (For the case when static load that is equivalent to product of multiplication of max. working pressure and cylinder area, is applied to rod, max. movement of piston is larger than 0.5mm (0.02 in)) per 10 minutes.	Foreign matter is caught by sliding face of slide ring.	Remove foreign matter.
	Scuffing or faulty condition on sliding face of slide ring.	Replace.
	Scuffing on sliding face of seal ring assembly.	Replace.
	Damages on O-ring.	Replace.

MidWestTech | New Holland E50B Hydraulic Excavator Service Manual | Publication S... Order the manual at mid-west-tech.com >

3TNV84T (~ EPA Tier2)

Engine Model	3TNV84T						
Version	CL			VM			
Type	Vertical In-line Diesel Engine						
Combustion System	Direct Injection						
Aspiration	Turbocharged						
No. of Cylinders	3						
Bore × Stroke	84 × 90mm						
Displacement	1.496L						
Continuous Rated Output	min^{-1}	1500	1800				
	kW	14.0	16.5				
	PS	19.0	22.5				
Max. Rated Output (Net)	min^{-1}	1500	1800	2400	2600	2800	3000
	kW	15.8	18.8	25.0	26.8	29.1	30.9
	PS	21.5	25.5	34.0	36.5	39.5	42.0
High Idling	min^{-1}	1600 ± 25	1895 ± 25	2590 ± 25	2810 ± 25	2995 ± 25	3210 ± 25
Engine Weight (Dry) *with Flywheel Housing	161 kg			155 kg			
PTO Position	Flywheel End						
Direction of Rotation	Counterclockwise Viewed From Flywheel End						
Cooling System	Liquid-Cooled with Radiator						
Lubricating System	Forced Lubrication with Trochoid Pump						
Normal Oil Pressure at Rated Engine Speed	0.29 - 0.44 MPa			0.34 - 0.49 MPa		0.39 - 0.54 MPa	
Normal Oil Pressure at Low Idle Speed	0.06 MPa						
Starting System	Electric Starting (Starter Motor: DC12V (1.2 kW)) ***						
	Alternator: DC12V, 40A***						
	Recommended Battery Capacity: 12V,55 Ah*** (5h rating)						
Dimensions (L × W × H)*	589 × 486 × 622mm			564 × 486 × 622mm			
Engine Oil Pan Capacity**	6.7/3.9L (Dipstick Upper Limit / Lower Limit)						
Engine Coolant Capacity	2.0L Engine Only						
Standard Cooling Fan	350mm O.D., 6 Blade Pusher-Type ***						
Crank V-pulley dia./ Fan V-pulley dia.	ϕ120/ ϕ90mm ***			ϕ110/ ϕ110mm ***			

* *Engine specifications without radiator.*

** *Engine oil capacity for a "Deep Standard" oil pan. Refer to the operation manual provided by the driven machine manufacturer for the actual engine oil capacity of your machine.*

*** *May vary depending on application.*

MidWestTech | New Holland E50B Hydraulic Excavator Service Manual | Publication S... Order the manual at mid-west-tech.com >

CAUTION

Do not operate the engine if the alternator is producing unusual sounds. Damage to the alternator will result.

0000039en

CAUTION

If the engine coolant pump must be replaced, replace the engine coolant pump as an assembly only. Do not attempt to repair the engine coolant pump or replace individual components.

0000041en

CAUTION

Use a new special O-ring between the engine coolant pump and the joint. Be sure to use the special O-ring for each engine model. Although the O-ring dimensions are the same as a commercially available O-ring, the material is different.

0000042en

CAUTION

Remove or install the high-pressure fuel injection lines as an assembly whenever possible. Disassembling the high-pressure fuel injection lines from the retainers or bending any of the fuel lines will make it difficult to reinstall the fuel lines.

0000047en

CAUTION

After marking the position of the pump drive gear, do not rotate the engine crankshaft. Rotating the crankshaft will cause the fuel injection pump to become misaligned.

0000048en

CAUTION

Do not use a high-pressure wash directly on the alternator. Water will damage the alternator and result in inadequate charging.

0000049en

CAUTION

Do not reverse the positive (+) and negative (-) ends of the battery cable. The alternator diode and stator coil will be damaged.

0000050en

CAUTION

When the battery indicator goes out, it should not come on again. The battery indicator only comes on during operation if the alternator fails. However, if an LED is used in the battery indicator, the LED will shine faintly during normal operation.

0000051en

CAUTION

Using a non-specified V-belt will cause inadequate charging and shorten the belt life. Use the specified belt.

0000052en

CAUTION

Agricultural or other chemicals, especially those with a high sulfur content, can adhere to the IC regulator. This will corrode the conductor and result in battery over-charging (boiling) and charging malfunctions. Consult Yanmar before using the equipment in such an environment or the warranty is voided.


0000053en

MidWestTech | New Holland E50B Hydraulic Excavator Service Manual | Publication S... Order the manual at mid-west-tech.com >

2. Install wear ring (10) for piston from rod side. (2 places)
   -Expand the split of wear ring as minimum as required.



3. If the O-ring of seal ring was extremely stretched at the installation, insert the piston subassembly from the taper side of reforming jig (D) to reform the ring.

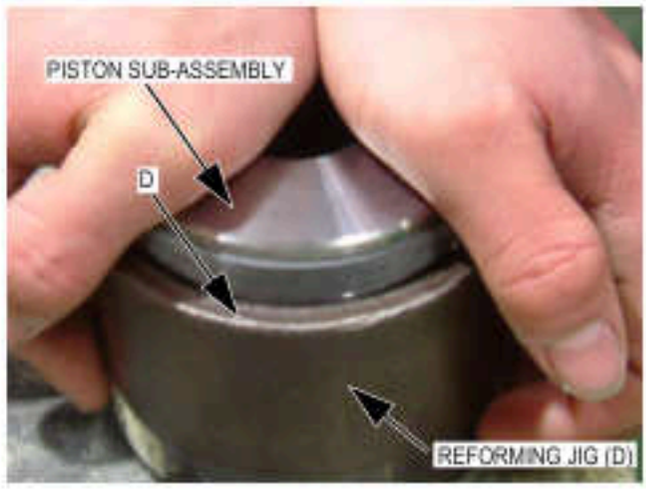

(4) Assembly of piston rod

1. Keep clevis of piston rod (2) horizontal, and install the head sub-assembly.
   -Apply hydraulic oil to seal slightly.
   -Take care not to hit the seal against the thread of piston rod.



MidWestTech | New Holland E50B Hydraulic Excavator Service Manual | Publication S... Order the manual at mid-west-tech.com >

Symptoms and conditions of failure / Possible causes		Starting failure					Engine stall after start up			Speed control error						Engine output low			Noise and vibration					Lubricating oil					Cooling water		Intake air		Exhaust gas			Fuel			Electrical parts					Corrective Action	Referenced page number
		Starter does not rotates		Starter rotates			Smoke			Revolution speed cannot be changed with accelerator (stays at a constant speed)	No load				Workload	Smoke color			High knocking sound at combustion time	Uneven combustion sound	Abnormal sound (other than combustion sound) from engine	Engine vibrates heavily	Too much lubricating oil consumed	Lubricating oil diluted with fuel	Lubricating oil mixed with water	Oil pressure low (oil pressure warning lamp lit)	Overheat (water temperature warning lamp lit)	Water temperature low	Pressure low (air cleaner warning lamp lit)	Pressure high	Workload		Too much blow-bye	Exhaust gas temperature high	Too much fuel consumed	Fuel mixed with water (oil-water separator warning lamp lit)	Fuel filter fouled shortly	Battery charge error (charge lamp lit)	ECU failure lamp flashes	ECU failure lamp stops flashing immediately (within 2 seconds) after turning off the key	Specific ECU control functions fail	Fuses get blown or broken (repeatedly)		
		ECU failure lamp does not go on immediately after turning on the key	ECU failure lamp goes on immediately (within 2 seconds) after turning on the key	Engine does not start up (without initial ignition)	Engine does not start up (it stops immediately after initial ignition)	It takes longer than before to start up engine	None	Slight	Remarkable		Cannot be set to particular speed	Poor acceleration	Does not smoothly return to low speed	Hunting occurs	Hunting occurs	Normal	White	Black													White exhaust gas	Black exhaust gas												
Electrical system	Fuse blown or broken	○	○				○																																●	●	Replace the fuse.	
	Starter faulty		○	○																																			●		Repair or replace the starter.	See "Starter" (on page 11-9).
	Alternator faulty			○																																○					Repair or replace the alternator.	See "Removing the Alternator" (on page 12-12).
	Wires disconnected	○	○	○			○																													○	○	○	○		Repair or replace the disconnected wire(s) of the harness.	
	Wires short-circuited (sheathing broken); overloaded by the power consumption by additional devices	●																																						●	Inspect, repair, or replace the harnesses and wires as needed. Reexamine the additional devices.	
	Battery voltage low		○	○																																–					Inspect and charge the battery.	See "Inspecting the Electrolyte Level and Charging the Battery" (on page S-23).
	Key switch faulty or disconnected	○					○																																○		Repair or replace the harness. Replace the key switch.	
	Key switch instantly cut off				○		○																																		Replace the key switch.	
	Starter relay faulty, disconnected, or short-circuited		○																																						Repair or replace the harness. Replace the starter relay.	
	Main relay faulty (except for sticking of the contact, which is undetectable by ECU)	○																																					○		Repair or replace the harness. Replace the main relay.	
	Actuator relay faulty (contact failure undetectable by ECU)		?	?			○																																		Replace the actuator relay.	
	Start assist relay faulty (contact failure undetectable by ECU)			○		○													●														△									Replace the start assist relay.	
	Accelerator sensor signal error (an error undetectable by ECU)										○			○	○					○																							Repair or replace the accelerator sensor.	
	Water temperature sensor signal error (an error undetectable by ECU)			○		○								●	●				●																							Replace the water temperature sensor.	
	Speed sensor signal error (an error undetectable by ECU, such as caused by noise)				○	●	○							○	○					○																							Repair or replace the fuel injection pump.	Monitor the engine speed using the diagnosis tool.
	Rack position sensor signal error (an error undetectable by ECU)					●	○						●	□	○					○																							Repair or replace the fuel injection pump.	Monitor the rack position sensor signal using the diagnosis tool.
	Rack actuator malfunctioning (an error undetectable by ECU)					●	○						●	○	○					○																							Repair or replace the fuel injection pump.	Monitor the rack actuator using the diagnosis tool.
	ECU failure lamp disconnected																																							○		Replace the lamp. Repair or replace the harness.	
	ECU faulty (ECU self diagnosis failure)	○	○								○																													○	○	Replace the ECU.	

MidWestTech | New Holland E50B Hydraulic Excavator Service Manual | Publication S5PJ0033E01

Order the manual at mid-west-tech.com >