KOBELCO

SHOP MANUAL

COMPACT CRAWLER EXCAVATOR

SK17SR-3

S5PU0002E01 NA


Issued 01April07

APPLICABLE:
17SR-3. . . . . PU08-05001~

MidWestTech | Kobelco SK17SR-3 Compact Crawler Excavator Service Manual | Publication S5PU0002E01

Order the manual at mid-west-tech.com >

(7) SWING CIRCUIT : Boom swing left operation

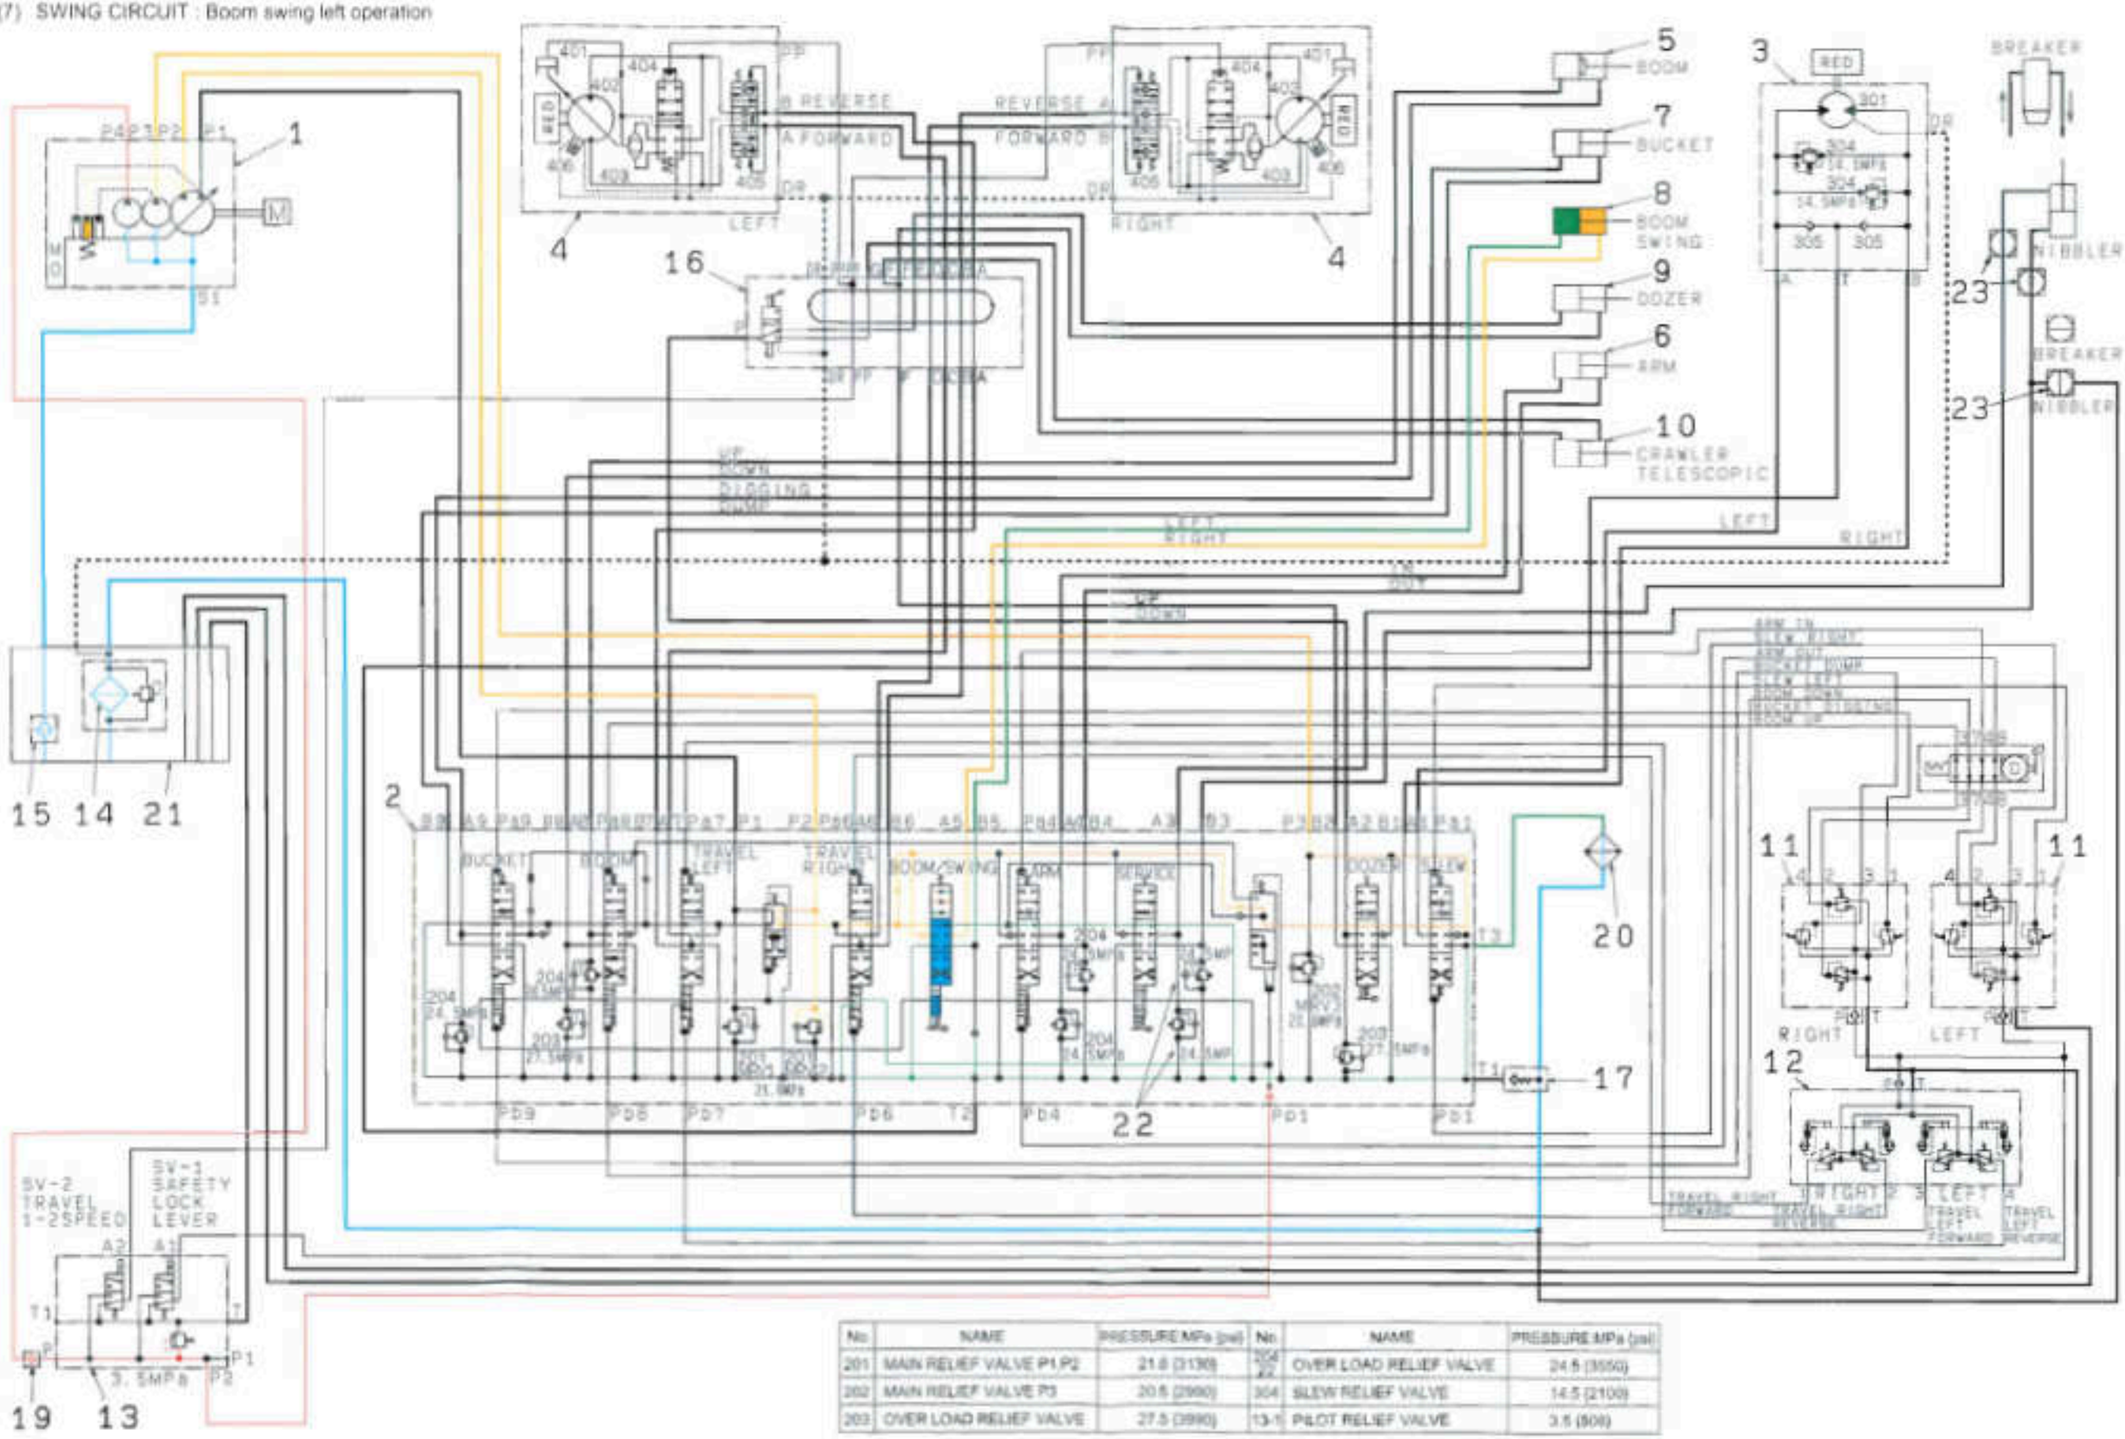

No.	NAME	PRESSURE MPa {psi}	No.	NAME	PRESSURE MPa {psi}
201	MAIN RELIEF VALVE P1,P2	21.6 {3130}	204 A2	OVER LOAD RELIEF VALVE	24.5 {3550}
202	MAIN RELIEF VALVE P3	20.6 {2990}	304	SLEW RELIEF VALVE	14.5 {2100}
203	OVER LOAD RELIEF VALVE	27.5 {3990}	13-1	PILOT RELIEF VALVE	3.5 {500}

Fig. 71-8

MidWestTech | Kobelco SK17SR-3 Compact Crawler Excavator Service Manual | Publication S5PU0002E01

Order the manual at mid-west-tech.com >