KOBELCO

SERVICE MANUAL

HYDRAULIC EXCAVATOR

17SR-Tier 4

S5PU0017E 01

APPLICABLE:
PU09-08001~

Issued: March 2010

MidWestTech | Kobelco 17SR Tier 4 Hydraulic Excavator Service Manual | Publication S5PU0017E01

Order the manual at mid-west-tech.com >

1. OUTLINE

TABLE OF CONTENTS

1.1 GENERAL PRECAUTIONS FOR REPAIRS 1-3
1.1.1 PREPARATION BEFORE DISASSEMBLING 1-3
1.1.2 SAFETY IN DISASSEMBLING AND ASSEMBLING 1-3
1.1.3 DISASSEMBLING AND ASSEMBLING HYDRAULIC EQUIPMENT 1-4
1.1.4 ELECTRICAL EQUIPMENT 1-6
1.1.5 HYDRAULIC PARTS 1-7
1.1.6 WELDING REPAIR 1-7
1.1.7 ENVIRONMENTAL MEASURE 1-7
1.2 INTERNATIONAL UNIT CONVERSION SYSTEM (Based on MARKS' STANDARD HANDBOOK FOR MECHANICAL ENGINEERS) 1-8

Book Code No. **S5PA0105E01**

MidWestTech | Kobelco 17SR Tier 4 Hydraulic Excavator Service Manual | Publication... Order the manual at mid-west-tech.com >

2. SPECIFICATIONS

TABLE OF CONTENTS

2.1 COMPONENTS NAME 2-3
2.2 MACHINE DIMENSIONS 2-4
2.3 SPECIFICATIONS AND PERFORMANCE 2-5
2.4 MACHINE & COMPONENTS WEIGHT (DRY) 2-6
2.5 TRANSPORTATION 2-8
2.6 TYPE OF CRAWLER SHOES 2-11
2.7 TYPE OF BUCKET 2-12
2.8 ENGINE SPECIFICATIONS 2-13
2.8.1 SPECIFICATIONS 2-13
2.8.2 ENGINE PERFORMANCE CURVE 2-14

Book Code No. **S5PU0217E01**

MidWestTech | Kobelco 17SR Tier 4 Hydraulic Excavator Service Manual | Publication... Order the manual at mid-west-tech.com >

3. ATTACHMENT DIMENSIONS

TABLE OF CONTENTS


3.1 BOOM 3-3
3.1.1 BOOM DIMENSIONAL DRAWINGS 3-3
3.1.2 BOOM MAINTENANCE STANDARDS 3-4
3.2 ARM 3-8
3.2.1 ARM DIMENSIONAL DRAWINGS 3-8
3.2.2 ARM MAINTENANCE STANDARDS 3-10
3.3 BUCKET 3-14
3.3.1 BUCKET DIMENSIONAL DRAWINGS 3-14
3.3.2 DETAIL DIMENSIONAL DRAWINGS OF LUG SECTION 3-15
3.3.3 DETAIL DIMENSIONAL DRAWINGS OF BOSS SECTION 3-15
3.4 DOZER 3-16
3.4.1 DOZER DIMENSIONAL DRAWINGS 3-16
3.4.2 DOZER MAINTENANCE STANDARDS 3-18
3.5 SWING 3-20
3.5.1 SWING BRACKET DIMENSIONAL DRAWINGS 3-20
3.5.2 SWING PORTION MAINTENANCE STANDARDS 3-21

Book Code No. **S5PU0314E01**

MidWestTech | Kobelco 17SR Tier 4 Hydraulic Excavator Service Manual | Publication... Order the manual at mid-west-tech.com >

3.2 ARM

3.2.1 ARM DIMENSIONAL DRAWINGS

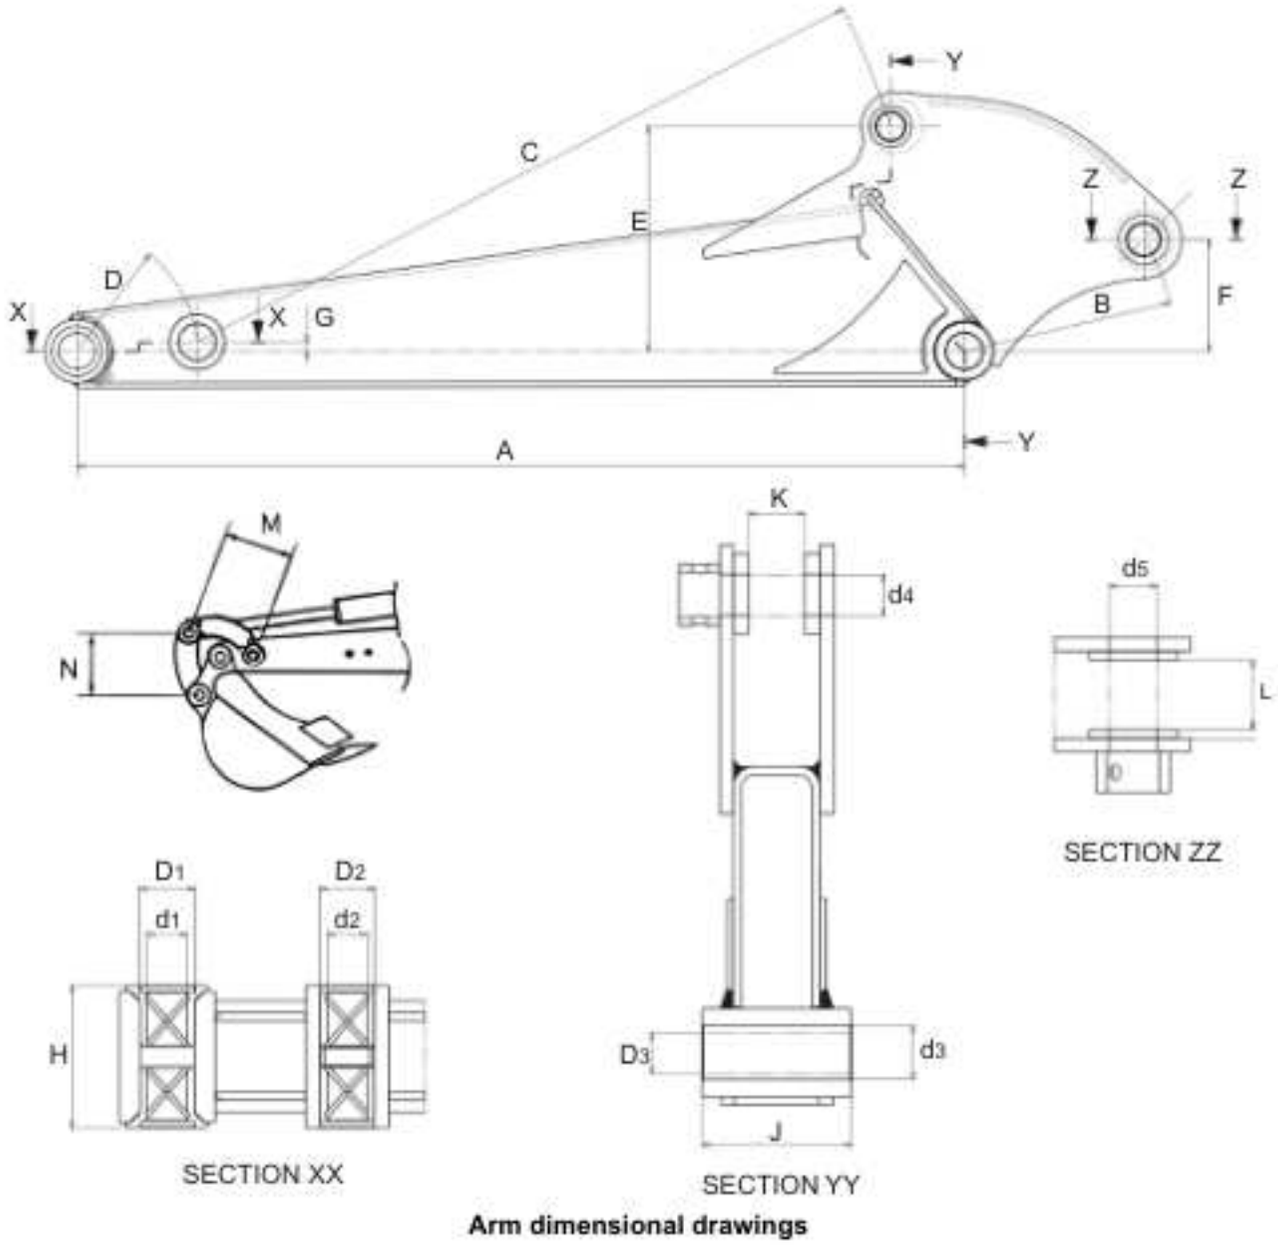


Arm dimensional drawings


MidWestTech | Kobelco 17SR Tier 4 Hydraulic Excavator Service Manual | Publication... Order the manual at mid-west-tech.com >

(4) Disconnecting harness

See Fig. "Disconnecting harness" to disconnect the harness connected to the electrical equipment and main harness.

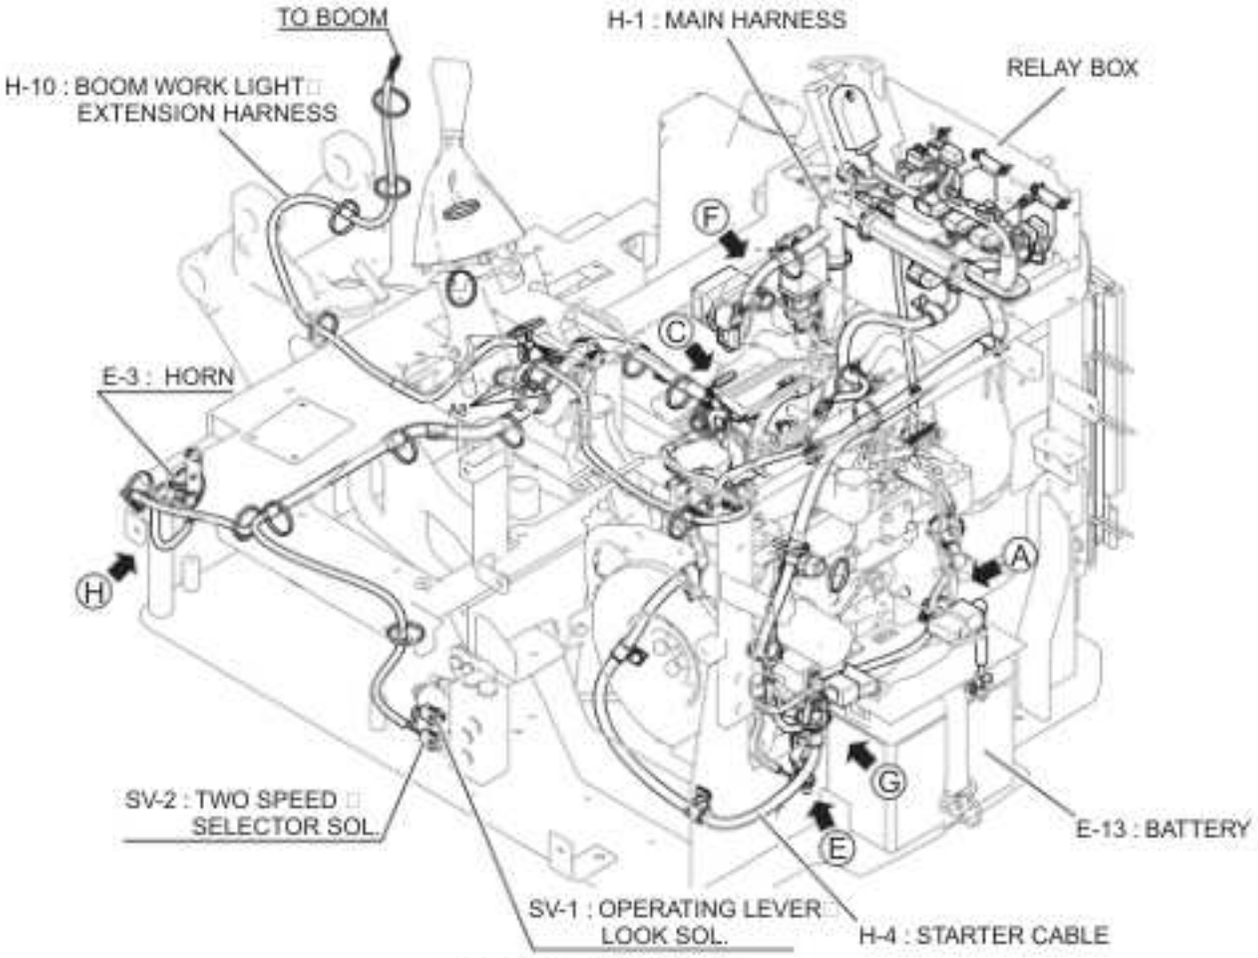

Disconnecting harness

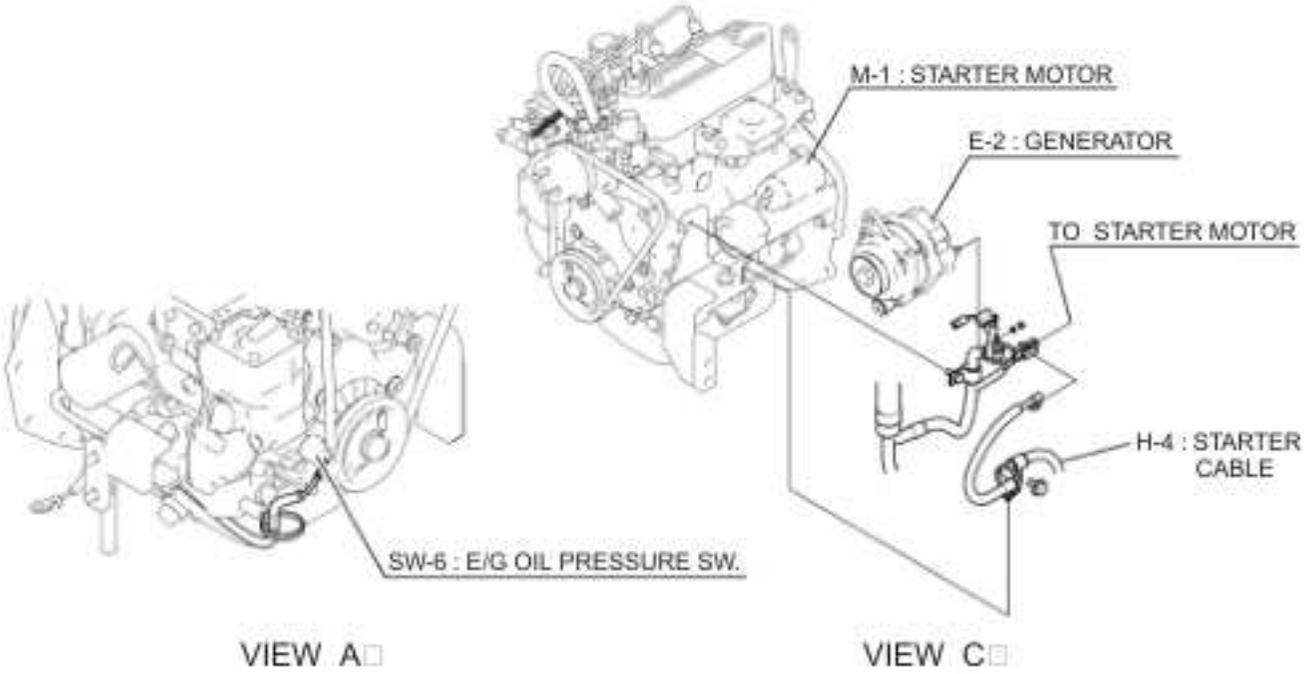


Disconnecting harness (1/2)

MidWestTech | Kobelco 17SR Tier 4 Hydraulic Excavator Service Manual | Publication... Order the manual at mid-west-tech.com >

Issue	Date of Issue	Applicable Machines	Remarks
↑	↑	SK17SR-3K : PU09-08001~	↑ (KOR)
↑	January, 2010	SK17SR-3 : PU09-08001~	↑ (Oceania)
↑	↑	SK17SR-3 : PU09-08001~	↑ (NA)

MidWestTech | Kobelco 17SR Tier 4 Hydraulic Excavator Service Manual | Publication... Order the manual at mid-west-tech.com >

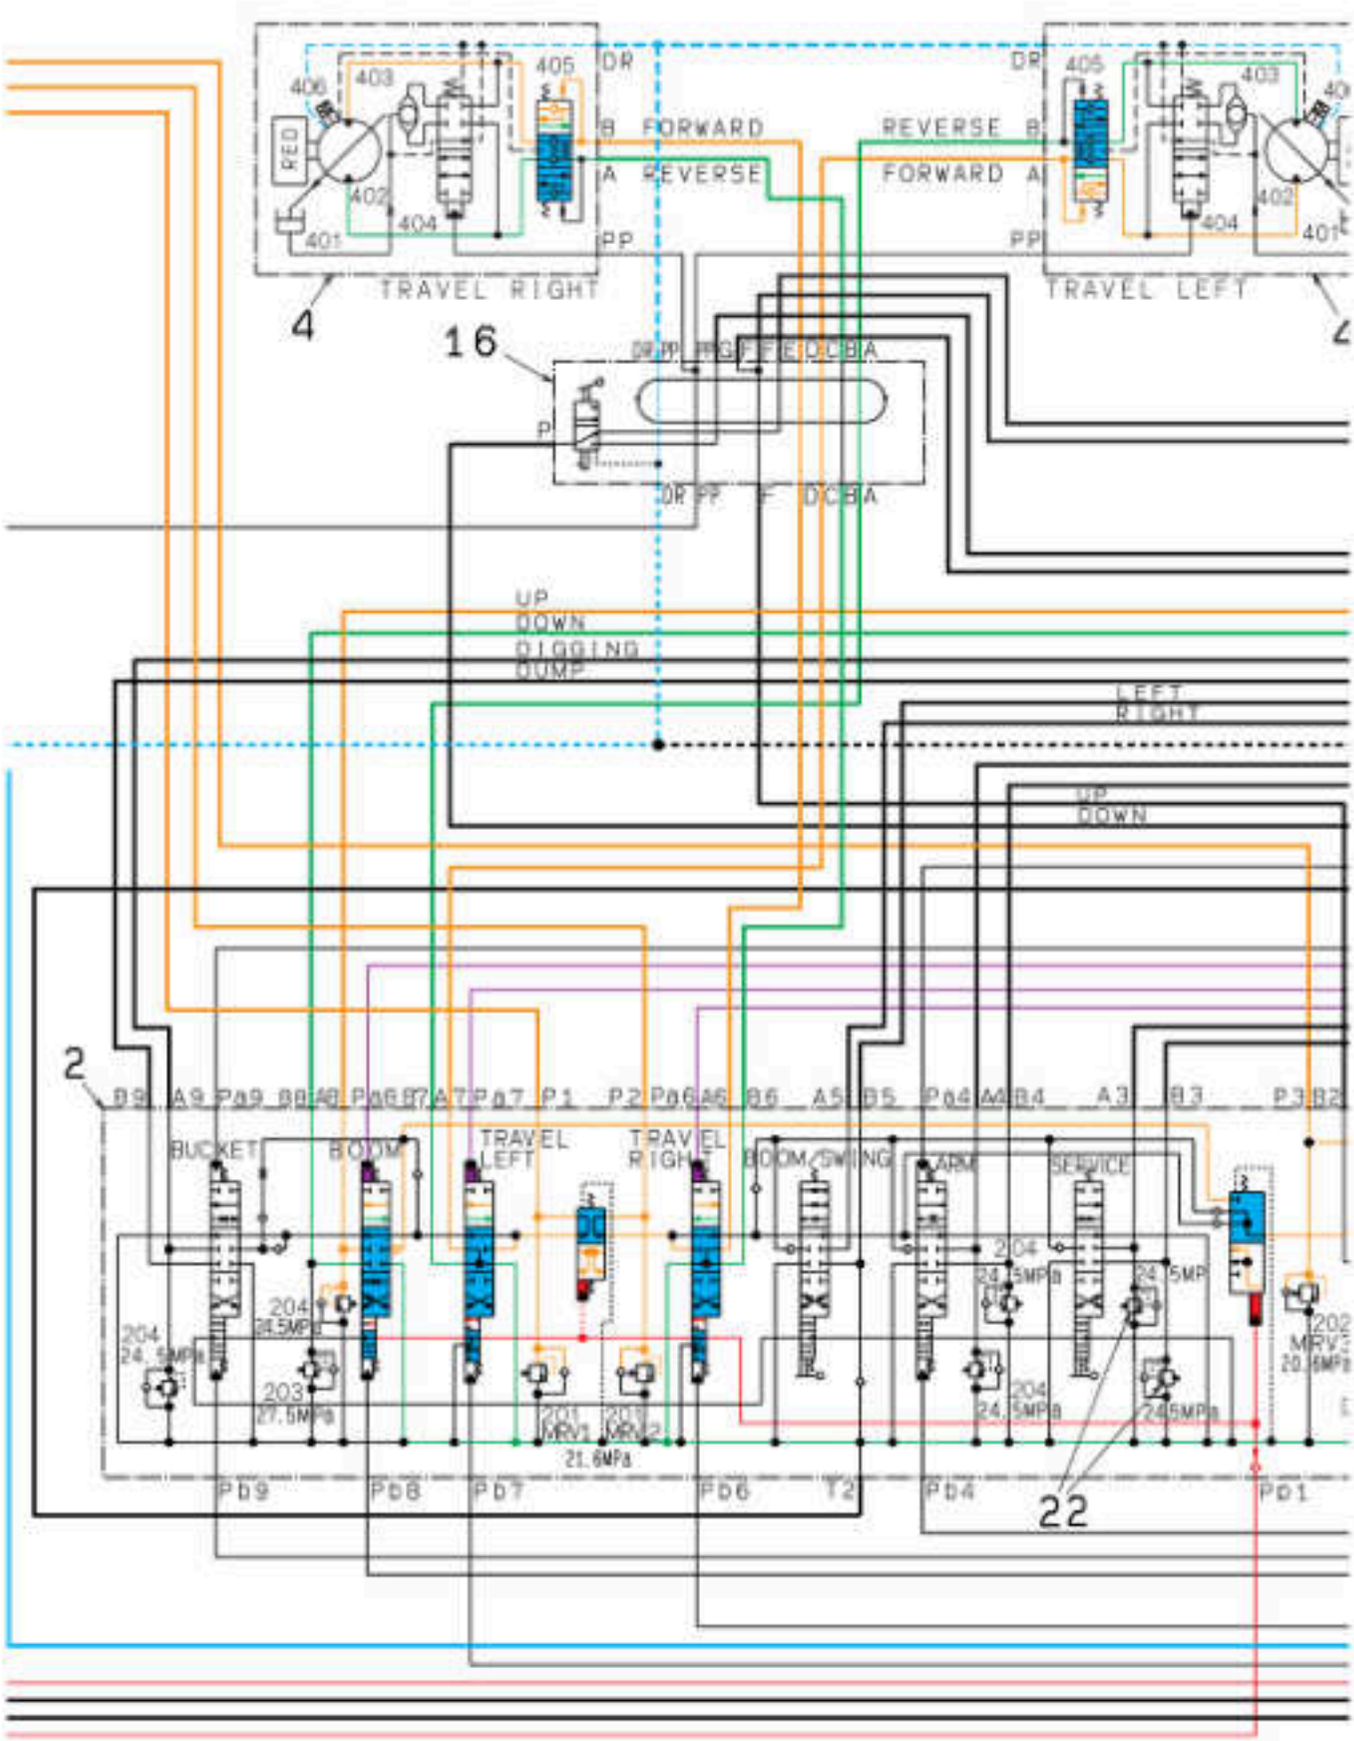

No.	NAME	PRESSURE:MPa (psi)	No.	
201	MAIN RELIEF VALVE P1,P2	21.6 (3130)	204 22	OVER
202	MAIN RELIEF VALVE P3	20.6 (2990)	304	SLEW
203	OVER LOAD RELIEF VALVE	27.5 (3990)	13-1	PILOT

Combined operation circuit : Travel (forward) 1st speed / Boom up operation

MidWestTech | Kobelco 17SR Tier 4 Hydraulic Excavator Service Manual | Publication... Order the manual at mid-west-tech.com >

⚠ CAUTION

About warning labels

Maintenance of warning labels

Make sure all warning/caution labels are legible.

Clean or replace the warning/caution labels the description and/or illustration of which cannot be seen clearly.

For cleaning the warning/caution labels, use a cloth, water and soap. Do not use cleaning solvents, gasoline or other chemicals to prevent the letters from getting blurred or the adhesion from being weakened.

Replace damaged or fractured labels with new ones.

If any engine part on which a warning label is attached is replaced with a new one, attach a new identical warning label to the new part.

To obtain replacement warning labels, contact a Mitsubishi dealer.



Warning labeles

X

Order the manual at mid-west-tech.com >