KOBELCO

SERVICE MANUAL

HYDRAULIC EXCAVATOR

SK30SR-3

SK35SR-3

Applicable: SK30SR-3 PW11-30001 ~
SK35SR-3 PX12-11001~


S5PW0009E-01

MidWestTech | Kobelco SK30SR-2, SK35SR-2 Hydraulic Excavator Service Manual | Publication S5PW0009E-01

Order the manual at mid-west-tech.com >

71.1 HYDRAULIC CIRCUIT DIAGRAM

71.1.1 STANDARD SPECIFICATION

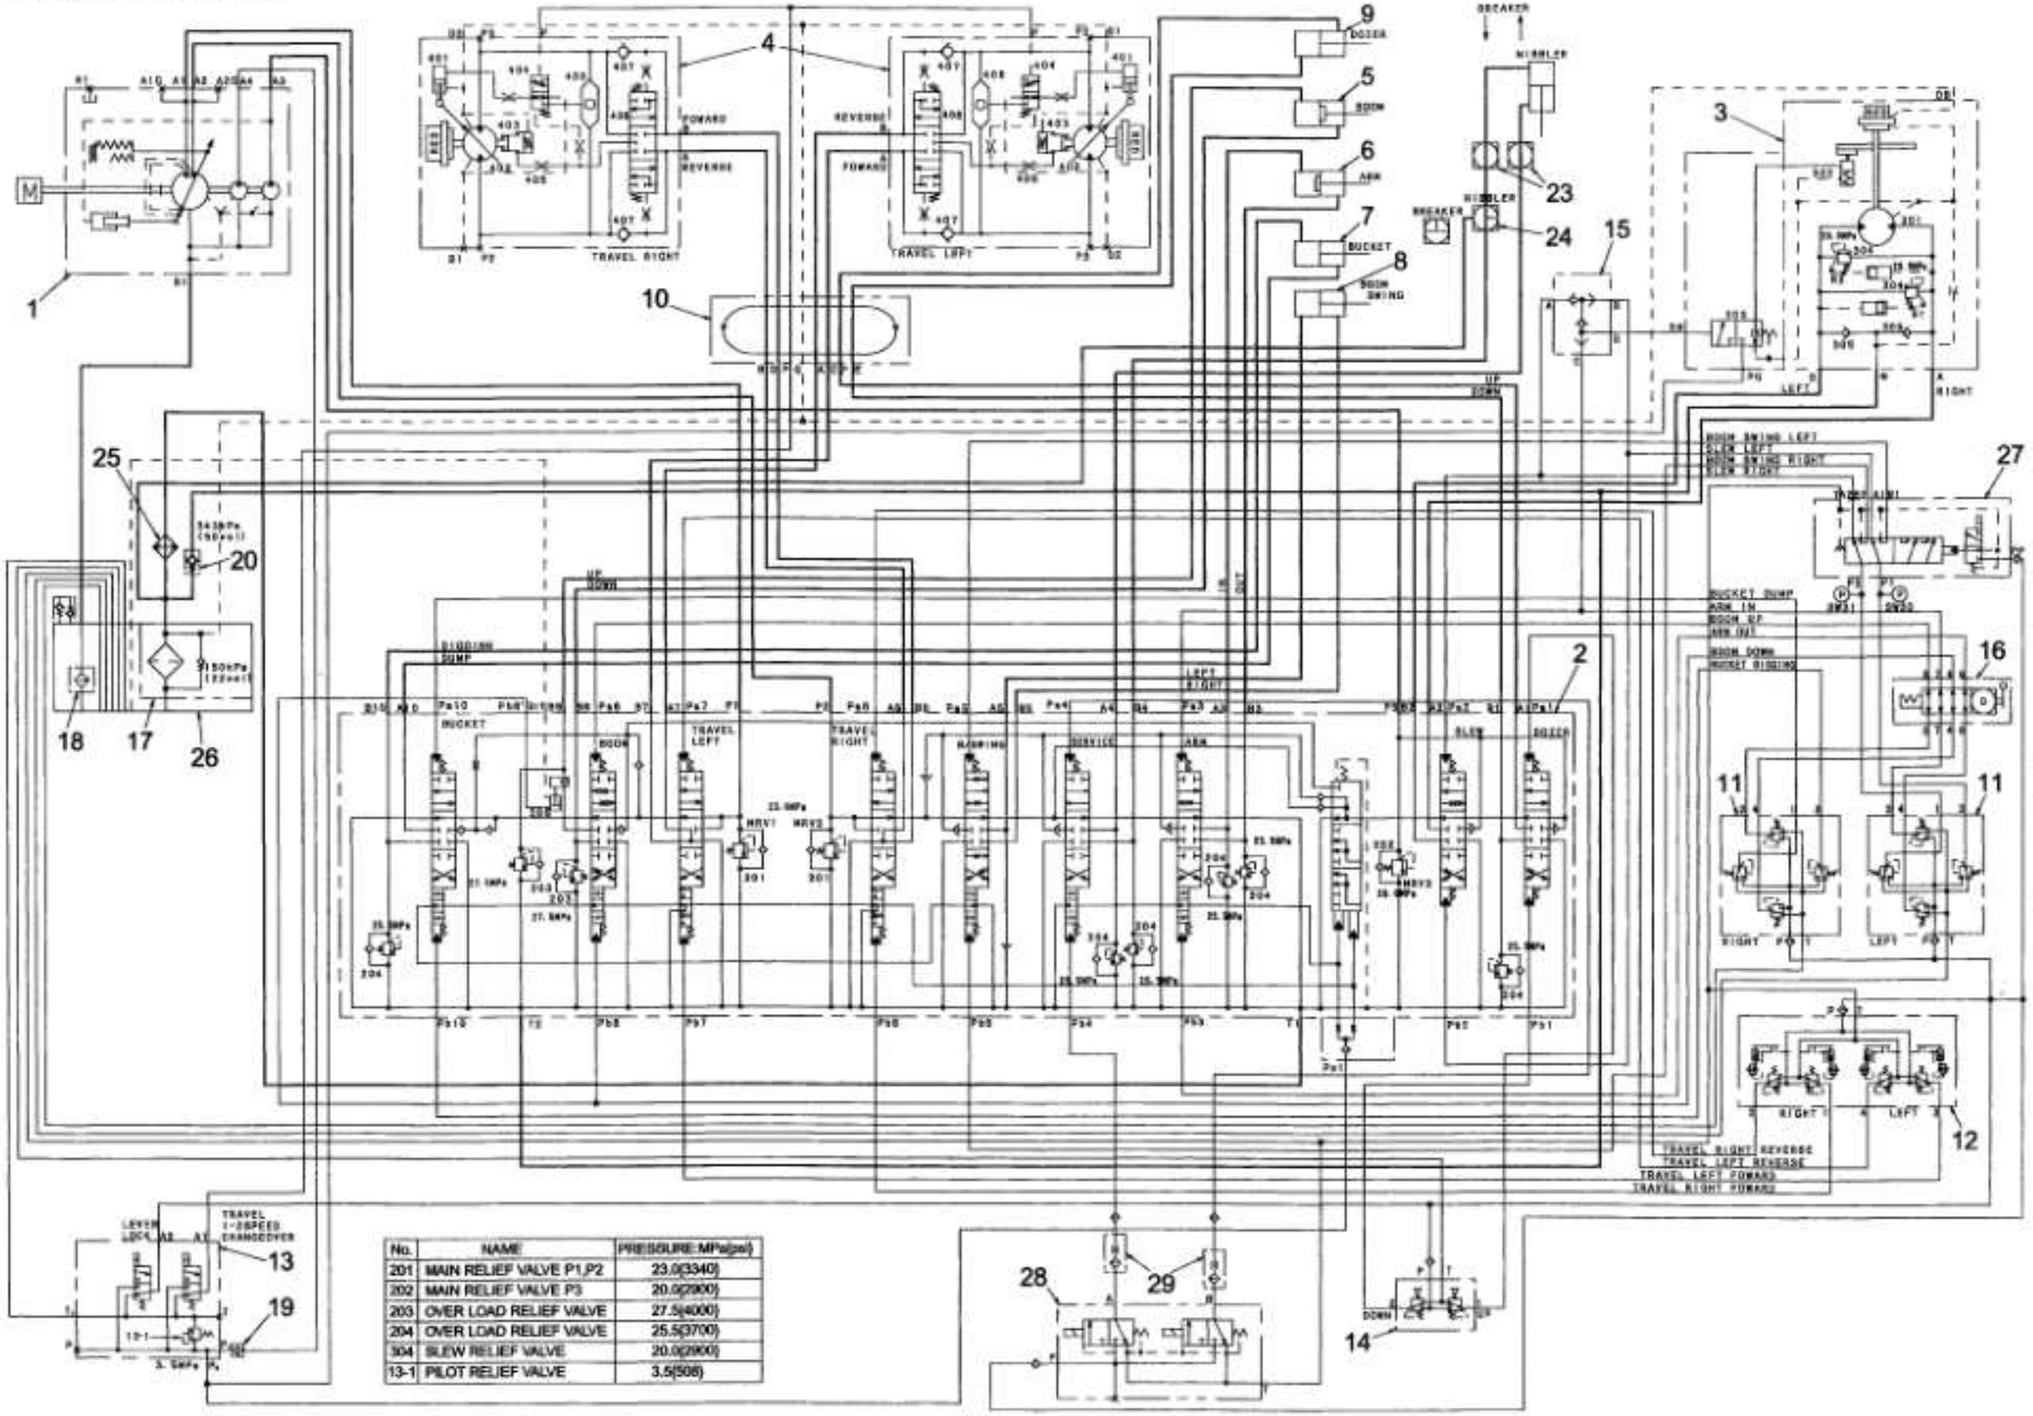

No.	NAME	PRESSURE MPa{psi}
201	MAIN RELIEF VALVE P1,P2	23.0{3340}
202	MAIN RELIEF VALVE P3	20.0{2900}
203	OVER LOAD RELIEF VALVE	27.5{4000}
204	OVER LOAD RELIEF VALVE	25.5{3700}
304	SLEW RELIEF VALVE	20.0{2900}
13-1	PILOT RELIEF VALVE	3.5{508}

Fig. 71-1

MidWestTech | Kobelco SK30SR-2, SK35SR-2 Hydraulic Excavator Service Manual | Publication S5PW0009E-01

Order the manual at mid-west-tech.com >