CASE
CONSTRUCTION

SERVICE MANUAL

COMPACT CRAWLER EXCAVATOR

CX31B
CX36B
TIER 4

S5PW0028E01 EN-US

Issued 01Sep 08

MidWestTech | Case CX31B, CX36B Tier 4 Compact Hydraulic Excavator Service Manual | Publication S5PW0028E01

Order the manual at mid-west-tech.com >


CHAPTER 1
GENERAL PRECAUTIONS FOR MAKING REPAIRS

TABLE OF CONTENTS

GENERAL PRECAUTIONS FOR MAKING REPAIRS 1-3
Preparation Before Disassembling 1-3
Safety When Disassembling And Assembling 1-3
Disassembling and Assembling Hydraulic Equipment 1-3
Removing Hydraulic Equipment Assembly 1-3
Disassembling Hydraulic Equipment 1-3
Inspecting Parts 1-4
Assembling Hydraulic Equipment 1-4
Installing Hydraulic Equipment 1-4
Electrical Equipment 1-4
Hydraulic Parts 1-5
Weld Repair 1-5
Environmental Issues 1-5
INTERNATIONAL UNIT SYSTEM 1-6
Introduction 1-6

MidWestTech | Case CX31B, CX36B Tier 4 Compact Hydraulic Excavator Service Manual |... Order the manual at mid-west-tech.com >

SECTION 3 - SYSTEMS
CHAPTER 1 - HYDRAULIC SYSTEM

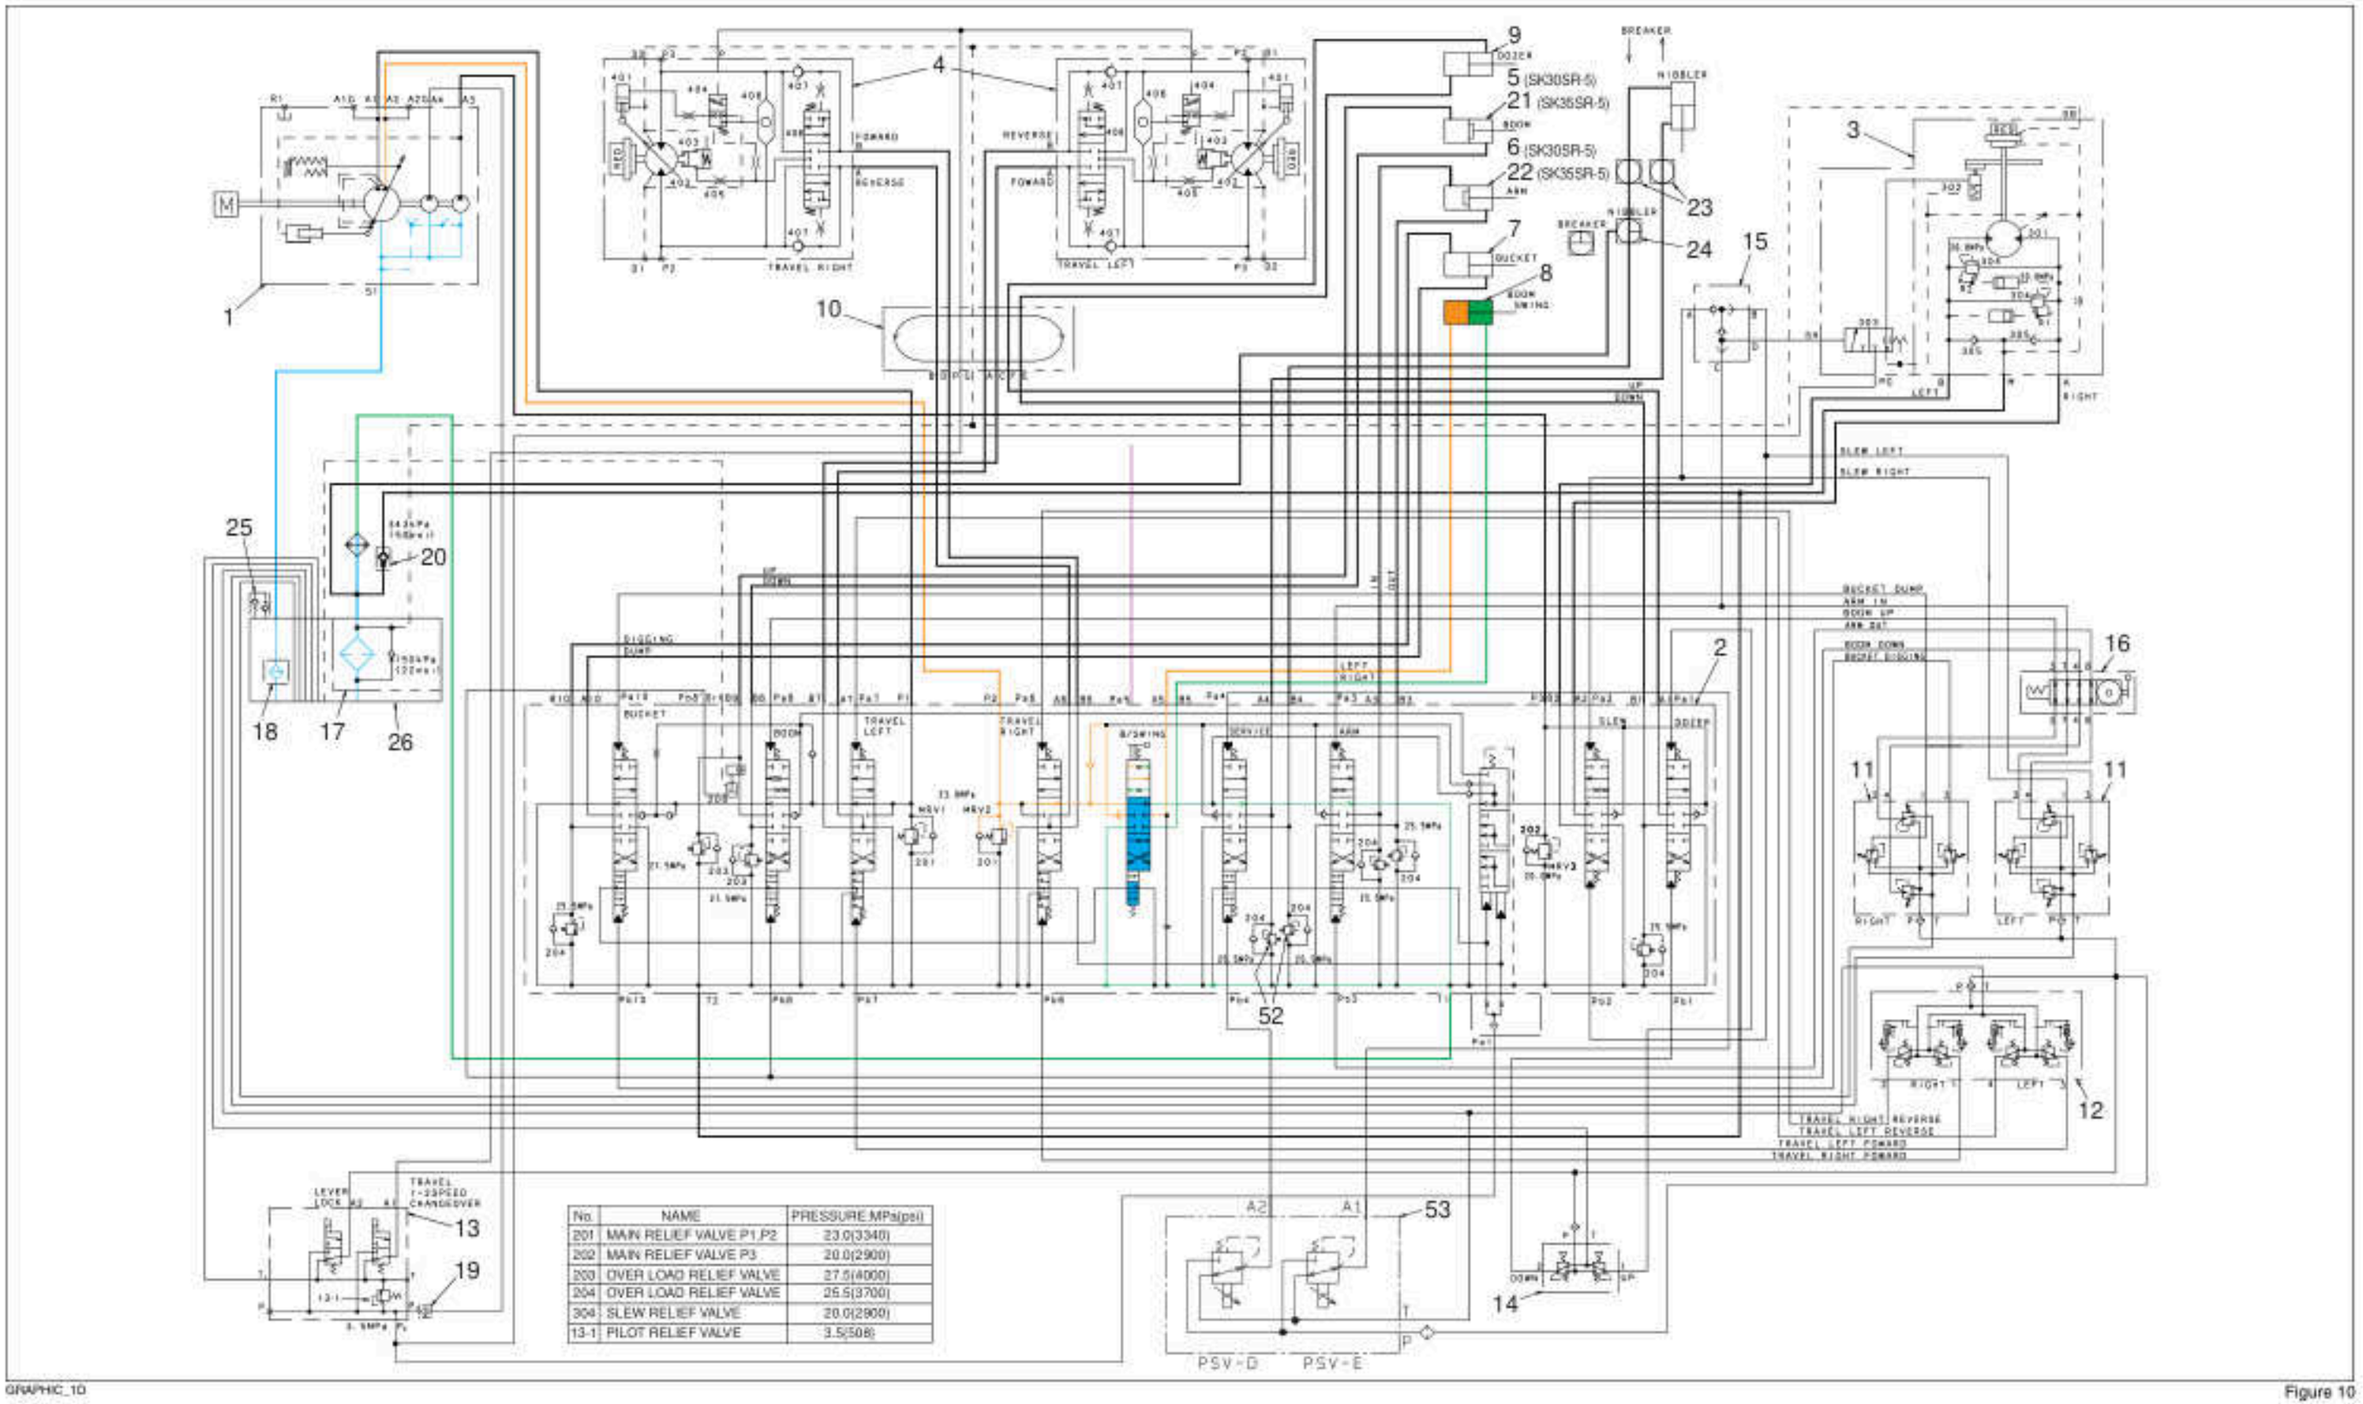

No.	NAME	PRESSURE MPa(psi)
201	MAIN RELIEF VALVE P1,P2	23.0(3340)
202	MAIN RELIEF VALVE P3	20.0(2900)
203	OVER LOAD RELIEF VALVE	27.5(4000)
204	OVER LOAD RELIEF VALVE	25.5(3700)
304	SLEW RELIEF VALVE	20.0(2900)
13-1	PILOT RELIEF VALVE	3.5(508)

GRAPHIC_10

Figure 10

SWING CIRCUIT: BOOM SWING LEFT OPERATION

MidWestTech | Case CX31B, CX36B Tier 4 Compact Hydraulic Excavator Service Manual | Publication S5PW0028E01

Order the manual at mid-west-tech.com >