KOBELCO

SERVICE MANUAL

WHEEL LOADER

LK200

Applicable: LK200 RK-1003~

S5RK0001E-04 10/88

MidWestTech | Kobelco LK200 Wheel Loader Service Manual | Publication S5RK0001E-04

Order the manual at mid-west-tech.com >

Book code No. S5RK03 01E

KOBELCO

SHOP MANUAL LK200

GENERAL [3]

MAIN COMPONENTS WEIGHT

TABLE OF CONTENTS

1. WEIGHT 1-1
1.1 Operating Weight 1-2
1.2 Attachment Weight 1-2
1.3 Frame Related Components 1-2
1.4 Drive System Components 1-3
1.5 Hydraulic System Components 1-3
1.6 Brake and Battery 1-4

KOBE STEEL, LTD.

MidWestTech | Kobelco LK200 Wheel Loader Service Manual | Publication S5RK0001E-04 Order the manual at mid-west-tech.com >

1. ELECTRIC SYSTEM DIAGRAM

1.1 ELECTRIC SYSTEM DIAGRAM OF ENGINE GROUP

259

Fig. 1-1 shows the electric system diagram and cable type of the engine group.

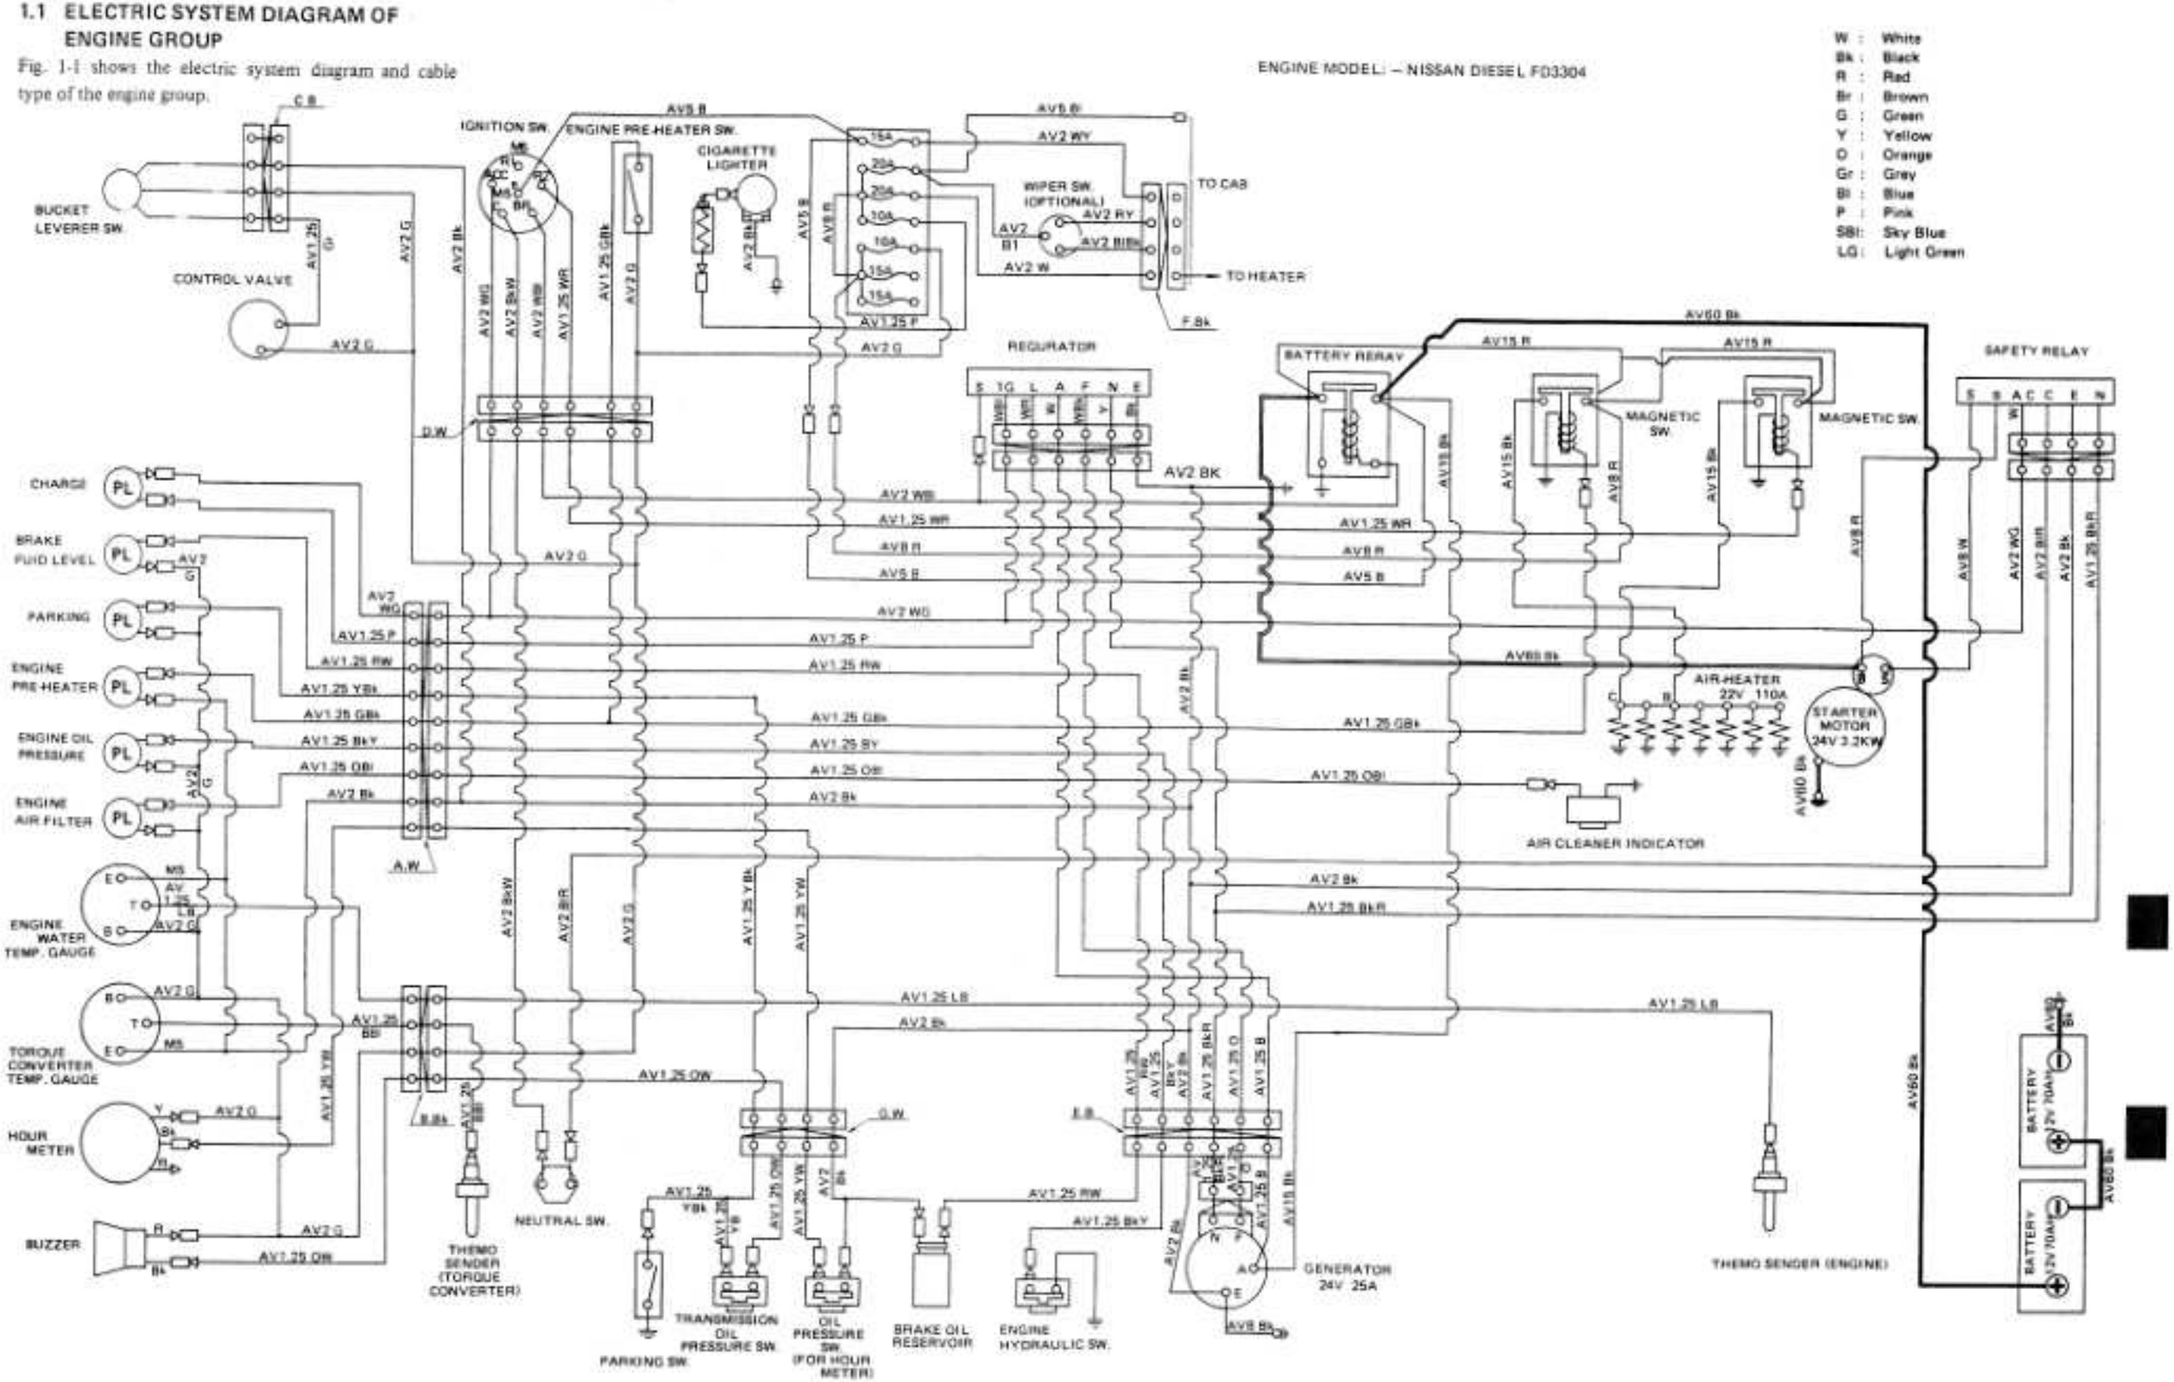


Fig. 1-1 Electric System Diagram of Engine Group

1-1

Order the manual at mid-west-tech.com >