KOBELCO

SHOP MANUAL

HYDRAULIC EXCAVATOR

SK024
SK027
SK032

S5RO0002E NA

Issued 04-1992

APPLICABLE:
SK024 . . . . . PV02600~
SK027 . . . . . PW01700~
SK032 . . . . . PX00500~

MidWestTech | Kobelco SK024, SK027, SK032 Hydraulic Excavator Service Manual | Publication S5RO0002E

Order the manual at mid-west-tech.com >

The pages which have been revised are shown in the list by the symbols below. Please treat each page as specified by the accompanying symbol.

Symbol	Meaning of Symbol	Treatment
○	Page added this time	Add to manual
◇	Page revised this time	Replace in manual.
×	Page deleted this time	Remove from manual

Pages with no symbols have not been revised, but some of these pages are being replaced because the page on their back or front side has been revised, making it necessary to replace both sides of the page.

List of Revisions

Symbol	Page	Symbol	Page	Symbol	Page	Symbol	Page	Symbol	Page	Symbol	Page
	I -01		II -10①		Ⅲ -01		Ⅲ -35①		Ⅳ -14		Ⅳ -48
	I -02		II -11①		Ⅲ -02		Ⅲ -36①		Ⅳ -15		Ⅳ -49①
	I -03		II -12①		Ⅲ -03		Ⅲ -37		Ⅳ -16		Ⅳ -50
	I -04		II -13①		Ⅲ -04		Ⅲ -38		Ⅳ -17		Ⅳ -51
	I -05		II -14		Ⅲ -05		Ⅲ -39		Ⅳ -18		Ⅳ -52
	I -06		II -15		Ⅲ -06		Ⅲ -40		Ⅳ -19		Ⅳ -53
	I -07①		II -16		Ⅲ -07		Ⅲ -41		Ⅳ -20		Ⅳ -54
	I -08		II -17		Ⅲ -08		Ⅲ -42		Ⅳ -21		Ⅳ -55
	I -09①		II -18		Ⅲ -09		Ⅲ -43①		Ⅳ -22		Ⅳ -56
	I -09-1		II -19		Ⅲ -10		Ⅲ -44		Ⅳ -23		Ⅳ -57
	I -10①		II -20		Ⅲ -11		Ⅲ -45①		Ⅳ -24		Ⅳ -58
	I -10-1		II -21		Ⅲ -12		Ⅲ -46①		Ⅳ -25		Ⅳ -59
			II -22		Ⅲ -13		Ⅲ -47①		Ⅳ -26		Ⅳ -60
			II -23		Ⅲ -14		Ⅲ -48①		Ⅳ -27		Ⅳ -61
	II -01①		II -24		Ⅲ -15		Ⅲ -49①		Ⅳ -28		Ⅳ -62
	II -02①		II -25		Ⅲ -16		Ⅲ -50①		Ⅳ -29		Ⅳ -63
	II -03①		II -26①		Ⅲ -17		Ⅲ -51		Ⅳ -30		Ⅳ -64
	II -04①		II -27①		Ⅲ -18		Ⅲ -52		Ⅳ -31		Ⅳ -65
	II -05①		II -28		Ⅲ -19		Ⅲ -53①		Ⅳ -32		Ⅳ -66
	II -06①		II -29①		Ⅲ -20		Ⅲ -54①		Ⅳ -33		Ⅳ -67
	II -07①		II -30①		Ⅲ -21				Ⅳ -34		Ⅳ -68
	II -07-1		II -31①		Ⅲ -22		Ⅳ -01		Ⅳ -35		Ⅳ -69
	II -07-2		II -32①		Ⅲ -23		Ⅳ -02①		Ⅳ -36		Ⅳ -70
	II -07-3		II -33①		Ⅲ -24		Ⅳ -03		Ⅳ -37		Ⅳ -71
	II -07-4		II -34①		Ⅲ -25		Ⅳ -04		Ⅳ -38①		Ⅳ -72
	II -07-5		II -35		Ⅲ -26		Ⅳ -05		Ⅳ -39		Ⅳ -73
	II -07-6		II -36		Ⅲ -27		Ⅳ -06		Ⅳ -40		Ⅳ -74
○	II -07-7		II -37		Ⅲ -28		Ⅳ -07		Ⅳ -41		Ⅳ -75
○	II -07-8		II -38		Ⅲ -29		Ⅳ -08		Ⅳ -42		Ⅳ -76
○	II -07-9		II -39		Ⅲ -30		Ⅳ -09		Ⅳ -43		Ⅳ -77
○	II -07-10		II -40		Ⅲ -31		Ⅳ -10		Ⅳ -44		Ⅳ -78
○	II -07-11		II -41		Ⅲ -32		Ⅳ -11		Ⅳ -45		Ⅳ -79
	II -08①		II -42		Ⅲ -33		Ⅳ -12		Ⅳ -46		Ⅳ -80
	II -09①				Ⅲ -34①		Ⅳ -13		Ⅳ -47		Ⅳ -81


MidWestTech | Kobelco SK024, SK027, SK032 Hydraulic Excavator Service Manual | Publi... Order the manual at mid-west-tech.com >

Symbol	Page	Symbol	Page	Symbol	Page	Symbol	Page
	IV-82		IV-95		V-09		V-42
	IV-83		IV-96		V-10		V-43
	IV-84		IV-97		V-11		V-44
	IV-85		IV-98		V-12		V-45
	IV-86		IV-99		V-13		V-46
○	IV-86-1		IV-100		V-14		V-47
○	IV-86-2		IV-101		V-15		V-48
○	IV-86-3		IV-102	◇	V-16①		V-49
○	IV-86-4		IV-103	○	V-17①		V-50
○	IV-86-5		IV-104		V-18		
○	IV-86-6		IV-105		V-19		
○	IV-86-7		IV-106		V-20		
○	IV-86-8		IV-107		V-21		
○	IV-86-9		IV-108		V-22		
○	IV-86-10		IV-109		V-23		
○	IV-86-11		IV-110		V-24		
○	IV-86-12		IV-111		V-25		
○	IV-86-13		IV-112		V-26		
○	IV-86-14		IV-113		V-27		
○	IV-86-15		IV-114		V-28		
○	IV-86-16		IV-115		V-29		
○	IV-86-17		IV-116		V-30		
○	IV-86-18		IV-117		V-31		
	IV-87		IV-118		V-32		
	IV-88				V-33		
	IV-89		V-01		V-34		
◇	IV-90①		V-02		V-35		
○	IV-90-1		V-03		V-36		
○	IV-90-2		V-04		V-37		
	IV-91		V-05		V-38		
	IV-92		V-06		V-39		
	IV-93		V-07		V-40		
	IV-94		V-08		V-41		

MidWestTech | Kobelco SK024, SK027, SK032 Hydraulic Excavator Service Manual | Publi... Order the manual at mid-west-tech.com >

ELECTRICAL SYSTEM

ELECTRICAL WIRING DIAGRAM

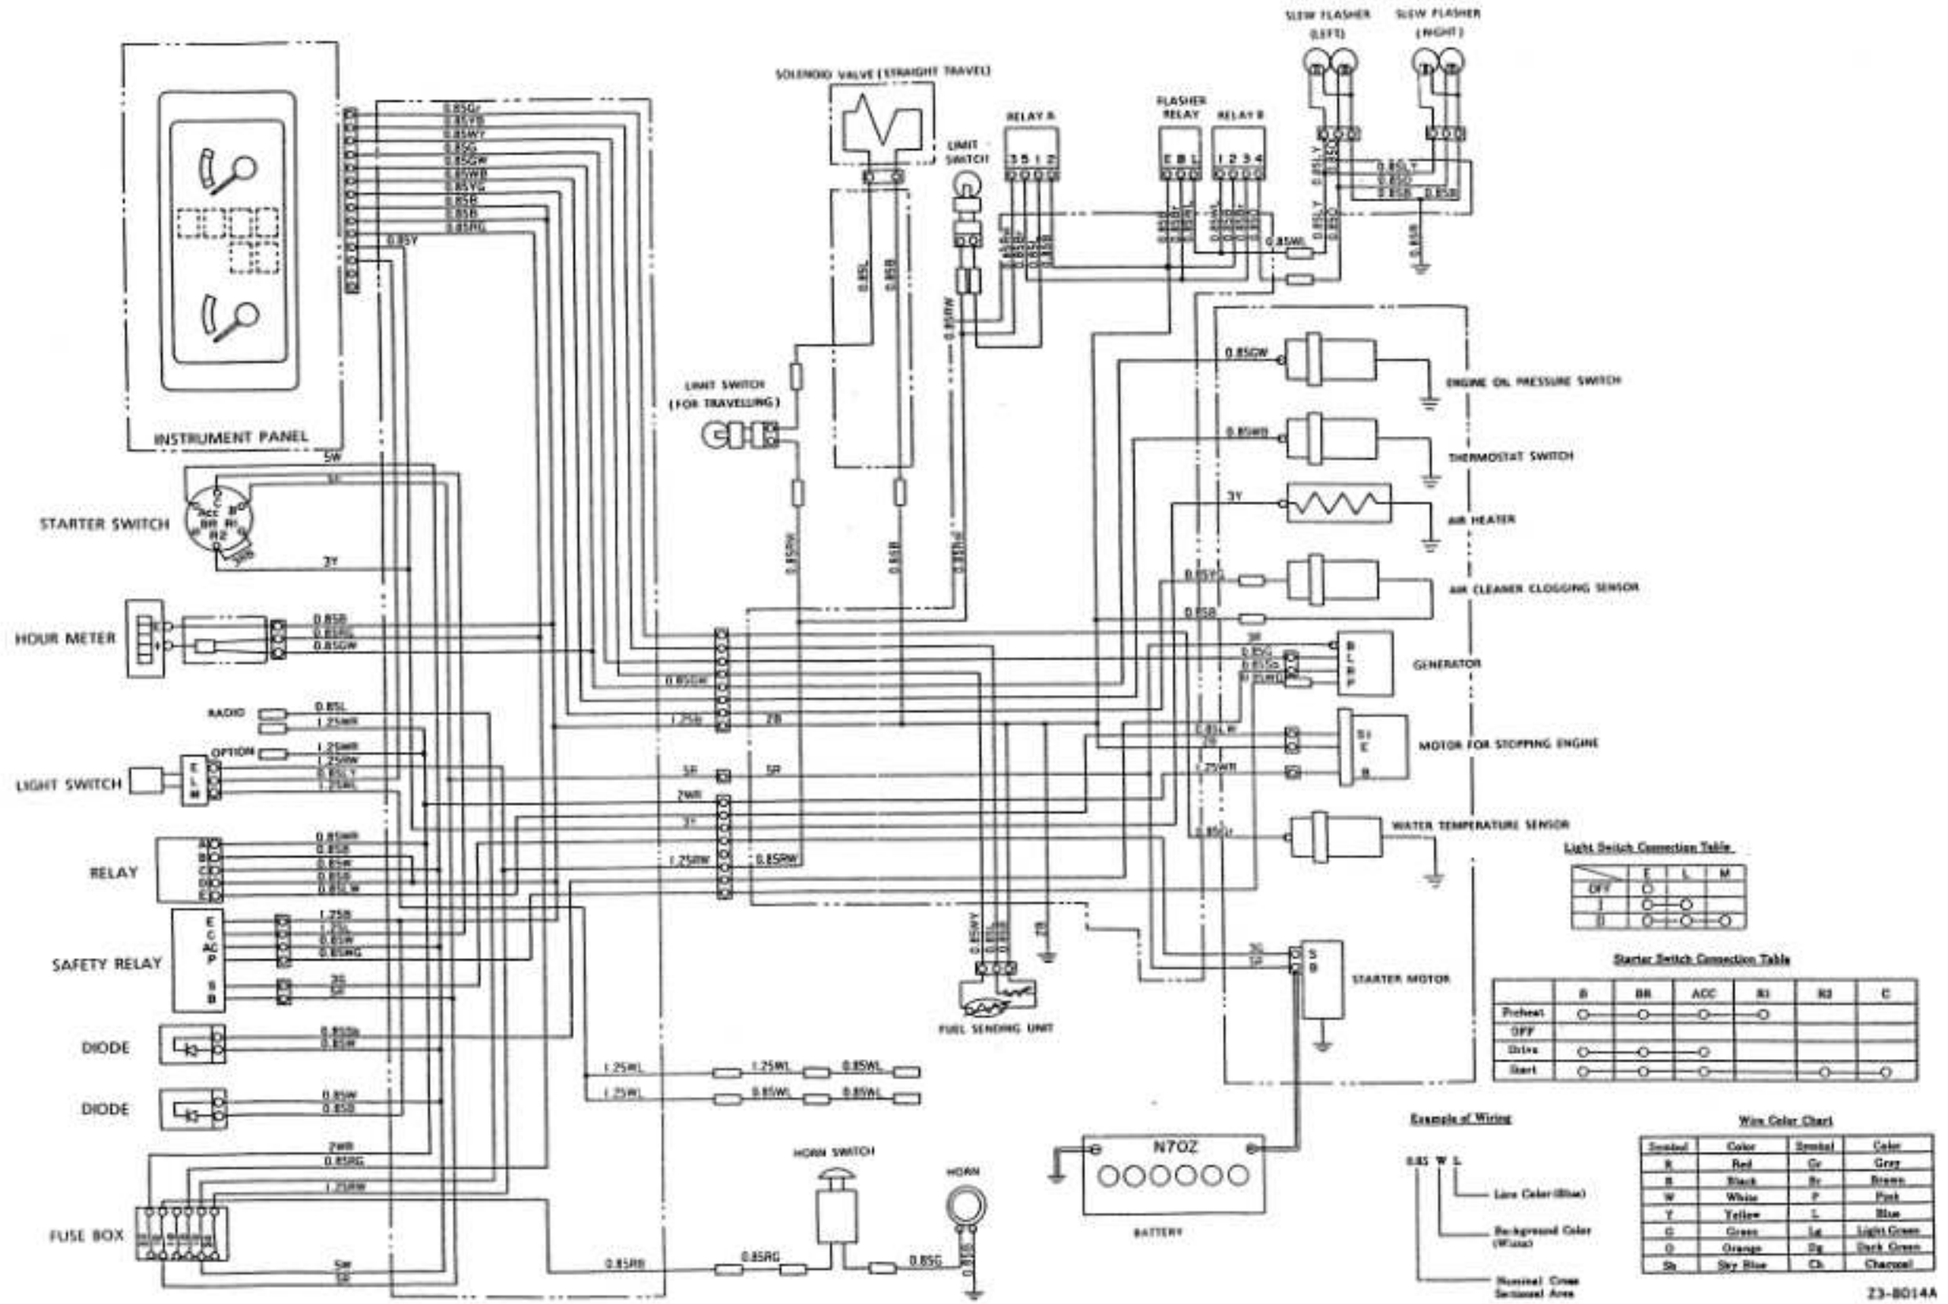

SK024/SK027/SK032
III－53①

Order the manual at mid-west-tech.com >