KOBELCO

SERVICE MANUAL

HYDRAULIC EXCAVATOR

SK013

SK015

Applicable:SK013 PN00001~
Applicable: SK015 PU02001 ~

S5RO0003E-03 04/04

Order the manual at mid-west-tech.com >

CONTENTS

Service Operations


General Precautions 03
Precautions for Disassembly and Assembly 05
Precautions for Removing and Installing Hydraulic Units 06
Precautions for Removing and Installing Piping 07
When Handling Seals 08
Tightening Torques 09

Specifications

Names of Components 12
Specification Diagrams 13
Lifting Capacities 15
Specification Tables 18
Weight Tables 22
Fluid Capacitiy Table 26
Types of Crawler Shoes 27
Types of Attachments and Their Combinations 28
Servicing Standards 30
Standards for Judging Performance 39
Reference Value Table 39
Method for Inspecting Performance 41
Engine Performance Curve 50

MidWestTech | Kobelco SK013, SK015 Hydraulic Excavator Service Manual | Publication S... Order the manual at mid-west-tech.com >

■ SK015
Serial No. PU02109~

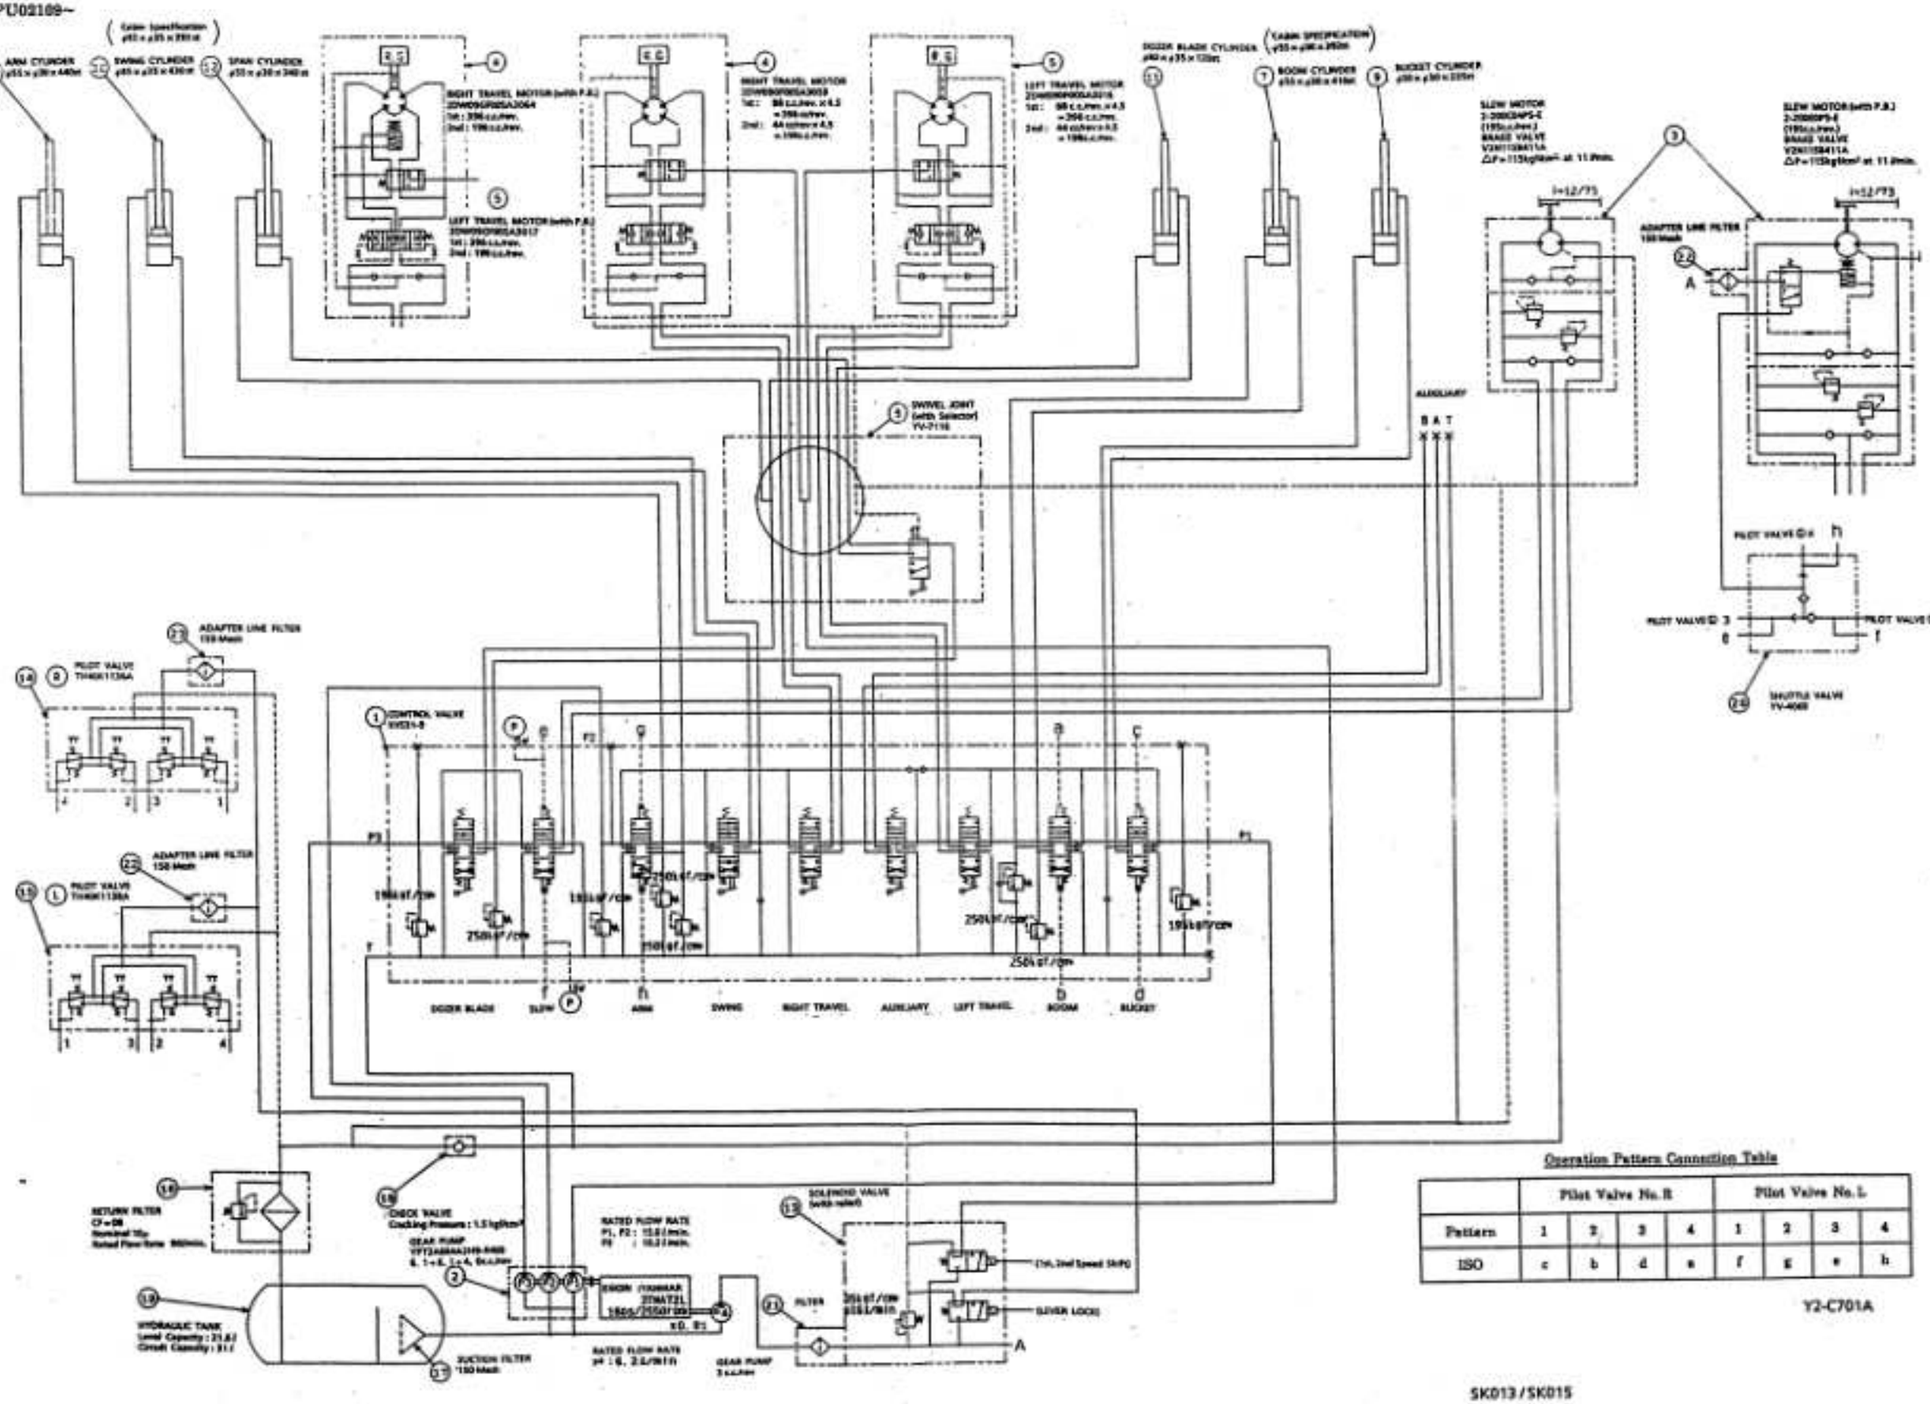

Operation Pattern Connection Table

	Pilot Valve No. R				Pilot Valve No. L			
Pattern	1	2	3	4	1	2	3	4
ISO	c	b	d	e	f	g	e	h

Y2-C701A

MidWestTech | Kobelco SK013, SK015 Hydraulic Excavator Service Manual | Publication S5RO0003E
Order the manual at mid-west-tech.com >