KOBELCO

SERVICE MANUAL

HYDRAULIC EXCAVATOR

SK025
SK030
SK035

Applicable: SK025 PV04301~
Applicable: SK030 PW03001 ~
Applicable: SK035 PX01201~

S5RO0004E-00 10/03

MidWestTech | Kobelco SK025, SK030, SK035 Hydraulic Excavator Service Manual | Publication S5RO0004E

Order the manual at mid-west-tech.com >

CONTENTS

Service Operations


General Precautions 03
Precautions for Disassembly and Assembly 05
Precautions for Removing and Installing Hydraulic Units 06
Precautions for Removing and Installing Piping 07
When Handling Seals 08
Tightening Torques 09

Specifications

Names of Components 13
Specification Diagrams 14
Lifting Capacities 17
Lifiting Capacities (U.K. Specifications) 19
Specification Tables 24
Weight Tables 29
Fluid Capacity Table 33
Types of Crawler Shoes 34
Types of Attachments and Their Combinations 35
Servicing Standards 38
Standards for Judging Performance 50
Reference Value Table 50
Methods for Inspecting Performance 52
Engine Performance Curve 60

MidWestTech | Kobelco SK025, SK030, SK035 Hydraulic Excavator Service Manual | Publi... Order the manual at mid-west-tech.com >

HYDRAULIC SYSTEM DIAGRAM

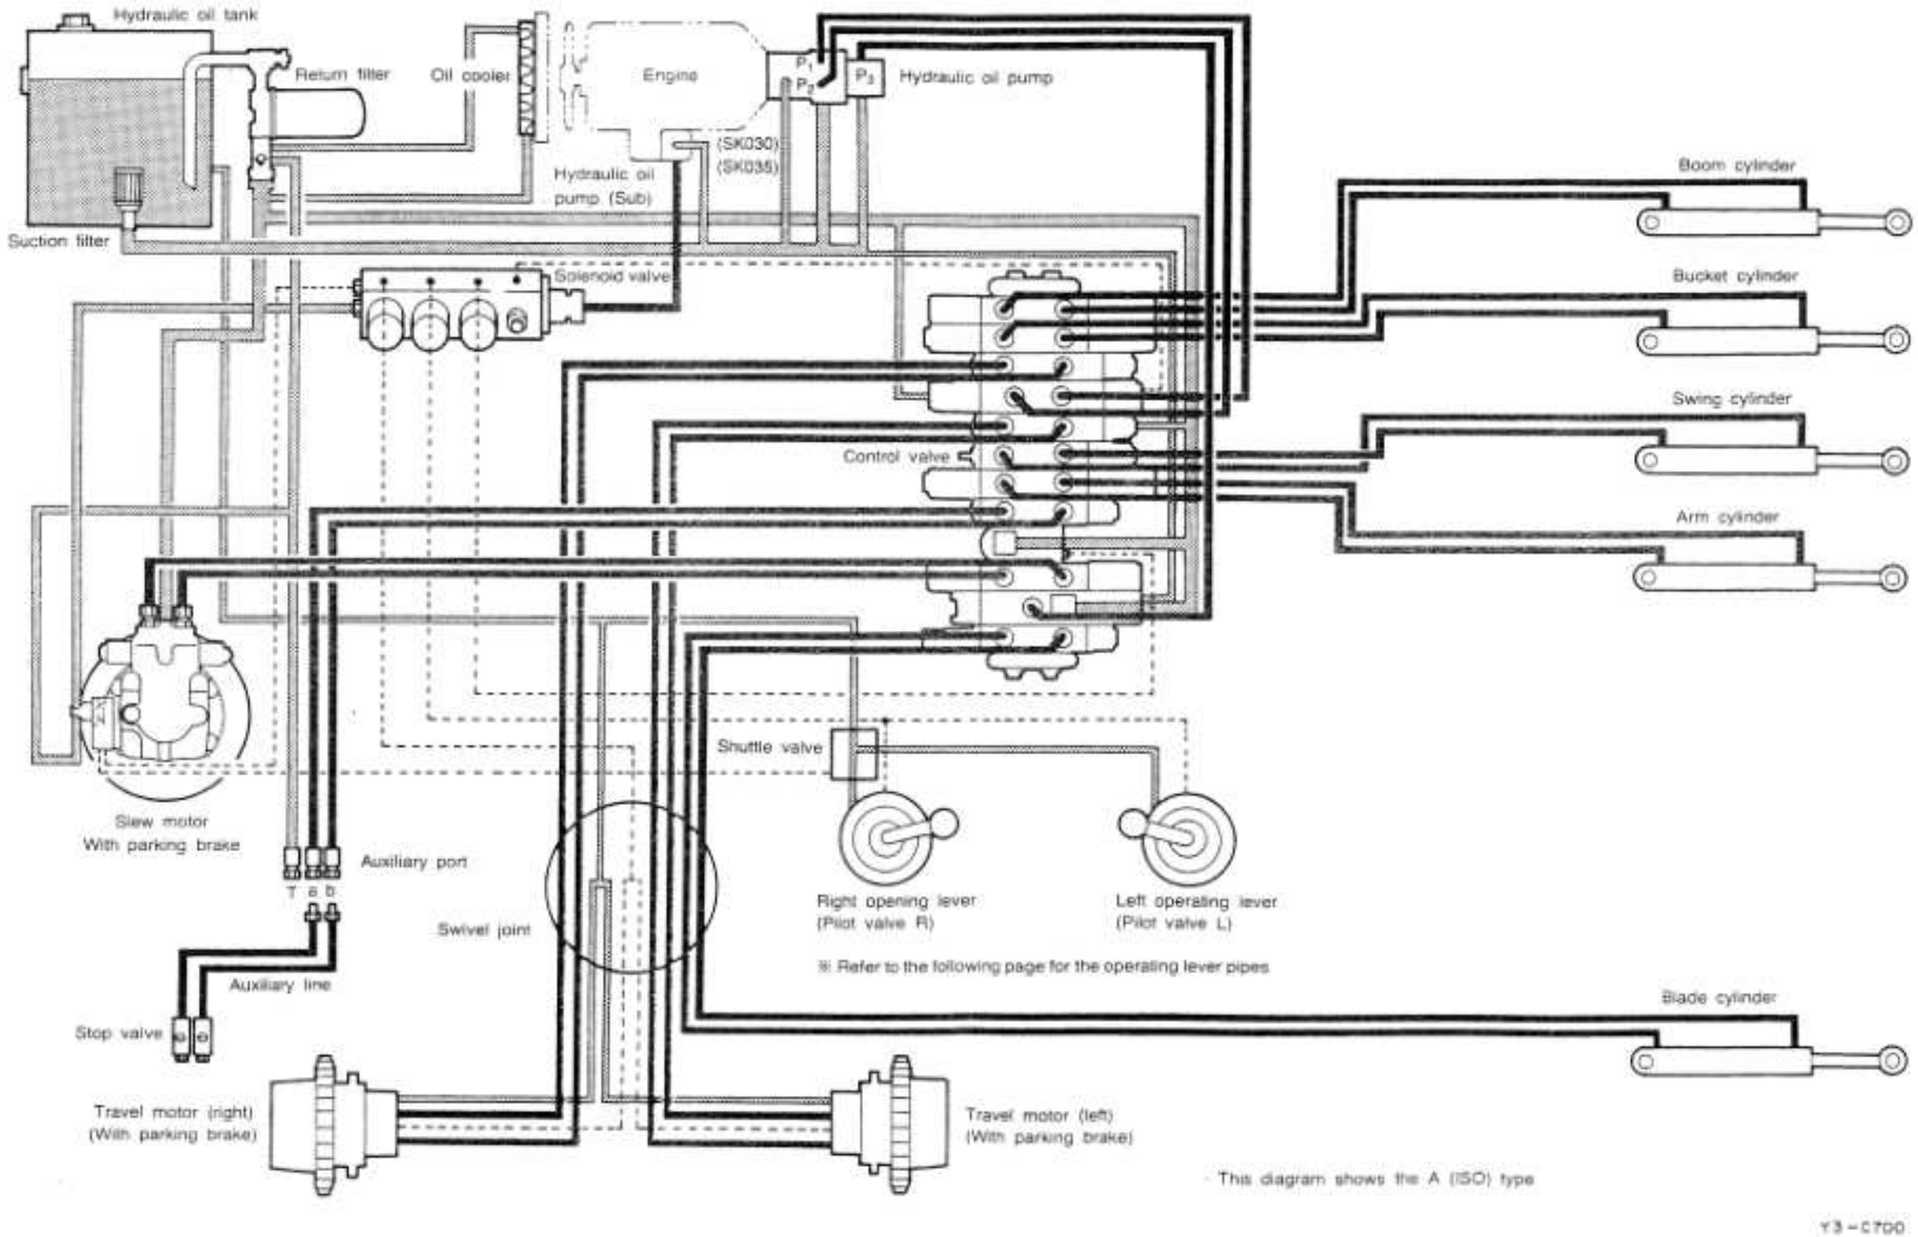

MidWestTech | Kobelco SK025, SK030, SK035 Hydraulic Excavator Service Manual | Publication S5RO0004E
Order the manual at mid-west-tech.com >