KOBELCO

SERVICE MANUAL

Hydraulic Excavator

SK210-9

Tier 4

S5YN0042E01

Issued January 2012
1st Edition

APPLICABLE:
SK210-9 . . . . . YQ13U5200 and higher ~

MidWestTech | Kobelco SK210-9 Tier 4 Hydraulic Excavator Service Manual | Publication S5YN0042E01

Order the manual at mid-west-tech.com >

1 - SPECIFICATIONS

SECTION 1 - OUTLINE

BOOK 1 - 84587039

CONTENTS

Section	Description	Page
1.1	GENERAL PRECAUTIONS FOR MAKING REPAIRS	1-3
1.1.1	PREPARATION BEFORE DISASSEMBLING	1-3
1.1.2	SAFETY WHEN DISASSEMBLING AND ASSEMBLING	1-3
1.1.3	DISASSEMBLING AND ASSEMBLING HYDRAULIC EQUIPMENT	1-3
1.1.4	ELECTRICAL EQUIPMENT	1-4
1.1.5	HYDRAULIC PARTS	1-5
1.1.6	WELD REPAIR	1-5
1.1.7	ENVIRONMENTAL ISSUES	1-5
1.2	INTERNATIONAL UNIT SYSTEM	1-6

SECTION 2 - SPECIFICATIONS

BOOK 1 - 84587039

CONTENTS

Section	Description	Page
2.1	NAME OF COMPONENTS	2-3
2.2	GENERAL DIMENSIONS	2-4
2.2.1	SK210-9 [5.65m(18ft-6in) + 2.94m(7ft-10in) Standard Arm + 0.80m3 (1.05cu-yd) Bucket]	2-4
2.2.2	SK210-9 [5.65m(18ft-6in) + 2.4m(7ft-10in) Short Arm + 0.93m3 (1.22cu-yd) Bucket]	2-4
2.2.3	SK210-9 [5.65m(18ft-6in) + 3.5m(11ft-6in) Long Arm + 0.70m3 (0.92cu-yd) Bucket]	2-5
2.3	WEIGHT OF COMPONENTS	2-6
2.4	TRANSPOTATION	2-8
2.4.1	OVERALL DIMENSIONS OF MACHINE ON A TRAILER	2-8
2.4.2	DIMENSIONS OF ATTACHMENT	2-9
2.5	SPECIFICATIONS AND PERFORMANCE	2-11
2.5.1	SPEED AND CLIMBING CAPABILITY	2-11
2.5.2	ENGINE	2-11
2.5.3	HYDRAULIC COMPONENTS	2-11

MidWestTech | Kobelco SK210-9 Tier 4 Hydraulic Excavator Service Manual | Publication... Order the manual at mid-west-tech.com >

SECTION 2 - SPECIFICATIONS (CONT)

BOOK 1 - 84587039

CONTENTS

Section	Description	Page
2.5.4	WEIGHT	2-11
2.6	TYPE OF CRAWLER	2-12
2.7	TYPE OF BUCKET	2-12
2.8	COMBINATIONS OF ATTACHMENT	2-13
2.9	ENGINE SPECIFICATION	2-14
2.9.1	SPECIFICATIONS	2-14
2.9.2	ENGINE CHARACTERISTIC CURVE	2-15

SECTION 3 - ATTACHMENT DIMENSIONS

BOOK 1 - 84587039

CONTENTS

Section	Description	Page
3.1	BOOM	3-3
3.1.1	BOOM DIMENSIONAL DRAWING	3-3
3.1.2	BOOM MAINTENANCE STANDARD	3-4
3.2	ARM	3-7
3.2.1	ARM DIMENSIONAL DRAWING	3-7
3.2.2	ARM MAINTENANCE STANDARD	3-8
3.3	BUCKET	3-12
3.3.1	BUCKET DIMENSIONAL DRAWING	3-12
3.3.2	BUCKET DIMENSIONAL TABLE	3-12
3.3.3	LUG SECTION DIMENSIONAL DRAWING	3-13
3.3.4	BOSS SECTION DIMENSIONAL DRAWING	3-14

MidWestTech | Kobelco SK210-9 Tier 4 Hydraulic Excavator Service Manual | Publication... Order the manual at mid-west-tech.com >

2 - MAINTENANCE

SECTION 11 - TOOLS


BOOK 1 - 84587039

CONTENTS


Section	Description	Page
11.1	TIGHTENING TORQUES FOR CAPSCREWS AND NUTS	11-3
11.2	SCREW SIZE	11-5
11.2.1	CAPSCREW (BOLT)	11-5
11.2.2	CAPSCREW (SOCKET BOLT)	11-5
11.2.3	SOCKET SET SCREW	11-5
11.3	TIGHTENING TORQUE FOR HOSE AND FITTING	11-6
11.3.1	JOINT (O-RING TYPE)	11-6
11.3.2	HYDRAULIC HOSE (30° FLARE TYPE)	11-6
11.3.3	JOINT (ORS TYPE)	11-6
11.3.4	SPLIT FLANGE	11-6
11.4	TIGHTENING TORQUES FOR NUTS AND SLEEVES	11-7
11.5	PLUG	11-8
11.5.1	PLUG FOR HYDRAULIC PIPE JOINT	11-8
11.5.2	PLUG FOR HYDRAULIC EQUIPMENT	11-9
11.6	SPECIAL SPANNER FOR TUBE	11-11
11.7	SPECIAL TOOLS	11-12
11.8	APPLICATION OF SCREW LOCKING COMPOUND AND SEALING COMPOUND	11-14
11.9	SUCTION STOPPER	11-15
11.9.1	COMPONENTS	11-15
11.9.2	DIMENSION	11-15
11.9.3	APPLICABLE MODEL	11-15
11.10	COUNTER WEIGHT LIFTING JIG	11-16
11.11	UPPER FRAME LIFTING JIG	11-17
11.12	ENGINE MOUNTING PEDESTAL	11-18
11.13	TRACK SPRING SET JIG	11-19

MidWestTech | Kobelco SK210-9 Tier 4 Hydraulic Excavator Service Manual | Publication... Order the manual at mid-west-tech.com >


24.3.3 DEF/AdBlue® CIRCUIT SCHEME

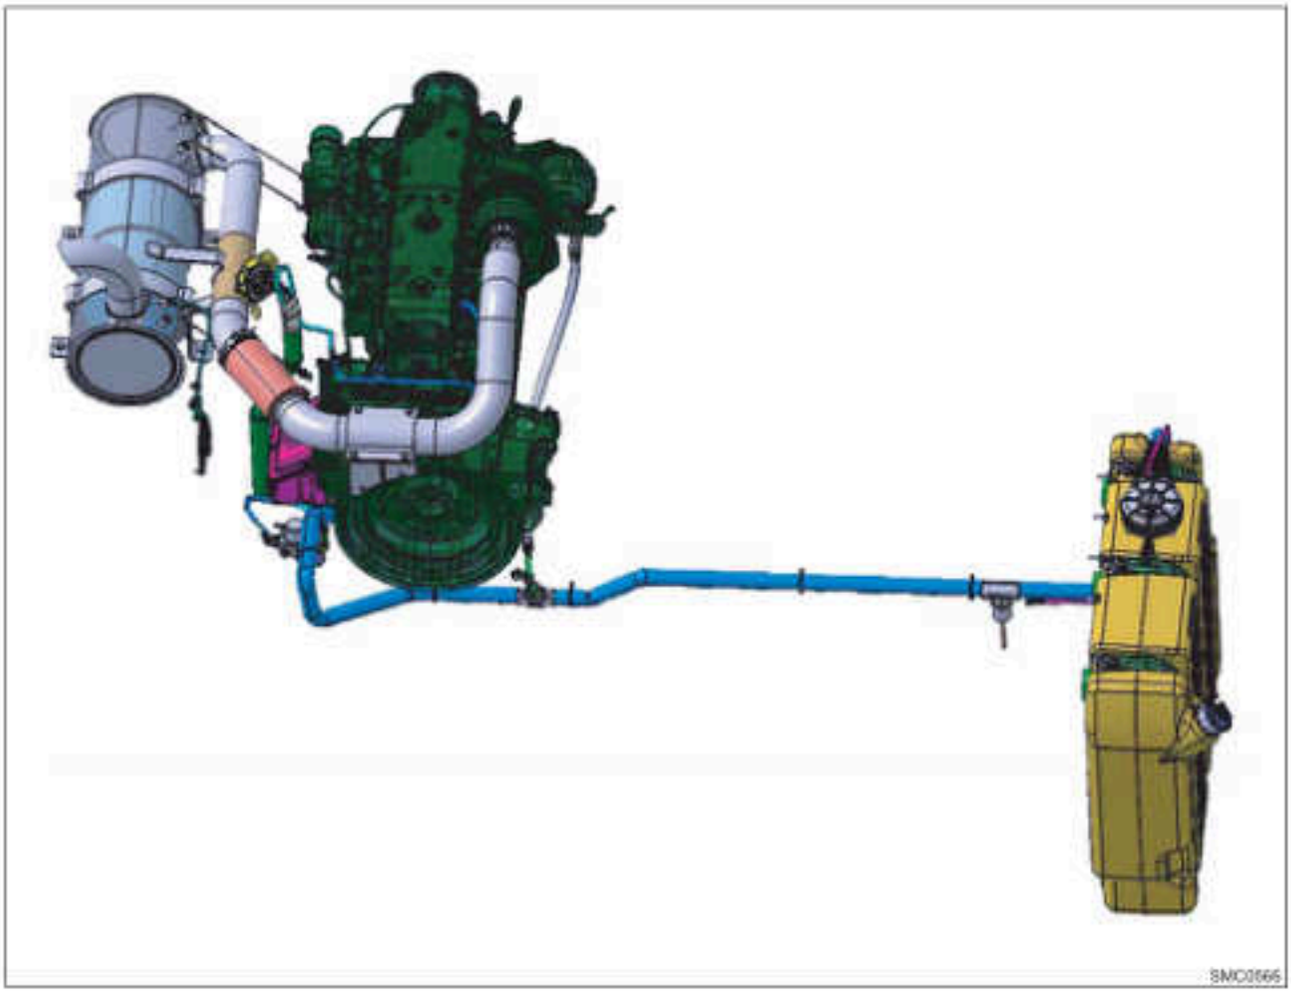

24.3.4 DEF/AdBlue® CIRCUIT COMPONENTS

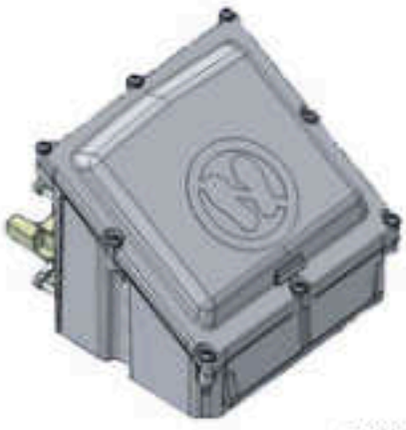DEF/AdBlue® Tank	Supply Module
	

MidWestTech | Kobelco SK210-9 Tier 4 Hydraulic Excavator Service Manual | Publicat... Order the manual at mid-west-tech.com >

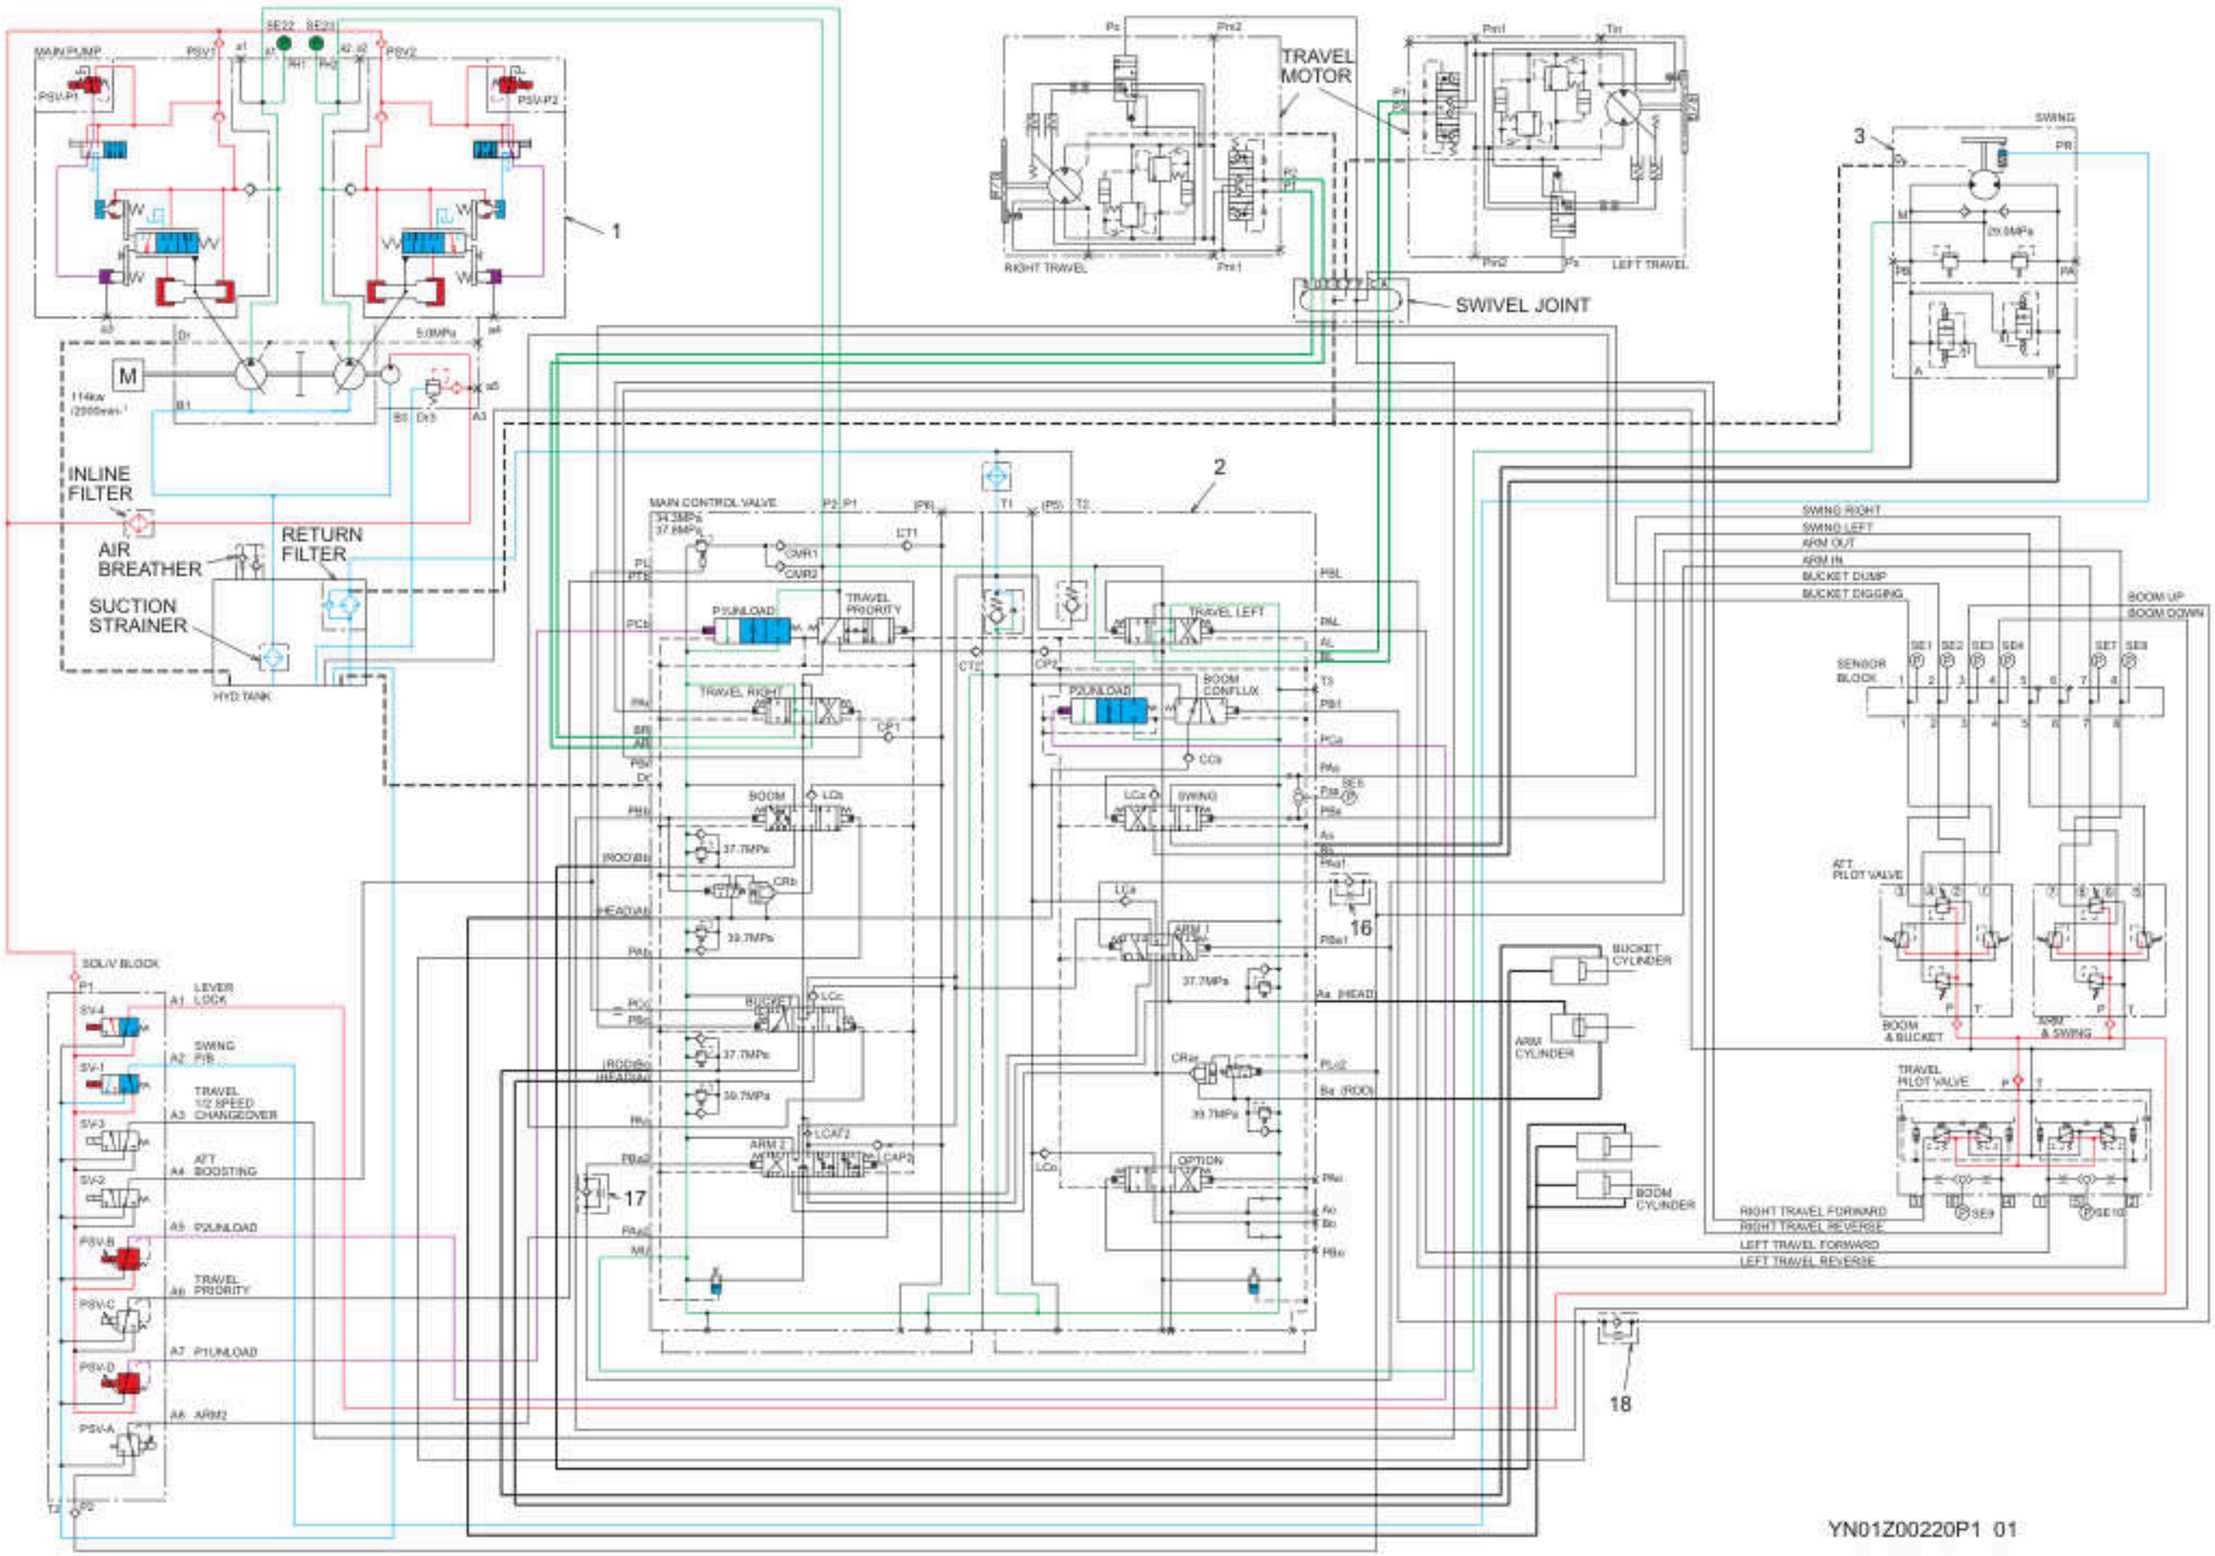

NEUTRAL CIRCUIT : Positive control function at safety lock lever down (unlocked position)

MidWestTech | Kobelco SK210-9 Tier 4 Hydraulic Excavator Service Manual | Publication S5YN0042E01

Order the manual at mid-west-tech.com >