SEAM002203

Operation & Maintenance Manual

PC100-6
PC120-6
PC130-6 MIGHTY

HYDRAULIC EXCAVATOR

SERIAL NUMBERS PC100 :40624
PC120 :47571 and up
PC130 :47713

WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept near the machine for reference and periodically reviewed by all personnel who will come into contact with it.

NOTICE

Komatsu has Operation & Maintenance Manuals written in some other languages. If a foreign language manual is necessary, contact your local distributor for availability.

KOMATSU®

MidWestTech | Komatsu PC100-6, PC120-6, PC130-6 Mighty Hydraulic Excavator Operatio... Order the manual at mid-west-tech.com >

5. CONTENTS

1. **Foreword** 0- 1

2. **Safety information** 0- 2

3. **Introduction** 0- 3

4. **Location of plates, table to enter serial No. and distributor** 0- 4

SAFETY

6. **General precautions** 1- 2

7. **Precautions during operation** 1- 8
   - 7.1 Before starting engine 1- 8
   - 7.2 Operating machine 1-10
   - 7.3 Transportation 1-15
   - 7.4 Battery 1-16
   - 7.5 Towing 1-17
   - 7.6 Bucket with hook 1-18

8. **Precautions for maintenance** 1-21
   - 8.1 Before carrying out maintenance 1-21
   - 8.2 During maintenance 1-24

9. **Position for attaching safety labels** 1-28

OPERATION

10. **General view** 2- 2
    - 10.1 General view of machine 2- 2
    - 10.2 General view of controls and gauges 2- 3

11. **Explanation of components** 2- 4
    - 11.1 Machine monitor 2- 4
    - 11.2 Meter 2-15
    - 11.3 Switches 2-16
    - 11.4 Control levers, pedals 2-21
    - 11.5 Ceiling window 2-26
    - 11.6 Front window 2-27
    - 11.7 Door lock 2-29
    - 11.8 Cap, cover with lock 2-30
    - 11.9 Hot / Cool box 2-31
    - 11.10 Luggage box 2-31
    - 11.11 Ashtray 2-31
    - 11.12 Air conditioner 2-32
    - 11.13 Car radio 2-35
    - 11.14 Fuse 2-39
    - 11.15 Fusible link 2-40
    - 11.16 Controllers 2-40
    - 11.17 Tool box 2-40
    - 11.18 Grease pump holder 2-40

MidWestTech | Komatsu PC100-6, PC120-6, PC130-6 Mighty Hydraulic Excavator Operation... Order the manual at mid-west-tech.com >

12. Operation 2-41
12.1 Check before starting engine 2-41
12.2 Starting engine 2-51
12.3 Operations and checks after starting engine 2-54
12.4 Moving machine off 2-60
12.5 Steering machine 2-63
12.6 Stopping machine 2-65
12.7 Swinging 2-66
12.8 Operation of work equipment 2-67
12.9 Working mode selection 2-68
12.10 Prohibitions for operation 2-70
12.11 Precautions for operation 2-72
12.12 Precautions when traveling up or down hills 2-73
12.13 How to escape from mud 2-75
12.14 Work possible using hydraulic excavator 2-76
12.15 Replacement and inversion of bucket 2-77
12.16 Parking machine 2-79
12.17 Check after finishing work 2-80
12.18 Stopping engine 2-81
12.19 Check after stopping engine 2-82
12.20 Locking 2-82

13. Transportation 2-83
13.1 Loading, unloading work 2-83
13.2 Precautions for loading 2-85
13.3 Precautions for transportation 2-86

14. Cold weather operation 2-88
14.1 Precautions for low temperature 2-88
14.2 Precautions after completion of work 2-90
14.3 After cold weather 2-90

15. Long-term storage 2-91
15.1 Before storage 2-91
15.2 During storage 2-92
15.3 After storage 2-92
15.4 Starting machine after long-term storage 2-92

16. Troubleshooting 2-93
16.1 Phenomena that are not failures 2-93
16.2 Method of towing machine 2-93
16.3 Using method for light-weight towing hook 2-93
16.4 Precautions on particular jobsites 2-94
16.5 If battery is discharged 2-94
16.6 Other trouble 2-98

MidWestTech | Komatsu PC100-6, PC120-6, PC130-6 Mighty Hydraulic Excavator Operation... Order the manual at mid-west-tech.com >

MAINTENANCE

17. Guides to maintenance 3- 2

18. Outlines of service 3- 4
18.1 Outline of oil, fuel, coolant 3- 4
18.2 Outline of electric system 3- 7
18.3 Outline of hydraulic system 3- 8

19. Wear parts list 3- 9

20. Use of fuel, coolant and lubricants according to ambient temperature 3-10

21. Standard tightening torques for bolts and nuts 3-14
21.1 Introduction of necessary tools 3-14
21.2 Torque list 3-15

22. Periodic replacement of safety critical parts 3-16


23. Maintenance schedule chart 3-18
23.1 Maintenance schedule chart 3-18
23.2 Maintenance interval when using hydraulic breaker 3-20

24. Service Procedure 3-21
24.1 Initial 250 hours service 3-21
24.2 When required 3-22
24.3 Check before starting 3-40
24.4 Every 50 hours service 3-44
24.5 Every 100 hours service 3-45
24.6 Every 250 hours service 3-48
24.7 Every 500 hours service 3-55
24.8 Every 1000 hours service 3-60
24.9 Every 2000 hours service 3-63
24.10 Every 4000 hours service 3-69

SPECIFICATIONS

25. Specifications 4- 2

MidWestTech | Komatsu PC100-6, PC120-6, PC130-6 Mighty Hydraulic Excavator Operation... Order the manual at mid-west-tech.com >

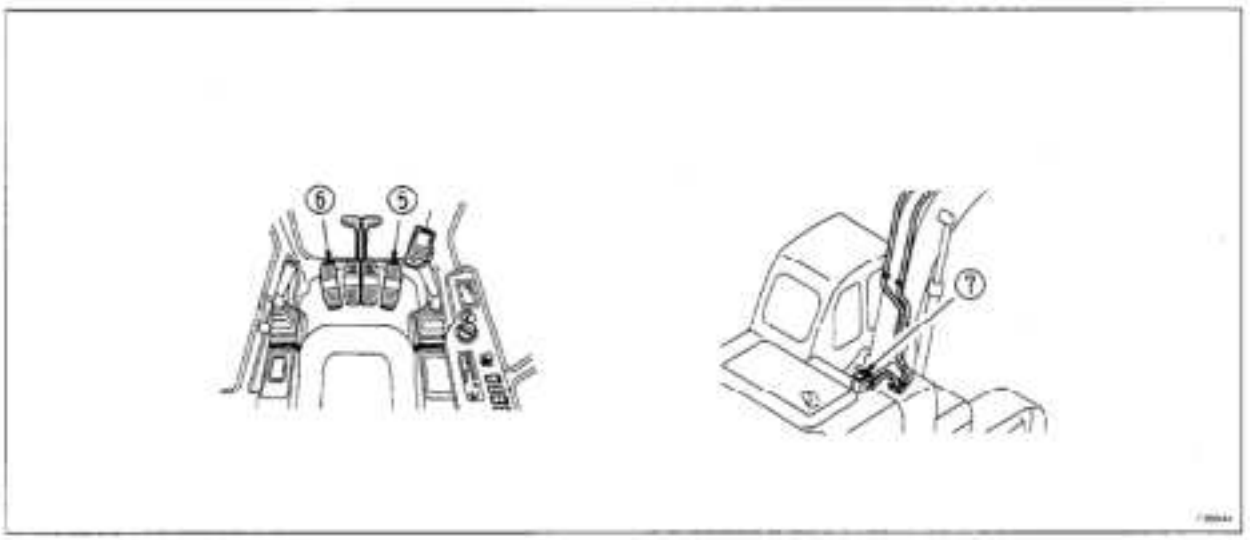

5. RIGHT ATTACHMENT CONTROL PEDAL (FOR ONE LINE) (WITH AUTO DECELERATION MECHANISM)

⚠ WARNING

Do not put your foot on the pedal except when operating the pedal. If resting your foot on the pedal during operations, and it is depressed by accident, the attachment may move suddenly and cause serious damage or injury.

When breaker is installed

- The breaker is actuated when the pedal is pushed forward.
- The positions of the lock pin are as follows: ① LOCK, ② FREE. Position ③ is not used.
- Set the working mode to BREAKER.



When general attachment is installed

- When the pedal is depressed, the attachment is actuated.
- The positions of the lock pin are as follows: ① LOCK, ②, ③ FREE.

Note:

Position ②: For attachments such as crushers and power rippers with large oil flow

Position ③: For attachments such as slide arm with small oil flow



MidWestTech | Komatsu PC100-6, PC120-6, PC130-6 Mighty Hydraulic Excavator Operation... Order the manual at mid-west-tech.com >

23. MAINTENANCE SCHEDULE CHART


23.1 MAINTENANCE SCHEDULE CHART

SERVICE ITEM	PAGE
INITIAL 250 HOURS SERVICE (only after the first 250 hours)	
Replace fuel filter cartridge	3-55
Check engine valve clearance, adjust	3-69
WHEN REQUIRED	
Check, clean and replace air cleaner element	3-22
Clean inside of cooling system	3-24
Check and tighten track shoe bolts	3-28
Check and adjust track tension	3-29
Check electrical intake air heater	3-31
Replace bucket teeth (vertical pin type)	3-32
Replace bucket teeth (horizontal pin type)	3-35
Adjust bucket clearance	3-36
Check window washer fluid level, add fluid	3-37
Check and adjust air conditioner	3-38
Replace additional breaker filter element	3-39
CHECK BEFORE STARTING	
Check coolant level, add water	3-40
Check oil level in engine oil pan, add oil	3-40
Check fuel level, add fuel	3-41
Check oil level in hydraulic tank, add oil	3-42
Check air cleaner for clogging	3-43
Check electric wirings	3-43
Check for water and sediment in water separator, drain water	3-43
EVERY 50 HOURS SERVICE	
Drain water and sediment from fuel tank	3-44
EVERY 100 HOURS SERVICE	
Lubricating	3-45
• Boom cylinder foot pin (2 points)	3-45
• Boom foot pin (2 points)	3-45
• Boom cylinder rod end (2 points)	3-45

MidWestTech | Komatsu PC100-6, PC120-6, PC130-6 Mighty Hydraulic Excavator Operation... Order the manual at mid-west-tech.com >

PC130-6 MIGHTY

1. The mark ※ indicates the dimensions for shovel operation.
2. Never allow other person than the operator to enter the swing range (Max. swing range, Max. digging radius).

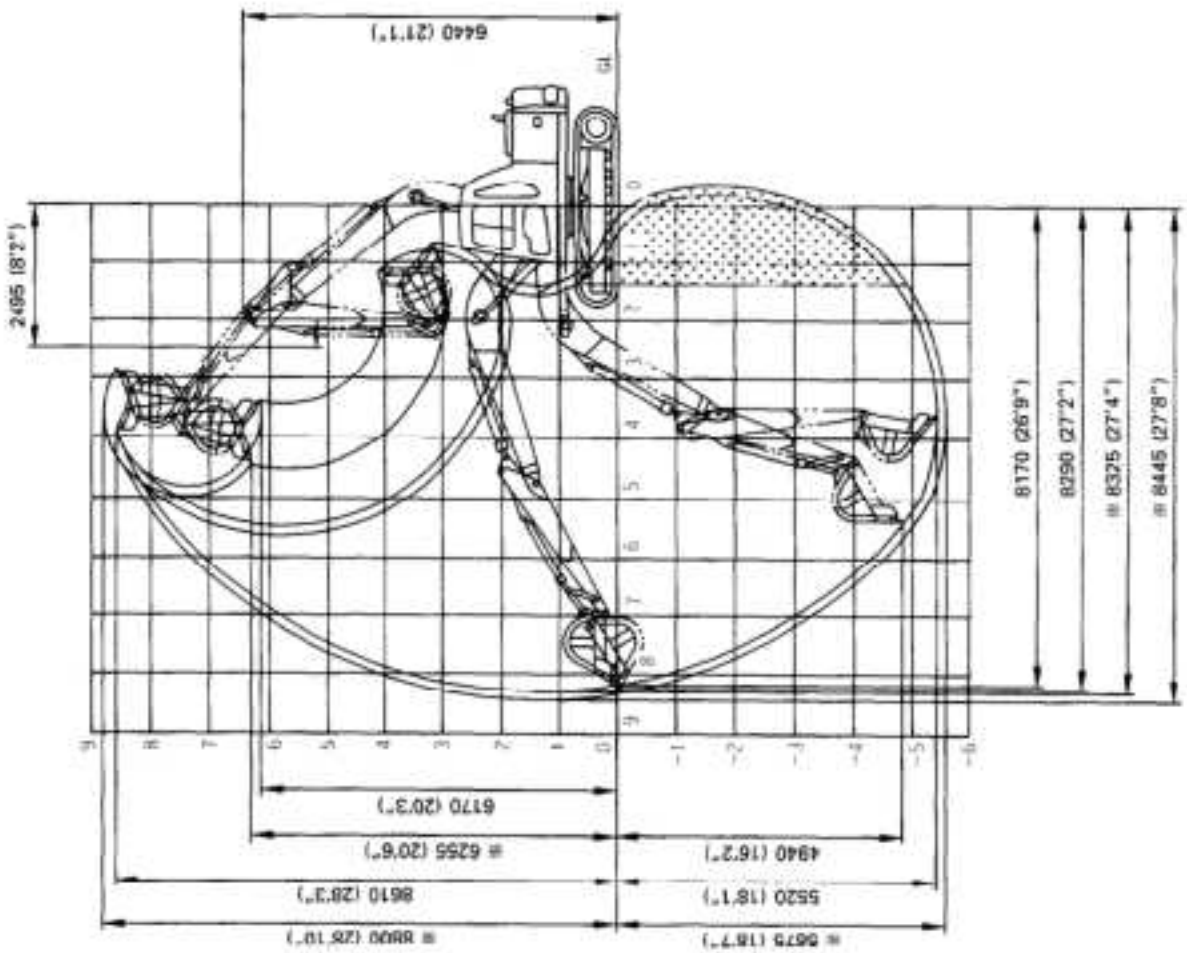

MidWestTech | Komatsu PC100-6, PC120-6, PC130-6 Mighty Hydraulic Excavator Operation &... Order the manual at mid-west-tech.com >