Operation & Maintenance Manual

SEAM006500



BR200R-1

MOBILE WASTE RECYCLER

SERIAL NUMBERS 1001 and up

KOMATSU

MidWestTech | Komatsu BR200R-1 Mobile Waste Recycler Operation & Maintenance Manu... Order the manual at mid-west-tech.com >

5. CONTENTS

1. FOREWORD 0- 1

2. SAFETY INFORMATION 0- 2

3. TO THE USER 0- 3

4. LOCATION OF PLATES, TABLE TO ENTER SERIAL NO. AND DISTBUTOR 0- 4

SAFETY

1. GENERAL PRECAUTIONS 1- 2

2. PRECAUTIONS DURING OPERATION 1- 6

- 2.1 Before starting engine 1- 6
- 2.2 Operating machine 1- 7
- 2.3 Crusher (crushing) operations 1- 8
- 2.4 Transportation 1-10
- 2.5 Battery 1-11

3. PRECAUTIONS FOR MAINTENANCE 1-12

4. POSITION FOR ATTACHING SAFETY LABELS 1-16

OPERATION

1. GENERAL VIEW 2- 2

2. INSTRUMENTS AND CONTROLS 2- 3

- 2.1 Electronic vehicle monitoring system 2- 3
- 2.2 Switch unit 2- 7
- 2.3 Cap with lock 2-10
- 2.4 Dust indicator 2-11
- 2.5 Fusible link 2-11
- 2.6 Fuse 2-12
- 2.7 Handling of accumulator 2-13

3. OPERATING PROCEDURES 2-15

- 3.1 Checks before starting 2-15
- 3.2 Checks before starting 2-16
- 3.3 Starting the engine 2-22
- 3.4 After starting the engine 2-25
- 3.5 Starting the vehicle 2-26
- 3.6 Steering (Changing the course) 2-27
- 3.7 Stopping the vehicle 2-27
- 3.8 Starting crusher operations 2-28
- 3.9 Type of debris and adjustment of engine speed and feeder speed 2-29
- 3.10 Sprinkler 2-30

MidWestTech | Komatsu BR200R-1 Mobile Waste Recycler Operation & Maintenance... Order the manual at mid-west-tech.com >

3.11 End of operation 2-31
3.12 After end of operation 2-31
3.13 Stopping the engine 2-31
3.14 Inspection after stop of engine 2-32
3.15 Automatic stop of belt conveyor 2-32

4. PROCAUTIONS DURING OPERATION OF CRUSHER 2-33
4.1 Precautions concerning adhesion of earth and sand and striking board 2-33
4.2 Grain size of product 2-34
4.3 Other precautions 2-36

5. TRANSPORTATION 2-37

6. LONG-TERM STORAGE 2-39

MAINTENACE

1. GENERAL INSTRUCTIONS ON MAINTENANCE OPERATIONS 3- 2

2. AIR BLEEDING FROM CIRCUIT 3-11
2.1 Air bleeding in the main pump 3-12
2.2 Air bleeding in the subpump 3-12
2.3 Starting the engine 3-12
2.4 Air bleeding in the crusher motor 3-13
2.5 Air bleeding in the plat feeder motor 3-13
2.6 Air bleeding in the belt converyor motor 3-13
2.7 Air bleeding in the travel motor 3-14
2.8 Starting operations 3-14

3. OIL FILLER AND OIL LEVEL GAUGE 3-15

4. STANDARD BOLTS AND NUTS 3-16

5. MAINTENANCE TABLE 3-18

6. PERIODIC MAINTENANCE 3-20
6.1 Check before starting 3-20
6.2 Every 100 hours service 3-25
6.3 Every 250 hours service 3-27
6.4 Every 500 hours service 3-33
6.5 Maintenance every 1000 hours 3-36
6.6 Every 2000 hours service 3-37
6.7 Every 4000 hours service 3-40

MidWestTech | Komatsu BR200R-1 Mobile Waste Recycler Operation & Maintenance... Order the manual at mid-west-tech.com >

7. WHEN REQUIRED 3-41
- 7.1 Check, cleaning and replacement of air cleaner 3-41
- 7.2 Cleaning of the inside of the cooling system 3-44
- 7.3 Tension check and adjustment for the track shoe 3-48
- 7.4 Inspection, adjustment and replacement of crusher 3-49
- 7.5 Inspection and adjustment of belt conveyor 3-68

8. WEAR PARTS 3-70
- 8.1 Wear parts related to the body 3-70
- 8.2 Parts related to crusher 3-71
- 7.3 Wear parts related to the primary belt conveyor 3-73

9. USAGE OF FUEL, COOLANT AND LUBRICANTS ACCORDING TO AMBIENT TEMPERATURE 3-75

10. PERIODIC REPLACEMENT OF SAFETY PARTS 3-76

11. TROUBLESHOOTING 3-78
- 11.1 Crusher 3-78
- 11.2 Electrical equipment 3-79
- 11.3 Engine 3-80
- 10.3 Engine (continued from the previous page) 3-81
- 10.4 Body 3-81
- 10.5 Belt conveyor 3-82

SPECIFICATIONS AND CIRCUIT DIAGRAMS

1. External View 4- 2

2. Specifications 4- 3

3. Hydraulic Circuit 4- 5

4. Electrical Circuit 4- 6

OPTIONS


1. HANDLING OF HYDRAULIC SECONDARY BELT CONVEYOR 5- 2
- 1.1 Specifications 5- 2
- 1.2 External view 5- 2
- 1.3 Procedure for installing the inclined leg 5- 3
- 1.4 Precautions concerning operation 5- 3
- 1.5 Inspection, maintenance and adjustment 5- 4
- 1.6 Troubleshooting 5- 5
- 1.7 Details of hydraulic secondary belt conveyor wear parts 5- 6

MidWestTech | Komatsu BR200R-1 Mobile Waste Recycler Operation & Maintenance... Order the manual at mid-west-tech.com >

ELECTRIC CIRCUIT

1. Symbols in the figure indicate following connectors:

- Yazaki M type Connector 008056-0XXXX
- Yazaki S type Connector 008056-1XXXX
- Yazaki L Type Connector 008056-2XXXX
- Yazaki X type connector 008055-0XXXX
- Yazaki SWP type Connector 008055-1XXXX
- KES 008027-1XXXX
- AMP 040 type connector
- AMP Mark 2 type connector
- 22W-06-13480
- 419-00-11390

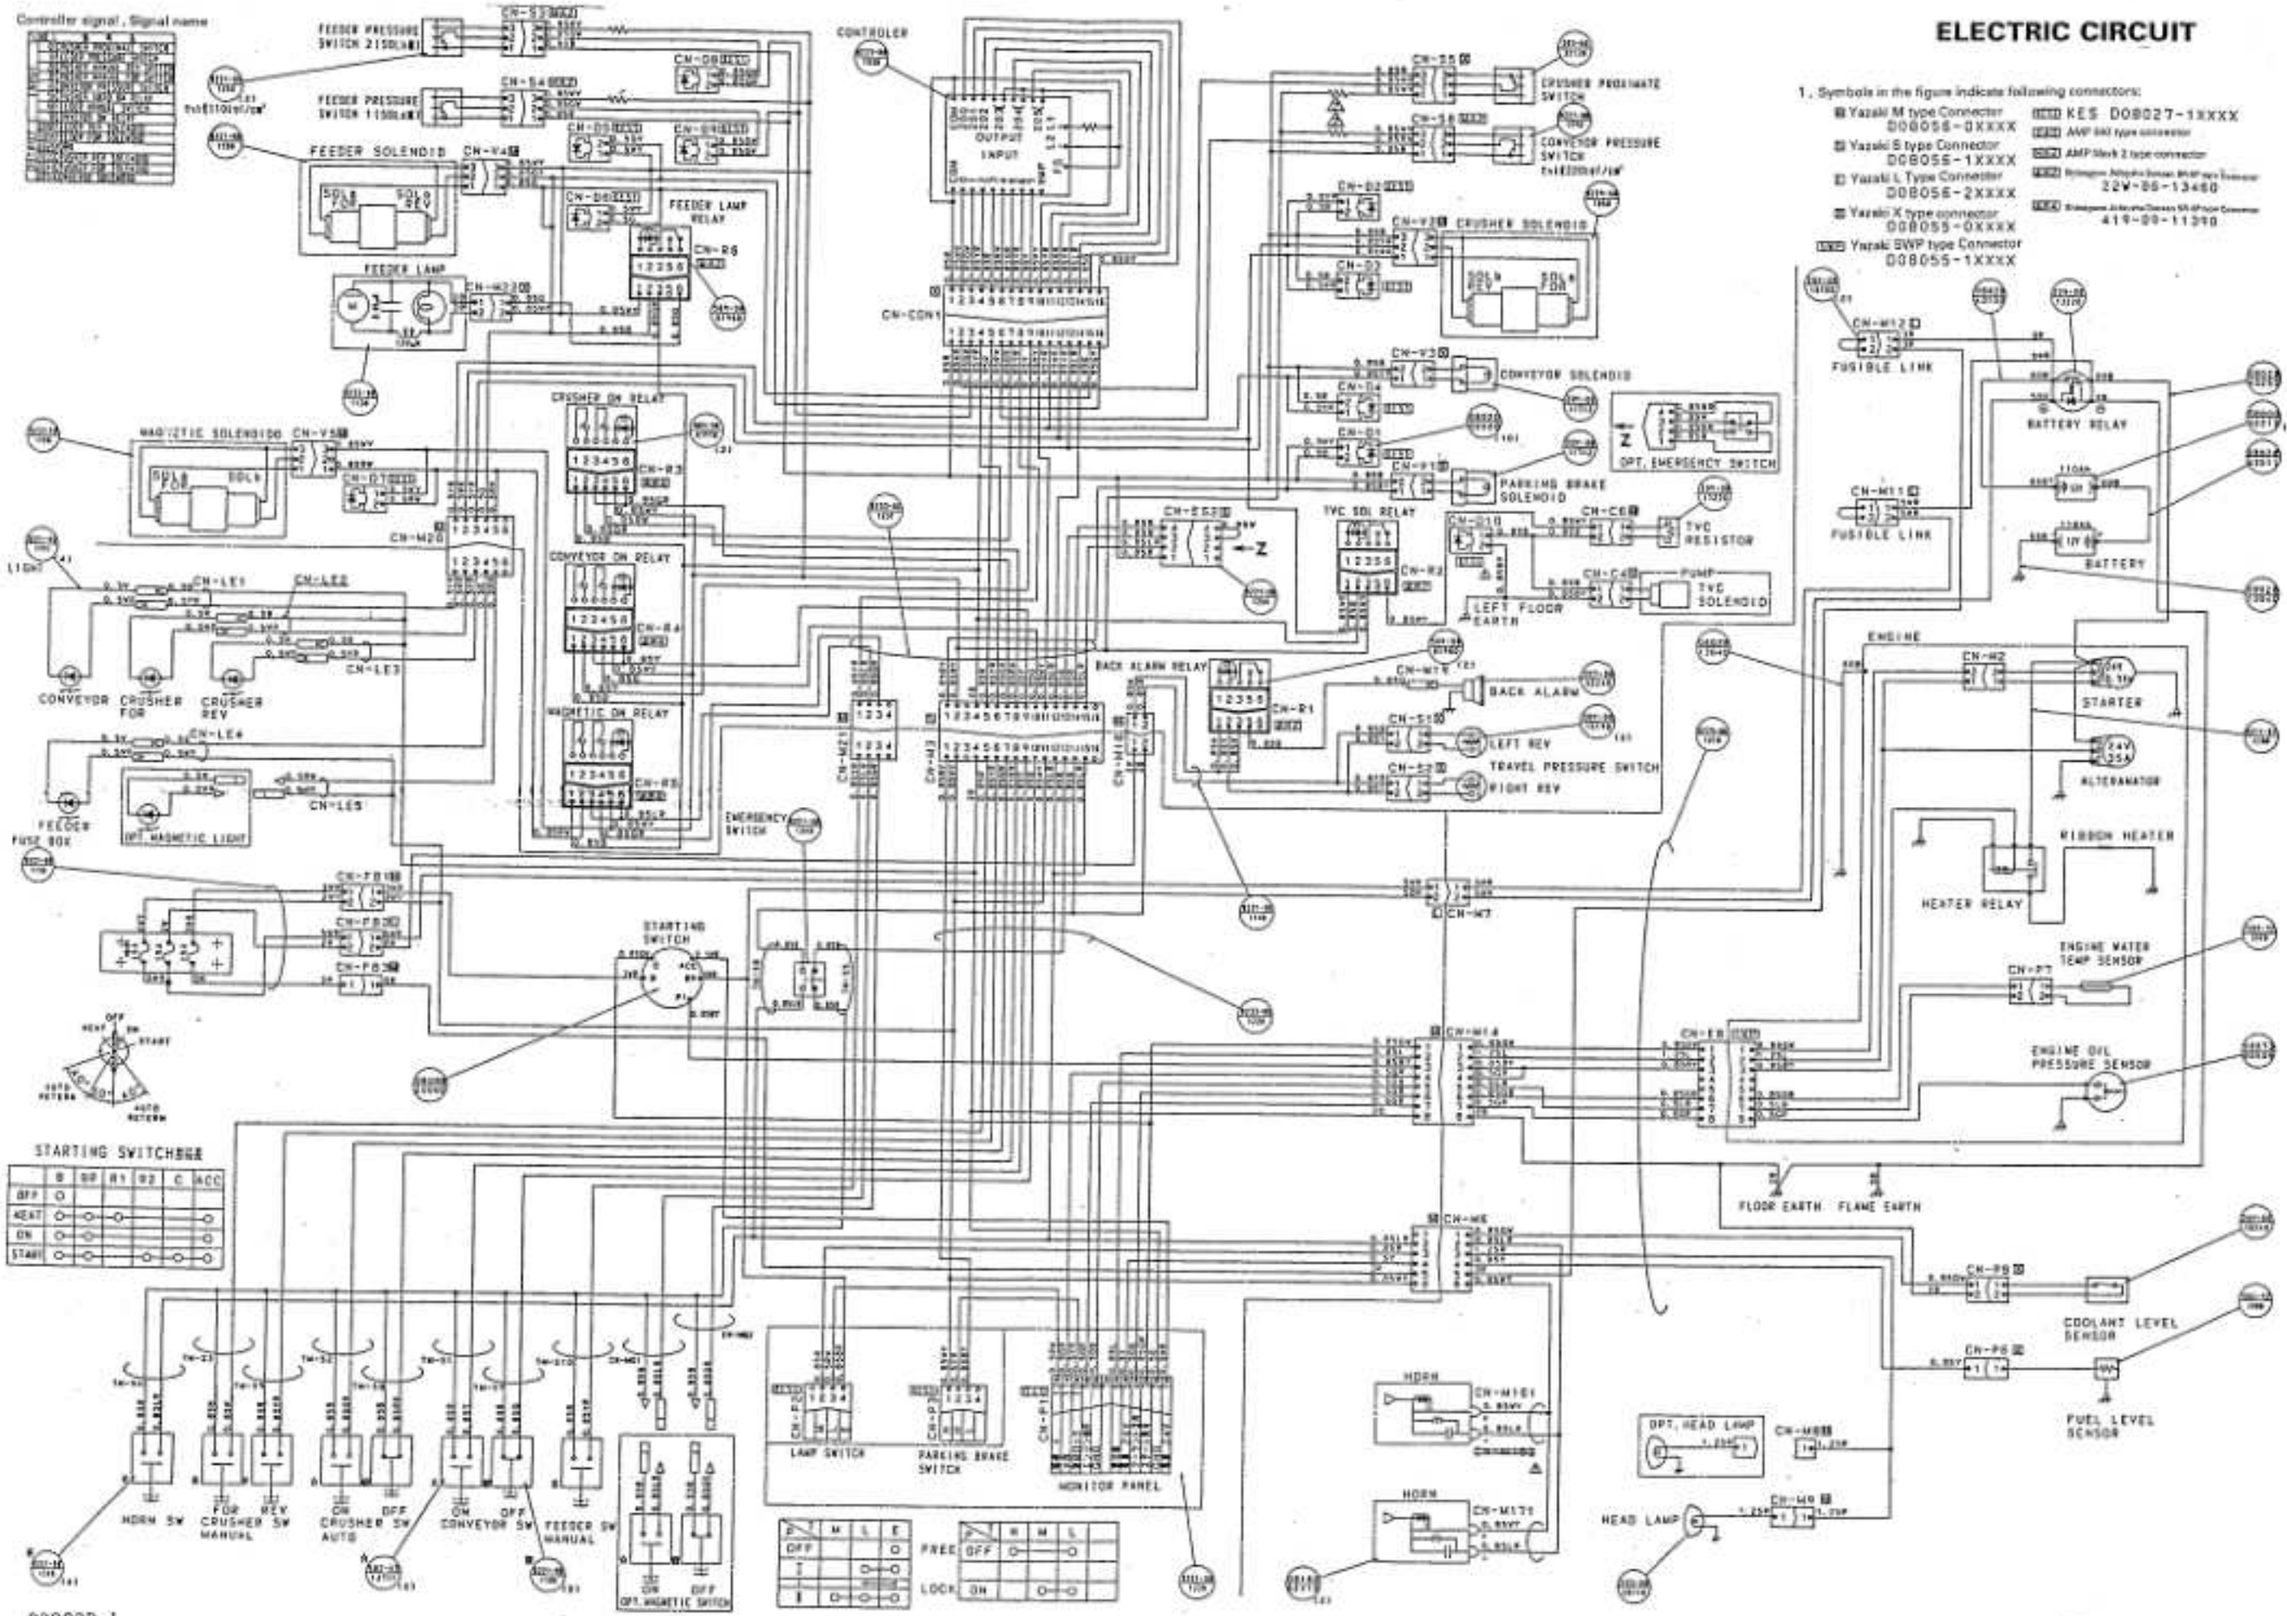

MidWestTech | Komatsu BR200R-1 Mobile Waste Recycler Operation & Maintenance Manual | Publication SEAM006500

Order the manual at mid-west-tech.com >