SEAM007205

Operation & Maintenance Manual

D65EX-12
D65PX-12

BULLDOZER

SERIAL NUMBERS D65EX-62959 and up
D65PX-62771

WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept near the machine for reference and periodically reviewed by all personnel who will come into contact with it.

NOTICE

Komatsu has Operation & Maintenance Manuals written in some other languages. If a foreign language manual is necessary, contact your local distributor for availability.

KOMATSU®

MidWestTech | Komatsu D65EX-12, D65PX-12 Bulldozer Operation & Maintenance Manual... Order the manual at mid-west-tech.com >

5. CONTENTS

1. **Foreword** 0- 1

2. **Safety information** 0- 2

3. **Introduction** 0- 3

4. **Location of plates, table to enter serial No. and distributor** 0- 4

SAFETY

6. **General precautions** 1- 2

7. **Precautions during operation** 1- 7
   - 7.1 Before starting engine 1- 7
   - 7.2 After starting engine 1- 9
   - 7.3 Transportation 1-15
   - 7.4 Battery 1-16
   - 7.5 Towing 1-18

8. **Precautions for maintenance** 1-19
   - 8.1 Before carrying out maintenance 1-19
   - 8.2 During maintenance 1-23

9. **Position for attaching safety labels** 1-28
   - 9.1 Position for attaching safety labels 1-28

OPERATION

10. **General view** 2- 2
   - 10.1 General view of machine 2- 2
   - 10.2 General view of controls and gauges 2- 3

11. **Explanation of components** 2- 6
   - 11.1 Front panel (meters, lamps, switches) 2- 7
   - 11.2 Switches 2-20
   - 11.3 Control levers, pedals 2-23
   - 11.4 Fuse box 2-30
   - 11.5 Power pickup connectors 2-31
   - 11.6 Grease pump holder 2-32
   - 11.7 Shovel holder 2-32
   - 11.8 Door-open lock (machines equipped with cab) 2-32
   - 11.9 Sash glass intermediate lock (machines equipped with cab) 2-33
   - 11.10 Cap with lock 2-33
   - 11.11 Hot and cool box (machines equipped with cab) 2-34
   - 11.12 Door pocket (machines equipped with cab) 2-34
   - 11.13 Ashtray (machines equipped with cab) 2-34
   - 11.14 Tool box 2-34
   - 11.15 Using car radio (machines equipped with cab, car radio) 2-35
   - 11.16 Handling air conditioner (machines equipped with cab) 2-39
   - 11.17 Handling heater (machines equipped with cab) 2-43

MidWestTech | Komatsu D65EX-12, D65PX-12 Bulldozer Operation & Maintenance Ma... Order the manual at mid-west-tech.com >

12. Operation 2-44
12.1 Check before starting engine 2-44
12.2 Starting engine 2-56
12.3 Operations and checks after starting engine 2-62
12.4 Moving machine 2-64
12.5 Shifting gear 2-65
12.6 Shifting between forward and reverse 2-66
12.7 Steering machine 2-67
12.8 Stopping machine 2-70
12.9 Precautions for operation 2-71
12.10 Parking machine 2-73
12.11 Check after finishing work 2-74
12.12 Stopping engine 2-75
12.13 Check after stopping engine 2-76
12.14 Locking 2-76
12.15 Work possible using bulldozer 2-77
12.16 Adjusting posture of work equipment 2-78
12.17 Tips for longer undercarriage life 2-82

13. Transportation 2-85
13.1 Loading, unloading work 2-85
13.2 Precautions for loading, and securing the machine 2-86
13.3 Precautions for transportation 2-87
13.4 Precautions when removing work equipment 2-87
13.5 Removing cab (machines equipped with cab) 2-87
13.6 Lifting the machine 2-88

14. Cold weather operation 2-91
14.1 Precautions for low temperature 2-91
14.2 After completion of work 2-93
14.3 After cold weather 2-93

15. Long-term storage 2-94
15.1 Before storage 2-94
15.2 During storage 2-94
15.3 After storage 2-94

16. Troubleshooting 2-95
16.1 After running out of fuel 2-95
16.2 If battery is discharged 2-95
16.3 Other trouble 2-98

MidWestTech | Komatsu D65EX-12, D65PX-12 Bulldozer Operation & Maintenance Ma... Order the manual at mid-west-tech.com >

MAINTENANCE

17. Guides to maintenance 3- 2

18. Outlines of service 3- 5
18.1 Outline of oil, fuel, coolant 3- 5
18.2 Relating to electric system 3- 7

19. Wear parts list 3- 8

20. Use of fuel, coolant and lubricants according to ambient temperature 3-10

21. Standard tightening torques for bolts and nuts 3-14
21.1 Introduction of necessary tools 3-14
21.2 Torque list 3-15

22. Periodic replacement of safety critical parts 3-16

23. Maintenance schedule chart 3-19

24. Service Procedure 3-22
24.1 When required 3-22
24.2 Check before starting 3-42
24.3 Every 50 hours service 3-47
24.4 Every 250 hours service 3-48
24.5 Every 500 hours service 3-59
24.6 Every 1000 hours service 3-63
24.7 Every 2000 hours service 3-68
24.8 Every 4000 hours service 3-71

SPECIFICATIONS


25. Specifications 4- 2

MidWestTech | Komatsu D65EX-12, D65PX-12 Bulldozer Operation & Maintenance Ma... Order the manual at mid-west-tech.com >

3. TEMPERATURE CONTROL LEVER


This is used to control the temperature for heating.

- When the temperature control lever is moved to the right, the temperature of the air coming from the vents becomes lower.
- When the temperature control lever is moved to the left, the temperature of the air coming from the vents becomes higher.

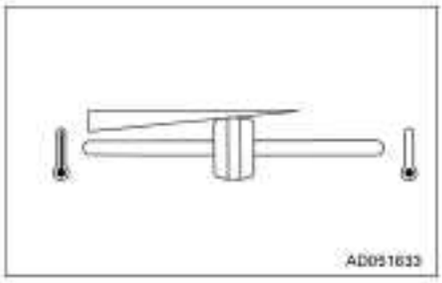

4. STARTING SWITCH

This switch is used to start the engine.

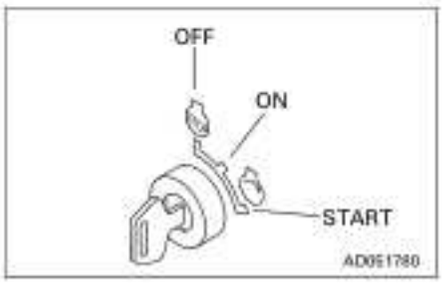

OFF ( ) position:

At this position, the starting switch key can be inserted or removed. When the switch is turned to this position, the electrical circuits are switched off.

Do not the starting switch key at the OFF position while the engine is running.

ON position:

In this position, electric current flows in the charging and lamp circuits.

Keep the starting switch key at the ON position while the engine is running.

START ( ) position:

This is the position to start the engine. Hold the key at this position while cranking. Release the key immediately after the engine has been started. The key will return to ON position when released.

MidWestTech | Komatsu D65EX-12, D65PX-12 Bulldozer Operation & Maintenance Ma... Order the manual at mid-west-tech.com >

13.6.3 TABLE OF MACHINE WEIGHT

Model	Operating weight (with ROPS & cab)		
	Without work equipment	With straight-tiltdozer	With straight-tiltdozer & ripper
D65EX-12	17640 kg (38499 lb)	20180 kg (44497 lb)	21860 kg (48201 lb)
D65PX-12	17570 kg (38742 lb)	20310 kg (44784 lb)	–

13.6.4 LIFTING PROCEDURE

When lifting the machine, carry out the operations on level ground as follows.

1. Park the machine at the proper position for the crane, shut down the engine and apply the parking brake.
2. Set up the sling like wire which is suitable to the load, referring "13.6.1 POSITION FOR ATTACHING LIFTING POSITION MARKS" and "13.6.2 SETTING UP WIRE OR ROPE".
3. Protect the wire from cutting accident, by inserting protective pads between wire and angular parts of the machine.
4. Choose sledders and bars having sufficient width to prevent wire from contacting the machine.
5. After wire setting is finished, lift the machine 100 – 200 mm (3.94 – 7.88 in) up from ground, and confirm that wire does not become loose and the machine is lifted horizontally. Then start lifting.

MidWestTech | Komatsu D65EX-12, D65PX-12 Bulldozer Operation & Maintenance Ma... Order the manual at mid-west-tech.com >

SERVICE ITEM	PAGE
(EVERY 250 HOURS SERVICE)	
Drain water and sediment from fuel filter	3-55
Check, clean additional fuel strainer	3-55
Replace power train oil filter element	3-56
Check brake performance	3-57
Clean air conditioner air filter (FRESH/RECIRC filter) (Machines equipped with cab)	3-58
EVERY 500 HOURS SERVICE	
Replace fuel filter cartridge	3-59
Change oil in engine oil pan, replace engine oil filter cartridge	3-61
EVERY 1000 HOURS SERVICE	
Change oil in power train case, clean strainers (Power train strainer, scavenging pump strainer)	3-63
Change oil in final drive case	3-65
Clean power train (transmission) case breather (1 place)	3-66
Grease universal joint (2 places)	3-66
Replace corrosion resistor cartridge	3-67
Check all tightening parts of turbocharger	3-67
Check play of turbocharger rotor	3-67
Check for loose Rops mount bolts	3-67
EVERY 2000 HOURS SERVICE	
Change oil in hydraulic tank, replace hydraulic oil filter element	3-68
Clean, check turbocharger	3-70
Clean engine breather element	3-70
Check vibration damper	3-70
Check alternator, starting motor	3-70
Check engine valve clearance, adjust	3-70
EVERY 4000 HOURS SERVICE	
Check water pump	3-71

MidWestTech | Komatsu D65EX-12, D65PX-12 Bulldozer Operation & Maintenance Ma... Order the manual at mid-west-tech.com >