SEAM007401

Operation & Maintenance Manual

KOMATSU®

WA180-3

WHEEL LOADER

SERIAL NUMBERS **WA180-3 - 50001** and up

June 1997

Copyright 1997 Komatsu America International Company

MidWestTech | Komatsu WA180-3 Wheel Loader Operation & Maintenance Manual | Publi... Order the manual at mid-west-tech.com >

5. CONTENTS

1. **Foreword** 0- 1

2. **Safety information** 0- 2

3. **Introduction** 0- 3

4. **Location of plates, table to enter serial No. and distributor** 0- 4

SAFETY

6. **General precautions** 1- 2

7. **Precautions during operation** 1- 7
   - 7.1 Before starting engine 1- 7
   - 7.2 Operating machine 1- 9
   - 7.3 Transportation 1-13
   - 7.4 Battery 1-14
   - 7.5 Towing 1-15

8. **Precautions for maintenance** 1-16
   - 8.1 Before carrying out maintenance 1-16
   - 8.2 During maintenance 1-19
   - 8.3 Tires 1-23

9. **Position for attaching safety labels** 1-26

OPERATION

10. **General view** 2- 2
    - 10.1 General view of machine 2- 2
    - 10.2 General view of controls and gauges 2- 3

11. **Explanation of components** 2- 5
    - 11.1 Meter, lamps 2- 5
    - 11.2 Switches 2- 9
    - 11.3 Control levers, pedals 2-15
    - 11.4 Cap with lock 2-19
    - 11.5 Safety bar 2-20
    - 11.6 Towing pin 2-20
    - 11.7 Grease pump clamp and rubber ring 2-20
    - 11.8 Buckup alarm 2-21
    - 11.9 Fuse 2-22
    - 11.10 Slow-blow fuse 2-23

MidWestTech | Komatsu WA180-3 Wheel Loader Operation & Maintenance Manual | Publicati... Order the manual at mid-west-tech.com >

12. Operation 2-24
12.1 Check before starting engine 2-24
12.2 Starting engine 2-35
12.3 Operations and checks after starting engine 2-36
12.4 Moving machine off 2-37
12.5 Changing gear speed 2-39
12.6 Changing direction 2-39
12.7 Turning 2-40
12.8 Stopping machine 2-41
12.9 Operation of work equipment 2-42
12.10 Work possible using wheel loader 2-43
12.11 Precautions for operation 2-47
12.12 Adjusting work equipment posture 2-49
12.13 Parking machine 2-51
12.14 Checks after completion of operation 2-52
12.15 Stopping engine 2-52
12.16 Check after stopping engine 2-53
12.17 Locking 2-53
12.18 Handling the tires 2-54

13. Transportation 2-56
13.1 Loading, unloading work 2-56
13.2 Precautions for loading 2-57
13.3 Precautions for transportation 2-57

14. Cold weather operation 2-58
14.1 Precautions for low temperature 2-58
14.2 Precautions after completion of work 2-60
14.3 After cold weather 2-60

15. Long-term storage 2-61
15.1 Before storage 2-61
15.2 During storage 2-61
15.3 After storage 2-61

16. Troubleshooting 2-62
16.1 When machine runs out of fuel 2-62
16.2 Towing the machine 2-63
16.3 If battery is discharged 2-66
16.4 Other trouble 2-70

MidWestTech | Komatsu WA180-3 Wheel Loader Operation & Maintenance Manual | Public... Order the manual at mid-west-tech.com >

MAINTENANCE

17. Guides to maintenance 3- 2

18. Outlines of service 3- 5
18.1 Outline of oil, fuel, coolant 3- 5
18.2 Outline of electric system 3- 8

19. Wear parts list 3- 9

20. Use of fuel, coolant and lubricants according to ambient temperature 3-10

21. Standard tightening torques for bolts and nuts 3-14
21.1 Introduction of necessary tools 3-14
21.2 Torque list 3-15

22. Periodic replacement of safety critical parts 3-16

23. Maintenance schedule chart 3-20
23.1 Maintenance schedule chart 3-20


24. Service Procedure 3-24
24.1 Initial 250 hours service 3-24
24.2 When required 3-25
24.3 Check before starting 3-40
24.4 Every 50 hours service 3-44
24.5 Every 100 hours service 3-45
24.6 Every 250 hours service 3-48
24.7 Every 500 hours service 3-54
24.8 Every 1000 hours service 3-58
24.9 Every 2000 hours service 3-65
24.10 Every 4000 hours service 3-68

SPECIFICATIONS

25. Specifications 4- 2

MidWestTech | Komatsu WA180-3 Wheel Loader Operation & Maintenance Manual | Publicat... Order the manual at mid-west-tech.com >

10.2 GENERAL VIEW OF CONTROLS AND GAUGES

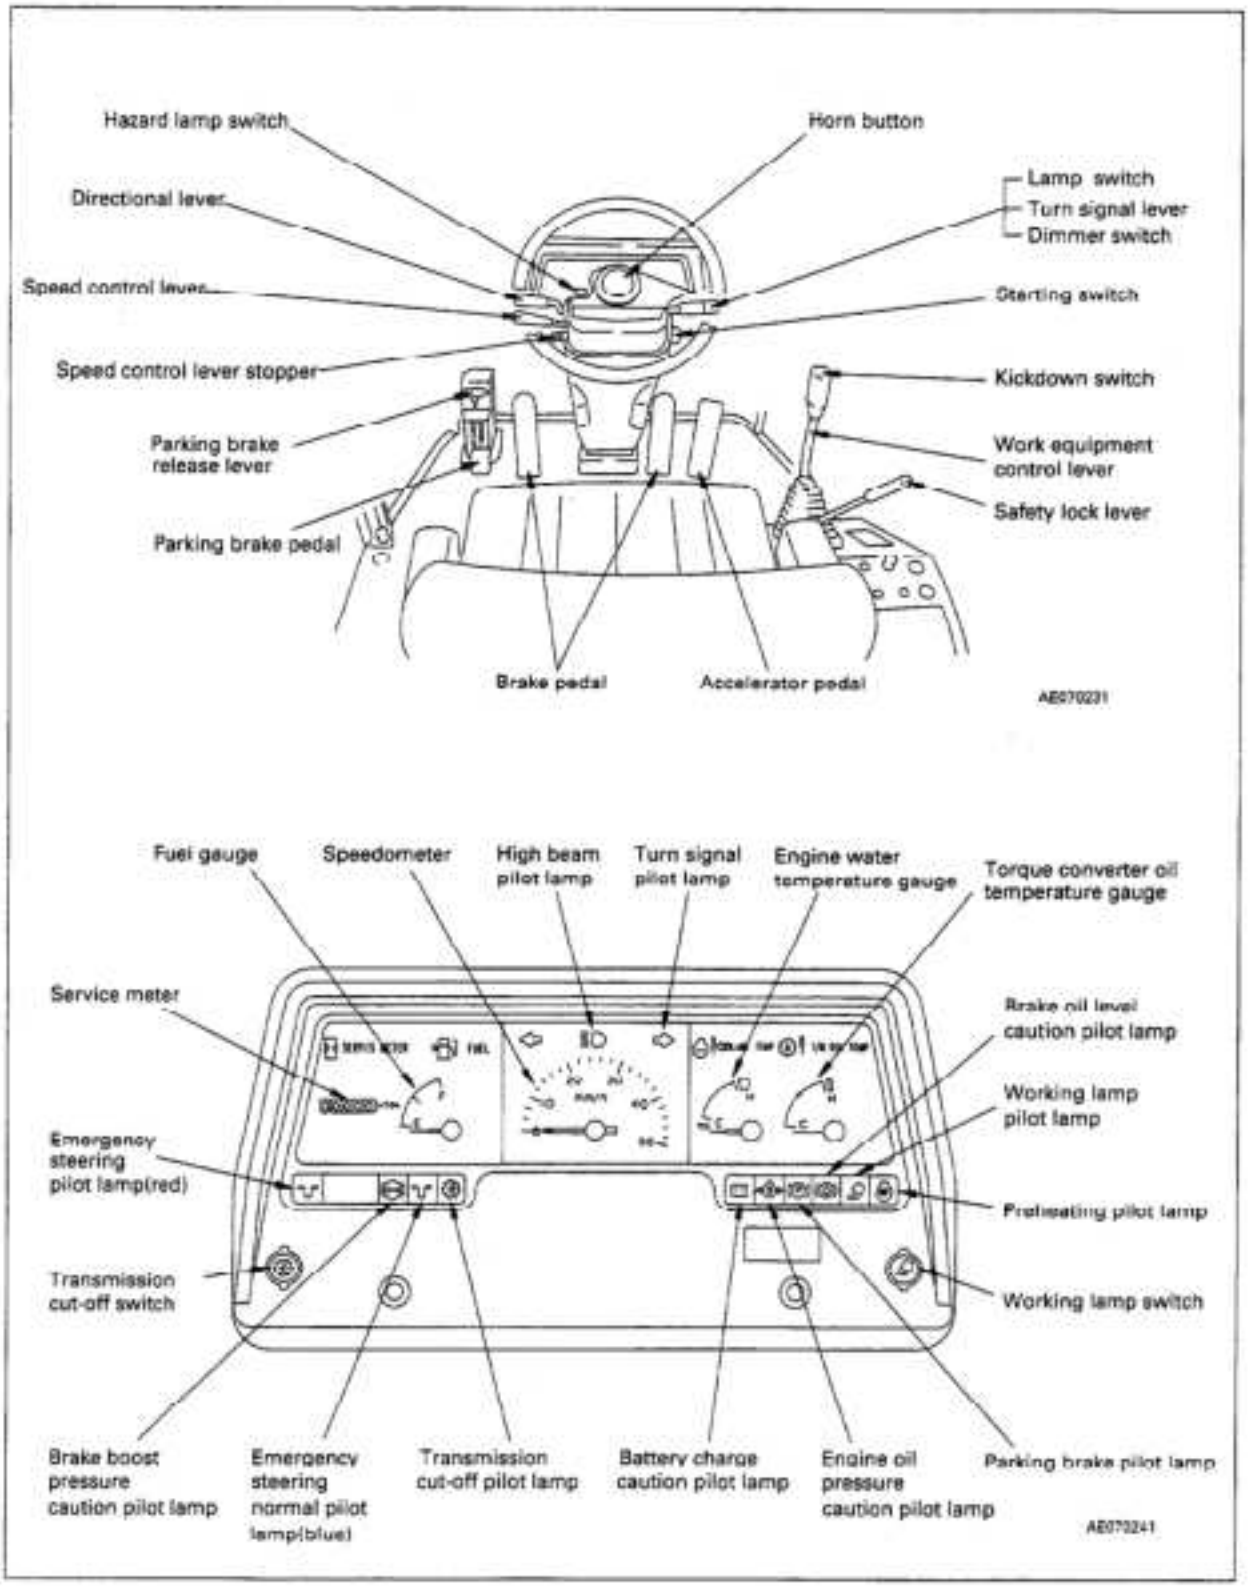

MidWestTech | Komatsu WA180-3 Wheel Loader Operation & Maintenance Manual | Public... Order the manual at mid-west-tech.com >

23. MAINTENANCE SCHEDULE CHART

23.1 MAINTENANCE SCHEDULE CHART

SERVICE ITEM	PAGE
INITIAL 250 HOURS SERVICE (only after the first 250 hours)	
Replace fuel filter cartridge	3-24
Replace transmission oil filter element	3-24
Replace hydraulic tank filter element	3-24
Check engine valve clearance, adjust	3-24
WHEN REQUIRED	
Check, clean, or replace air cleaner element	3-25
Clean inside of cooling system	3-27
Check transmission oil level, add oil	3-31
Check axle oil level, add oil	3-32
Clean axle case breather	3-33
Clean radiator fins	3-33
Replace bolt-on cutting edge	3-34
Replace bucket teeth	3-35
Check air conditioner	3-36
Clean condenser of air conditioner	3-37
Check window washing fluid level, add fluid	3-37
Adjust parking brake	3-38
Check glow plug	3-39
Drain water from water separator	3-39
CHECK BEFORE STARTING	
Check coolant level, add water	3-40
Check fuel level, add fuel	3-40
Check oil level in engine oil pan, add oil	3-41
Check and refill of oil in brake oil tank	3-41
Check dust indicator	3-42
Check electric wiring	3-42
Check for water and sediment in water separator	3-42

MidWestTech | Komatsu WA180-3 Wheel Loader Operation & Maintenance Manual | Publica... Order the manual at mid-west-tech.com >

26. OPTIONAL PARTS AND ATTACHMENTS

Name	Specifications, use
Excavating bucket	Capacity (flat edge, for rock) 1.5 m³ (2.0 cu.yd)
Light material bucket	Capacity (for light duty work, snow bucket) 2.2 m³ (2.9 cu.yd)
Multi-purpose bucket	Capacity 1.2 m³ (1.6 cu.yd)
Bucket tooth	• Bolt-on tooth • Tip tooth
Lumber grapple	Loading and transporting large logs or lumber
Lumber fork	Loading and carrying comparatively small diameter lumber
Dumping fork	Loading and carrying comparatively small diameter lumber

The following attachments are also available, so please contact your Komatsu distributor.

- Steel cab
- ROPS canopy
- ROPS cab
- Canopy
- Air conditioner
- Heater and defroster
- Car radio
- E.C.S.S. (Electronic controlled suspension system)

MidWestTech | Komatsu WA180-3 Wheel Loader Operation & Maintenance Manual | Public... Order the manual at mid-west-tech.com >