SEAM034300

Operation & Maintenance Manual

KOMATSU®

WA30-5
WA50-3

WHEEL LOADER

SERIAL NUMBERS WA30-5 -22005 and up
WA50-3 -21450

July 1999

Copyright 1999 Komatsu Utility Corporation

MidWestTech | Komatsu WA30-5, WA50-3 Wheel Loader Operation & Maintenance Manual... Order the manual at mid-west-tech.com >

5. CONTENTS

1. **Foreword** 0- 1

2. **Safety information** 0- 2

3. **Introduction** 0- 3

4. **Location of plates, table to enter serial No. and distributor** 0- 4

SAFETY

6. **General precautions** 1- 2

7. **Precautions during operation** 1- 7
   - 7.1 Before starting engine 1- 7
   - 7.2 Operating machine 1- 9
   - 7.3 Transportation 1-14
   - 7.4 Battery 1-15
   - 7.5 Towing 1-16

8. **Precautions for maintenance** 1-17
   - 8.1 Before carrying out maintenance 1-17
   - 8.2 During maintenance 1-21
   - 8.3 Precautions with tires 1-25

9. **Position for attaching safety labels** 1 26

OPERATION

10. **General view** 2- 2
    - 10.1 General view of machine 2- 2
    - 10.2 General view of controls and gauges 2- 3

11. **Explanation of components** 2- 5
    - 11.1 Meter, lamps 2- 5
    - 11.2 Switches 2- 8
    - 11.3 Control levers, pedals 2-10
    - 11.4 Cap with lock 2-14
    - 11.5 Safety bar 2-14
    - 11.6 Tilt hood 2-15
    - 11.7 Towing pin 2-15
    - 11.8 Fuse 2-15
    - 11.9 Fusible link 2-16
    - 11.10 Manual pocket 2-17
    - 11.11 Connectors 2-17

MidWestTech | Komatsu WA30-5, WA50-3 Wheel Loader Operation & Maintenance Manual |... Order the manual at mid-west-tech.com >

12. Operation 2-18
12.1 Check before starting engine 2-18
12.2 Starting engine 2-31
12.3 Operations and checks after starting engine 2-34
12.4 Moving machine off 2-36
12.5 Changing direction 2-38
12.6 Turning 2-38
12.7 Stopping machine 2-39
12.8 Operation of work equipment 2-40
12.9 Operating front attachment service hydraulic circuit 2-41
12.10 Work possible using wheel loader 2-43
12.11 Precautions for operation 2-47
12.12 Adjusting work equipment posture 2-49
12.13 Parking machine 2-50
12.14 Checks after completion of operation 2-51
12.15 Stopping engine 2-52
12.16 Check after stopping engine 2-52
12.17 Locking 2-52
12.18 Handling the tires 2-53

13. Transportation 2-56
13.1 Loading, unloading work 2-56
13.2 Precautions for loading 2-57
13.3 Lifting machine 2-57
13.4 Precautions for transportation 2-60

14. Cold weather operation 2-61
14.1 Precautions for low temperature 2-61
14.2 Precautions after completion of work 2-63
14.3 After cold weather 2-63

15. Long-term storage 2-64
15.1 Before storage 2-64
15.2 During storage 2-64
15.3 After storage 2-64

16. Troubleshooting 2-65
16.1 When machine runs out of fuel 2-65
16.2 Towing the machine 2-66
16.3 If battery is discharged 2-69
16.4 Other trouble 2-73

MidWestTech | Komatsu WA30-5, WA50-3 Wheel Loader Operation & Maintenance Manual |... Order the manual at mid-west-tech.com >

MAINTENANCE

17. Guides to maintenance 3- 2

18. Outlines of service 3- 5
18.1 Outline of oil, fuel, coolant 3- 5
18.2 Outline of electric system 3- 7

19. Wear parts list 3- 8

20. Use of fuel, coolant and lubricants according to ambient temperature 3- 9

21. Standard tightening torques for bolts and nuts 3-13
21.1 Introduction of necessary tools 3-13
21.2 Torque list 3-15

22. Periodic replacement of safety critical parts 3-16

23. Maintenance schedule chart 3-17
23.1 Maintenance schedule chart 3-17


24. Service Procedure 3-20
24.1 Initial 250 hours service 3-20
24.2 When required 3-21
24.3 Check before starting 3-34
24.4 Every 50 hours service 3-40
24.5 Every 250 hours service 3-41
24.6 Every 500 hours service 3-46
24.7 Every 1000 hours service 3-50
24.8 Every 2000 hours service 3-53

SPECIFICATIONS

25. Specifications 4- 2

MidWestTech | Komatsu WA30-5, WA50-3 Wheel Loader Operation & Maintenance Manual... Order the manual at mid-west-tech.com >

4. SAFETY LOCK (for work equipment control lever)

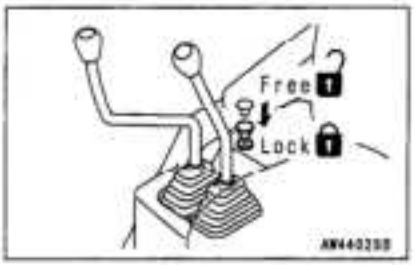

⚠ WARNING

- **When leaving the operator's compartment, set the safety lock securely to the LOCK position. If the control lever are not locked, and they are touched by mistake, this may lead to a serious accident.**
- **If the safety lock is not placed securely in the LOCK position. the control lever may not be properly locked. Check that the situation is as shown in the diagram.**
- **When parking the machine or carrying out maintenance, always lower the bucket to the ground and apply the lock.**

This is used to lock the work equipment lever.
Push the knob to apply the lock.

5. BRAKE PEDALS




⚠ WARNING

- **Do not use the brake pedals repeatedly unless necessary.**
- **Do not put your foot on this pedal unless necessary.**

There are brake pedals on both the left and right sides. Both the left and right pedals have the same function. When the brake pedal is depressed, the machine is stopped.

The brake pedal is interconnected with the HST inching valve, so if the brake pedal is depressed lightly, the HST pump returns in the neutral direction in accordance with the amount the pedal is depressed, and this gives a deceleration effect. If the pedal is depressed further, the wheel brake is actuated and the machine is stopped.

6. ACCELERATOR PEDAL

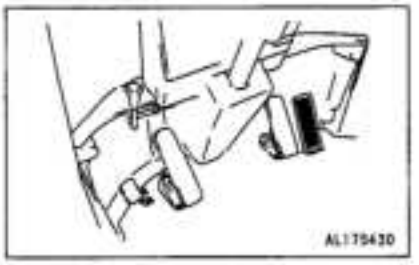

This pedal controls the engine speed and output.

The engine speed can be freely controlled between low idling and full speed.

MidWestTech | Komatsu WA30-5, WA50-3 Wheel Loader Operation & Maintenance Manual |... Order the manual at mid-west-tech.com >

13.4 PRECAUTIONS FOR TRANSPORTATION

⚠ WARNING

Determine the route for transporting the machine by taking into account the width, height and weight of the machine.

Obey all state and local laws governing the weight, width and length of a load. Observe all regulations governing wide loads.

MidWestTech | Komatsu WA30-5, WA50-3 Wheel Loader Operation & Maintenance Manual |... Order the manual at mid-west-tech.com >

23. MAINTENANCE SCHEDULE CHART

23.1 MAINTENANCE SCHEDULE CHART

SERVICE ITEM	PAGE
INITIAL 250 HOURS SERVICE (only after the first 250 hours)	
Change oil in engine oil pan, replace engine oil filter cartridge	3-48
Replace hydraulic tank filter element and HST filter element	3-50
Check engine valve clearance, adjust	3-54
WHEN REQUIRED	
Replace air cleaner element	3-21
Clean inside of cooling system	3-22
Drain water and sediment from fuel tank	3-25
Check transfer case oil level, add oil	3-25
Check axle oil level, add oil	3-26
Clean transfer case breather	3-27
Clean axle case breather	3-27
Clean radiator fin	3-27
Replace bolt-on cutting edge (option for WA20)	3-28
Adjust parking brake	3-29
Adjust parking brake release lever	3-30
Adjust brake pedal stroke	3-31
Selection and inspection of tires	3-32
CHECK BEFORE STARTING	
Check bulb of pilot lamp	3-34
Check coolant level, add water	3-34
Check fuel level, add fuel	3-35
Check oil level in engine oil pan, add oil	3-36
Check parking brake alarm buzzer	3-37
Check effect of parking brake and the pedal stroke	3-37
Check travel of parking brake release lever	3-37
Check effect of brake and the pedal stroke	3-37
Check steering wheel play and operation of steering	3-37

MidWestTech | Komatsu WA30-5, WA50-3 Wheel Loader Operation & Maintenance Manual |... Order the manual at mid-west-tech.com >