Operation & Maintenance Manual

SEAM059200T

GALEO

WA250PTL-5

WHEEL LOADER

SERIAL NUMBERS WA250PTL-70001 and up

WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept near the machine for reference and periodically reviewed by all personnel who will come into contact with it.

NOTICE

Komatsu has Operation & Maintenance Manuals written in some other languages. If a foreign language manual is necessary, contact your local distributor for availability.

KOMATSU®

MidWestTech | Komatsu Galeo WA250PTL-5 Wheel Loader Operation & Maintenance Manu... Order the manual at mid-west-tech.com >

CONTENTS

FOREWORD ---- 1- 1
FOREWORD ---- 1- 2
SAFETY INFORMATION ---- 1- 5
INTRODUCTION ---- 1- 7
FRONT/REAR, LEFT/RIGHT DIRECTIONS OF MACHINE ---- 1- 7
NECESSARY INFORMATION ---- 1- 8
MACHINE SERIAL NO. PLATE AND POSITION ---- 1- 8
ENGINE SERIAL NO. PLATE AND POSITION ---- 1- 8
POSITION OF SERVICE METER ---- 1- 9
TABLE TO ENTER SERIAL NO. AND DISTRIBUTOR ---- 1- 9
SAFETY ---- 2- 1
SAFETY ---- 2- 2
SAFETY LABELS ---- 2- 5
LOCATION OF SAFETY LABELS ---- 2- 5
SAFETY LABELS ---- 2- 6
GENERAL PRECAUTIONS ---- 2- 11
PRECAUTIONS FOR OPERATION ---- 2- 20
STARTING ENGINE ---- 2- 20
OPERATION ---- 2- 22
TRANSPORTATION ---- 2- 28
BATTERY ---- 2- 29
TOWING ---- 2- 31
PRECAUTIONS FOR MAINTENANCE ---- 2- 32
PRECAUTIONS WITH TIRES ---- 2- 39
OPERATION ---- 3- 1
GENERAL VIEW ---- 3- 2
GENERAL VIEW OF MACHINE ---- 3- 2
GENERAL VIEW OF CONTROLS AND GAUGES ---- 3- 3
EXPLANATION OF COMPONENTS ---- 3- 5
MACHINE MONITOR ---- 3- 5
SWITCHES ---- 3- 31
CONTROL LEVERS, PEDALS ---- 3- 40
STEERING TILT LOCK LEVER ---- 3- 44
CAP AND COVER WITH LOCK ---- 3- 44
SAFETY BAR ---- 3- 45
TOWING PIN ---- 3- 46
GREASE PUMP ---- 3- 46
CAB DOOR INNER LOCK ---- 3- 46
CAB DOOR OPEN LOCK ---- 3- 47
CAB WINDOW OPEN LOCK CANCEL KNOB ---- 3- 47
FUSE ---- 3- 47
SLOW BLOW FUSE ---- 3- 49
POWER OUTLET ---- 3- 49
STORAGE BOX ---- 3- 49
AM/FM RADIO-CASSETTE STEREO ---- 3- 50
AIR CONDITIONER ---- 3- 58
HANDLING CAB WIPER ---- 3- 63
OPERATION ---- 3- 64
CHECK BEFORE STARTING ENGINE, ADJUST ---- 3- 64

MidWestTech | Komatsu Galeo WA250PTL-5 Wheel Loader Operation & Maintenance... Order the manual at mid-west-tech.com >

STARTING ENGINE ---- 3- 79
OPERATIONS AND CHECKS AFTER STARTING ENGINE ---- 3- 81
STOPPING ENGINE ---- 3- 83
MOVING THE MACHINE (DIRECTIONAL, SPEED), STOPPING THE MACHINE ---- 3- 84
TURNING ---- 3- 89
OPERATION OF WORK EQUIPMENT ---- 3- 91
HANDLING HYDRAULIC QUICK COUPLER ---- 3- 93
WORK POSSIBLE USING WHEEL LOADER ---- 3- 97
PRECAUTIONS FOR OPERATION ---- 3-102
ADJUSTING WORK EQUIPMENT POSTURE ---- 3-104
PARKING MACHINE ---- 3-108
CHECK AFTER STOPPING ENGINE ---- 3-110
CHECKS AFTER COMPLETION OF OPERATION ---- 3-110
LOCKING ---- 3-110
HANDLING THE TIRES ---- 3-111
TRANSPORTATION ---- 3-113
TRANSPORTATION PROCEDURE ---- 3-113
LOADING, UNLOADING WORK WITH TRAILERS ---- 3-113
LIFTING MACHINE ---- 3-115
COLD WEATHER OPERATION ---- 3-118
PRECAUTIONS FOR LOW TEMPERATURE ---- 3-118
PRECAUTIONS AFTER COMPLETION OF WORK ---- 3-119
AFTER COLD WEATHER ---- 3-120
WARMING-UP OPERATION FOR STEERING HYDRAULIC CIRCUIT IN COLD WEATHER ---- 3-120
LONG-TERM STORAGE ---- 3-121
BEFORE STORAGE ---- 3-121
DURING STORAGE ---- 3-121
AFTER STORAGE ---- 3-121
TROUBLESHOOTING ---- 3-122
WHEN MACHINE RUNS OUT OF FUEL ---- 3-122
TOWING THE MACHINE ---- 3-122
IF BATTERY IS DISCHARGED ---- 3-124
OTHER TROUBLE ---- 3-127
MAINTENANCE ---- 4- 1
GUIDES TO MAINTENANCE ---- 4- 2
OUTLINES OF SERVICE ---- 4- 4
HANDLING OIL, FUEL, COOLANT, AND PERFORMING OIL CLINIC ---- 4- 4
OUTLINE OF ELECTRIC SYSTEM ---- 4- 6
WEAR PARTS ---- 4- 7
WEAR PARTS LIST ---- 4- 7
USE OF FUEL, COOLANT AND LUBRICANTS ACCORDING TO AMBIENT TEMPERATURE ---- 4- 8
PROPER SELECTION OF FUEL, COOLANT AND LUBRICANTS ---- 4- 8
STANDARD TIGHTENING TORQUES FOR BOLTS AND NUTS ---- 4- 13
TORQUE LIST ---- 4- 13
PERIODIC REPLACEMENT OF SAFETY CRITICAL PARTS ---- 4- 14
MAINTENANCE SCHEDULE CHART ---- 4- 15
MAINTENANCE SCHEDULE CHART ---- 4- 15
SERVICE PROCEDURE ---- 4- 17
INITIAL 250 HOURS SERVICE ---- 4- 17
WHEN REQUIRED ---- 4- 18

MidWestTech | Komatsu Galeo WA250PTL-5 Wheel Loader Operation & Maintenance... Order the manual at mid-west-tech.com >


CHECK BEFORE STARTING ---- 4- 35
EVERY 50 HOURS SERVICE ---- 4- 36
EVERY 100 HOURS SERVICE ---- 4- 37
EVERY 250 HOURS SERVICE ---- 4- 39
EVERY 500 HOURS SERVICE ---- 4- 45
EVERY 1000 HOURS SERVICE ---- 4- 48
EVERY 2000 HOURS SERVICE ---- 4- 52
EVERY 4000 HOURS SERVICE ---- 4- 57
SPECIFICATIONS ---- 5- 1
SPECIFICATIONS ---- 5- 2
ATTACHMENTS, OPTIONS ---- 6- 1
SELECTING BUCKET AND TIRES ---- 6- 2
HANDLING FORK TOOL ---- 6- 3
EXPLANATION OF COMPONENTS ---- 6- 3
OPERATION ---- 6- 4
INDEX ---- 7- 1

MidWestTech | Komatsu Galeo WA250PTL-5 Wheel Loader Operation & Maintenance... Order the manual at mid-west-tech.com >


OPERATIONS AND CHECKS BEFORE STARTING ENGINE

⚠ WARNING

Before starting the engine, check that the safety lock lever is securely at the LOCK position.
If the work equipment control lever is touched by accident when starting the engine, the work equipment may move unexpectedly and cause serious damage or personal injury.

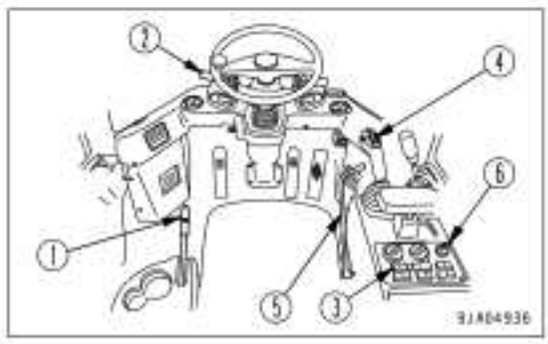


1. Check that parking brake lever (1) is at the LOCK position.

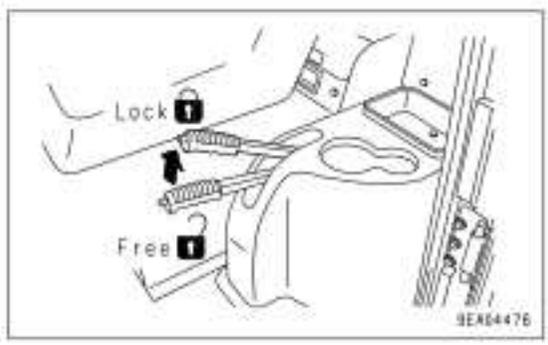


2. Check that directional lever (2) is at the N position.

REMARK


- If directional lever (2) is not set to the N position, the engine will not start.
- When directional selector switch actuation switch (3) is ON, the engine will not start if directional lever (2) and directional selector switch (4) are not both at the N position.

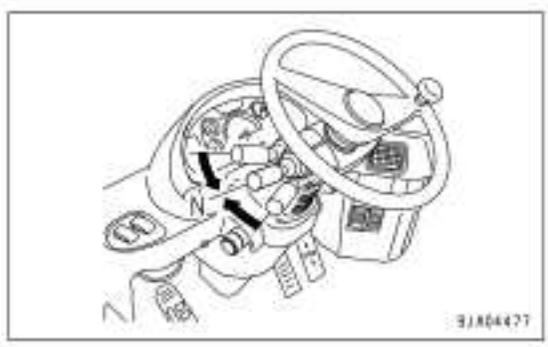

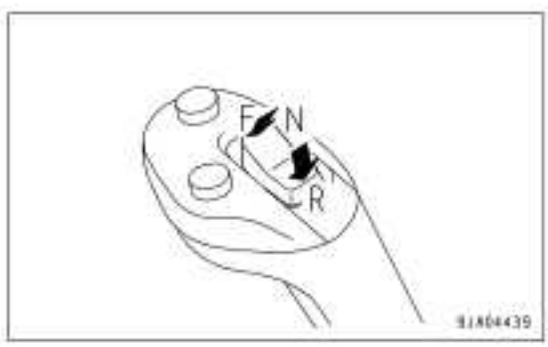


MidWestTech | Komatsu Galeo WA250PTL-5 Wheel Loader Operation & Maintenance... Order the manual at mid-west-tech.com >

LOCATION OF LIFTING POSITION MARK

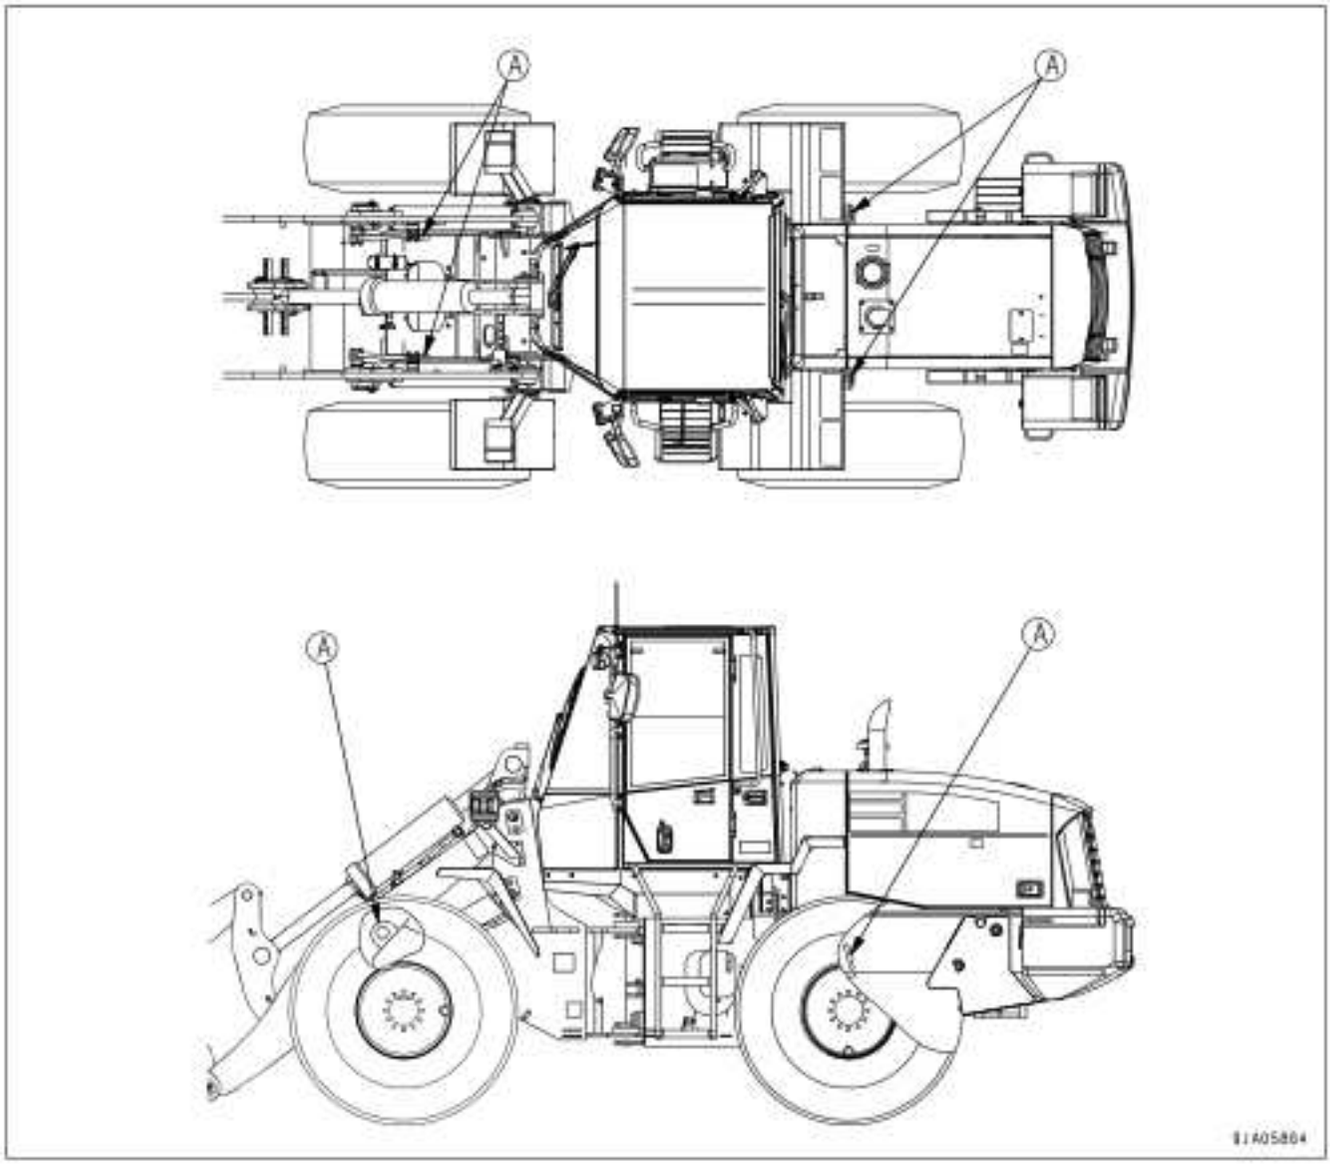

Lifting hooks (A) are located at 4 places on the machine as shown in the diagram on the right.
Use only these 4 places when lifting; do not use any other places.
There is a serious danger that the machine will lose its balance.

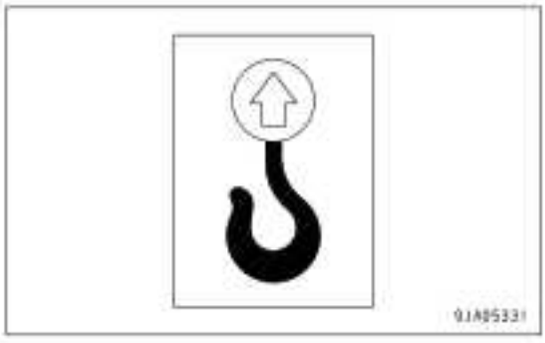

WEIGHT TABLE

	Machine weight	Front wheel load	Rear wheel load	Center of gravity
WA250PT-5	12,200 kg (26,901 lb)	5,350 kg (11,797 lb)	6,850 kg (15,104 lb)	1,630 mm (5 ft 4 in)

MidWestTech | Komatsu Galeo WA250PTL-5 Wheel Loader Operation & Maintenance... Order the manual at mid-west-tech.com >

MAINTENANCE SCHEDULE CHART

MAINTENANCE SCHEDULE CHART

INITIAL 250 HOURS SERVICE (ONLY AFTER THE FIRST 250 HOURS)
REPLACE HST OIL FILTER ELEMENT ---- 4- 50
REPLACE HYDRAULIC TANK FILTER ELEMENT ---- 4- 52

WHEN REQUIRED
CHECK, CLEAN, OR REPLACE AIR CLEANER ELEMENT ---- 4- 18
CLEAN INSIDE OF COOLING SYSTEM ---- 4- 21
CHECK OIL LEVEL IN TRANSFER CASE, ADD OIL ---- 4- 24
CHECK AXLE OIL LEVEL, ADD OIL ---- 4- 25
CLEAN AXLE CASE BREATHER ---- 4- 26
CLEAN AIR CONDITIONER CONDENSER ---- 4- 27
CHECK WINDOW WASHING FLUID LEVEL, ADD FLUID ---- 4- 27
CLEAN RADIATOR FINS AND COOLER FINS ---- 4- 28
CLEAN TRANSFER OIL COOLER FINS ---- 4- 29
CHECK ELECTRICAL INTAKE AIR HEATER ---- 4- 29
REPLACE BOLT ON CUTTING EDGE ---- 4- 29
REPLACE BUCKET TEETH ---- 4- 30
CHECK AIR CONDITIONER ---- 4- 31
REPLACE SLOW BLOW FUSE ---- 4- 32
SELECTION AND INSPECTION OF TIRES ---- 4- 33

CHECK BEFORE STARTING

EVERY 50 HOURS SERVICE
DRAIN WATER, SEDIMENT FROM FUEL TANK ---- 4- 36

EVERY 100 HOURS SERVICE
LUBRICATE REAR AXLE PIVOT PIN ---- 4- 37
CLEAN ELEMENT IN AIR CONDITIONER FRESH AIR FILTER ---- 4- 37
CHECK OIL LEVEL IN HYDRAULIC TANK, ADD OIL ---- 4- 38

EVERY 250 HOURS SERVICE
CHECK BATTERY ELECTROLYTE LEVEL ---- 4- 39
CHECK PARKING BRAKE ---- 4- 41
CHECK AIR CONDITIONER COMPRESSOR BELT TENSION, ADJUST ---- 4- 41
CHECK FOR LOOSE WHEEL HUB BOLTS, TIGHTEN ---- 4- 42
CLEAN ELEMENT IN AIR CONDITIONER RECIRCULATION FILTER ---- 4- 43
LUBRICATING ---- 4- 44

EVERY 500 HOURS SERVICE
CHANGE OIL IN ENGINE OIL PAN, REPLACE ENGINE OIL FILTER CARTRIDGE ---- 4- 45
REPLACE FUEL FILTER CARTRIDGE ---- 4- 46
CLEAN WATER SEPARATOR STRAINER ---- 4- 47

MidWestTech | Komatsu Galeo WA250PTL-5 Wheel Loader Operation & Maintenance... Order the manual at mid-west-tech.com >