SHOP MANUAL

KOMATSU®

avance LOADER

WA250-3

Machine model	Serial number
WA250-3	**50001 and up**

- This shop manual may contain attachments and optional equipment that are not available in your area. Please consult your local Komatsu distributor for those items you may require. Materials and specifications are subject to change without notice.

- WA250-3 mount the S6D95L and S6D102E engine.
  For details of the engine, see the 95 and 102 Series Engine Shop Manual.

MidWestTech | Komatsu Avance WA250-3 Wheel Loader Service Manual | Publication SEBM005910

Order the manual at mid-west-tech.com >

Contents

No. of page

01 General 01-1

10 Structure and function 10-1

20 Testing and adjusting 20-1

30 Disassembly and assembly 30-1


40 Maintenance standard 40-1

90 Others 90-1

MidWestTech | Komatsu Avance WA250-3 Wheel Loader Service Manual | Publication... Order the manual at mid-west-tech.com >

ELECTRICAL CIRCUIT DIAGRAM (1/2)

Serial No.: 50001 – 53000

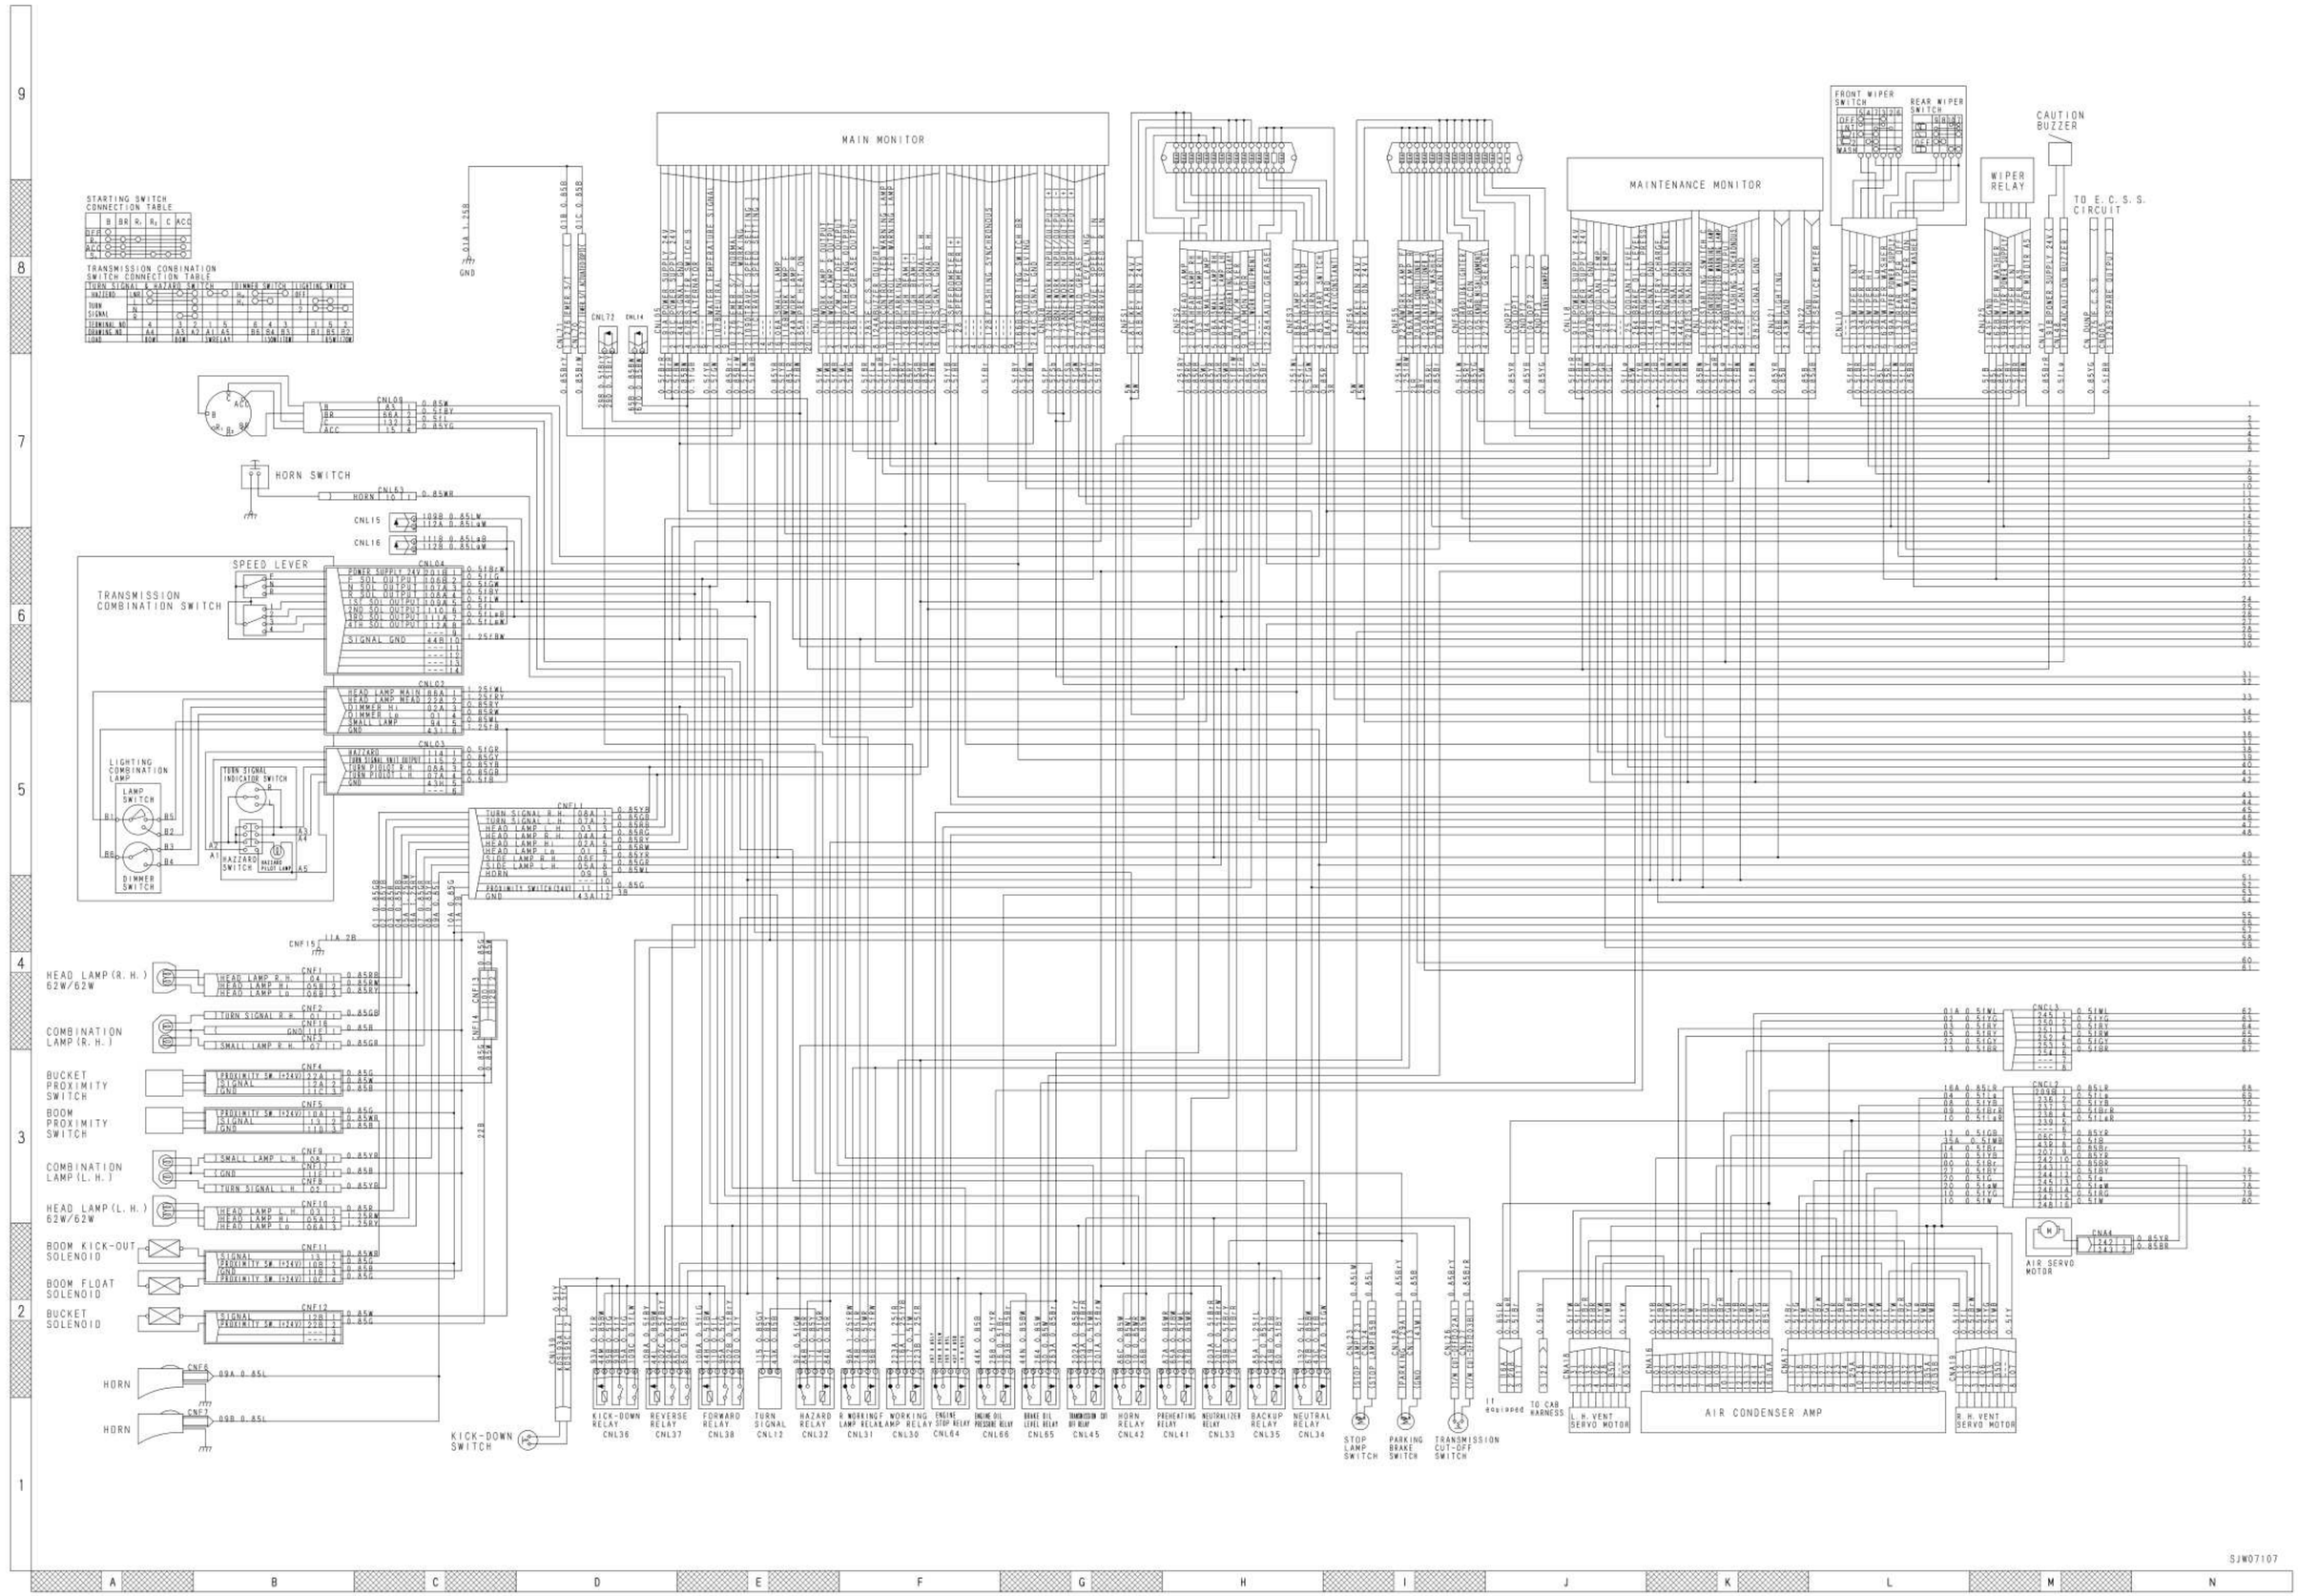

MidWestTech | Komatsu Avance WA250-3 Wheel Loader Service Manual | Publication SEBM005910

Order the manual at mid-west-tech.com >