SEBM008707

SHOP MANUAL

KOMATSU®

PC750-6
PC800-6

MACHINE MODEL	SERIAL NUMBER
PC750-6	**10001 and up**
PC750SE-6	**10001 and up**
PC750LC-6	**10001 and up**
PC800-6	**30001 and up**
PC800SE-6	**30001 and up**

- This shop manual may contain attachments and optional equipment that are not available in your area. Please consult your local Komatsu distributor for those items you may require. Materials and specifications are subject to change without notice.

- PC750, 800-6 mount the SAA6D140-2 engine.
  For details of the engine, see the 6D140-2 Series Engine Shop Manual.

MidWestTech | Komatsu PC750-6, PC750SE-6, PC750LC-6, PC800-6, PC800SE-6 Hydraulic Excavator Service Manual | Publication SEBM008707

Order the manual at mid-west-tech.com >

CONTENTS

No. of page

01 GENERAL 01-1

10 STRUCTURE AND FUNCTION 10-1

20 TESTING AND ADJUSTING 20-1

30 DISASSENBLY AND ASSEMBLY 30-1

40 MAINTENANCE STANDARD 40-1

90 OTHERS 90-1

020906

MidWestTech | Komatsu PC750-6, PC750SE-6, PC750LC-6, PC800-6, PC800SE-6 Hy... Order the manual at mid-west-tech.com >

LOADING SHOVEL

Machine model				PC750-6
Serial Number				10001 – 10238
Bucket capacity			m^3	3.8
Weight of machine			kg	74,435
Performance	Working ranges	Max. digging depth	mm	3,455
		Max. vertical wall depth	mm	–
		Max. digging reach	mm	9,960
		Max. reach at ground level	mm	9,695
		Max. digging height	mm	10,565
		Max. dumping height	mm	6,825
	Max. digging force		kN {kg}	431.5 {44,000}
	Swing speed		rpm	5.7
	Swing max. slope angle		deg.	14
	Travel speed		km/h	Low speed: 2.7 High speed: 4.2
	Gradeability		deg.	35
	Ground pressure (standard double grouser shoe width: 710 mm)		kPa {kg/cm²}	101.99 {1.04}
Dimensions	Overall length		mm	9,760
	Overall width		mm	–
	Overall width of track (when extended)		mm	3,490 {4,210}
	Overall height		mm	5,375
	Overall height to top of machine		mm	4,490
	Ground clearance of upper structure		mm	1,555
	Min. ground clearance		mm	840
	Tail swing radius		mm	4,300
	Min. swing radius of work equipment		mm	5,940
	Height of work equipment at min. swing radius		mm	6,925
	Length of track on ground		mm	4,500
	Track gauge (when extended)		mm	2,780 {3,500}
	Height of machine cab		mm	3,495

320906

MidWestTech | Komatsu PC750-6, PC750SE-6, PC750LC-6, PC800-6, PC800SE-6 Hydraulic... Order the manual at mid-west-tech.com >

POINTS TO REMEMBER WHEN TROUBLESHOOTING

⚠ Stop the machine in a level place, and check that the safety pin, blocks, and parking brake are securely fitted.

⚠ When carrying out the operation with two or more workers, keep strictly to the agreed signals, and do not allow any unauthorized person to come near.

⚠ If the radiator cap is removed when the engine is hot, hot water may spurt out and cause burns, so wait for the engine to cool down before starting troubleshooting.

⚠ Be extremely careful not to touch any hot parts or to get caught in any rotating parts.

⚠ When disconnecting wiring, always disconnect the negative (–) terminal of the battery first.

⚠ When removing the plug or cap from a location which is under pressure from oil, water, or air, always release the internal pressure first. When installing measuring equipment, be sure to connect it properly.

The aim of troubleshooting is to pinpoint the basic cause of the failure, to carry out repairs swiftly, and to prevent reoccurrence of the failure.
When carrying out troubleshooting, and important point is of course to understand the structure and function. However, a short cut to effective troubleshooting is to ask the operator various questions to form some idea of possible causes of the failure that would produce the reported symptoms.

1. When carrying out troubleshooting, do not hurry to disassemble the components.
   If components are disassembled immediately any failure occurs:
   - Parts that have no connection with the failure or other unnecessary parts will be disassembled.
   - It will become impossible to find the cause of the failure.

   It will also cause a waste of manhours, parts, or oil or grease, and at the same time, will also lose the confidence of the user or operator.
   For this reason, when carrying out troubleshooting, it is necessary to carry out thorough prior investigation and to carry out troubleshooting in accordance with the fixed procedure.
2. Points to ask user or operator
   1) Have any other problems occurred apart from the problem that has been reported?
   2) Was there anything strange about the machine before the failure occurred?
   3) Did the failure occur suddenly, or were there problems with the machine condition before this?
   4) Under what conditions did the failure occur?
   5) Had any repairs been carried out before the failure?
      When were these repairs carried out?
   6) Has the same kind of failure occurred before?
3. Check before troubleshooting
   1) Check the oil level
   2) Check for any external leakage of oil from the piping or hydraulic equipment.
   3) Check the travel of the control levers.
   4) Check the stroke of the control valve spool.
   5) Other maintenance items can be checked externally, so check any item that is considered to be necessary.
4. Confirming failure
   - Confirm the extent of the failure yourself, and judge whether to handle it as a real failure or as a problem with the method of operation, etc.
     ★ When operating the machine to reenact the troubleshooting symptoms, do not carry out any investigation or measurement that may make the problem worse.
5. Troubleshooting
   - Use the results of the investigation and inspection in Items 2 – 4 to narrow down the causes of failure, then use the troubleshooting flowchart to locate the position of the failure exactly.
     ★ The basic procedure for troubleshooting is as follows.
       1) Start from the simple points.
       2) Start from the most likely points.
       3) Investigate other related parts or information.
6. Measures to remove root cause of failure
   - Even if the failure is repaired, if the root cause of the failure is not repaired, the same failure will occur again.
     To prevent this, always investigate why the problem occurred. Then, remove the root cause.


020906

MidWestTech | Komatsu PC750-6, PC750SE-6, PC750LC-6, PC800-6, PC800SE-6 Hy... Order the manual at mid-west-tech.com >


b) Engine oil pressure system

★ When engine oil pressure is normal.

1) Low-pressure sensor

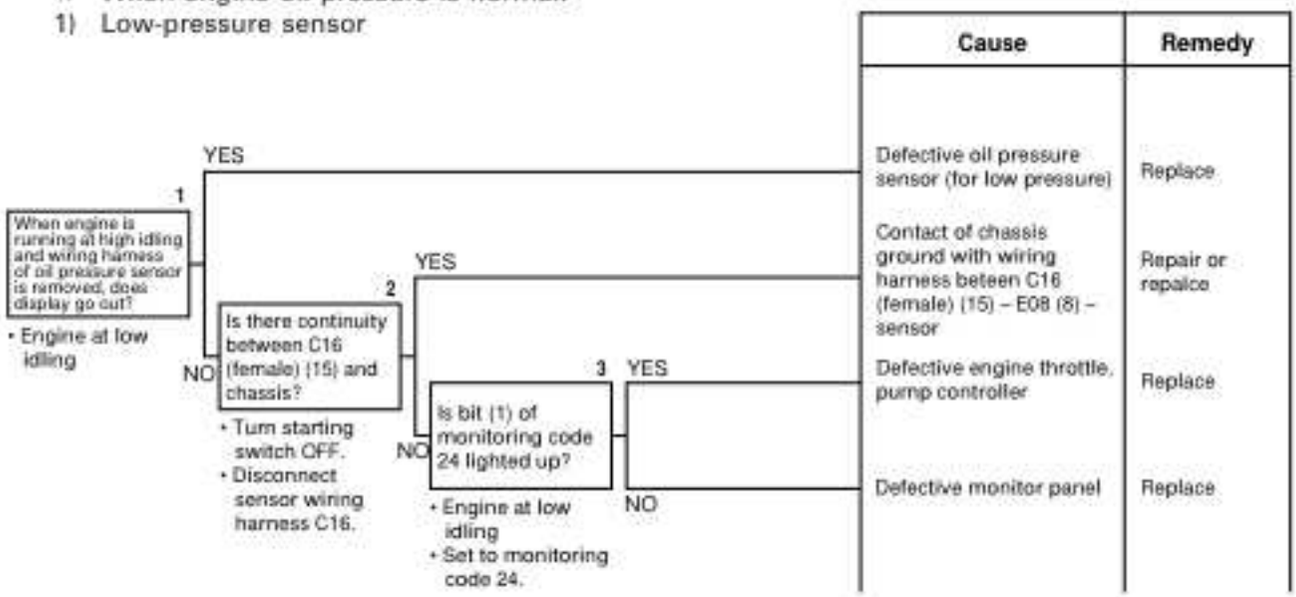


2) High-pressure sensor

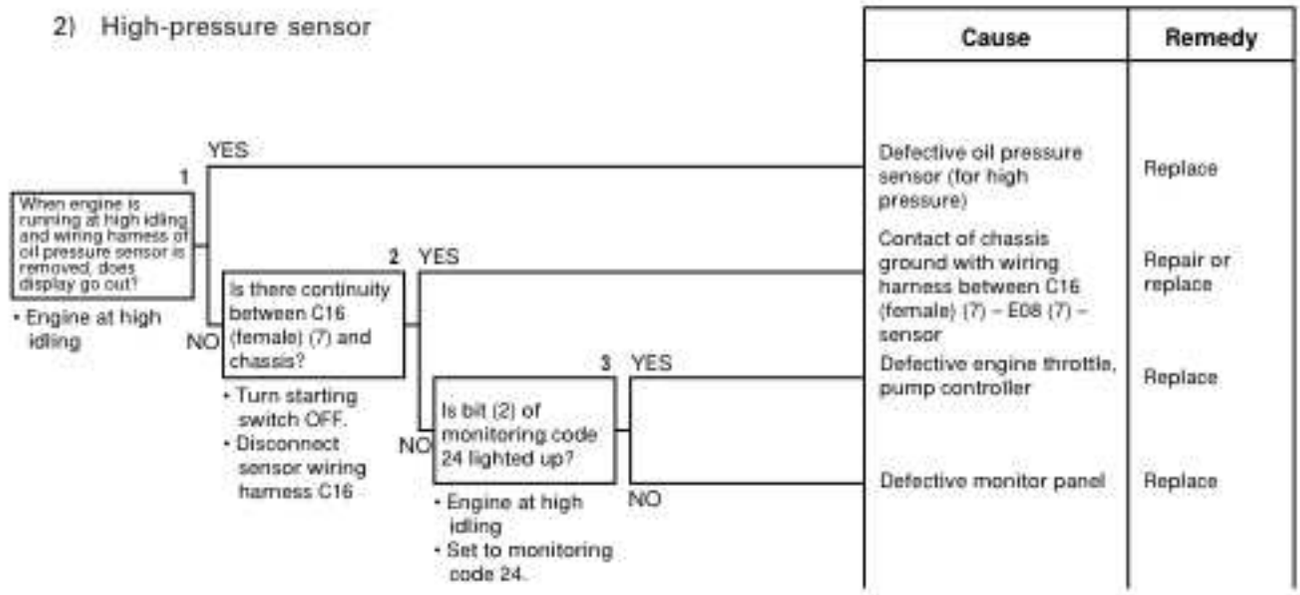

020906


M-11 b) Related electric circuit diagram

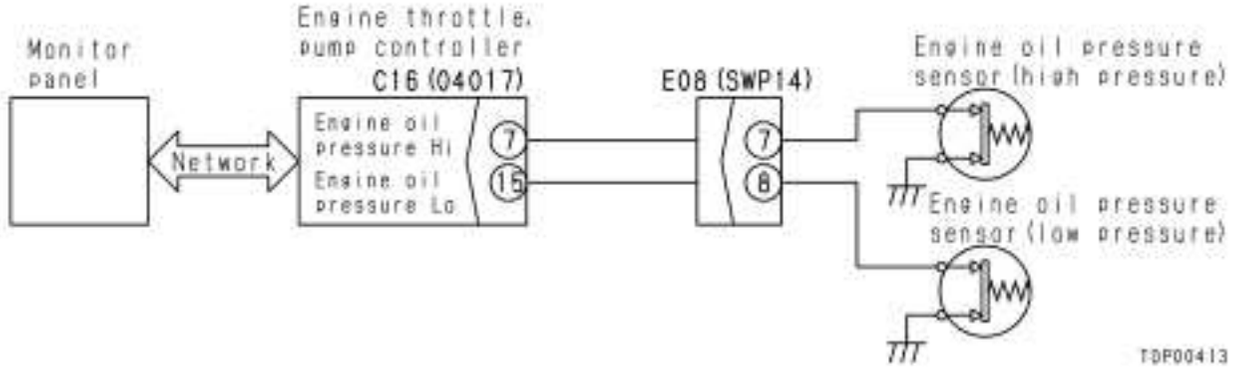

MidWestTech | Komatsu PC750-6, PC750SE-6, PC750LC-6, PC800-6, PC800SE-6 Hy... Order the manual at mid-west-tech.com >

ELECTRIC CIRCUIT DIAGRAM

LOADING SHOVEL (1/3)

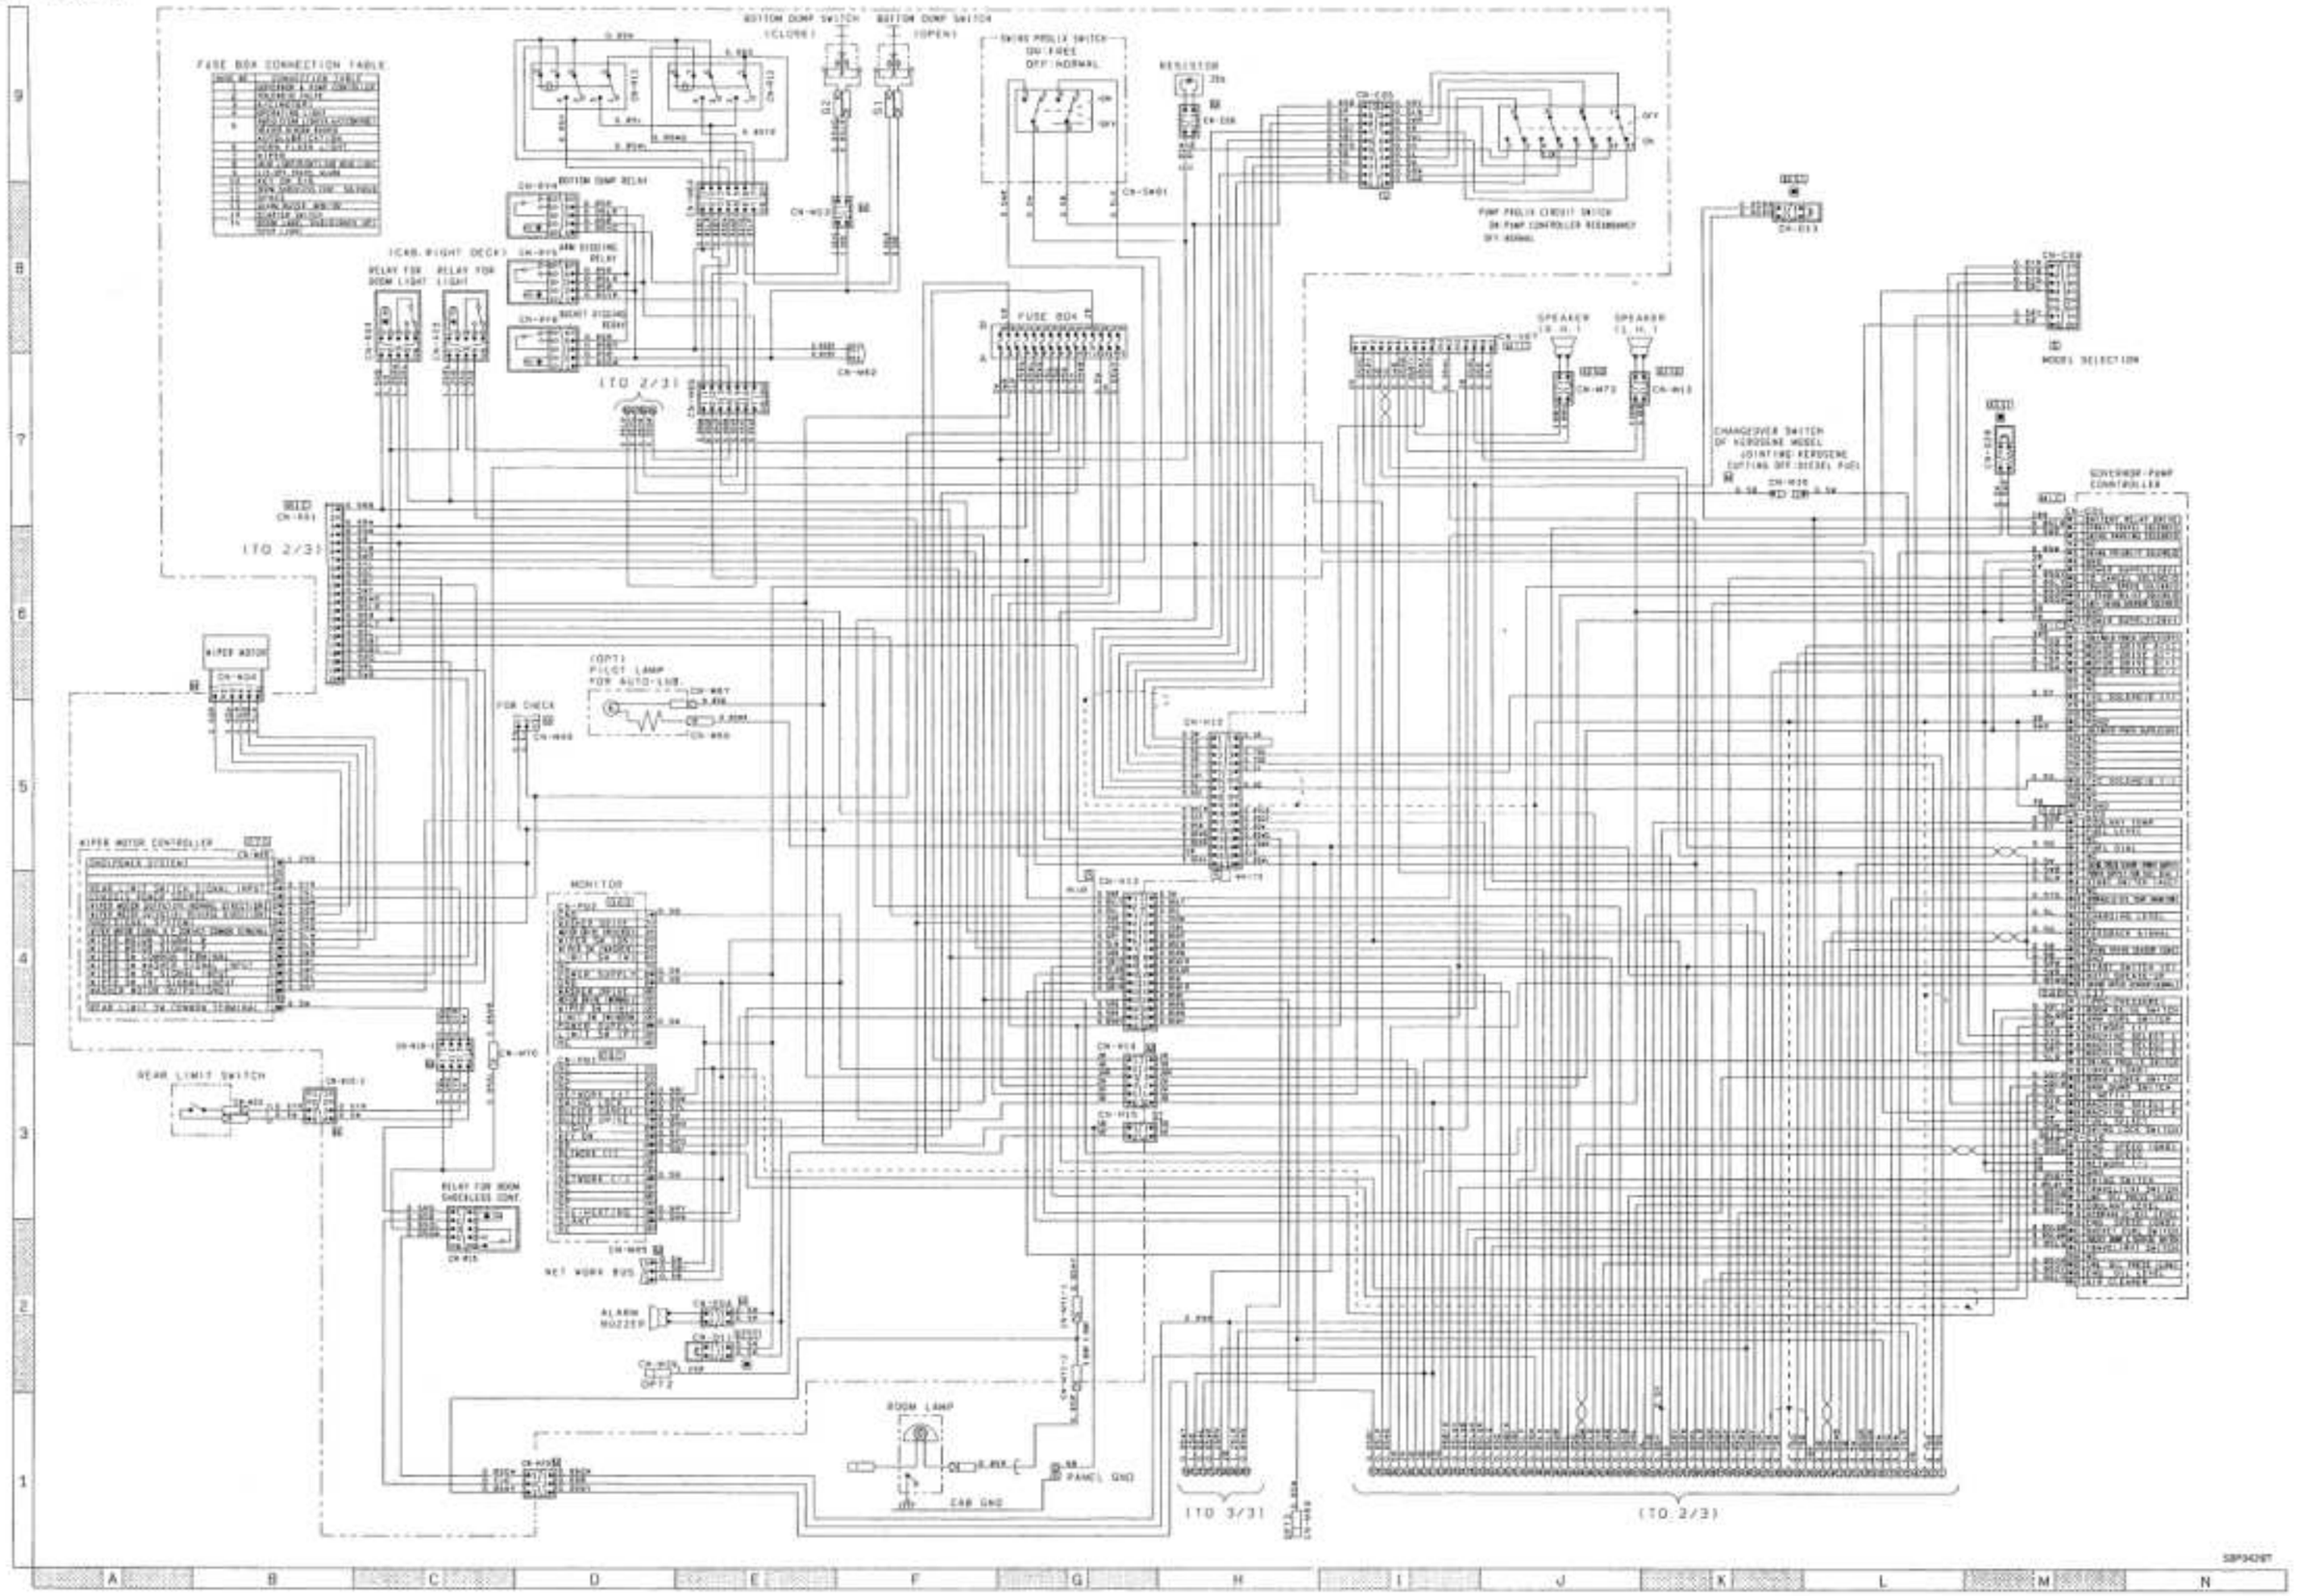

MidWestTech | Komatsu PC750-6, PC750SE-6, PC750LC-6, PC800-6, PC800SE-6 Hydraulic Excavator Service Manual | Publication SEBM008707

Order the manual at mid-west-tech.com >