SEBM020E0104

SHOP MANUAL

KOMATSU®

PW150-1

MACHINE MODEL SERIAL No.

PW150-1 1001 and up

- This shop manual may contain attachments and optional equipment that are not available in your area. Please consult your local Komatsu distributor for those items you may require. Materials and specifications are subjet to change without notice.

- PW-150-1 mounts the 6D95L-1 engine.
  For details of engine, see the 95 Series Engine Shop Manual.

MidWestTech | Komatsu PW150-1 Wheel Excavator Service Manual | Publication SEBM020E0104

Order the manual at mid-west-tech.com >

CONTENTS

No. of page

01 GENERAL 01-1

10 ENGINE

11 STRUCTURE AND FUNCTION 11-1
12 TESTING AND ADJUSTING 12-1
13 DISASSEMBLY AND ASSEMBLY 13-1

20 POWER TRAIN

21 STRUCTURE AND FUNCTION 21-1
22 TESTING AND ADJUSTING ..... See 62 TESTING AND ADJUSTING
23 DISASSEMBLY AND ASSEMBLY 23-1
24 MAINTENANCE STANDARD 24-1

40 STEERING SYSTEM

41 STRUCTURE AND FUNCTION 41-1
42 TESTING AND ADJUSTING 42-1
43 DISASSEMBLY AND ASSEMBLY 43-1
44 MAINTENANCE STANDARD 44-1

50 AIR SYSTEM

51 STRUCTURE AND FUNCTION 51-1

60 HYDRAULIC SYSTEM

61 STRUCTURE AND FUNCTION 61-1
62 TESTING AND ADJUSTING 62-1
63 DISASSEMBLY AND ASSEMBLY 63-1
64 MAINTENANCE STANDARD 64-1

70 WORK EQUIPMENT


71 STRUCTURE AND FUNCTION 71-1
73 DISASSEMBLY AND ASSEMBLY 73-1
74 MAINTENANCE STANDARD 74-1

80 ELECTRIC AND ELECTRONIC SYSTEM

81 STRUCTURE AND FUNCTION 81-1

90 OTHERS 91-1

MidWestTech | Komatsu PW150-1 Wheel Excavator Service Manual | Publication SEB... Order the manual at mid-west-tech.com >

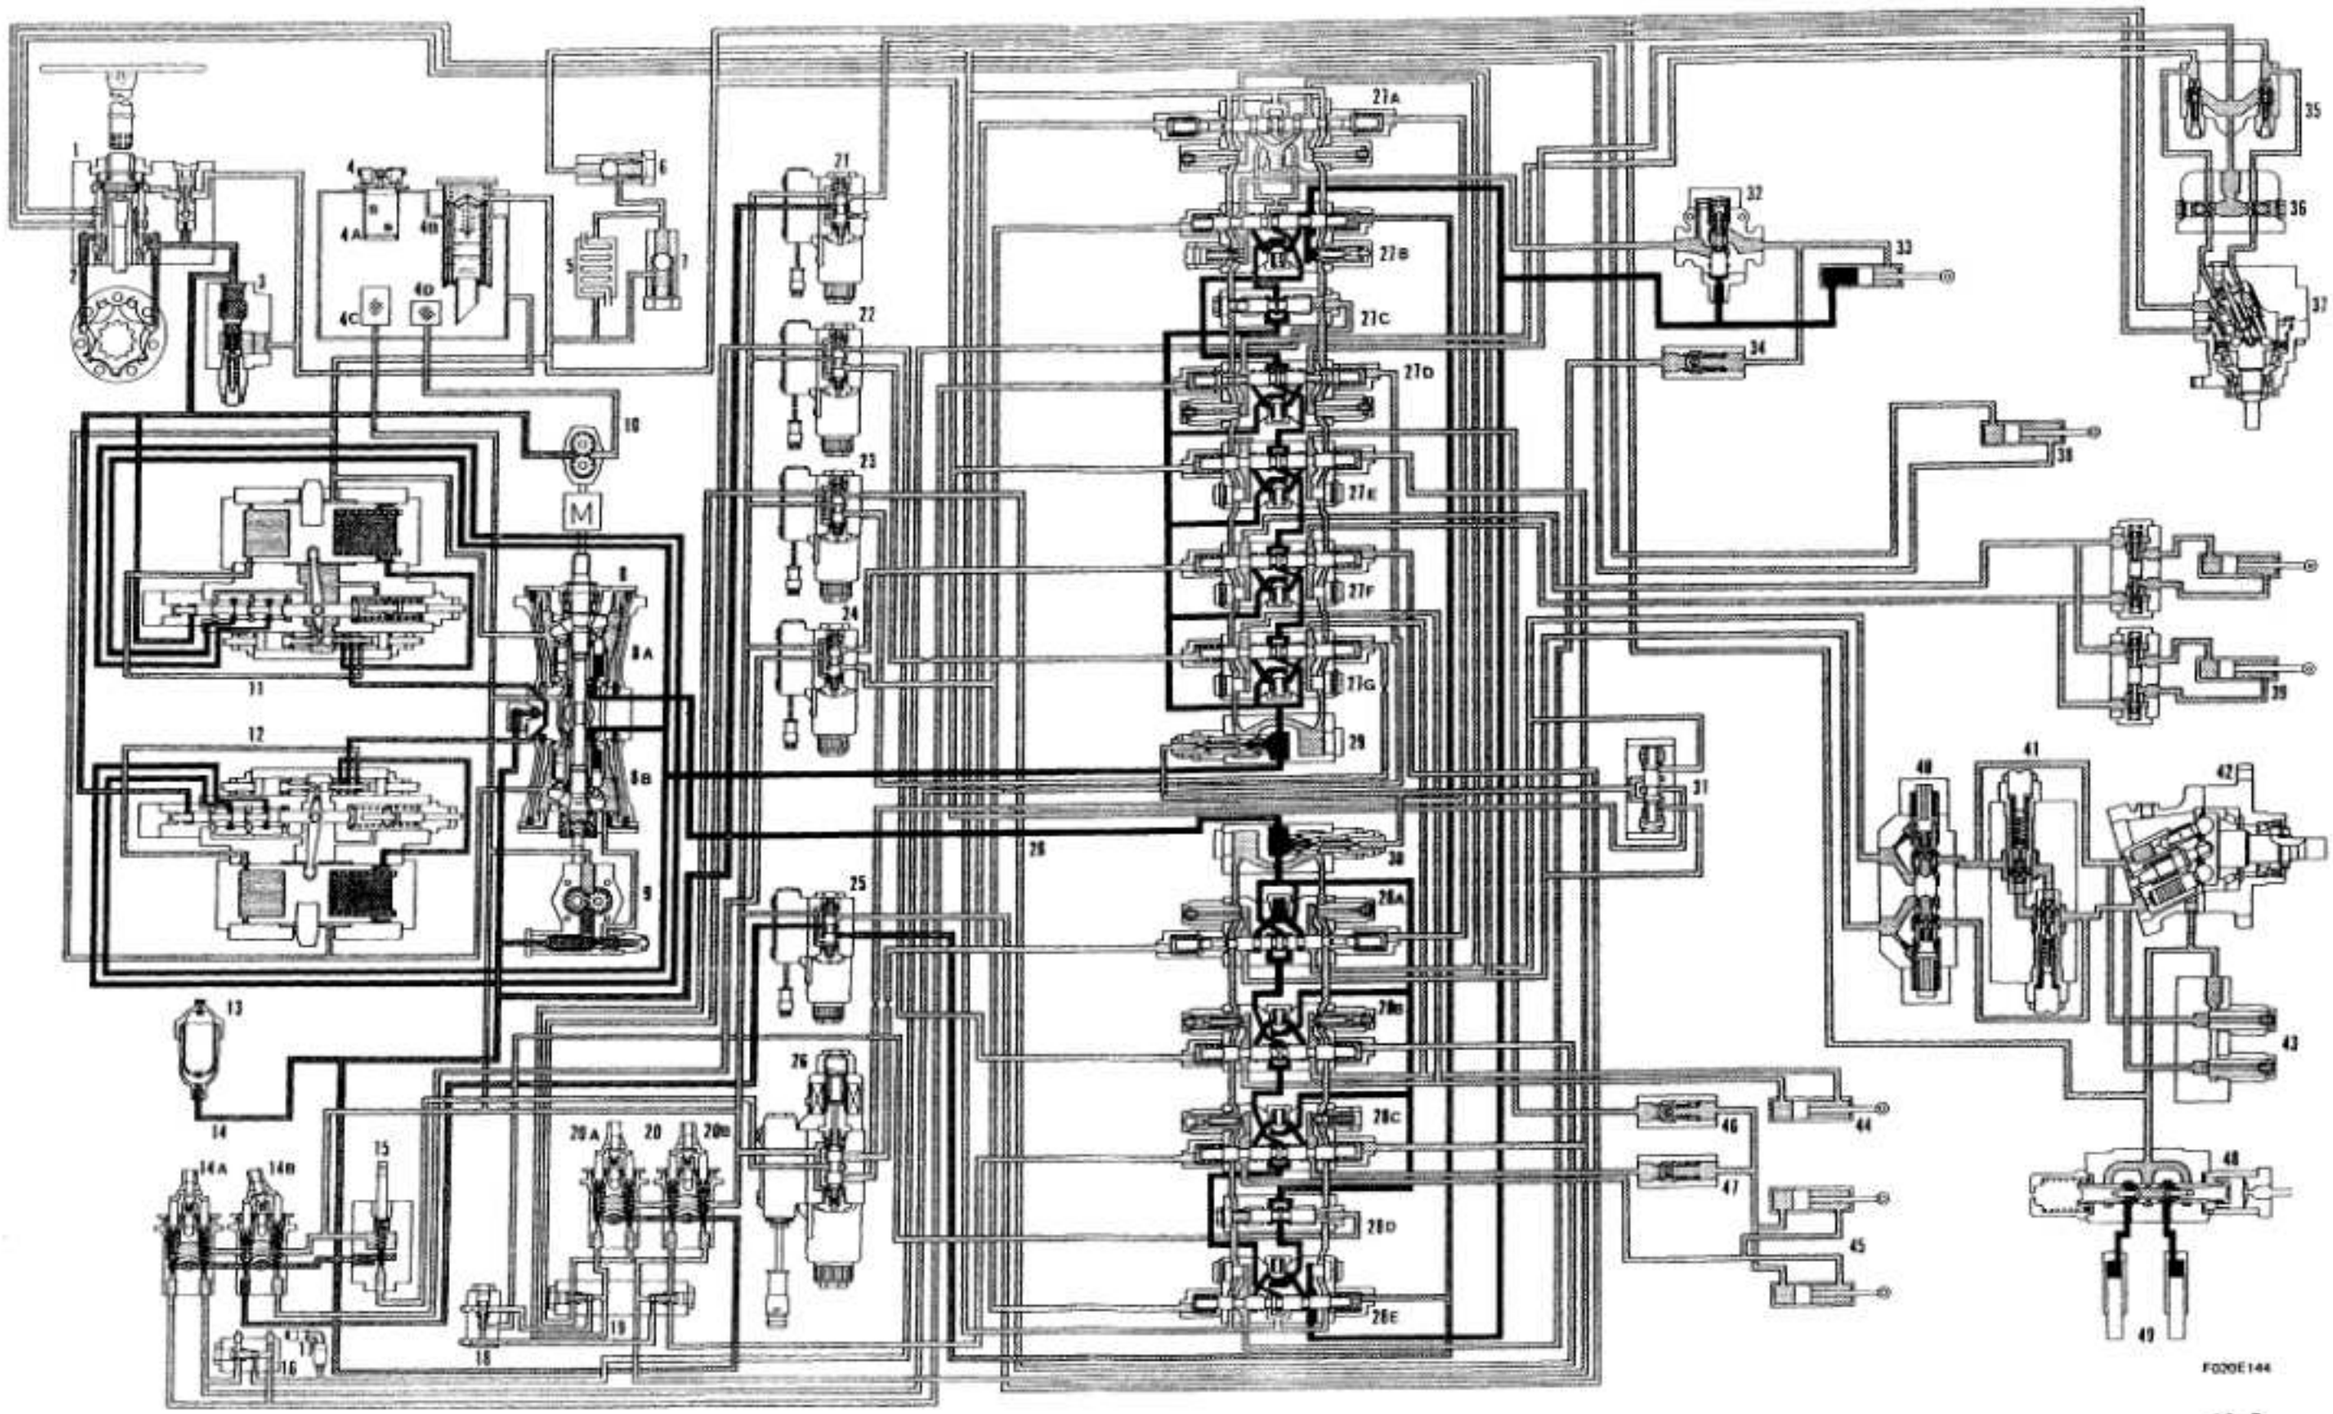

MidWestTech | Komatsu PW150-1 Wheel Excavator Service Manual | Publication SEBM020E0104

Order the manual at mid-west-tech.com >