SEBM020K0102

SHOP MANUAL

KOMATSU®

PW210-1

MACHINE MODEL	SERIAL No.
PW210-1	**10001 and up**

- This shop manual may contain attachments and optional equipment that are not available in your area. Please consult your local Komatsu distributor for those items you may require. Materials and specifications are subject to change without notice.

- PW210-1 mount the S6D105-1 engine.
  For details of the engine, see the 6D105 Series Engine Shop Manual.

MidWestTech | Komatsu PW210-1 Wheel Excavator Service Manual | Publication SEBM020K0102

Order the manual at mid-west-tech.com >

CONTENTS

No. of page

10 ENGINE

11 STRUCTURE AND FUNCTION 11-1
12 TESTING AND ADJUSTING 12-1
13 DISASSEMBLY AND ASSEMBLY 13-1

20 POWER TRAIN

21 STRUCTURE AND FUNCTION 21-1
23 DISASSEMBLY AND ASSEMBLY 23-1
24 MAINTENANCE STANDARD 24-1

40 STEERING SYSTEM

41 STRUCTURE AND FUNCTION 41-1
42 TESTING AND ADJUSTING 42-1
43 DISASSEMBLY AND ASSEMBLY 43-1
44 MAINTENANCE STANDARD 44-1

50 AIR SYSTEM

51 STRUCTURE AND FUNCTION 51-1

60 HYDRAULIC SYSTEM


61 STRUCTURE AND FUNCTION 61-1
62 TESTING AND ADJUSTING 62-1
63 DISASSEMBLY AND ASSEMBLY 63-1
64 MAINTENANCE STANDARD 64-1

80 ELECTRIC AND ELETRONIC SYSTEM

81 STRUCTURE AND FUNCTION 81-1
82 TESTING AND ADJUSTING 82-1

MidWestTech | Komatsu PW210-1 Wheel Excavator Service Manual | Publication SE... Order the manual at mid-west-tech.com >

ELECTRICAL CIRCUIT DIAGRAM

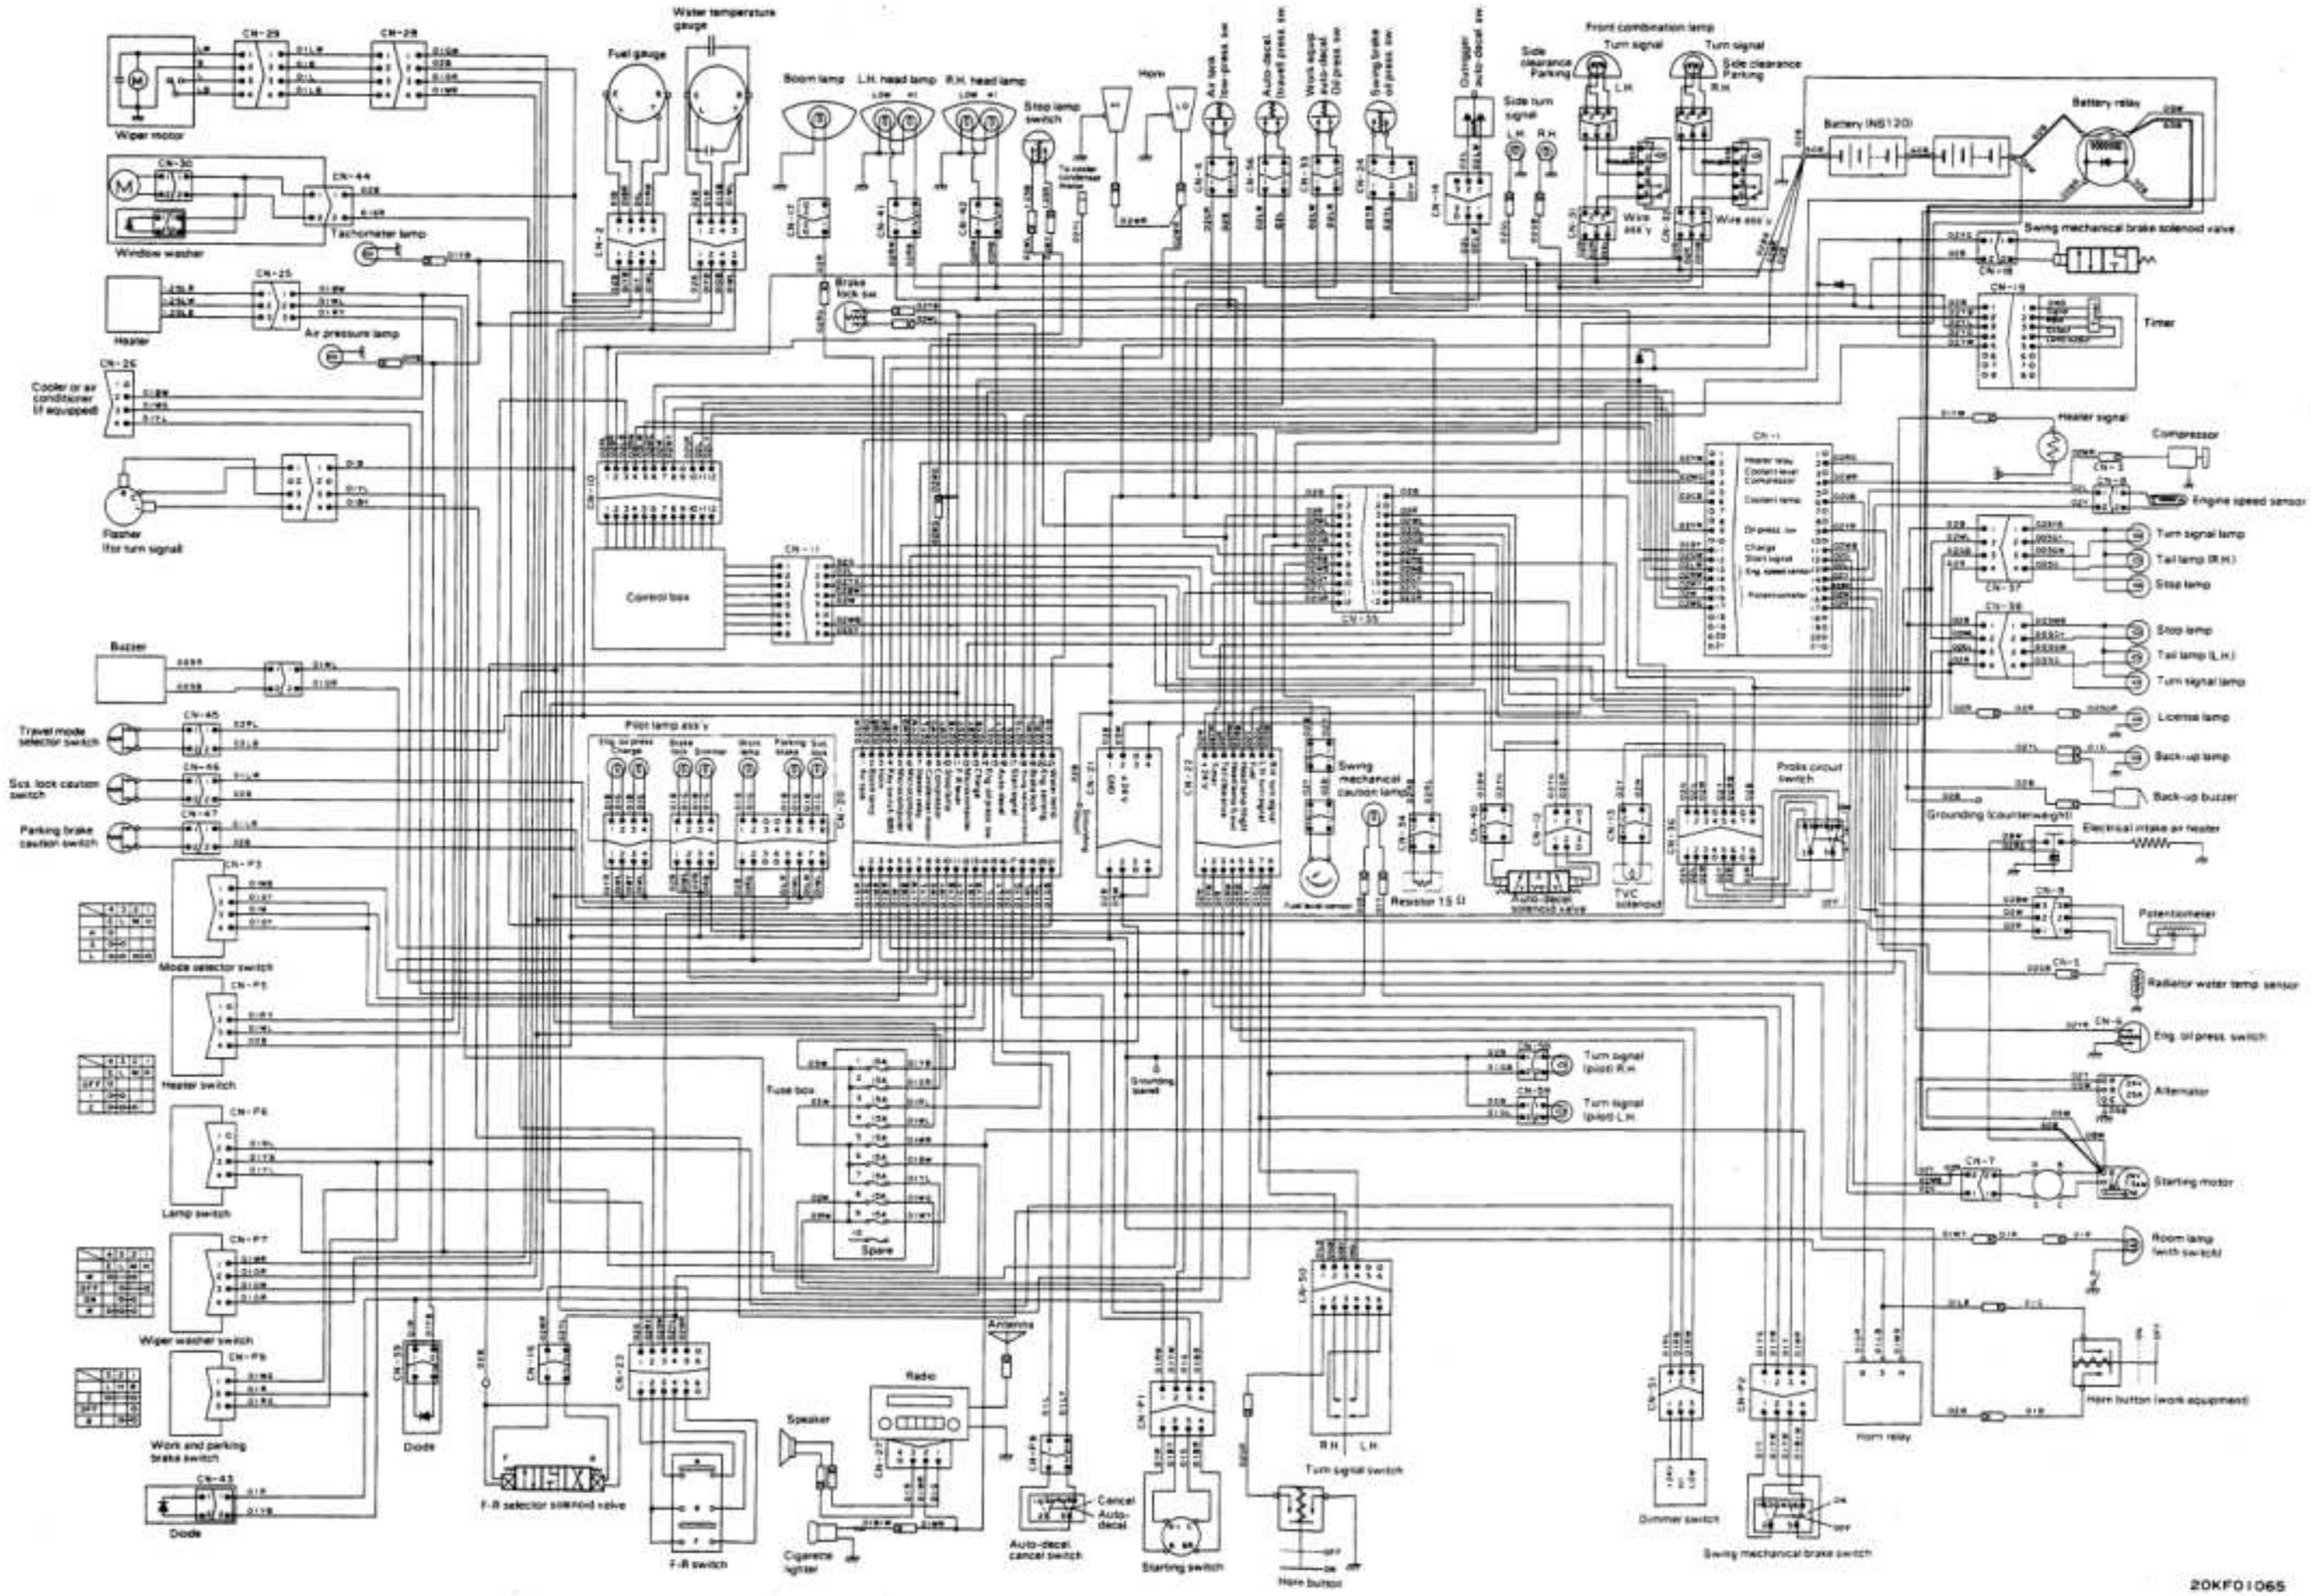

020K01

MidWestTech | Komatsu PW210-1 Wheel Excavator Service Manual | Publication SEBM020K0102

Order the manual at mid-west-tech.com >