SEBM020L0101

SHOP MANUAL

KOMATSU®

PW05-1

MACHINE MODEL	SERIAL No.
PW05-1	1001 and up

Order the manual at mid-west-tech.com >

WEIGHT TABLE

⚠ This weight table is a guide for use when transporting or handling components.

Unit: kg


Machine model	PW05-1
Serial No.	1001 –
Engine assembly	115
• Engine (incl. muffler, accessories)	106
• PTO	7.5
• Hydraulic, steering pump	1.5
Engine mount	7.5
Radiator assembly (incl. mount)	6.5
Fuel tank (not incl. fuel)	10
Hydraulic tank (not incl. hydraulic oil)	15.5
Revolving frame	107
Swing circle assembly	17.7
Chassis frame assembly	239
• Frame	102.5
• Front bracket	58
• Rear bracket	40
• Oscillating bracket	10
• Tie rod	11
Transfer assembly	24
Drive shaft assembly	5 x 2
Front axle	62 x 1
Rear axle assembly	55 x 1
Tire assembly	15 x 4
Hydraulic pump assembly	25
Control valve assembly	14
Steering valve assembly	7
Travel motor assembly	10
Swing motor assembly	10.5
Center swivel joint assembly	16

Machine model	PW05-1
Serial No.	1001 –
Boom cylinder assembly	8
Arm cylinder assembly	9
Bucket cylinder assembly	8
Blade cylinder assembly	6
Steering cylinder assembly	6.5
Swing cylinder assembly	6.5
Suspension lock cylinder assembly	4 x 2
Boom assembly	34
Arm assembly	25
Bucket assembly	19.5
Blade assembly	47
Swing bracket	16.5

020L01

MidWestTech | Komatsu PW05-1 Wh... Order the manual at mid-west-tech.com >

HYDRAULIC CIRCUIT DIAGRAM

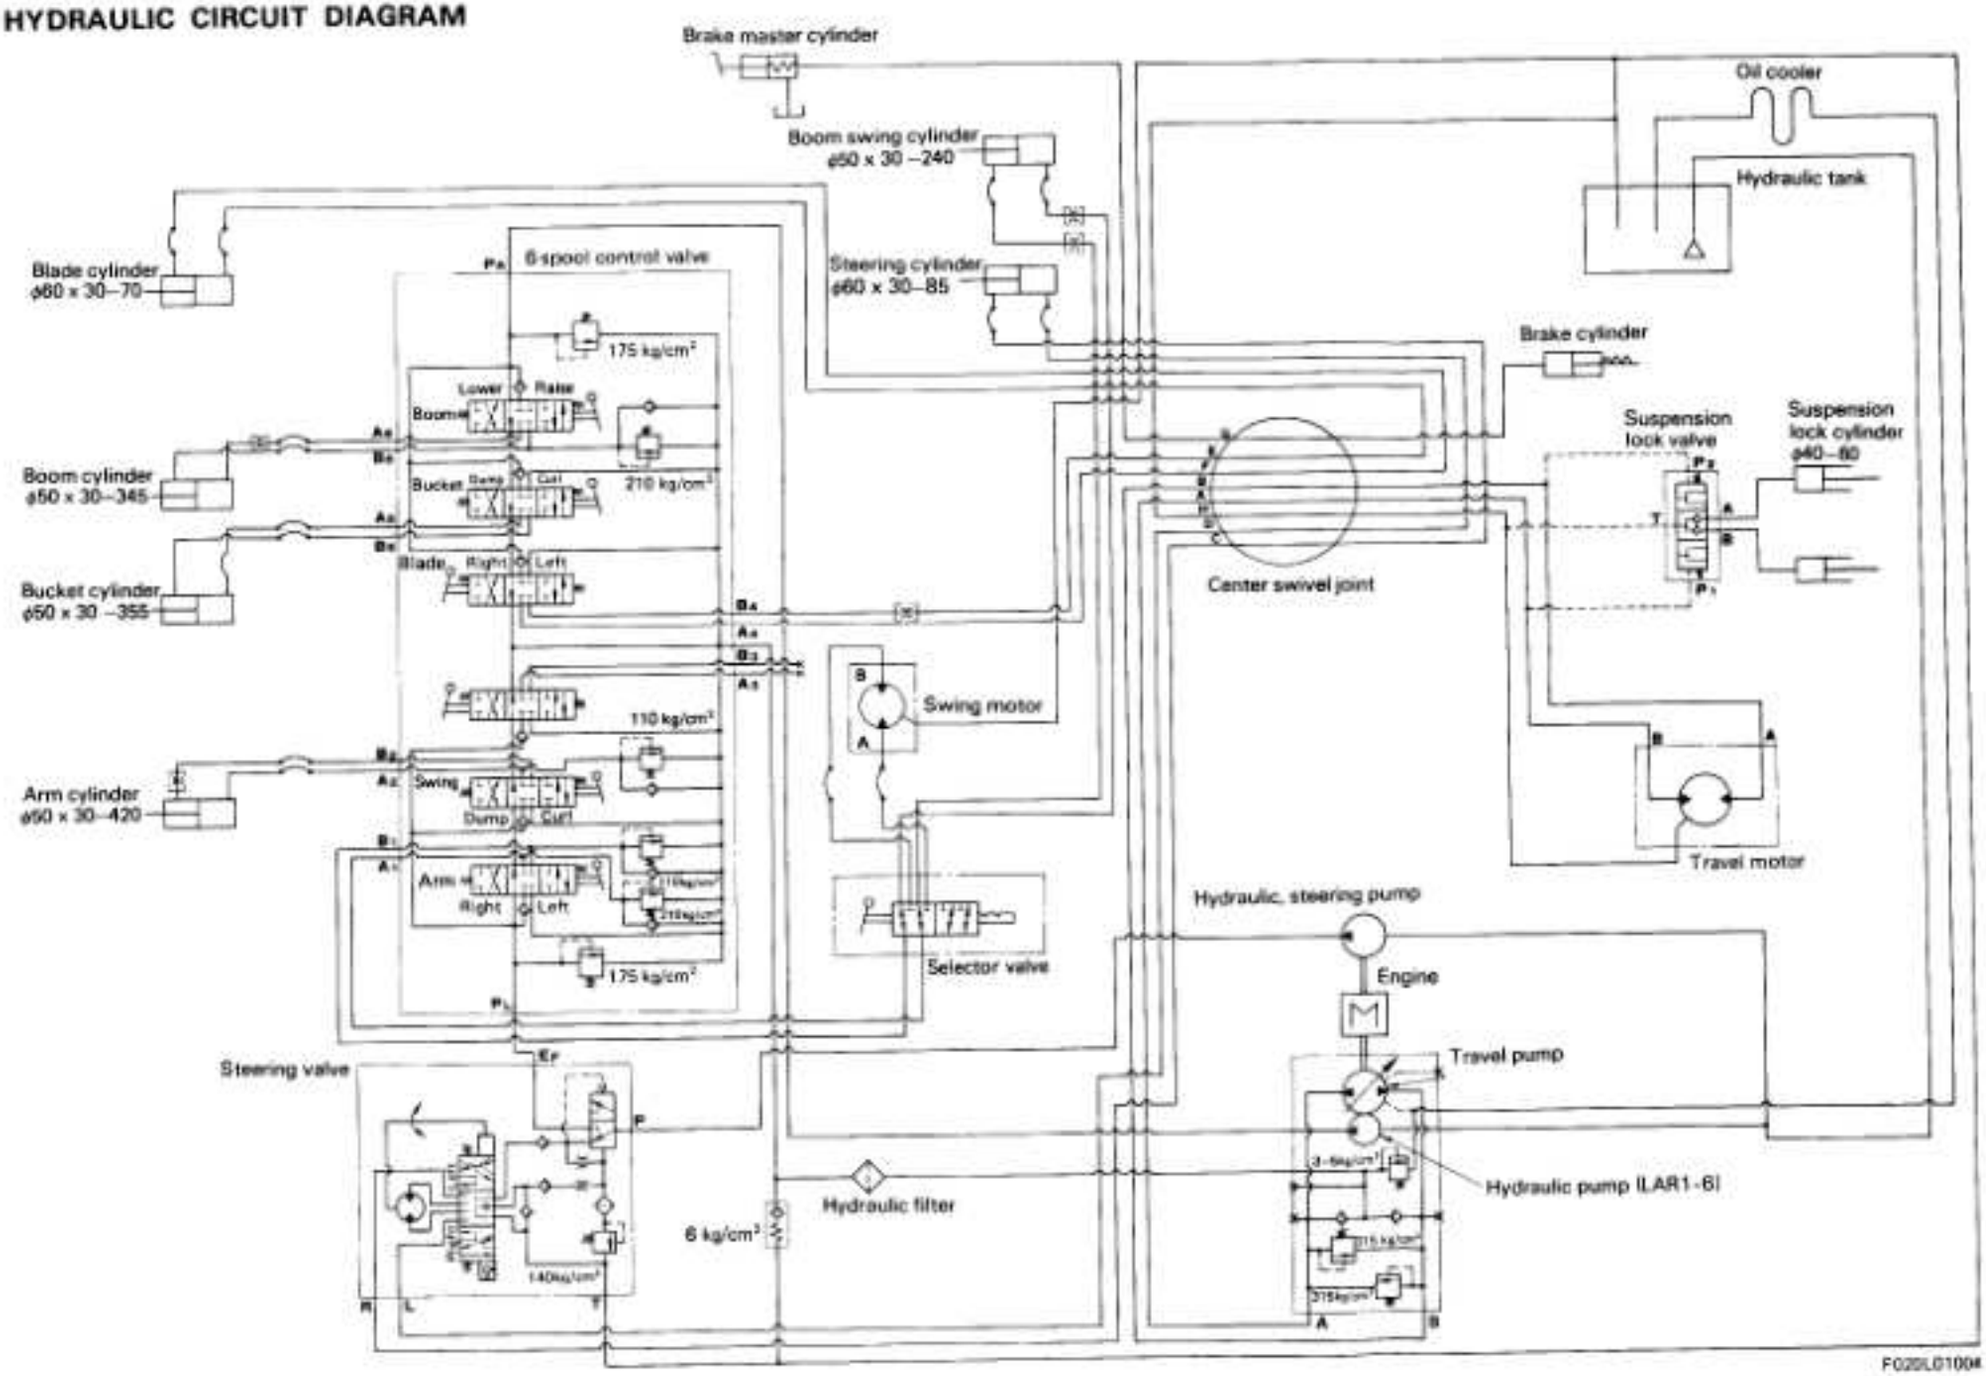

MidWestTech | Komatsu PW05-1 Wheel Excavator Service Manual | Publication SEBM020L0101 Order the manual at mid-west-tech.com >