SEBM02350106

SHOP MANUAL

KOMATSU®

GD825A-1

MACHINE MODEL SERIAL No.

GD825A-1 10002 and up

- This shop manual may contain attachments and optional equipment that are not available in your area. Please consult your local Komatsu distributor for those items you may require. Materials and specifications are subject to change without notice.

- GD825A-1 mount the S6D140-1 engine.
  For details of the engine, see the 6D140-1 Series Engine Shop Manual.

MidWestTech | Komatsu GD825A-1 Motor Grader Service Manual | Publication SEBM02350106
Order the manual at mid-west-tech.com >

CONTENTS

No. of page

10 ENGINE

11 STRUCTURE AND FUNCTION 11-1
12 TESTING AND ADJUSTING 12-1
13 DISASSEMBLY AND ASSEMBLY 13-1

20 POWER TRAIN

21 STRUCTURE AND FUNCTION 21-1
22 TESTING AND ADJUSTING 22-1
23 DISASSEMBLY AND ASSEMBLY 23-1
24 MAINTENANCE STANDARD 24-1

40 STEERING SYSTEM

41 STRUCTURE AND FUNCTION 41-1
42 TESTING AND ADJUSTING 42-1
43 DISASSEMBLY AND ASSEMBLY 43-1
44 MAINTENANCE STANDARD 44-1

50 BRAKE SYSTEM

51 STRUCTURE AND FUNCTION 51-1
52 TESTING AND ADJUSTING 52-1
53 DISASSEMBLY AND ASSEMBLY 53-1
54 MAINTENANCE STANDARD 54-1

60 HYDRAULIC SYSTEM

61 STRUCTURE AND FUNCTION 61-1
63 DISASSEMBLY AND ASSEMBLY 63-1
64 MAINTENANCE STANDARD 64-1

70 WORK EQUIPMENT

71 STRUCTURE AND FUNCTION 71-1
72 TESTING AND ADJUSTING 72-1
73 DISASSEMBLY AND ASSEMBLY 73-1
74 MAINTENANCE STANDARD 74-1

80 ELECTRIC AND ELECTRONIC SYSTEM


81 STRUCTURE AND FUNCTION 81-1
82 TESTING AND ADJUSTING 82-1


Not to be reproduced in whole or in part without the prior written permission of KOMATSU, Tokyo, Japan.

MidWestTech | Komatsu GD825A-1 Motor Grader Service Manual | Publication SEBM0235... Order the manual at mid-west-tech.com >

MidWestTech | Komatsu GD825A-1 Motor Grader Service Manual | Publication SEBM02350106

1. TRANSMISSION CONTROL CIRCUIT DIAGRAM

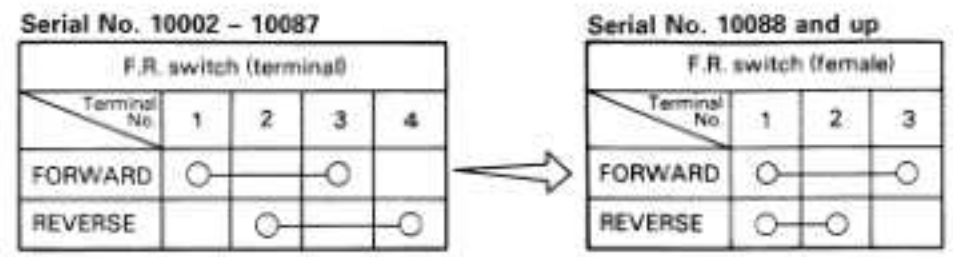

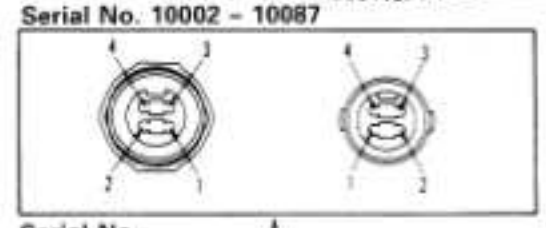

Transmission control lever table

		CN 23										CN 14				
		A	B	C	D	E	F	G	H	I	J	1	2	3	4	5
P												○—○				◎
N												○—○			○	
F	1	◎		○		○				○		○—○			○	
	2	◎		○			○			○		○—○			○	
	3	◎		○				○		○		○—○			○	
	4	◎		○					○	○		○—○			○	
	5	◎			○	○				○		○—○			○	
	6	◎			○		○			○		○—○			○	
	7	◎			○			○		○		○—○			○	
	8	◎			○				○	○		○—○			○	
R	1	◎		○		○					○	○—○		○	○	
	2	◎		○			○				○	○—○		○	○	
	3	◎		○				○			○	○—○		○	○	
	4	◎		○					○		○	○—○		○	○	
	5	◎			○	○					○	○—○		○	○	
	6	◎			○		○				○	○—○		○	○	
	7	◎			○			○			○	○—○		○	○	
	8	◎			○				○		○	○—○		○	○	

◎ : Chassis ground

GD825A-1

Order the manual at mid-west-tech.com >