SEBM033605

SHOP MANUAL

KOMATSU®

D21A,P-8

MACHINE MODEL | SERIAL No.

D21A, P-8 | **83001 and up**

- This shop manual may contain attachments and optional equipment that are not available in your area. Please consult your local Komatsu distributor for those items you may require. Materials and specifications are subject to change without notice.

- D21-8 mount the 4D94LE-2 engine.
  For details of the engine, see the 94E, 98E Series Engine Shop Manual.

MidWestTech | Komatsu D21A-8, D21P-8 Crawler Dozer Service Manual | Publication SEBM033605

Order the manual at mid-west-tech.com >

CONTENTS

No. of page

01 GENERAL 01-1

10 STRUCTURE AND FUNCTION 10-1

20 TESTING AND ADJUSTING 20-1

30 DISASSEMBLY AND ASSEMBLY 30-1

40 MAINTENANCE STANDARD 40-1

90 OTHERS 90-1

MidWestTech | Komatsu D21A-8, D21P-8 Crawler Dozer Service Manual | Publication... Order the manual at mid-west-tech.com >

CONTENTS

OUTLINE

Specification drawing 90-103
Specifications 90-104
Weight table 90-108
Fuel, coolant and lubricants 90-110

STRUCTURE AND FUNCTION


Power train sleleton 90-112
Power train hydraulic circuit diagram 90-113
Transmission control 90-114
Hydroshift transmission 90-115
Transmission control valve 90-118
Track frame 90-120
Hydraulic piping diagram of work equipment 90-121
Hydraulic circuit of work equipment 90-122
Work equipment control 90-123
Work equipment control valve 90-124
Trimming dozer 90-130
Electrical wiring diagram 90-131
Monitor system 90-133

MAINTENANCE STANDARD

Hydroshift transmission 90-134
Transmission control valve 90-136
Track frame 90-138
Idler cushion 90-139
Idler 90-140
Track roller 90-142
Carrier roller 90-143
Track shoe (Dry type) 90-144
Rubber crawler 90-147
Work equipment control valve 90-148
Work equipment cylinder 90-150
Trimming dozer 90-152

MidWestTech | Komatsu D21A-8, D21P-8 Crawler Dozer Service Manual | Publication... Order the manual at mid-west-tech.com >

ELECTRICAL WIRING DIAGRAM

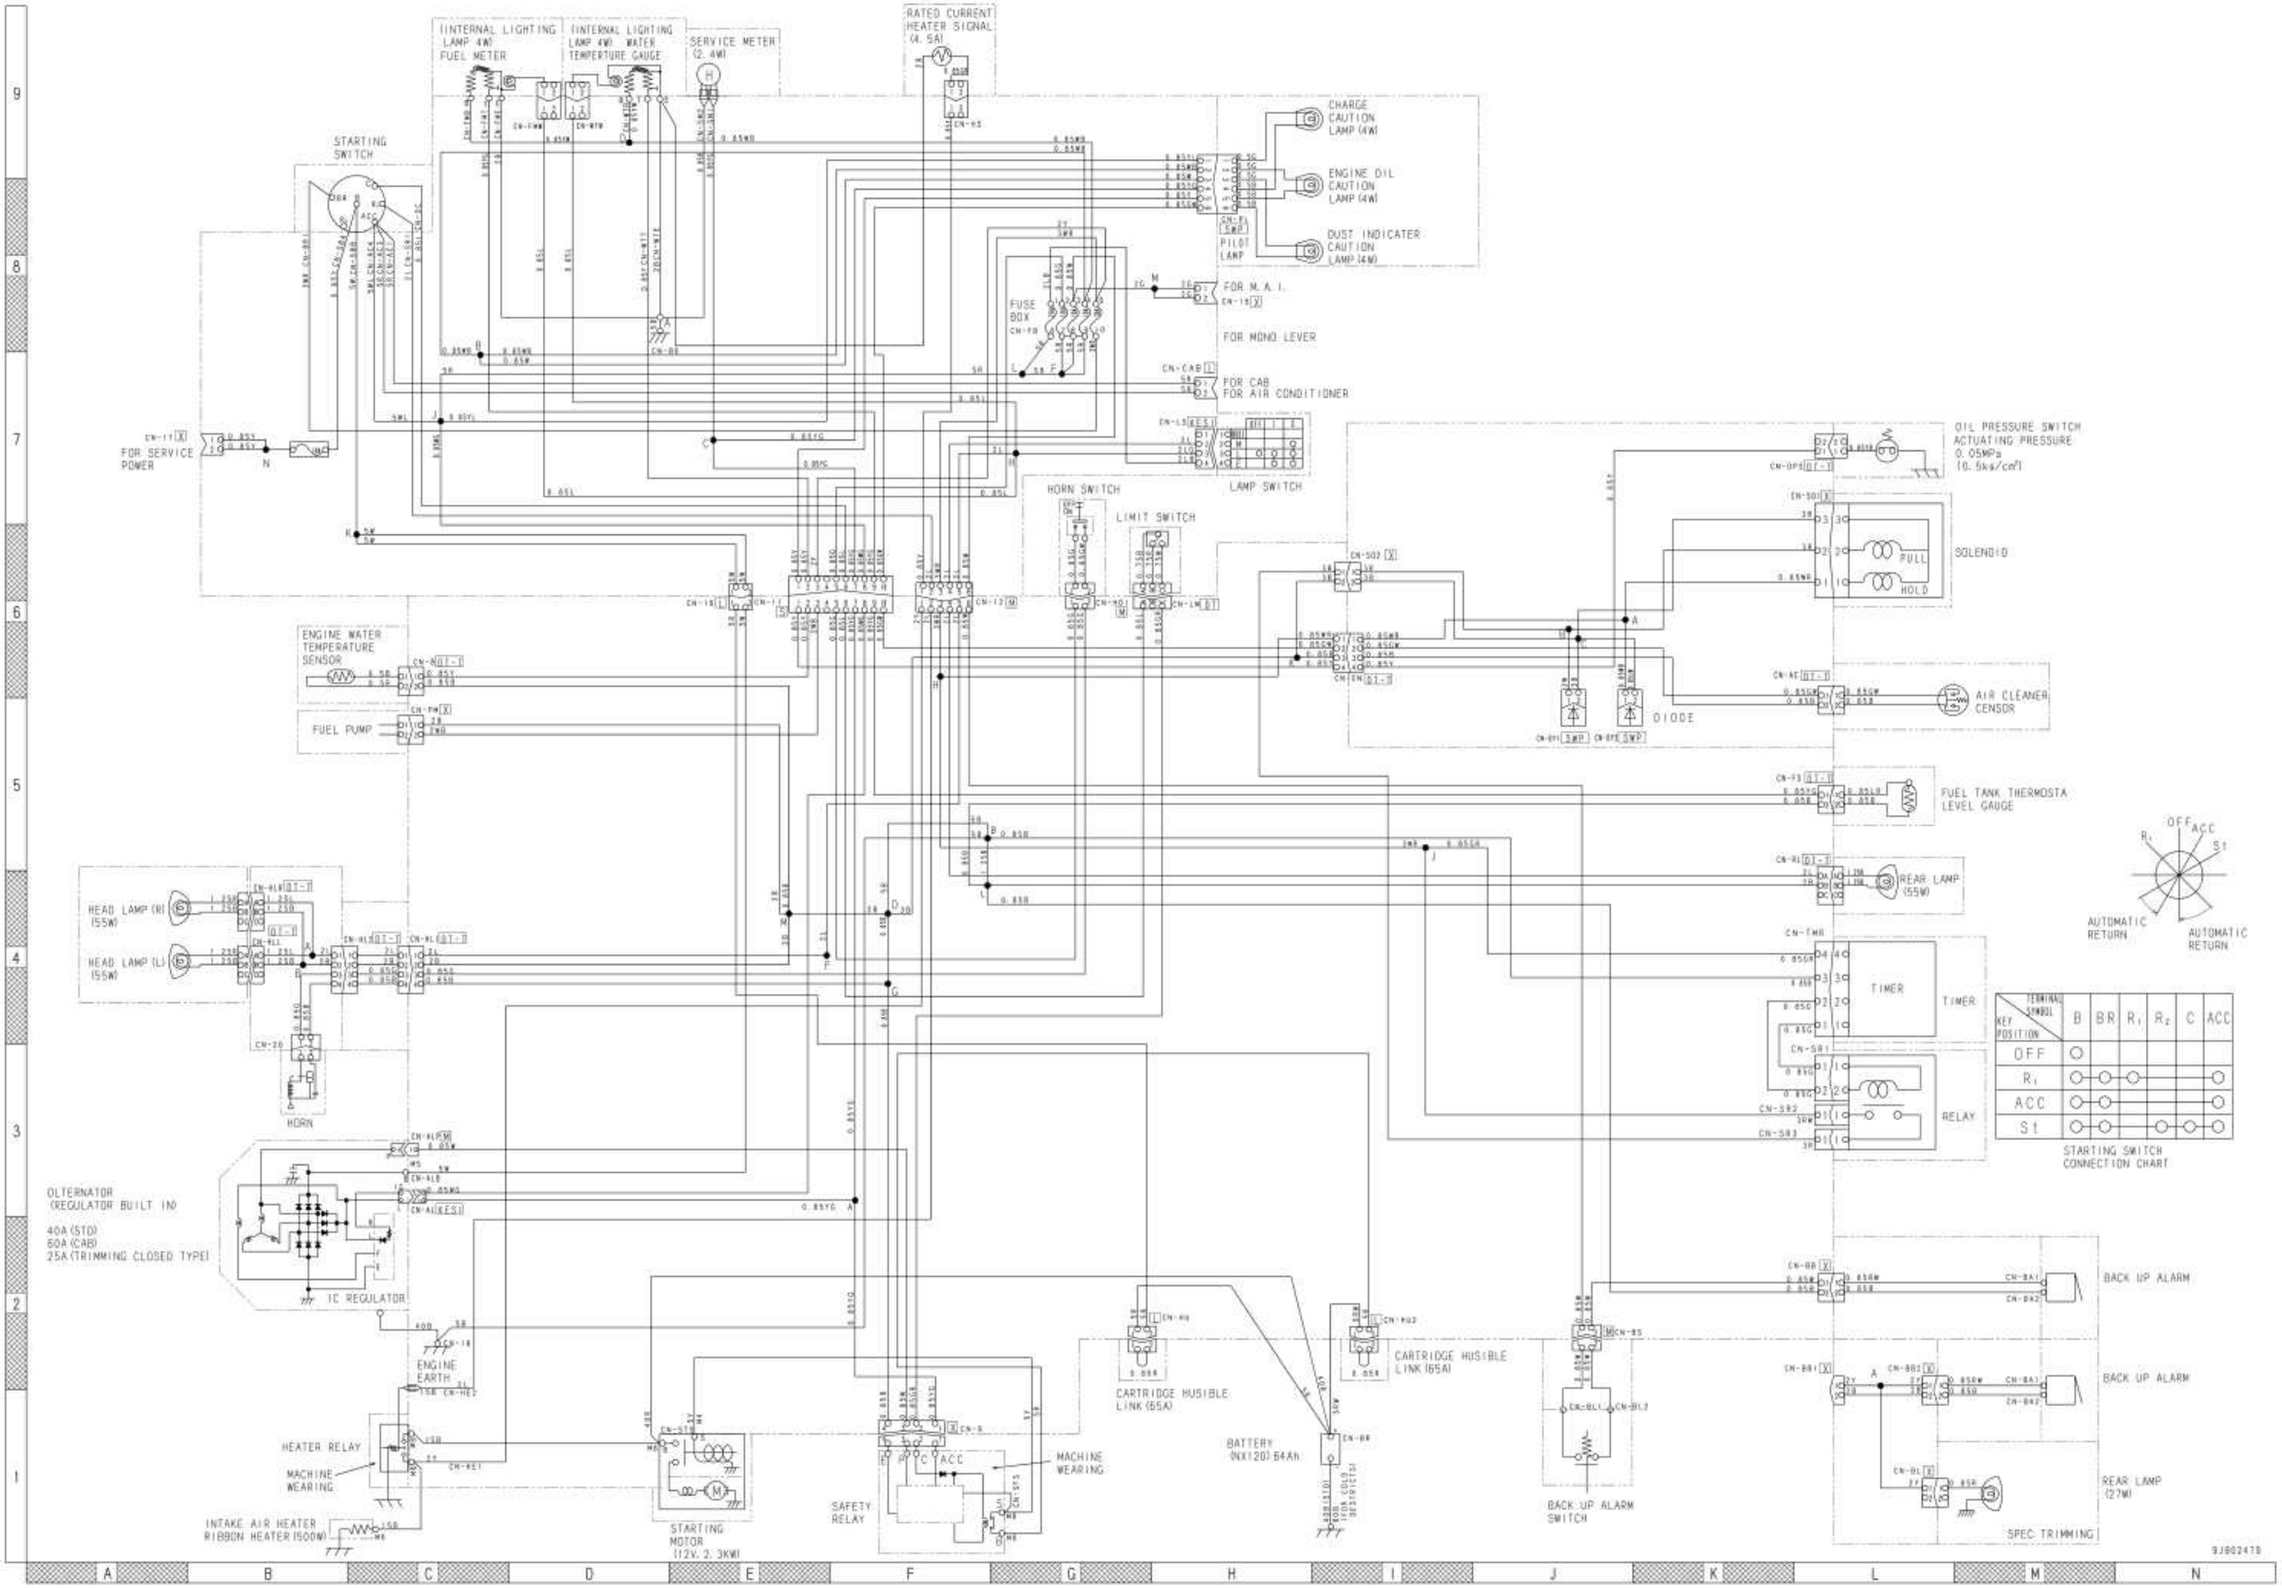

MidWestTech | Komatsu D21A-8, D21P-8 Crawler Dozer Service Manual | Publication SEBM033605

Order the manual at mid-west-tech.com >