SEBM034906

SHOP MANUAL

KOMATSU®

WA180-1

MACHINE MODEL

WA180-1

SERIAL No.

10001 and up

- This shop manual may contain attachments and optional equipment that are not available in your area. Please consult your local Komatsu distributor for those items you may require. Materials and specifications are subject to change without notice.
- WA180-1 mount the S6D95L-1 engine.
  For details of the engine, see the 95 Series Engine Shop Manual.

© 2003 KOMATSU
All Rights Reserved
Printed in Japan 10-03(03)

MidWestTech | Komatsu WA180-1 Wheel Loader Service Manual | Publication SEBM034906
Order the manual at mid-west-tech.com >

CONTENTS

No. of page

10 ENGINE
11 STRUCTURE AND FUNCTION 11-1
12 TESTING AND ADJUSTING 12-1
13 DISASSEMBLY AND ASSEMBLY 13-1

20 POWER TRAIN
21 STRUCTURE AND FUNCTION 21-1
22 TESTING AND ADJUSTING 22-1
23 DISASSEMBLY AND ASSEMBLY 23-1
24 MAINTENANCE STANDARD 24-1

40 STEERING SYSTEM
41 STRUCTURE AND FUNCTION 41-1
42 TESTING AND ADJUSTING 42-1
43 DISASSEMBLY AND ASSEMBLY 43-1
44 MAINTENANCE STANDARD 44-1

50 BRAKE SYSTEM
51 STRUCTURE AND FUNCTION 51-1
52 TESTING AND ADJUSTING 52-1
53 DISASSEMBLY AND ASSEMBLY 53-1
54 MAINTENANCE STANDARD 54-1


60 WORK EQUIPMENT SYSTEM
61 STRUCTURE AND FUNCTION 61-1
62 TESTING AND ADJUSTING 62-1
63 DISASSEMBLY AND ASSEMBLY 63-1
64 MAINTENANCE STANDARD 64-1

80 ELECTRIC AND ELECTRONIC SYSTEM
81 STRUCTURE AND FUNCTION 81-1
83 DISASSEMBLY AND ASSEMBLY 83-1

90 OTHERS
91 STRUCTURE AND FUNCTION 91-1

MidWestTech | Komatsu WA180-1 Wheel Loader Service Manual | Publication SEBM0... Order the manual at mid-west-tech.com >

ELECTRICAL WIRING DIAGRAM CIRCUIT

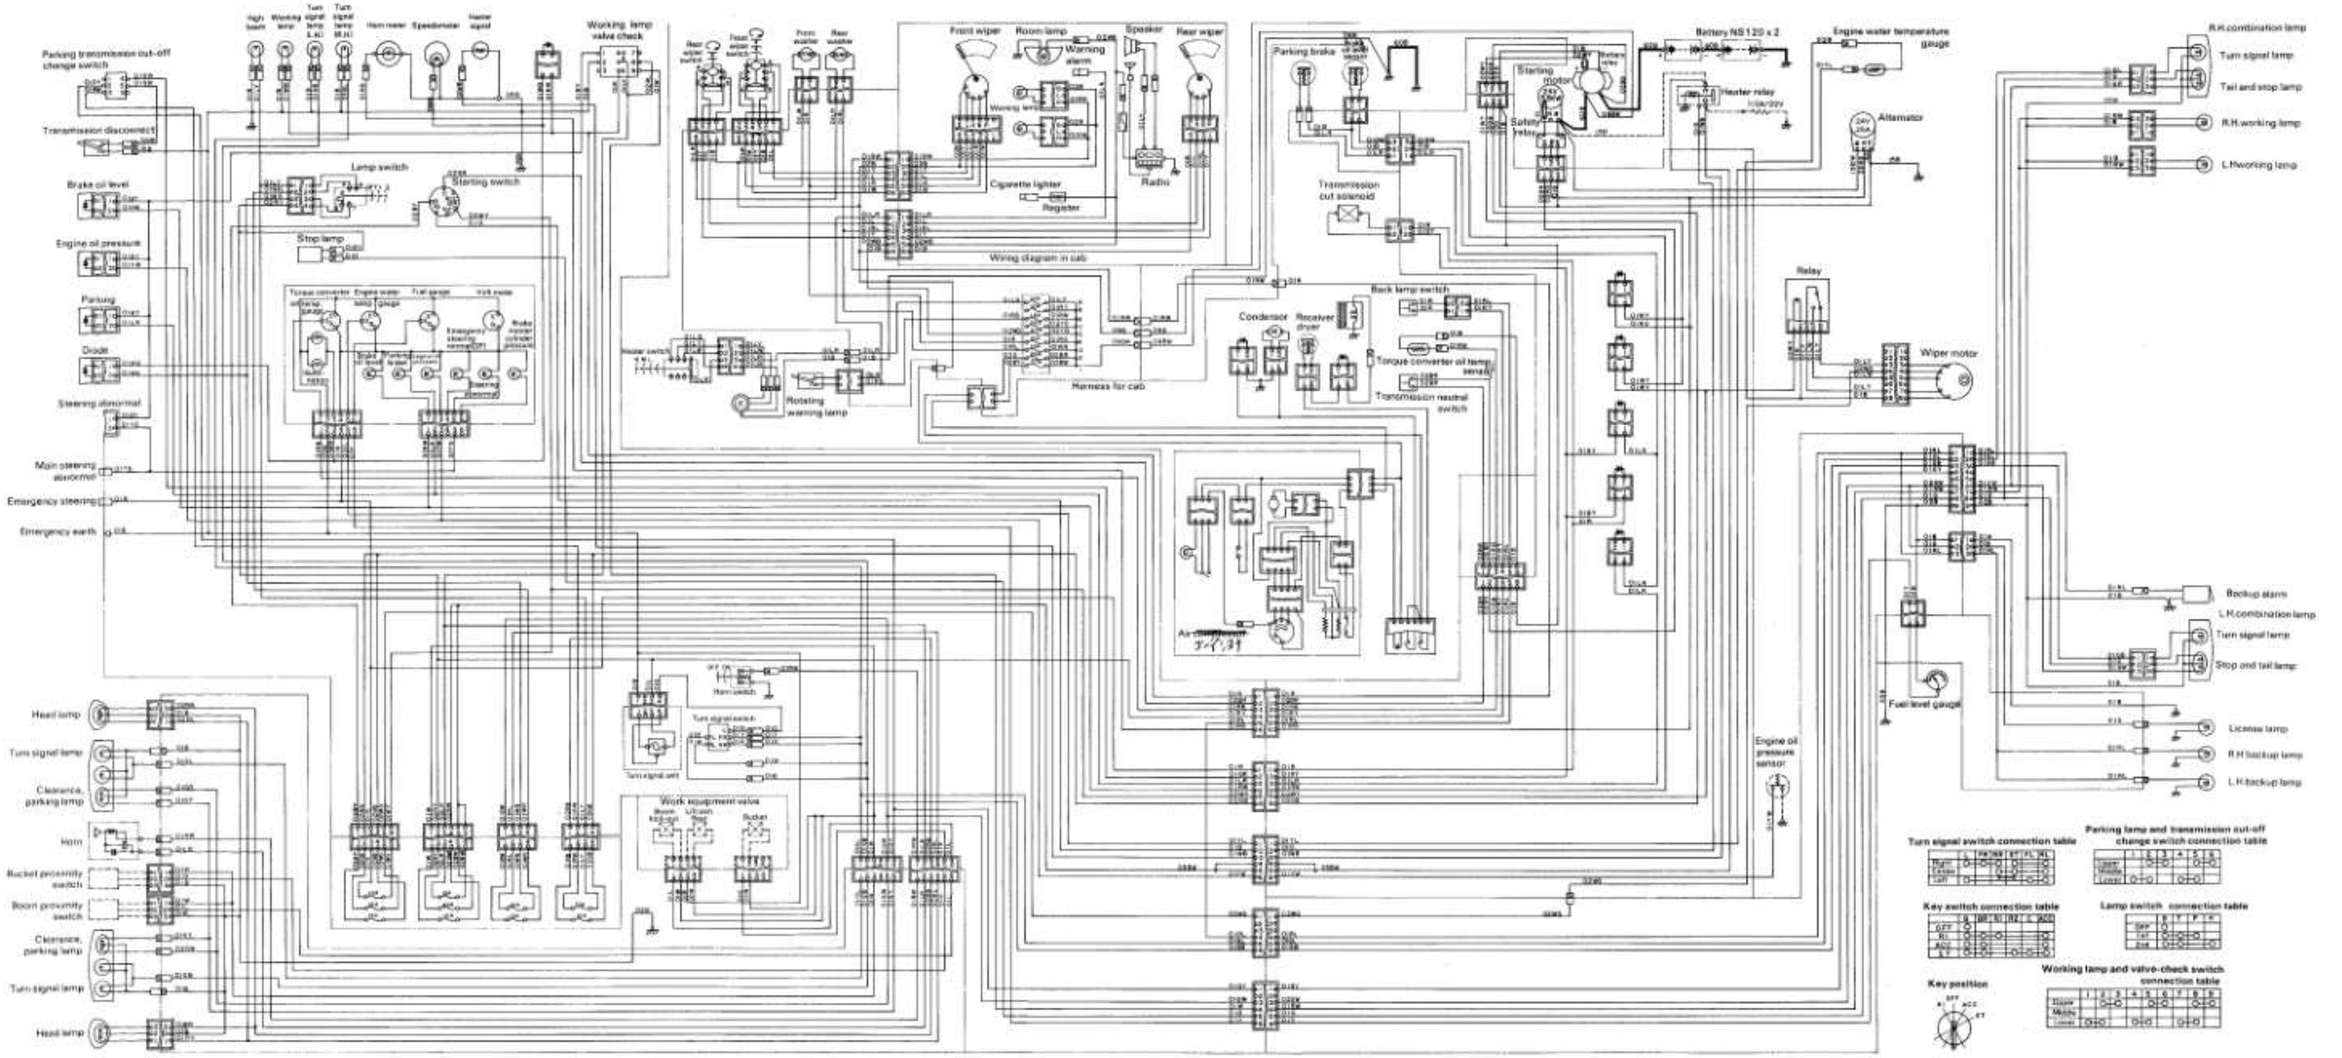

F4160104

MidWestTech | Komatsu WA180-1 Wheel Loader Service Manual | Publication SEBM034906

Order the manual at mid-west-tech.com >