SEBM04260111

SHOP MANUAL

KOMATSU®

WA600-1

MACHINE MODEL SERIAL NO.

WA600-1 10001 and up

- This shop manual may contain attachments and optional equipment that are not available in your area. Please consult your local Komatsu distributor for those items you may require. Materials and specifications are subject to change without notice.

- WA600-1 mount the S6D170-1 engine.
  For details of the engine, see the 6D170-1 Series Engine Shop Manual.

© 1996 KOMATSU
All Rights Reserved
96-04(02)03551

MidWestTech | Komatsu WA600-1 Wheel Loader Service Manual | Publication SEBM04260111 Order the manual at mid-west-tech.com >

CONTENTS

10 ENGINE — No. of page

12 TESTING AND ADJUSTING 12-1
13 DISASSEMBLY AND ASSEMBLY 13-1

20 POWER TRAIN

21 STRUCTURE AND FUNCTION 21-1
22 TESTING AND ADJUSTING 22-1
23 DISASSEMBLY AND ASSEMBLY 23-1
24 MAINTENANCE STANDARD 24-1

40 STEERING SYSTEM

41 STRUCTURE AND FUNCTION 41-1
42 TESTING AND ADJUSTING 42-1
43 DISASSEMBLY AND ASSEMBLY 43-1
44 MAINTENANCE STANDARD 44-1

50 BRAKE AND AIR SYSTEM

51 STRUCTURE AND FUNCTION 51-1
52 TESTING AND ADJUSTING 52-1
53 DISASSEMBLY AND ASSEMBLY 53-1
54 MAINTENANCE STANDARD 54-1

60 WORK EQUIPMENT SYSTEM

61 STRUCTURE AND FUNCTION 61-1
62 TESTING AND ADJUSTING 62-1
63 DISASSEMBLY AND ASSEMBLY 63-1
64 MAINTENANCE STANDARD 64-1

80 ELECTRIC AND ELECTRONIC SYSTEM

81 STRUCTURE AND FUNCTION 81-1
82 TESTING AND ADJUSTING 82-1
83 DISASSEMBLY AND ASSEMBLY 83-1


90 OTHERS


91 OTHERS 91-1
93 DISASSEMBLY AND ASSEMBLY 93-1
97 GEAR PUMP 97-1

MidWestTech | Komatsu WA600-1 Wheel Loader Service Manual | Publication SEBM04260... Order the manual at mid-west-tech.com >

J-4 FAILURE CODE [19] ABNORMALITY IN CAUTION LAMP SYSTEM


★ Before carrying out troubleshooting, check that all the related connectors are properly inserted.
★ Except when using the joystick steering lever, place it at the N position and turn the joystick steering selector switch ON.
★ Always connect any disconnected connectors before going on to the next step.
★ Turn the starting switch to the OFF position before disconnecting any connector.

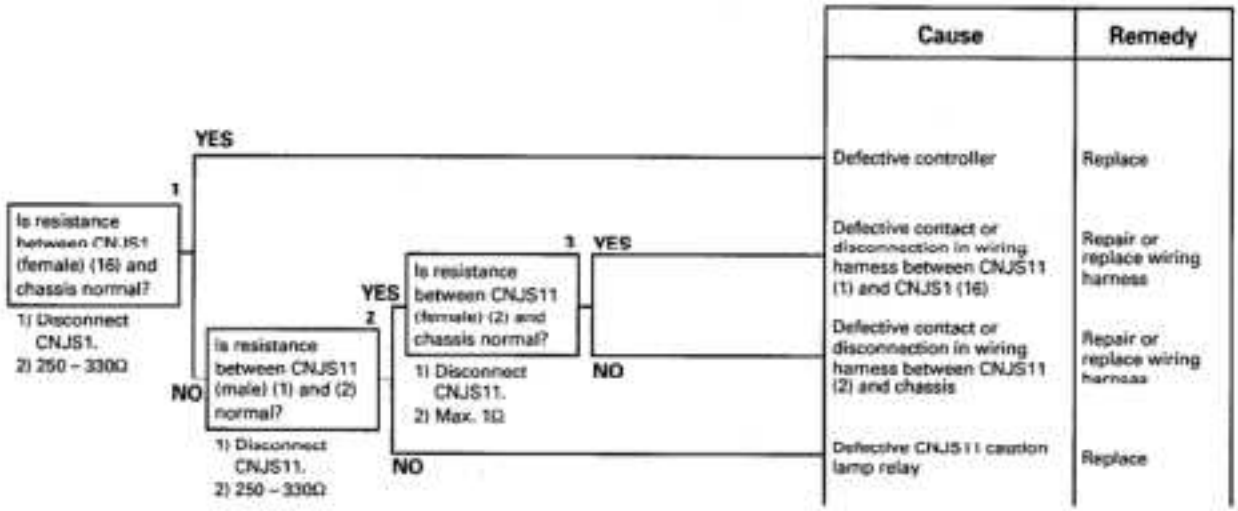

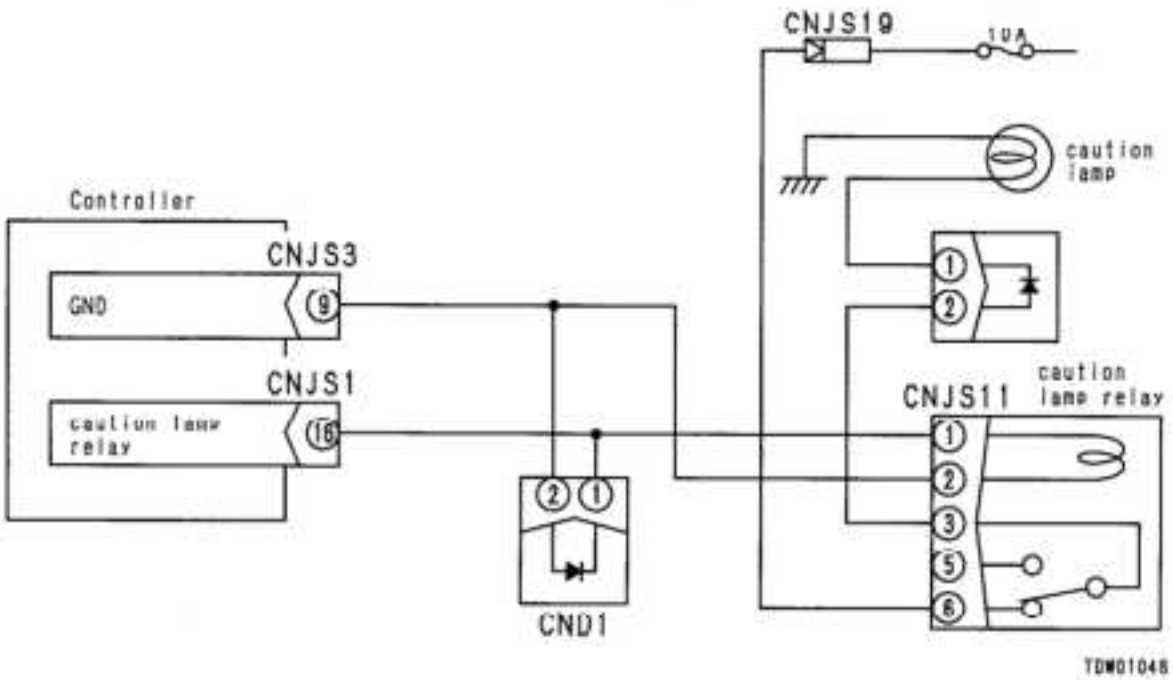

MidWestTech | Komatsu WA600-1 Wheel Loader Service Manual | Publication SEBM04260... Order the manual at mid-west-tech.com >


b) Defective continuity in FORWARD solenoid circuit

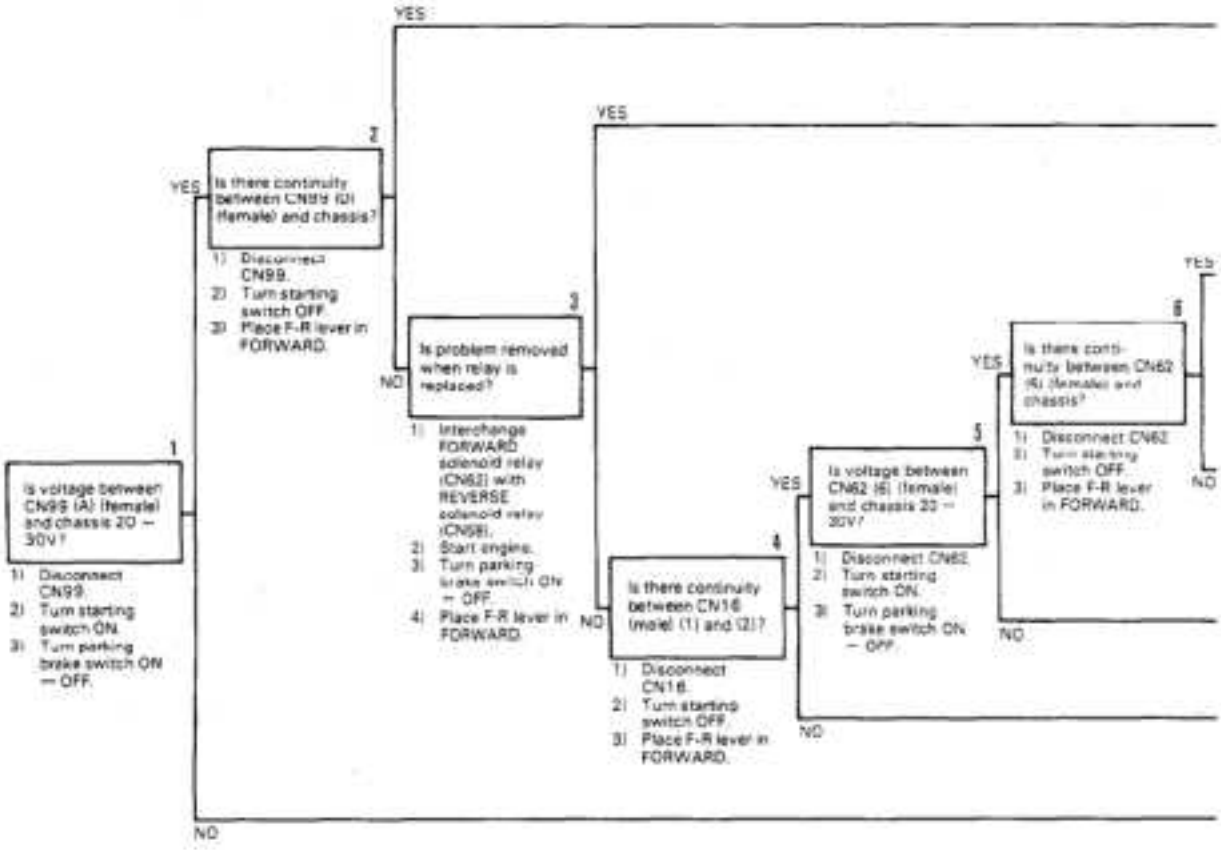

Trouble-shooting tools	T-adapter or socket adapter (for Econoseal)	

MidWestTech | Komatsu WA600-1 Wheel Loader Service Manual | Publication SEBM04260111 Order the manual at mid-west-tech.com >

Serial No. 10343–10494

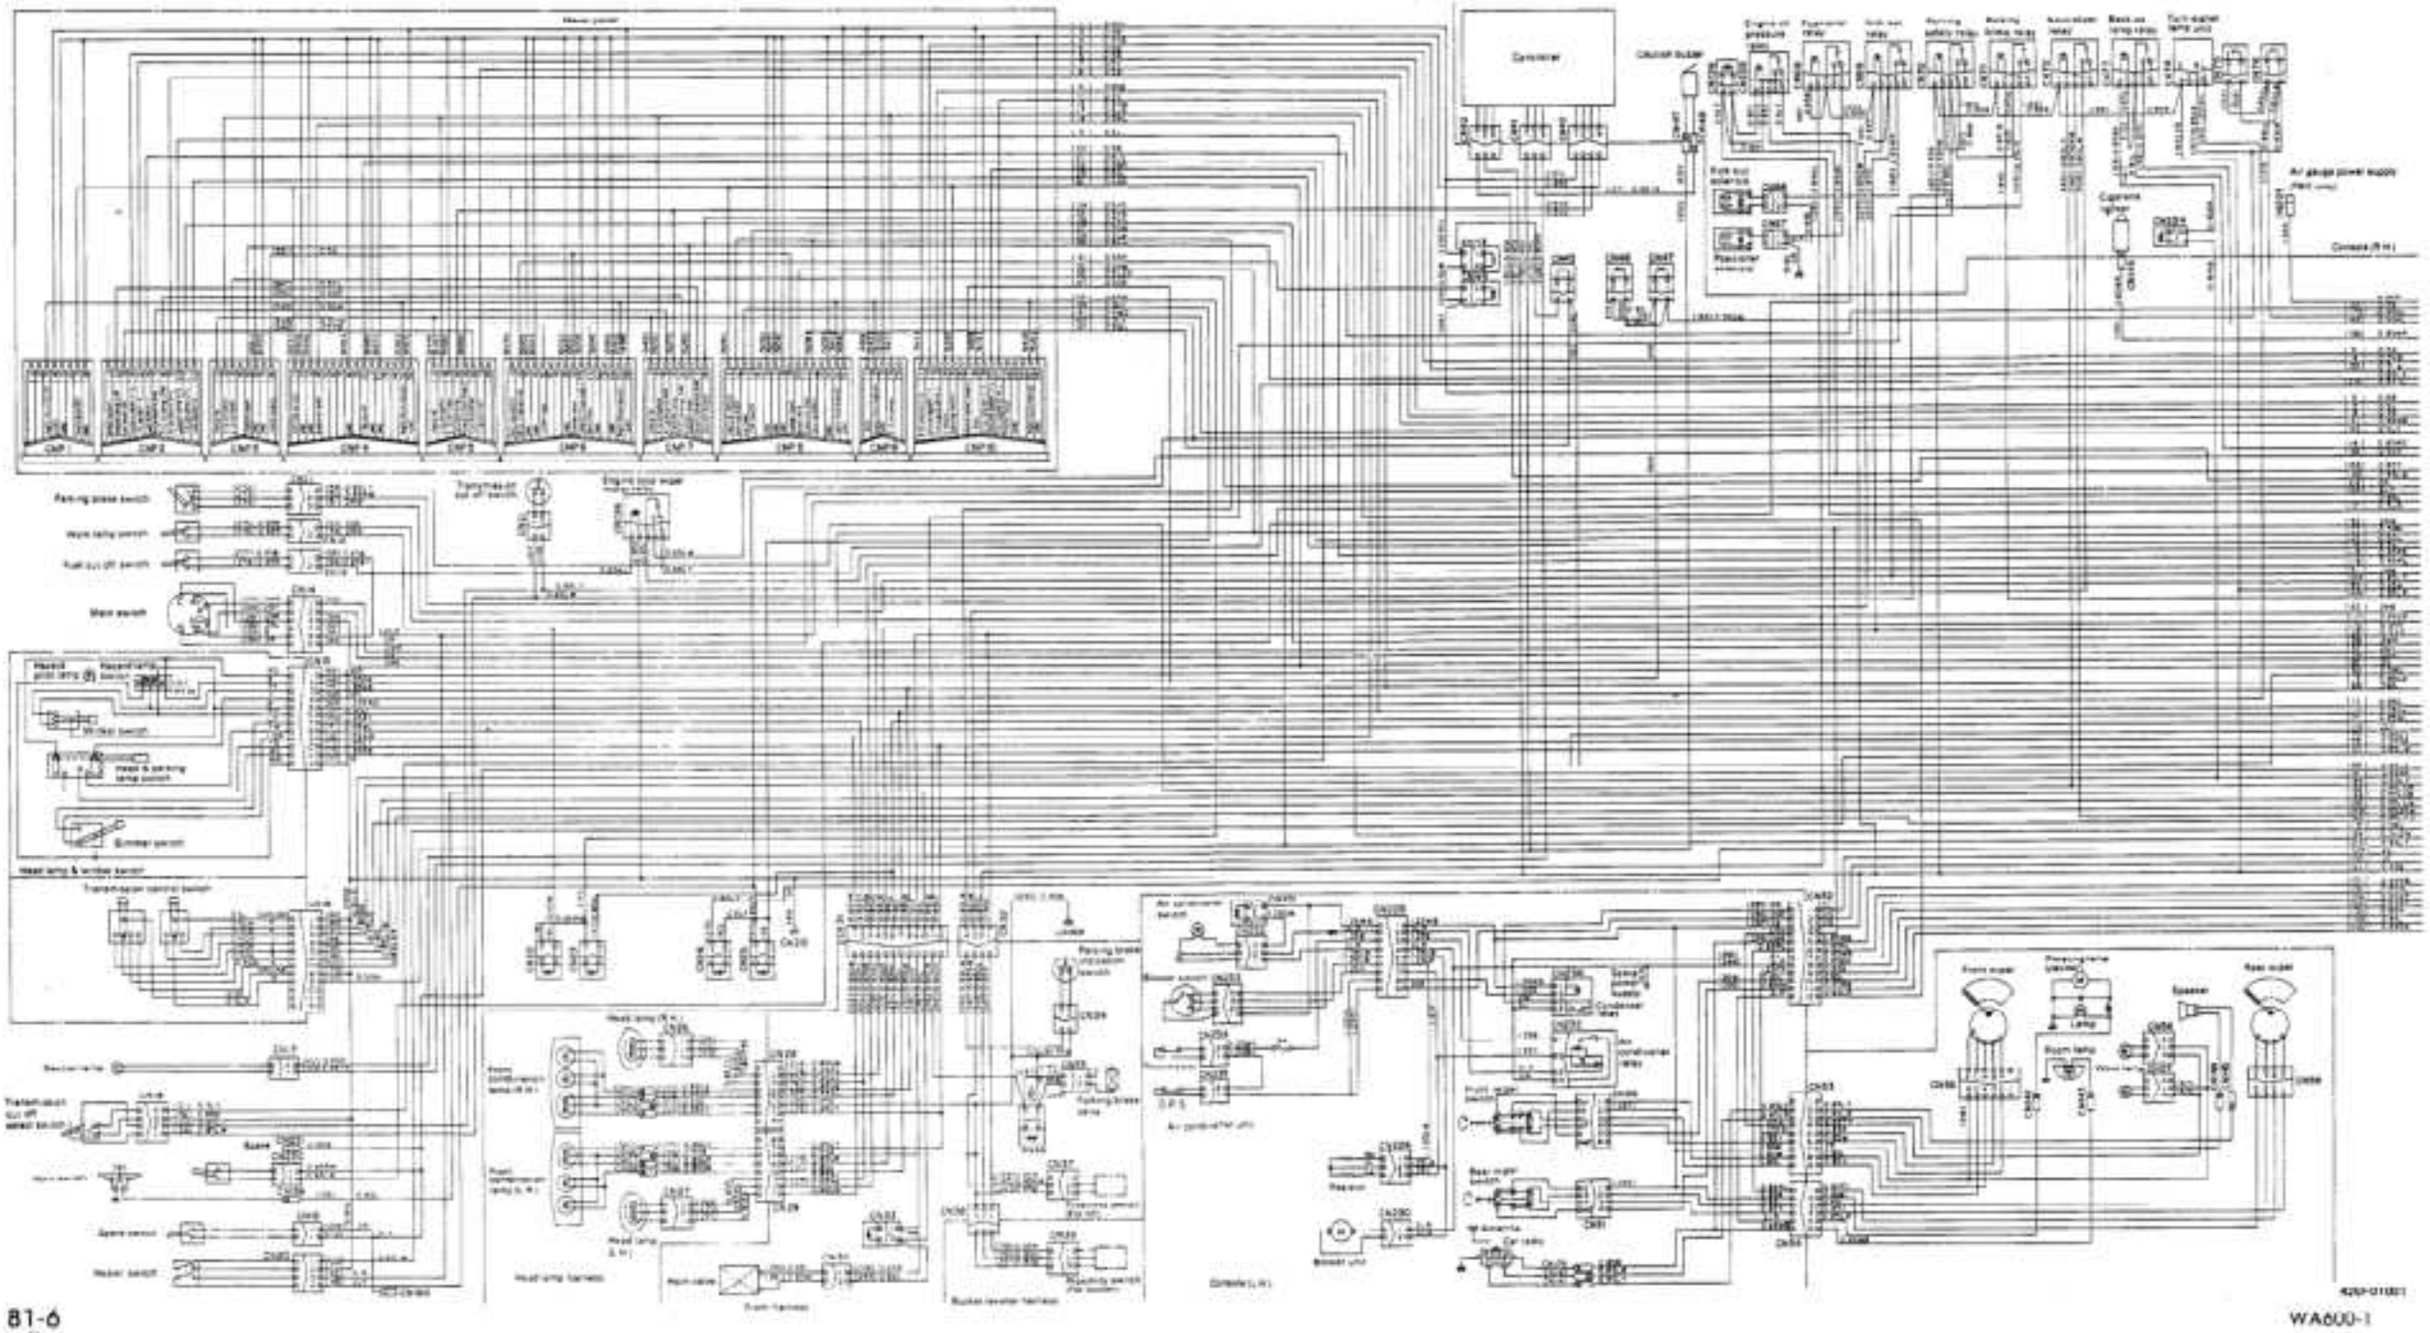

WA600-1

MidWestTech | Komatsu WA600-1 Wheel Loader Service Manual | Publication SEBM04260111

Order the manual at mid-west-tech.com >