SEN00235-18

Shop Manual

WHEEL LOADER

WA600-6

SERIAL NUMBERS 60001 and up

ecot3

KOMATSU®

MidWestTech | Komatsu WA600-6 Wheel Loader Service Manual | Publication SEN00235-18

Order the manual at mid-west-tech.com >

Table of contents

00 Index and foreword
Index SEN00398-18
Composition of shop manual ... 2
Table of contents ... 4
Foreword and general information SEN00415-04
Safety notice ... 2
How to read the shop manual ... 7
Explanation of terms for maintenance standard ... 9
Handling of electric equipment and hydraulic component ... 11
Handling of connectors newly used for engines ... 20
How to read electric wire code ... 23
Precautions when carrying out operation ... 26
Method of disassembling and connecting push-pull type coupler ... 29
Standard tightening torque table ... 32
Conversion table ... 36

01 Specification
Specification and technical data SEN00400-03
Specification and technical data ... 2
Specification dimension drawing ... 2
Specifications ... 3
Weight table ... 10
Table of fuel, coolant and lubricants ... 12

10 Structure, function and maintenance standard
Engine and cooling system SEN00402-01
Engine and cooling system ... 2
Engine mount and transmission mount ... 2
Cooling system ... 6
Cooling fan pump ... 10
Cooling fan motor ... 18
Power train, Part 1 SEN00403-02
Power train, Part 1 ... 2
Power train ... 2
Power train system diagram ... 3
Torque converter and transmission piping diagram ... 4
Torque converter ... 6
Modulation clutch ... 15
Torque converter regulator valve ... 16
Transmission ... 18
Transfer ... 38
Transmission control valve ... 40
ECMV ... 43
Main relief valve and torque converter relief valve ... 50
Lubrication relief valve ... 52
Power train, Part 2 SEN02455-01
Power train, Part 2 ... 2
Torque converter oil cooler ... 2
Torque converter oil filter ... 3
Drive shaft ... 5
Center support ... 8
Axle ... 10
Differential ... 14
Limited slip differential ... 23

MidWestTech | Komatsu WA600-6 Wheel Loader Service Manual | Publication SEN00... Order the manual at mid-west-tech.com >

Final drive ... 28
Steering system SEN00404-03
Steering system ... 4
Steering piping diagram ... 4
Steering column ... 6
Joystick steering lever linkage ... 7
Joystick EPC valve ... 8
Lock valve ... 9
Steering valve ... 10
Rotary valve ... 13
Steering control valve ... 16
Two-way restrictor valve ... 32
Stop valve ... 33
Steering pump ... 34
Steering cylinder ... 48
Emergency steering piping diagram ... 50
Diverter valve ... 51
Emergency steering pump ... 59
Brake system SEN00405-02
Brake system ... 2
Brake piping diagram ... 2
Brake ... 4
Brake valve ... 8
Accumulator charge valve ... 16
EPC relief valve ... 22
Accumulator (for brake) ... 24
Slack adjuster ... 26
Parking brake ... 30
Parking brake solenoid valve ... 32
Emergency parking brake release valve ... 34
Brake cooling pump ... 35
Undercarriage and frame SEN00406-00
Undercarriage and frame ... 2
Axle mount ... 2
Center hinge pin ... 7
Hydraulic system, Part 1 SEN00407-01
Hydraulic system, Part 1 ... 2
Hydraulic piping diagram ... 2
Work equipment control lever linkage ... 4
Hydraulic tank ... 6
Work equipment hydraulic pump ... 8
Hydraulic system, Part 2 SEN02456-01
Hydraulic system, Part 2 ... 2
Control valve ... 2
CLSS ... 16
Each function and operation of each valve ... 21
Accumulator (for PPC circuit) ... 38
Accumulator (for ECSS) ... 39
Triple pump ... 40
Work equipment SEN00408-03
Work equipment ... 2
Work equipment linkage ... 2
Bucket ... 6
Bucket positioner and boom kick-out ... 11
Work equipment lubrication ... 12
Work equipment cylinder ... 14

MidWestTech | Komatsu WA600-6 Wheel Loader Service Manual | Publication SEN00... Order the manual at mid-west-tech.com >


Cab and its attachments SEN00409-01
Cab and its attachments 2
ROPS cab 2
Air conditioner 4
Electrical system, Part 1 SEN01009-02
Electrical system, Part 1 2
Machine monitor system 2
Machine monitor 8
Electrical system, Part 2 SEN00410-02
Electrical system, Part 2 2
Work equipment control system 2
Transmission controller system 38
Electrical system, Part 3 SEN00411-03
Electrical system, Part 3 2
Electric transmission control 2
Engine starting/stopping circuit 4
Parking brake circuit 7
Sensor 11
VHMS controller related 33
Work equipment electric lever 37

20 Standard value table
Standard service value table SEN00552-05
Standard service value table for engine 2
Standard service value table for chassis 3

30 Testing and adjusting
Testing and adjusting, Part 1 SEN00553-05
Tools for testing, adjusting, and troubleshooting 3
Sketches of special tools 9
Measuring engine speed 10
Measuring exhaust gas color 12
Measuring exhaust temperature 13
Adjusting valve clearance 15
Testing compression pressures 17
Measuring blow-by pressure 20
Measuring engine oil pressure 21
Testing EGR valve and bypass valve drive oil pressure 22
Measuring intake air (boost) pressure 24
Handling fuel system equipment 25
Releasing residual pressure in fuel system 25
Testing fuel pressures 26
Testing return rate and leakage 27
Bleeding air from fuel circuit 30
Testing leakage in fuel system 32
Handling reduced cylinder mode operation 33
Handling no-injection cranking operation 33
Handling controller voltage circuit 34
Replacing and adjusting alternator and air conditioner compressor belt tension 35
Adjusting modulation clutch speed sensor and speed sensor 36
Measuring directional lever and gear shift lever (Steering wheel specification) 38
Testing and adjusting power train oil pressure 39
Flushing procedure for torque converter and transmission hydraulic circuit 53
Method of moving machine when transmission valve is broken 55
Adjusting steering stop valve 57

MidWestTech | Komatsu WA600-6 Wheel Loader Service Manual | Publication SEN00... Order the manual at mid-west-tech.com >

Machine monitor electrical circuit diagram (Steering wheel specification)

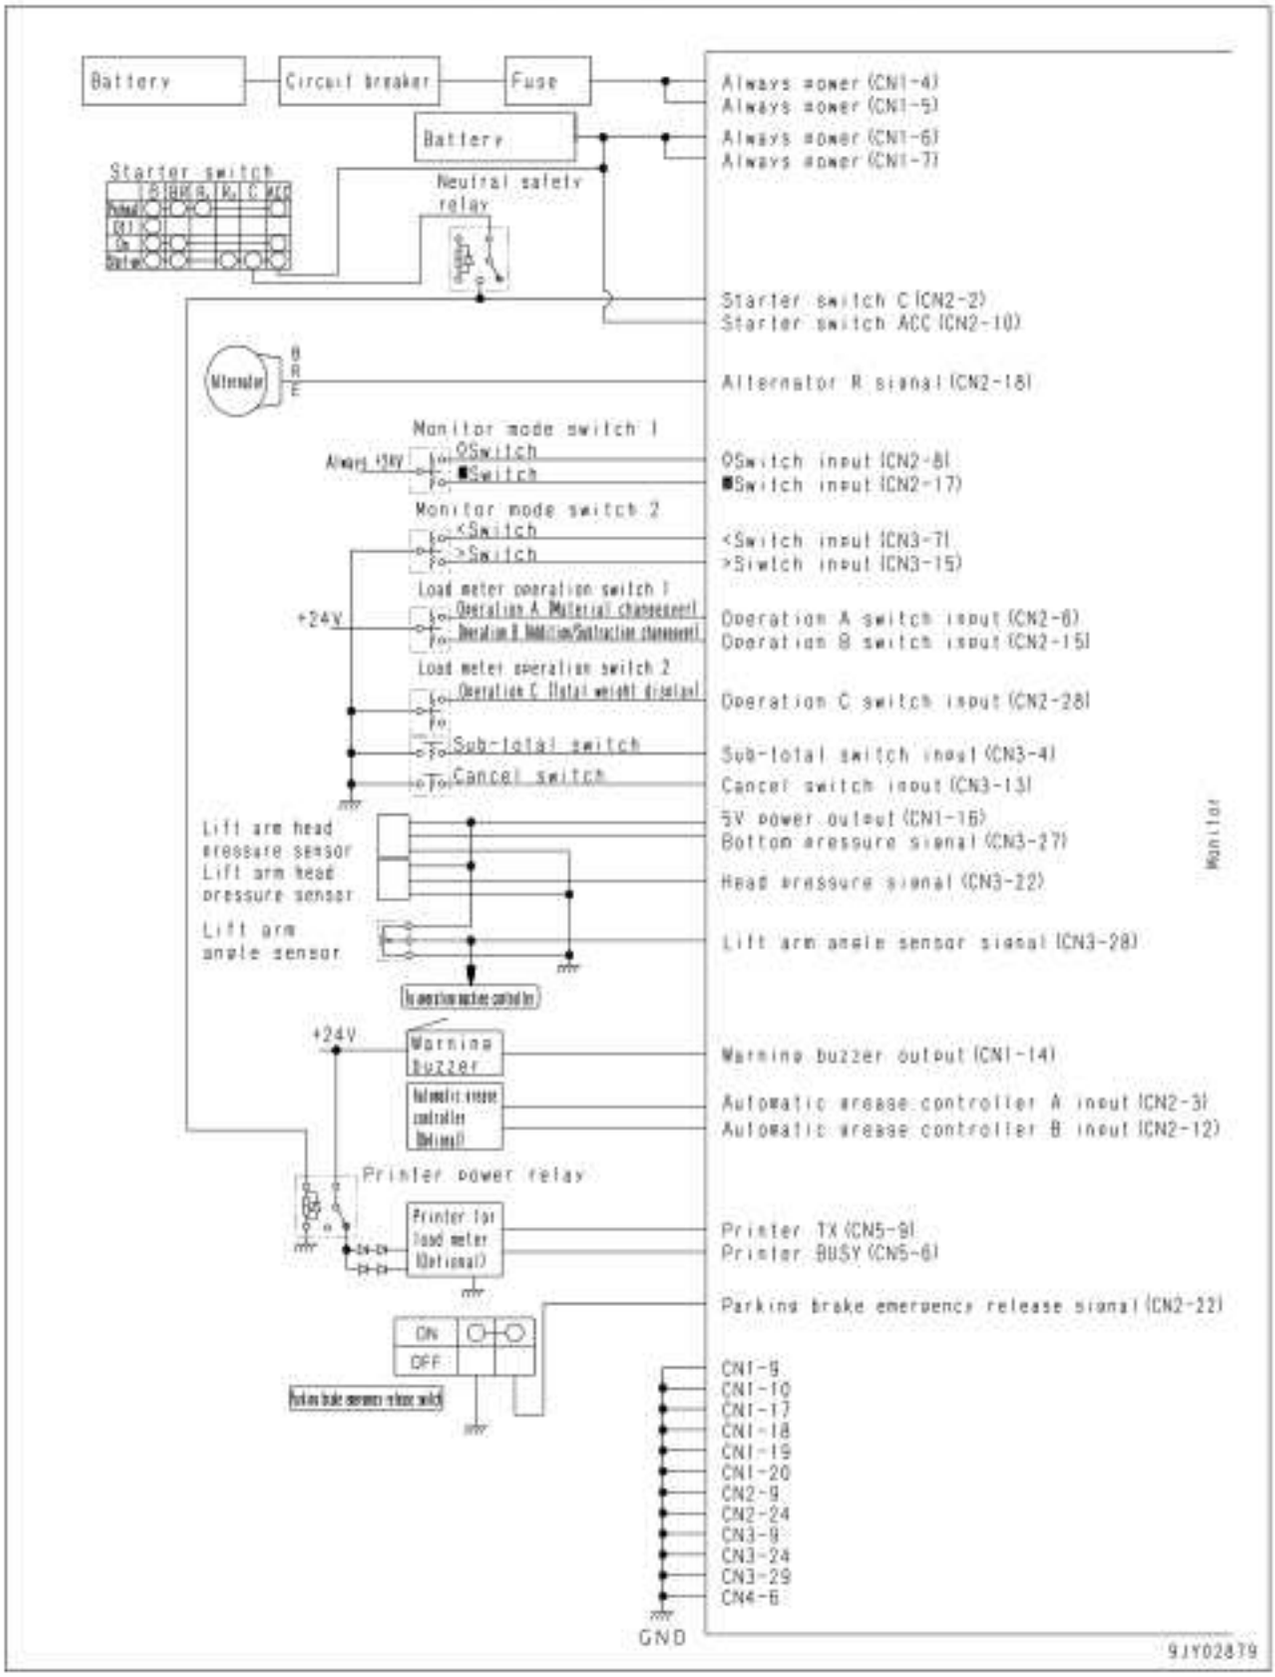

MidWestTech | Komatsu WA600-6 Wheel Loader Service Manual | Publication SEN00... Order the manual at mid-west-tech.com >


Failure code [CA2556] Intake air heater relay short circuit error

Action code	Failure code	Failure	Intake air heater relay short circuit (Engine controller system)
E01	CA2556		
Detail of failure	• Short circuit is detected in drive circuit (primary circuit) of preheat relay.		
Action of controller	• None in particular		
Problem on machine	• Intake air heater does not work (degraded starting performance at low temperature and emission of white smokes)		
Related information	• Temperature sensed by engine coolant temperature sensor can be checked by using monitoring function. (Code: 04104 (°C)) • Method of reproducing failure code: Turn starting switch to ON position (Coolant temperature: Max. -5 °C) • Troubleshooting for this failure code covers circuit starting from engine controller to primary (coil) side of preheat relay L106.		

Cause		Procedure, measuring location, criteria and remarks		
1	Defective harness connector	See the descriptions of harness and connectors in "Electrical equipment" of "Checks before troubleshooting" in "General information on troubleshooting", and check them.		
2	Defective preheat relay	1. Turn starting switch to OFF position. 2. Disconnect relay L106, and connect T-adapter to male side.		
		Between L106 (male) (1) and (2)	Resistance	200 – 400 Ω
		1. Turn starting switch to OFF position. 2. Replace relay L106 with another one. 3. Turn starting switch to ON position.		
		If this failure code disappears, original preheat relay L106 is defective.		
3	Ground fault in harness	1. Turn starting switch to OFF position. 2. Disconnect connector E18 and relay L106, and connect T-adapters to either female side.		
		Between E18 (female) (40) or L106 (female) (1) and ground	Resistance	Min. 1 MΩ
4	Short circuit in harness	1. Turn starting switch to OFF position. 2. Disconnect connector E18 and relay L106, and connect T-adapter to female side of E18. ★ Check by using multimeter in continuity mode.		
		Between E18 (female) (40) and each pin other than (40)	No continuity (No sound is heard)	
5	Defective engine controller	If no abnormality is found by above checks, engine controller is defective. (Since this is an internal failure, troubleshooting is impossible.)		

MidWestTech | Komatsu WA600-6 Wheel Loader Service Manual | Publication SEN00...
Order the manual at mid-west-tech.com >

Circuit diagram related to 4th clutch ECMV solenoid

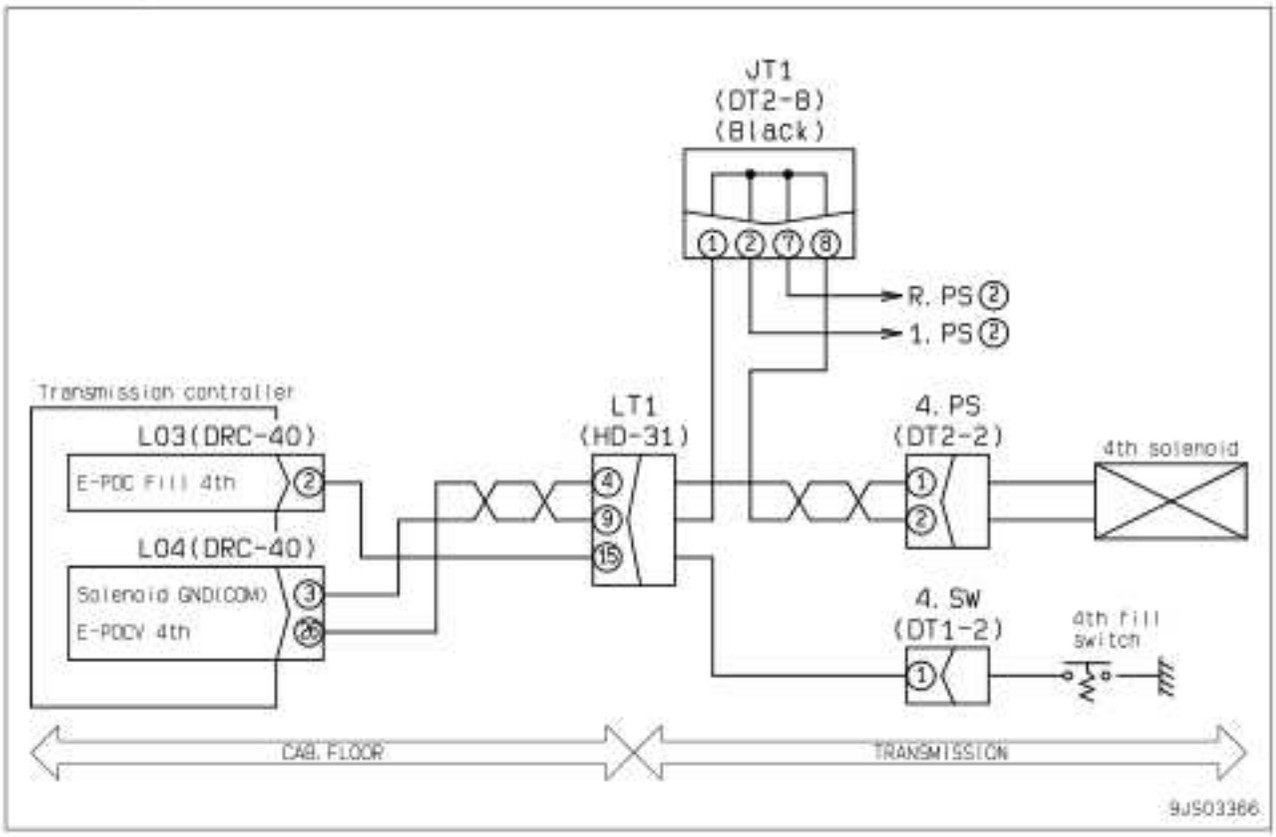

MidWestTech | Komatsu WA600-6 Wheel Loader Service Manual | Publication SEN00... Order the manual at mid-west-tech.com >


Connector arrangement diagram WA600-6


Connector No.	Model	Number of pins	Component name	Address of stereogram
1.PS	DT2	2	1st ECMV solenoid	AN-8
1.SW	DT	2	1st ECMV fill switch	AN-8
2.PS	DT2	2	2nd ECMV solenoid	AM-9
2.SW	DT	2	2nd ECMV fill switch	AN-8
3.PS	DT2	2	3rd ECMV solenoid	AM-9
3.SW	DT	2	3rd ECMV fill switch	AN-9
4.PS	DT2	2	4th ECMV solenoid	AL-9
4.SW	DT	2	4th ECMV fill switch	AK-9
A01	AMP040	20	Air conditioner control panel	C-8
A02	AMP040	16	Air conditioner control panel	C-8
A03	YAZAKI	2	Solar radiation sensor	E-1
A05	SUMITOMO	5	Blower main relay	AB-5
A08	YAZAKI	4	Magnet clutch relay	AB-8
A10	YAZAKI	18	Air conditioner unit	X-5
A11	SUMITOMO	4	Air conditioner unit	V-2
A12	SUMITOMO	2	Coolant Hi/Lo switch	W-3
B01	DT2	2	AJSS EPC solenoid	L-4
B02	DT2	2	EPC cut-off solenoid	L-4
B03	—	7	Junction connector	L-3
B04	DT2	2	Rear brake accumulator low pressure switch	L-3
B05	DT2	2	Front brake accumulator low pressure switch	N-3
B06	DT2	2	Rear emergency brake switch	L-2
B07	DT2	2	Front emergency brake switch	L-3
B08	DT2	2	Parking brake emergency release solenoid	N-4
B09	X	2	Transmission oil filter clogging sensor	L-2
B10	Terminal	1	GND (Rear frame)	L-3
BL1	DT2(B)	12	Intermediate connector (Brake component box)	W-3
BL1	KES0	2	Front windshield washer	G-9
BL2	DT2	4	Intermediate connector (Windshield washer)	X-5
BL3	KES0	2	Rear windshield washer	G-9
BL4	DT2	2	Intermediate connector (Rear windshield washer (if equipped))	I-2
BL5	KES0	2	Rear windshield washer (if equipped)	I-2
BP	DT-T	2	Not used	AR-2
BV1	DT2(B)	12	Intermediate connector (VHMS component box)	W-3
BV2	DT2(B)	6	Intermediate connector (VHMS controller)	X-3
BV3	DT2(B)	6	Intermediate connector (VHMS rear and engine harness)	N-5
C01	AMP070	20	Machine monitor	Q-1
C02	AMP070	18	Machine monitor	Q-1
C03	AMP070	12	Machine monitor	O-3
C04	AMP070	18	Machine monitor	O-4
C05	AMP070	12	Machine monitor	O-4
C06	AMP070	12	Machine monitor	Q-1
C07	AMP070	14	Machine monitor	O-5
C08	SWP	6	Parking brake switch	O-5
C09	SWP	6	Monitor mode switch 1	S-1
C10	SWP	6	Monitor mode switch 2	R-1
C11	SWP	6	Load meter mode switch 1	O-5
C12	SWP	6	Load meter mode switch 2	O-4
C13	M	6	Front wiper switch (AJSS specification)	R-1
C14	YAZAKI	7	Hazard switch (AJSS specification)	R-1
C15	KES1	4	Lighting mode switch (AJSS specification)	O-2
C16	YAZAKI	7	Dimmer switch	O-2
C18	SWP	6	RPM set cancel switch (Right brake pedal)	P-1
C19	SWP	6	Step lamp ON/OFF switch	B-7
C20	YAZAKI	9	AM/FM radio	I-2
C21	Terminal	1	GND (Radio)	C-8
C22	SWP	6	Hydraulic drive fan reverse switch	F-2
C23	SWP	6	Auto grease switch (if equipped)	E-9
C24	SWP	6	Glass heater switch	C-8
C25	KES1	2	Room lamp	E-9
C26	M	1	Left door switch (Room lamp)	F-9
C27	M	6	Front wiper motor	B-7
C28	SWP	6	Rear wiper switch (AJSS specification)	C-8
C29	M	1	Right door switch (Room lamp)	D-9
C30	KES1	2	Resistor (AJSS specification)	P-1
C33	SWP	4	Working lamp switch	D-8
C34	SWP	6	Fog lamp switch (if equipped)	D-9
C35	SWP	6	Warning lamp (Beacon) switch (if equipped)	D-9
C36	M	2	Speaker (Left)	F-9
C37	M	2	Speaker (Right)	E-9
C38	Terminal	1	Rear glass heater	E-9
C39	Terminal	1	Rear glass heater	G-9
C40	M	4	Rear wiper motor	H-1
C41	M	2	Front working lamp (Left)	B-7
C42	M	2	Front working lamp (Right)	B-7
C43	DT2	2	Warning lamp (Beacon) (if equipped)	D-9
C45	M	2	Step lamp	F-9
C46	DT2	6	Intermediate connector (Side wiper harness (if equipped))	C-8
C47	SWP	6	Side wiper switch (if equipped)	
C48	M	4	Side wiper motor (Left) (if equipped)	
C49	M	4	Side wiper motor (Right) (if equipped)	
C50	Terminal	1	GND (Cab)	B-7
C51	Terminal	1	Starting switch terminal B	O-3
C52	Terminal	1	Starting switch terminal BR	O-3
C53	Terminal	1	Starting switch terminal C	O-3
C54	Terminal	1	Starting switch terminal ACC	O-3
C56	KES1	2	Room lamp	B-8
C57	DT2	2	Intermediate connector (Warning lamp (Beacon) (if equipped))	C-8
C58	DT2	2	Outside temperature sensor (if equipped)	P-1
C90	DT2	6	AUX (Cab) harness (if equipped)	E-9
CAN1	DT2	3	Resistor	O-3
CL11	DRC12	70	Intermediate connector (Floor harness – Cab harness)	X-6
CL12	DRC12	24	Intermediate connector (Floor harness – Cab harness)	X-6
CL13	DRC12	24	Intermediate connector (Floor harness – Cab harness)	X-6
CL14	DT2	2	Intermediate connector (Backup lamp) (Steering wheel specification)	X-7
CL16	DT2(Gr)	12	Intermediate connector (Steering column switch) (Steering wheel specification)	O-2
CL17	DT2(B)	12	Intermediate connector (Steering column switch) (Steering wheel specification)	O-2
CL18	DT2	6	Intermediate connector (Steering column switch) (Steering wheel specification)	O-3
COMBI	M	3	Front combination lamp (Right)	A-6
COMBI	M	3	Front combination lamp (Left)	E-1
D01	Terminal	1	Battery relay (Right)	L-7
D02	Terminal	1	Battery relay (Right)	L-8
D03	Terminal	1	Battery relay (Left)	M-7


Connector No.	Model	Number of pins	Component name	Address of stereogram
D04	Terminal	1	Battery relay (Left)	L-9
D05	DT2	2	Battery electrolyte level sensor (for VHMS, if equipped)	L-7
D06	Terminal	1	Heater relay	M-9
D07	Terminal	1	Heater relay	M-9
D08	Terminal	1	Heater relay	M-9
D09	DT2	3	Step lamp switch	L-8
D10	Terminal	1	GND	J-9
D11	Terminal	1	Battery relay (Right)	L-8
D12	Terminal	1	Battery relay (Right)	L-7
D13	Terminal	1	Battery relay (Left)	L-9
D14	Terminal	1	Battery relay (Left)	N-7
D15	Terminal	1	Battery	M-7
D16	Terminal	1	Battery	K-4
D17	Terminal	1	Battery	H-9
D18	Terminal	1	Battery	G-9
D19	Terminal	1	Disconnection switch (if equipped)	H-9
D20	Terminal	1	Disconnection switch (if equipped)	H-9
DIODE1	DT2	2	Diode	AI-5
DIODE2	DT2	2	Diode	AI-5
DIODE3	DT2	2	Diode	AK-6
DLF	BENDIX	5	Download connector	P-7
DR1	DT2	6	Intermediate connector (Step lamp switch)	K-6
E01	DT2	2	Starting motor	AE-9
E02	DT2	2	Starting motor	AD-8
E03	Terminal	1	Alternator terminal R	AD-2
E04	Terminal	1	Alternator terminal B	AF-1
E05	Terminal	1	Alternator terminal E	AD-3
E13	Terminal	1	Heater	AD-3
E14	DT2	2	Engine oil level sensor	AF-1
E15	DT2	2	Dust indicator	AG-1
E16	DT2	2	Air conditioner compressor	AD-1
E17	DT2	2	Diode	AH-4
E18	DRC26	50	Engine controller	AH-3
E19	DTP	4	Engine controller	AH-2
E20	Terminal	1	Starting motor terminal B	AD-5
E21	DT2	3	Resistor	AH-2
E22	Terminal	1	GND (Engine unit)	AG-2
EGR	DT-T	2	EGR valve solenoid	AR-4
EP1	DT2	2	Intermediate connector (for engine harness)	AV-1
EP2	DT2	2	Priminnig pump	AU-1
EP3	DT2	6	Timer	AT-1
EP4	Terminal	1	GND	AT-1
ENG	DRC	60	Engine controller	AV-2
ER1	DT2(B)	12	Intermediate connector (Engine controller)	AH-8
ER2	DT2(Gr)	12	Intermediate connector (Engine controller)	AH-7
ER3	L	2	Intermediate connector (Heater relay)	AF-5
ER6	Terminal	1	GND (Alternator)	AE-5
F.PS	DT2	2	F ECMV solenoid	AL-6
F.SW	DT1	2	F ECMV fill switch	AM-6
F01	M	6	Intermediate connector (Combination lamp (Right), headlamp)	A-4
F02	M	6	Intermediate connector (Combination lamp (Left), headlamp)	A-2
F03	AMP 090	2	Horn Lo	B-6
F04	AMP 090	2	Horn Hi	B-6
F07	DT2	2	Lift arm raise EPC solenoid	A-1
F08	DT2	2	Lift arm lower EPC solenoid	C-1
F09	DT2	2	Bucket tilt EPC solenoid	C-1
F10	DT2	2	Bucket dump EPC solenoid	A-1
F11	DT2	3	Bucket level positioner proximity switch	A-3
F12	DT2	3	Bucket tilt detecting proximity switch	A-3
F13	DT2	3	Lift arm angle sensor	E-1
F14	DT2	3	Lift arm bottom pressure sensor (Load meter specification)	C-1
F15	DT2	3	Lift arm rod pressure sensor (Load meter specification)	D-1
F16	DT2	3	Loader pump pressure sensor	B-1
F20	Terminal	1	GND (Front frame)	A-4
F21	DT2	4	Intermediate connector	A-4
F22	DT2	2	3rd valve (attachment) EXT EPC solenoid (if equipped)	
F23	DT2	2	3rd valve (attachment) RET EPC solenoid (if equipped)	
F24	DT2	2	ECSS solenoid (if equipped)	A-1
F25	DT2	2	Intermediate connector (Front working lamp (if equipped))	B-1
F26	DT2	2	Intermediate connector (Fog lamp (if equipped))	A-3
FF01	M	2	Fog lamp (Right) (if equipped)	
FF02	M	2	Fog lamp (Left) (if equipped)	
FL6	DT2	2	Side working lamp (if equipped)	X-3
FL7	DT2	2	Side working lamp (if equipped)	W-3
FL11	DRC12	40	Intermediate connector (Floor frame – Front frame)	V-2
FW01	M	2	Front working lamp (Right) (if equipped)	
FW02	M	2	Front working lamp (Left) (if equipped)	
G	DENSO	3	Backup speed sensor	AV-4
G01	M	6	Rear combination lamp (Right)	I-9
G02	M	6	Rear combination lamp (Left)	K-7
G03	M	2	Rear working lamp (Right)	I-9
G04	M	2	Rear working lamp (Left)	K-8
G05	DT2	2	Coolant level sensor	K-8
G06	DT2	2	Backup buzzer	K-6
G07	DT2	2	Fan reverse solenoid	J-9
GR1	DT2(B)	12	Intermediate connector (Radiator guard harness)	K-6
HD.T	DT2	2	Hydraulic oil temperature sensor	AK-7
HD1	YAZAKI	2	Diode (F washer)	Y-6
HD2	YAZAKI	2	Diode (R washer)	Y-5
HD3	YAZAKI	2	Diode (S washer)	Z-5
HD4	YAZAKI	3	Diode (M/C cut-off lift arm BBC cut-off solenoid)	Z-4
HEAD	M	3	Headlamp (Right)	B-6
HEAD	M	3	Headlamp (Left)	A-3
INJ	DT-T	12	Fuel injector	AV-4
J1939	DT-T	3	—	AS-5
JB1	—	6	Junction connector	H-2
JB1	—	14	Junction connector	AS-5
JB2	—	19	Junction connector	AT-5
JBB1	—	6	Junction connector	L-9
JBB2	—	6	Junction connector	L-8
JE1	—	6	Junction connector	AD-7
JE1	—	6	Junction connector	J-9
JE2	—	6	Junction connector	AD-7
JE2	—	6	Junction connector	K-8
JE3	—	6	Junction connector	AD-6
JE3	—	6	Junction connector	K-7
JE4	—	6	Junction connector	K-9

Connector No.	Model	Number of pins	Component name	Address of stereogram
JE5	—	6	Junction connector	K-7
JF1	—	6	Junction connector	A-2
JF2	—	6	Junction connector	D-1
JF3	—	6	Junction connector	A-5
JF4	—	6	Junction connector	A-3
JF5	—	6	Junction connector	A-5
JF6	—	6	Junction connector	A-5
JF7	—	6	Junction connector	A-4
JF8	—	6	Junction connector	A-3
JF9	—	6	Junction connector	A-5
JF11	—	6	Junction connector (if equipped)	
JF12	—	6	Junction connector (if equipped)	
JF13	—	6	Junction connector	
JF14	—	6	Junction connector (if equipped)	
JR1	—	6	Junction connector (if equipped)	AF-6
JR2	—	6	Junction connector	J-3
JR3	—	6	Junction connector	AF-5
JR4	—	6	Junction connector	K-5
JT1	DT2(B)	8	Junction connector	AI-6
JT2	DT2	6	Junction connector	AI-5
JT3	DT2	6	Junction connector	AI-5
JT4	DT2	6	Junction connector	AK-6
JV1	—	6	Junction connector	N-4
JV2	—	6	Junction connector	L-4
JV3	—	6	Junction connector	N-4
JV4	—	6	Junction connector	L-4
KOM	DT2(Gr)	12	Data download	U-9
L01	Terminal	1	GND (Floor frame)	W-3
L02	DRC26	24	Transmission controller	U-9
L02	SWP	6	Lighting switch, Dimmer switch (Steering wheel specification)	
L03	DRC26	40	Transmission controller	U-9
L03	SWP	6	Turn and Hazard switch (Steering wheel specification)	
L04	DRC26	40	Transmission controller	V-8
L04	SWP	14	Shift switch (Steering wheel specification)	
L05	DRC26	24	Work equipment controller	V-8
L05	DT2	2	Steering wheel horn switch (Steering wheel specification)	
L06	DRC26	40	Work equipment controller	V-8
L07	DRC26	40	Work equipment controller	V-8
L08	DT2(Gr)	12	Intermediate connector (VHMS harness)	W-8
L10	M	6	Intermediate connector (Printer harness)	U-9
L11	AMP	2	Air suspension seat	V-2
L12	DT2	3	Frame angle potentiometer (AJSS specification)	U-2
L13	DT2	2	Steering lock switch (AJSS specification)	V-2
L16	DT2	2	Stop lamp switch	S-1
L17	DT2(B)	12	Intermediate connector (Steering wheel specification)	
L17	M	4	DC24V/DC12V converter	AA-5
L17	DT2(B)	6	Accelerator pedal	P-1
L18	DT2	6	Intermediate connector (Steering wheel specification)	
L18	YAZAKI	2	DC12V outlet	P-7
L19	KES1	4	Flasher unit	AB-7
L20	M	2	Alarm buzzer	AB-6
L21	S	10	Intermediate connector (Wiper) (Steering wheel specification)	
L21	KES1	6	Interval wiper timer	AB-6
L22	M	2	Resistor	AA-4
L23	SUMITOMO	16	Emergency parking release switch Modulation clutch direct joint switch	U-9
L25	M	1	Option connector	AB-7
L26	M	1	Option connector	AB-6
L45	D-sub	25	Printer (if equipped)	
L46	HOSHIDEN	4	Printer (if equipped)	
L101	SHINAGAWA	6	Relay No.1 Backup lamp	AA-3
L102	SHINAGAWA	6	Relay No.2 Stop lamp	AA-3
L103	SHINAGAWA	5	Relay No.3 Neutral safety	AA-3
L104	SHINAGAWA	5	Relay No.4 AJSS neutral safety	AA-2
L105	SHINAGAWA	5	Relay No.5 Parking brake safety	AA-2
L106	SHINAGAWA	5	Relay No.6 Preheating	Z-3
L107	SHINAGAWA	5	Relay No.7 Dust indicator	Z-3
L108	SHINAGAWA	6	Relay No.8 S working lamp	AA-3
L109	SHINAGAWA	6	Relay No.9 F working lamp	AA-2
L110	SHINAGAWA	6	Relay No.10 R working lamp	AA-2
L111	SHINAGAWA	5	Relay No.11 R glass heater	Z-3
L112	SHINAGAWA	5	Relay No.12 Start neutral hold	Z-3
L113	SHINAGAWA	5	Relay No.13 Hazard	Z-2
L114	SHINAGAWA	6	Relay No. 14 Turn signal (AJSS specification)	AA-1
L115	SHINAGAWA	5	Relay No.15 Small lamp	AA-2
L116	SHINAGAWA	5	Relay No.16 Horn	Z-2
L117	SHINAGAWA	5	Relay No.17 Fan motor	Z-2
L118	SHINAGAWA	5	Relay No.18 Dimmer	Z-2
L119	SHINAGAWA	6	Relay No.19 Fog lamp	Z-2
L120	SHINAGAWA	5	Relay No.20 S wiper	Z-1
L121	SHINAGAWA	5	Relay No. 21 Right turn (AJSS specification)	T-9
L122	SHINAGAWA	5	Relay No. 22 Left turn (AJSS specification)	T-1
L123	SHINAGAWA	6	Relay No.23 AUX (Cab) (if equipped)	T-1
L141	SHINAGAWA	5	Printer power source relay (if equipped)	
L142	YAZAKI	2	Diode (if equipped)	
L143	YAZAKI	2	Diode (if equipped)	
L144	YAZAKI	2	Diode (if equipped)	
L145	YAZAKI	2	Diode (if equipped)	
LC.PS	DT2	2	Torque converter lockup solenoid	AN-7
LR1	DTHD4	1	Intermediate connector	X-5
LR2	L	2	Intermediate connector	X-3
LR3	L	2	Intermediate connector	X-4
LR4	L	2	Intermediate connector	X-5
LR5	DT2	6	Intermediate connector	X-5
LR7	DT2(G)	12	Intermediate connector	X-4
LR11	DRC18	40	Intermediate connector	X-4
LS1	S(L)	12	Intermediate connector	Q-8
LS2	S(W)	16	Intermediate connector	Q-7
LS3	S(L)	16	Intermediate connector	Q-7
LS6	DTM	12	Intermediate connector (AJSS specification)	V-2
LS7	DTM	2	Intermediate connector (AJSS specification)	U-2
LT1	HD30	31	Intermediate connector	AI-6
MC.PS	DT2	2	Modulation clutch solenoid	AN-6
MOD OUT	DT2	2	Modulation clutch output speed sensor	AK-7
NE	FRAMATONE	3	Ne speed sensor	AV-3
P1	DT2	4	Lift arm and Bucket EPC lever	R-9
P2	DT2	4	Lift arm and Bucket EPC lever	S-9


Connector No.	Model	Number of pins	Component name	Address of stereogram
PAMB	FRAMATONE	3	Atmospheric pressure sensor	AV-3
PB.PS	DT2	2	Parking brake solenoid	AM-6
PB.SW	DT2	2	Parking brake indicator switch	AL-1
PCV1	SUMITOMO	2	Supply pump	AV-4
PCV2	SUMITOMO	2	Supply pump	AV-3
PFUEL	AMP	3	Common rail pressure sensor	AT-5
PIM	SUMITOMO	3	Charge pressure (boost pressure) sensor	AU-6
POIL	FRAMATONE	3	Engine oil pressure sensor	AU-1
R.PS	DT2	2	R (Reverse) solenoid	AK-8
R.SW	DT	2	R (Reverse) fill switch	AK-8
R01	Terminal	1	Circuit breaker CBF1	N-9
R02	Terminal	1	Circuit breaker CBF1	N-9
R03	Terminal	1	Circuit breaker CBF2	N-8
R04	Terminal	1	Circuit breaker CBF2	N-8
R05	Terminal	1	Circuit breaker CBF3	N-8
R06	Terminal	1	Circuit breaker CBF3	N-8
R07	Terminal	1	Slow-blow fuse SBF1	M-9
R08	Terminal	1	Slow-blow fuse SBF1	M-9
R09	Terminal	1	GND (Rear frame)	J-3
R10	Terminal	1	GND (Rear frame)	K-5
R12	DT2	2	Fan pump EPC solenoid	AN-4
R13	DT2	2	Torque converter oil temperature sensor	K-6
R14	Terminal	1	Circuit breaker CBF4	N-9
R15	Terminal	1	Circuit breaker CBF4	N-9
R16	DT2	2	Fuel level sensor	I-2
R17	DT2	12	Rear brake oil temperature sensor	H-2
R21	YAZAKI	3	Diode	AB-8
R22	YAZAKI	3	Diode	AA-8
R23	YAZAKI	2	Diode	AA-8
R24	YAZAKI	2	Diode	Y-7
R25	YAZAKI	2	Diode	Y-7
R26	YAZAKI	2	Diode	Y-6
R28	DT2	2	Diode	K-5
R38	DT2	6	Auto grease controller (if equipped)	
RES	DT-T	2	Resistor	AU-1
REV OUT1	DT2	2	Speed sensor 1	AI-3
REV OUT2	DT2	2	Speed sensor 2	AI-3
RT1	DT2	12	Intermediate connector	G-1
S01	DT2	2	Lift arm neutral lock switch	Q-8
S02	DT2	4	Lift arm and Bucket EPC lever	S-9
S03	DT2	4	Lift arm and Bucket EPC lever	R-8
S04	DT2	2	Lift arm and Bucket EPC lever	S-9
S05	DT2	2	Lift arm and Bucket EPC lever	R-8
S06	DT2	2	Lift arm and Bucket EPC lever	R-8
S07	DT2	4	Lift arm lever kickdown and hold switch	R-8
S08	DT2	4	Bucket lever switch (Load meter specification)	S-9
S09	X	3	Variable traction control	Y-7
S1	DT2	2	Lift arm and Bucket EPC lever	R-8
S2	DT2	2	Lift arm and Bucket EPC lever	R-8
S3	DT2	2	Lift arm and Bucket EPC lever	S-9
S10	DT2	4	Auto shift switch	Y-8
S11	SWP	6	Engine power mode switch	Z-9
S12	SWP	6	RPM set ON/OFF switch	Z-8
S13	SWP	6	RPM set ACC/DEC switch	Z-9
S14	SWP	6	Lift arm remote positioner set switch	Y-8
S15	SWP	6	Intermediate connector	S-9
S16	DT2	4	3-spool valve (attachment) EPC lever (if equipped)	
S17	SWP	6	Bucket remote positioner set switch	Z-8
S18	SWP	6	Torque converter lockup switch	Z-8
S19	YAZAKI	2	Cigarette lighter	AA-8
S20	SWP	6	ECSS switch	Y-8
S21	SWP	6	AUTO DIG switch	AA-9
S22	SWP	6	Turn signal switch (AJSS specification)	R-8
S30	DT2	3	AJSS lever angle sensor (AJSS specification)	X-6
S31	DTM	12	Joystick lever switch (AJSS specification)	X-7
SBP	DT-T	4	Not used	AR-2
SEGR	DT-T	4	EGR valve lift sensor	AS-4
T01	DT2	2	Pump EPC solenoid	H-1
T02	DT2	2	Modulation clutch cut-off solenoid	F-2
T03	DT2	3	Modulation clutch pressure switch	F-1
T04	DT2	2	Emergency steering drive switch	F-2
TFUEL	PACKARD	2	Fuel temperature sensor	AT-1
TGN	Terminal	1	GND (Transmission body)	AM-9
TIM	PACKARD	2	Charge temperature (boost temperature) sensor	AU-6
TM.T	DT2	2	Transmission oil temperature sensor	AI-3
TOIL	PACKARD	2	Engine oil temperature sensor	AV-2
TWTR	PACKARD	2	Coolant temperature sensor	AT-5
V01	AMP070	20	VHMS controller	Q-7
V02	AMP070	18	VHMS controller	O-6
V04	AMP070	18	VHMS controller	P-7
V06	AMP070	14	VHMS controller	O-6
V07	AMP070	10	VHMS controller	O-6
V08	AMP070	14	ORBCOM unit	W-8
V09	AMP070	10	ORBCOM unit	X-7
V10	DT2	4	Intermediate connector	T-1
V11	DT2	3	Exhaust gas temperature sensor amplifier	M-5
V12	DT2	3	Exhaust gas temperature sensor amplifier	M-5
V13	DT2	3	Rear brake pressure sensor	M-1
V14	DT2	3	Front brake pressure sensor	L-2
V15	Plug connector	1	VHMS start indicator (12V)	M-1
V16	Plug connector	1	VHMS start indicator (12V)	N-3
V17	Terminal	1	VHMS starting switch	N-2
V18	Terminal	1	VHMS starting switch	N-2
V19	Terminal	1	VHMS starting switch	N-2
V20	Terminal	1	VHMS starting switch	N-2
V21	DT2(B)	6	Intermediate connector	I-9
V22	G	1	VHMS operation indicator (24V)	I-9
V23	DT2	3	Steering pressure sensor	L-5
V25	DT2	3	Blow-by pressure sensor	I-3
V27	DT2	2	Exhaust gas temperature sensor amplifier	G-2
V28	DT2	2	Exhaust gas temperature sensor amplifier	F-2
V29	DT2	2	Exhaust gas temperature sensor (Right)	J-3
V30	DT2	2	Exhaust gas temperature sensor (Left)	J-3
V33	Plug connector	1	ORBCOM unit	W-7
V34	Plug connector	1	Antenna cable	B-6
V35	Plug connector	1	Antenna	B-7
VDL	BENDIX	5	Download connector	N-3

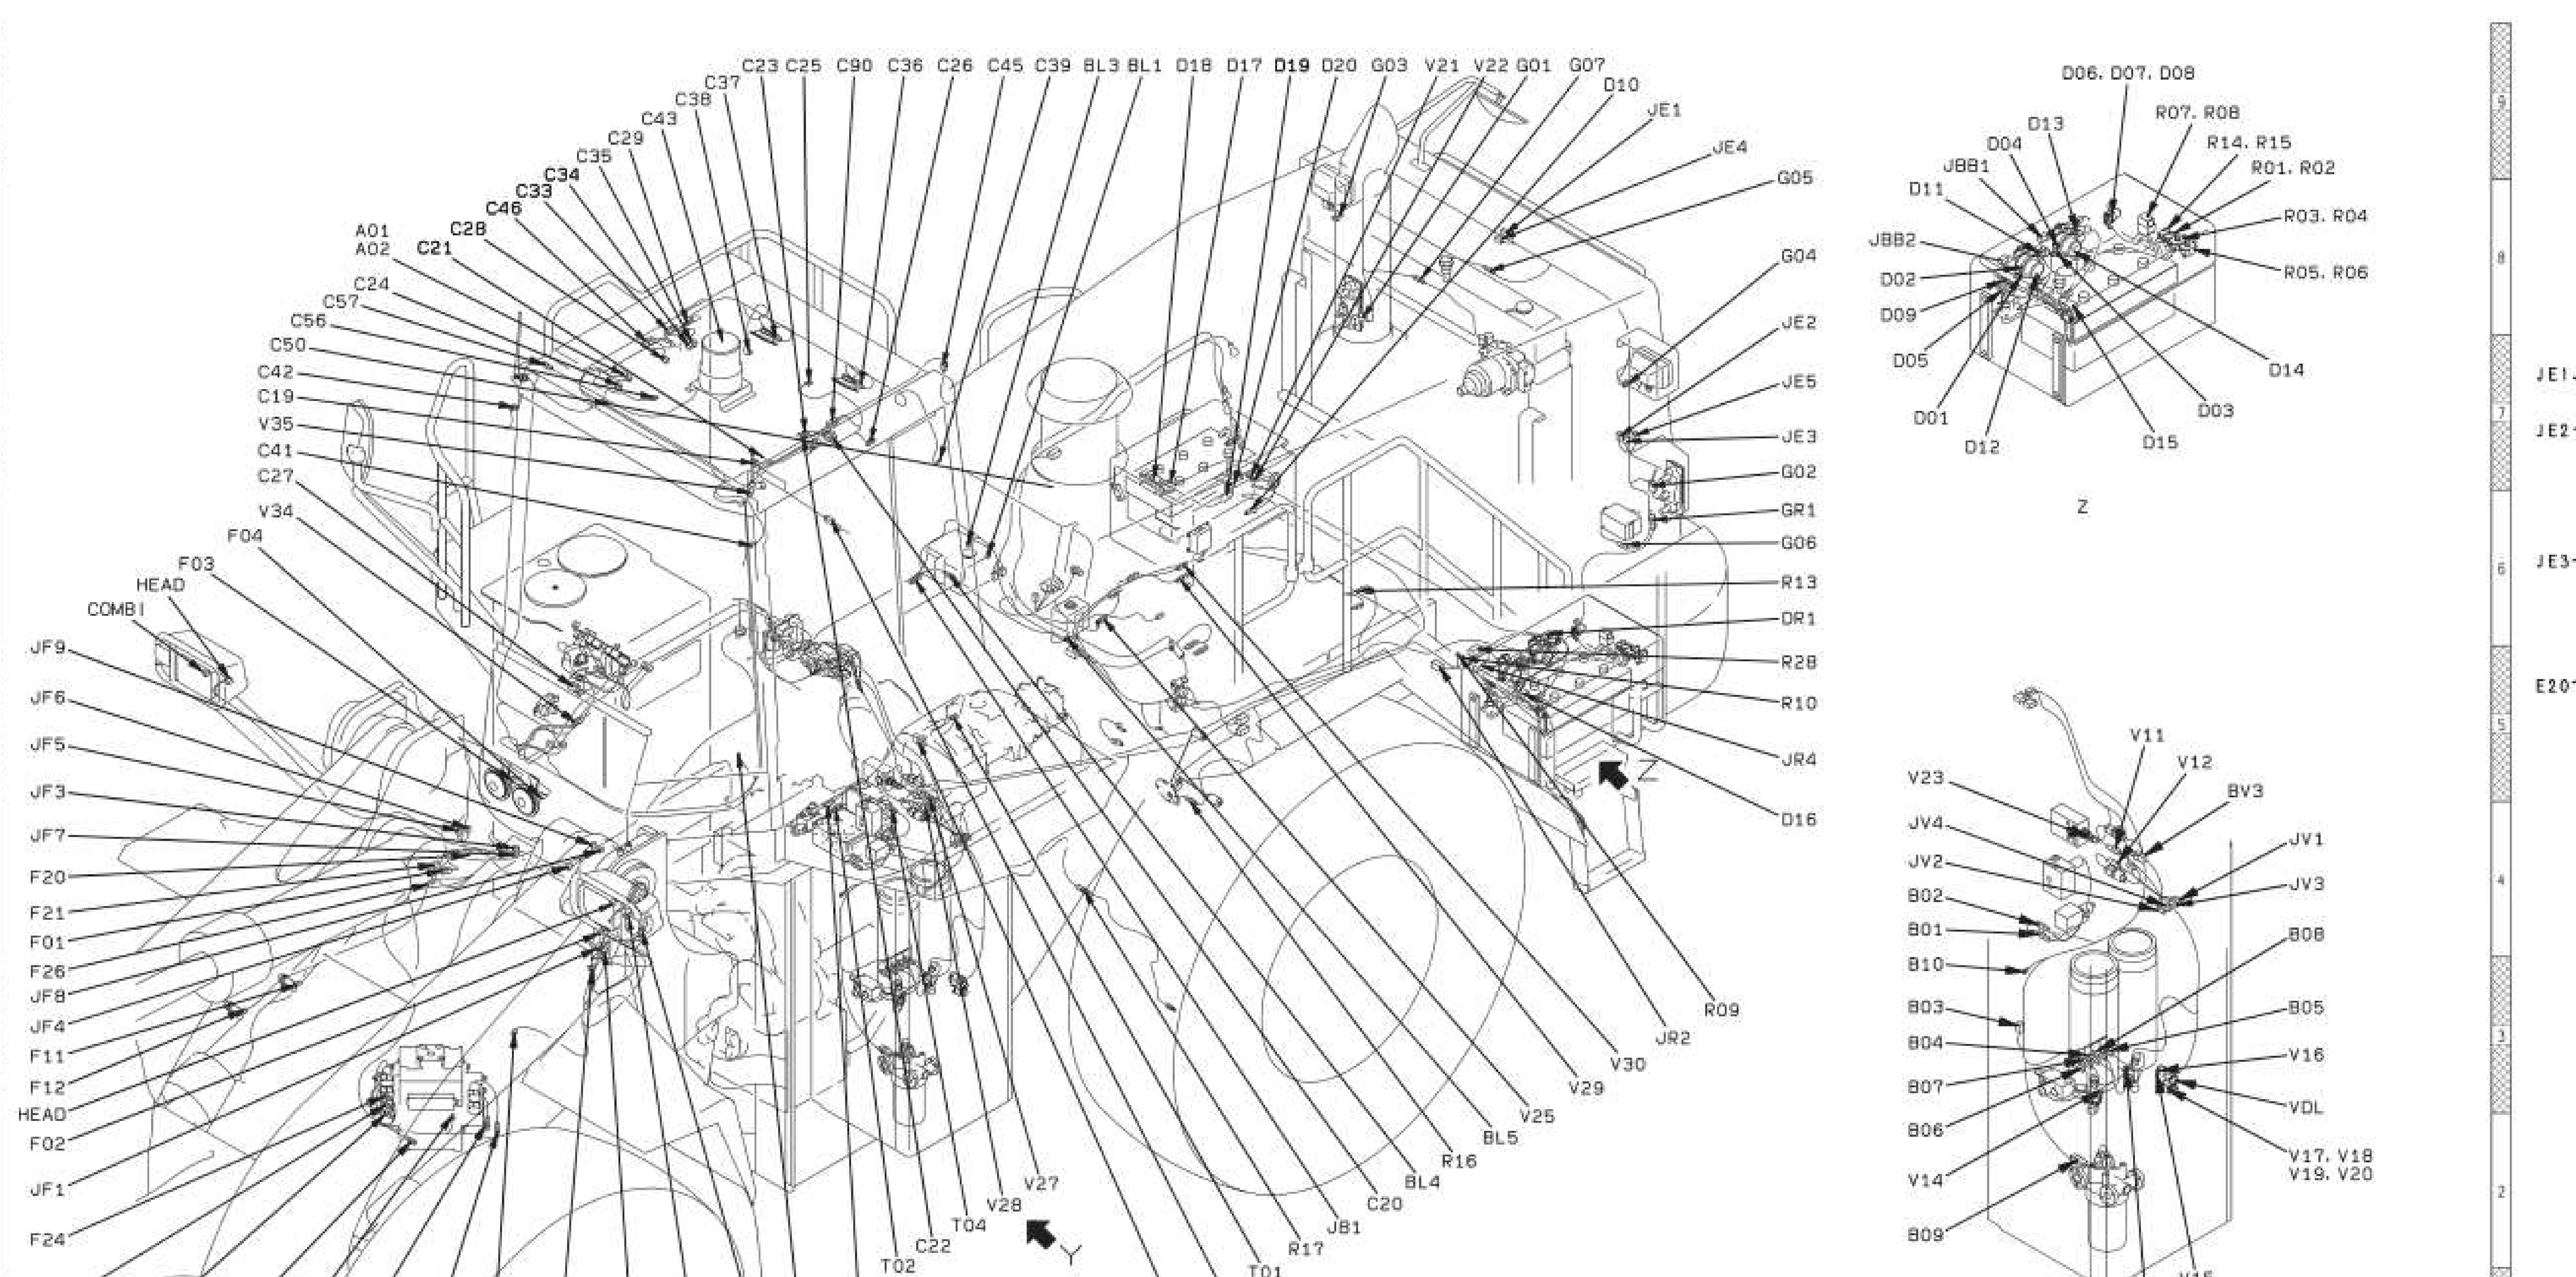

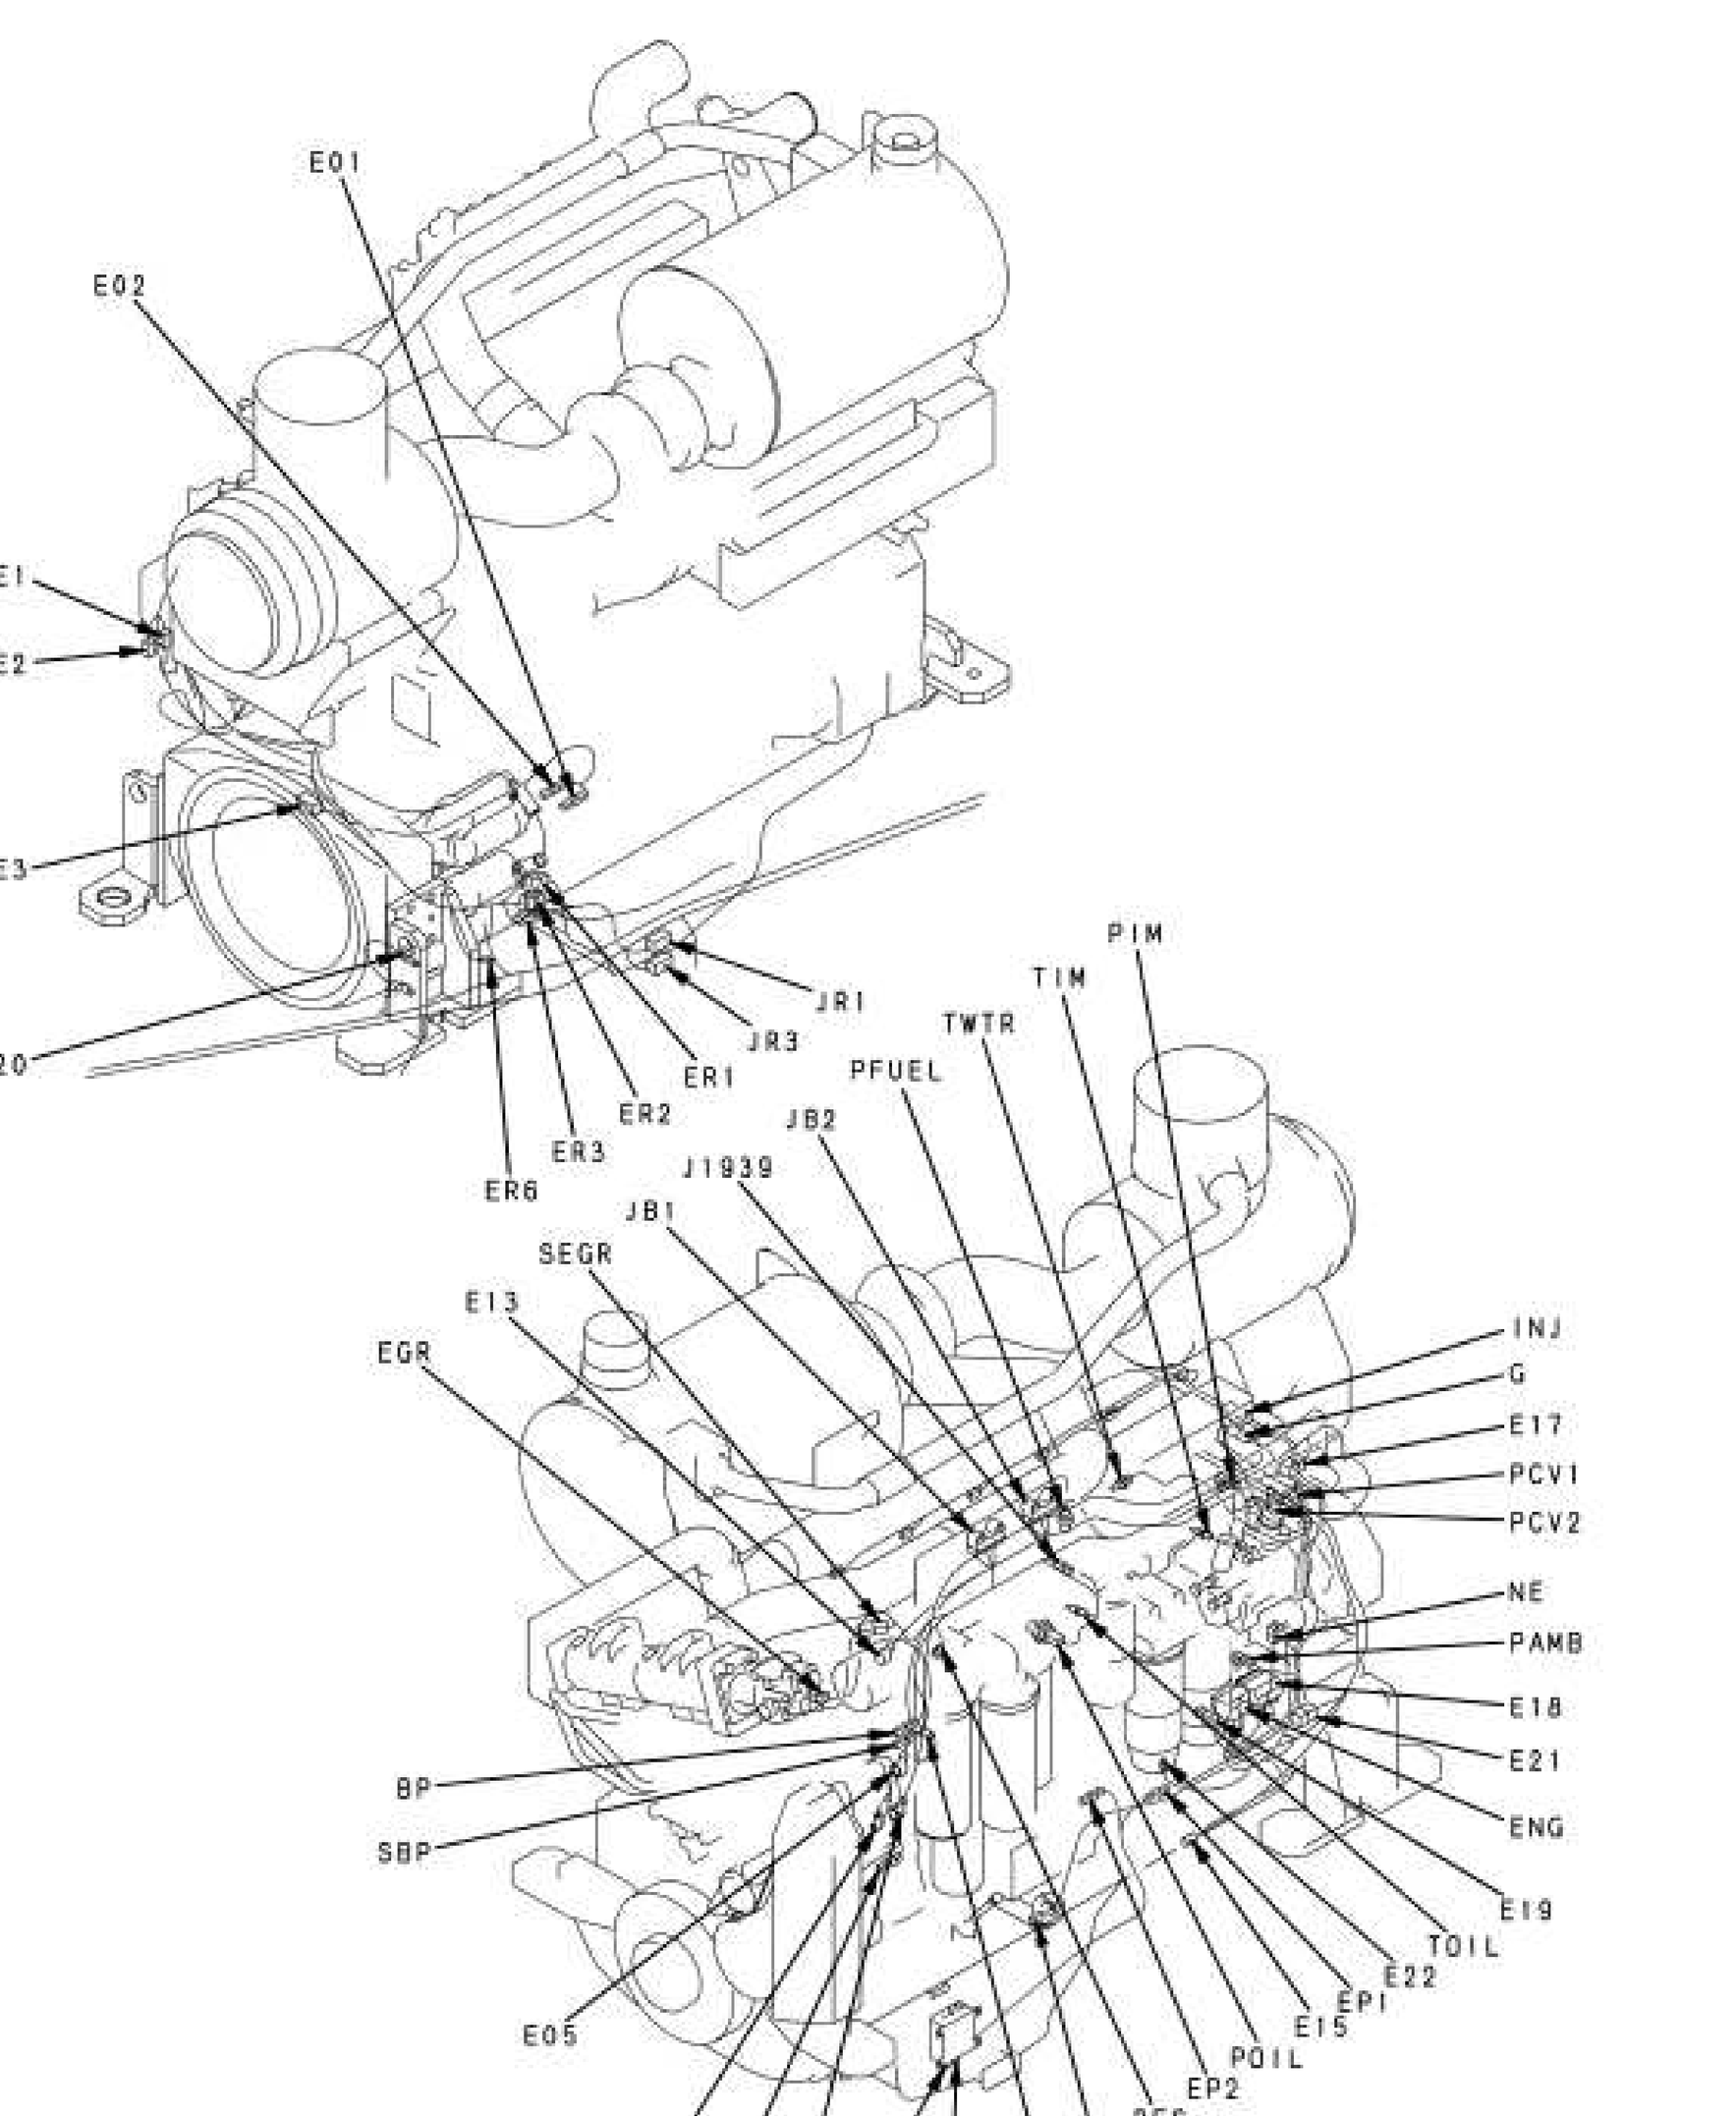


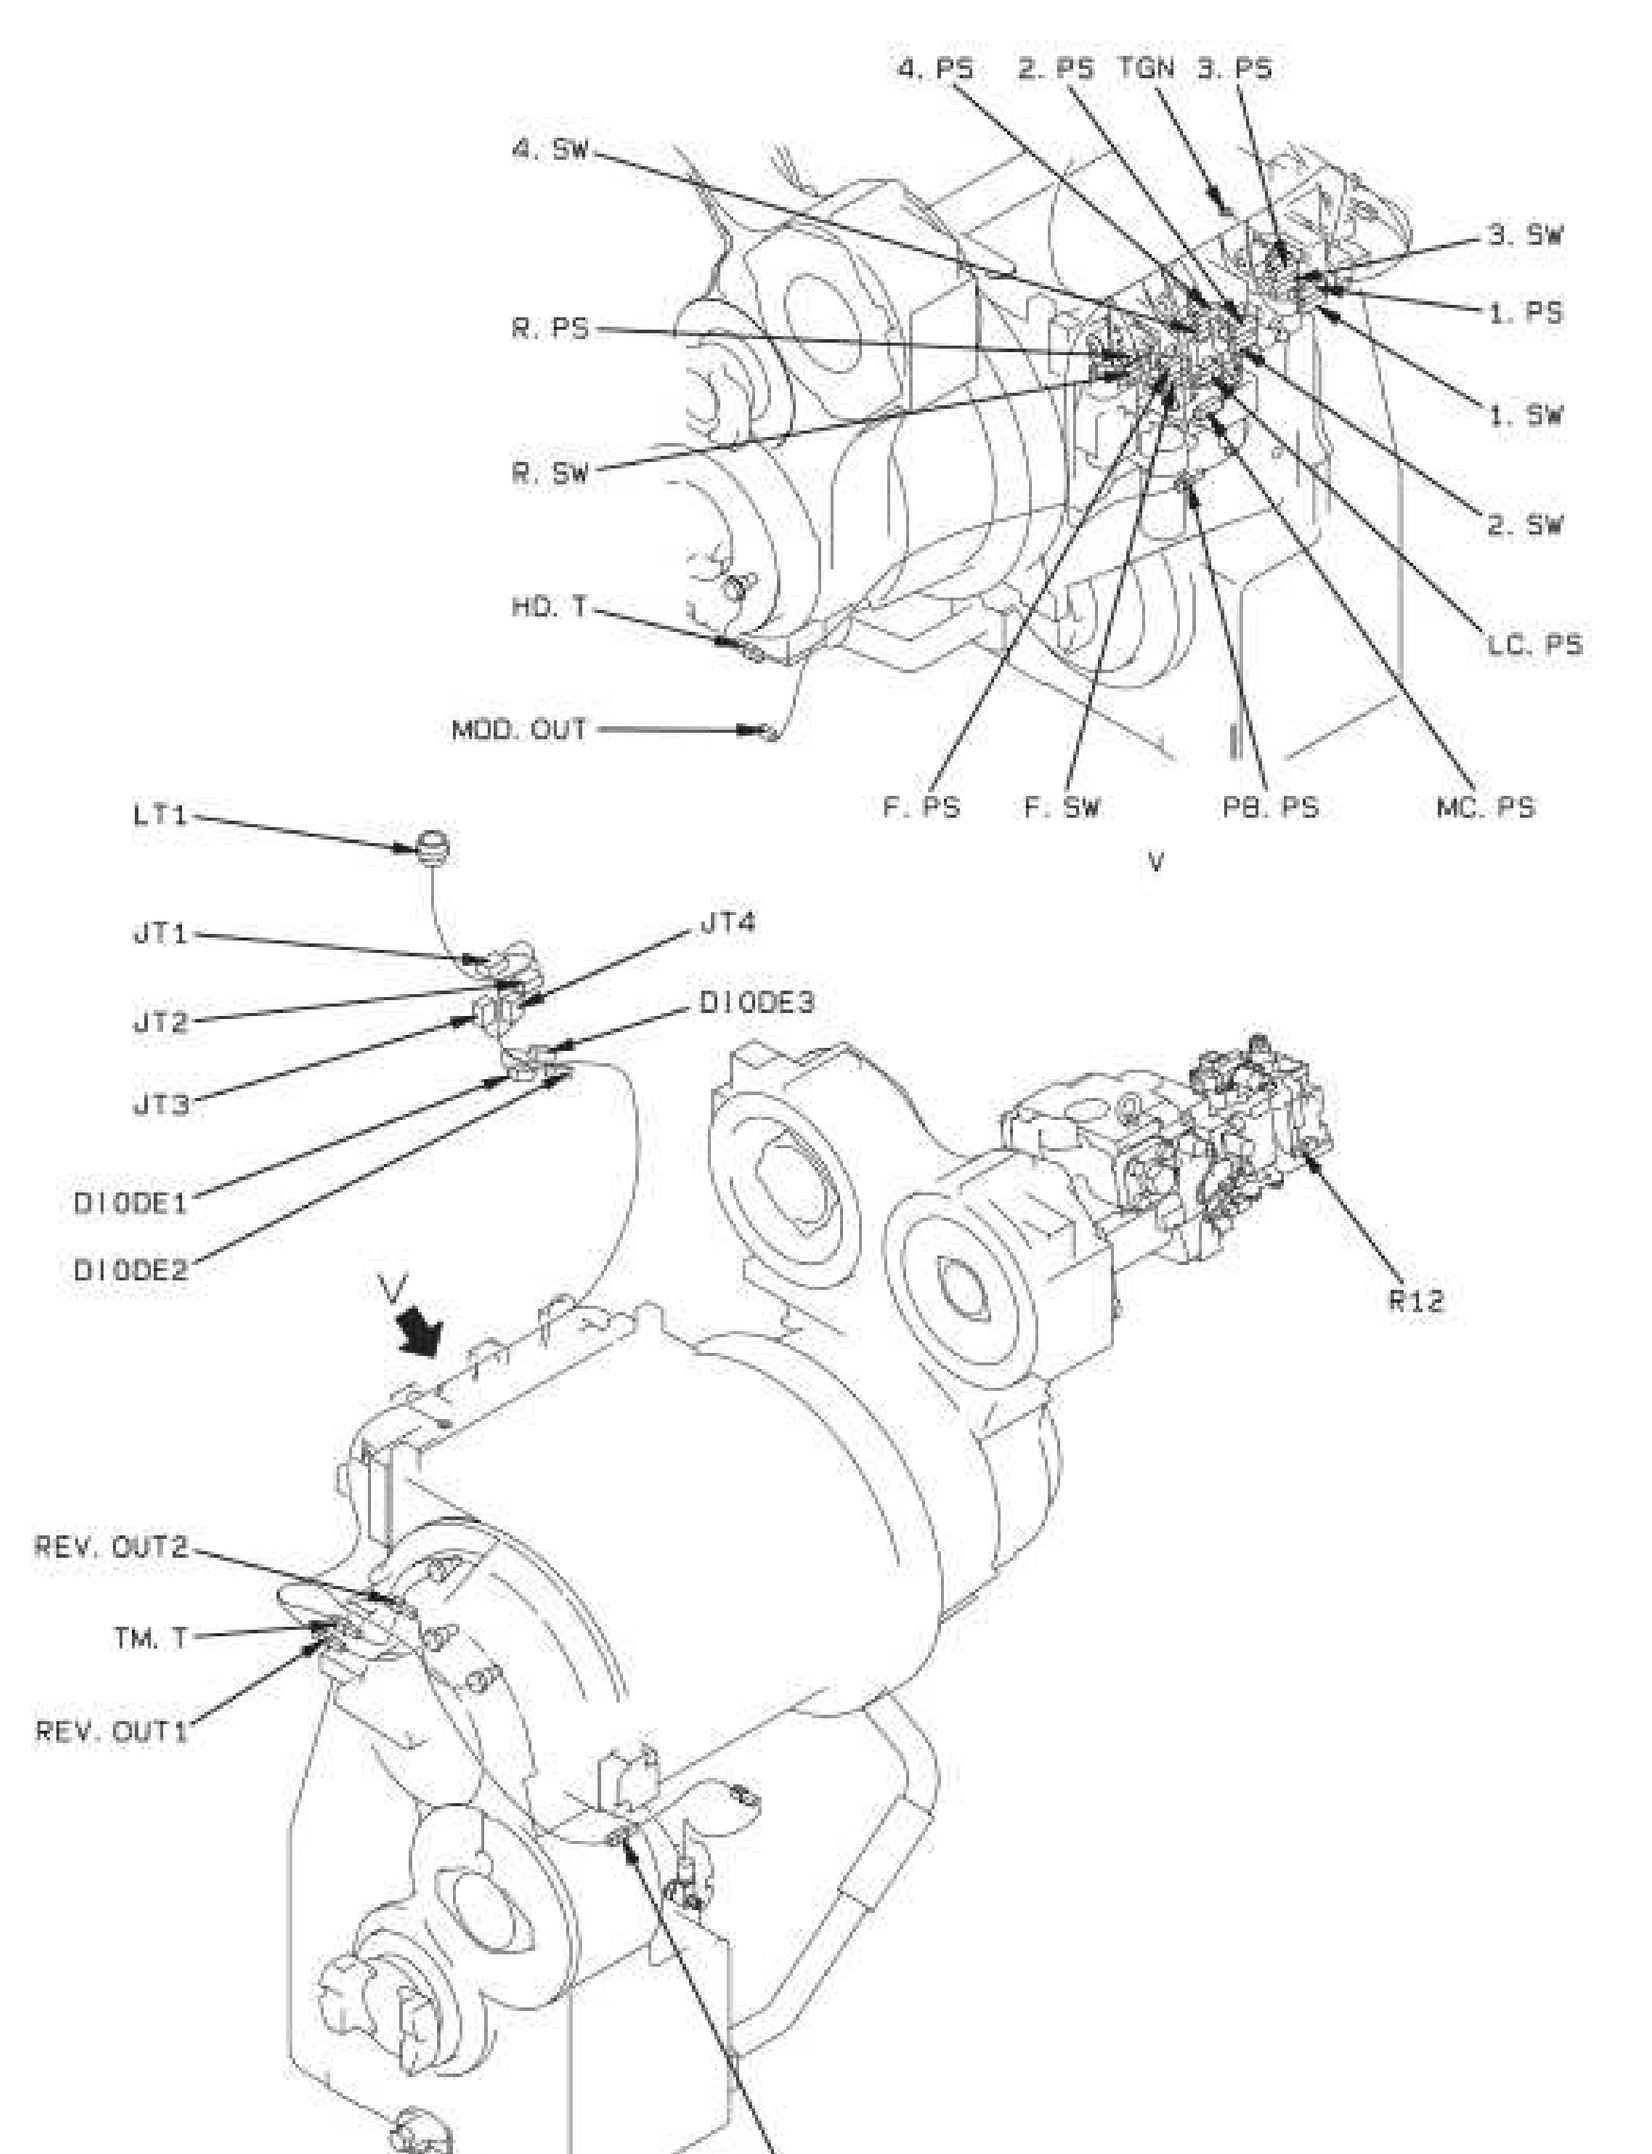

★ AJSS specification

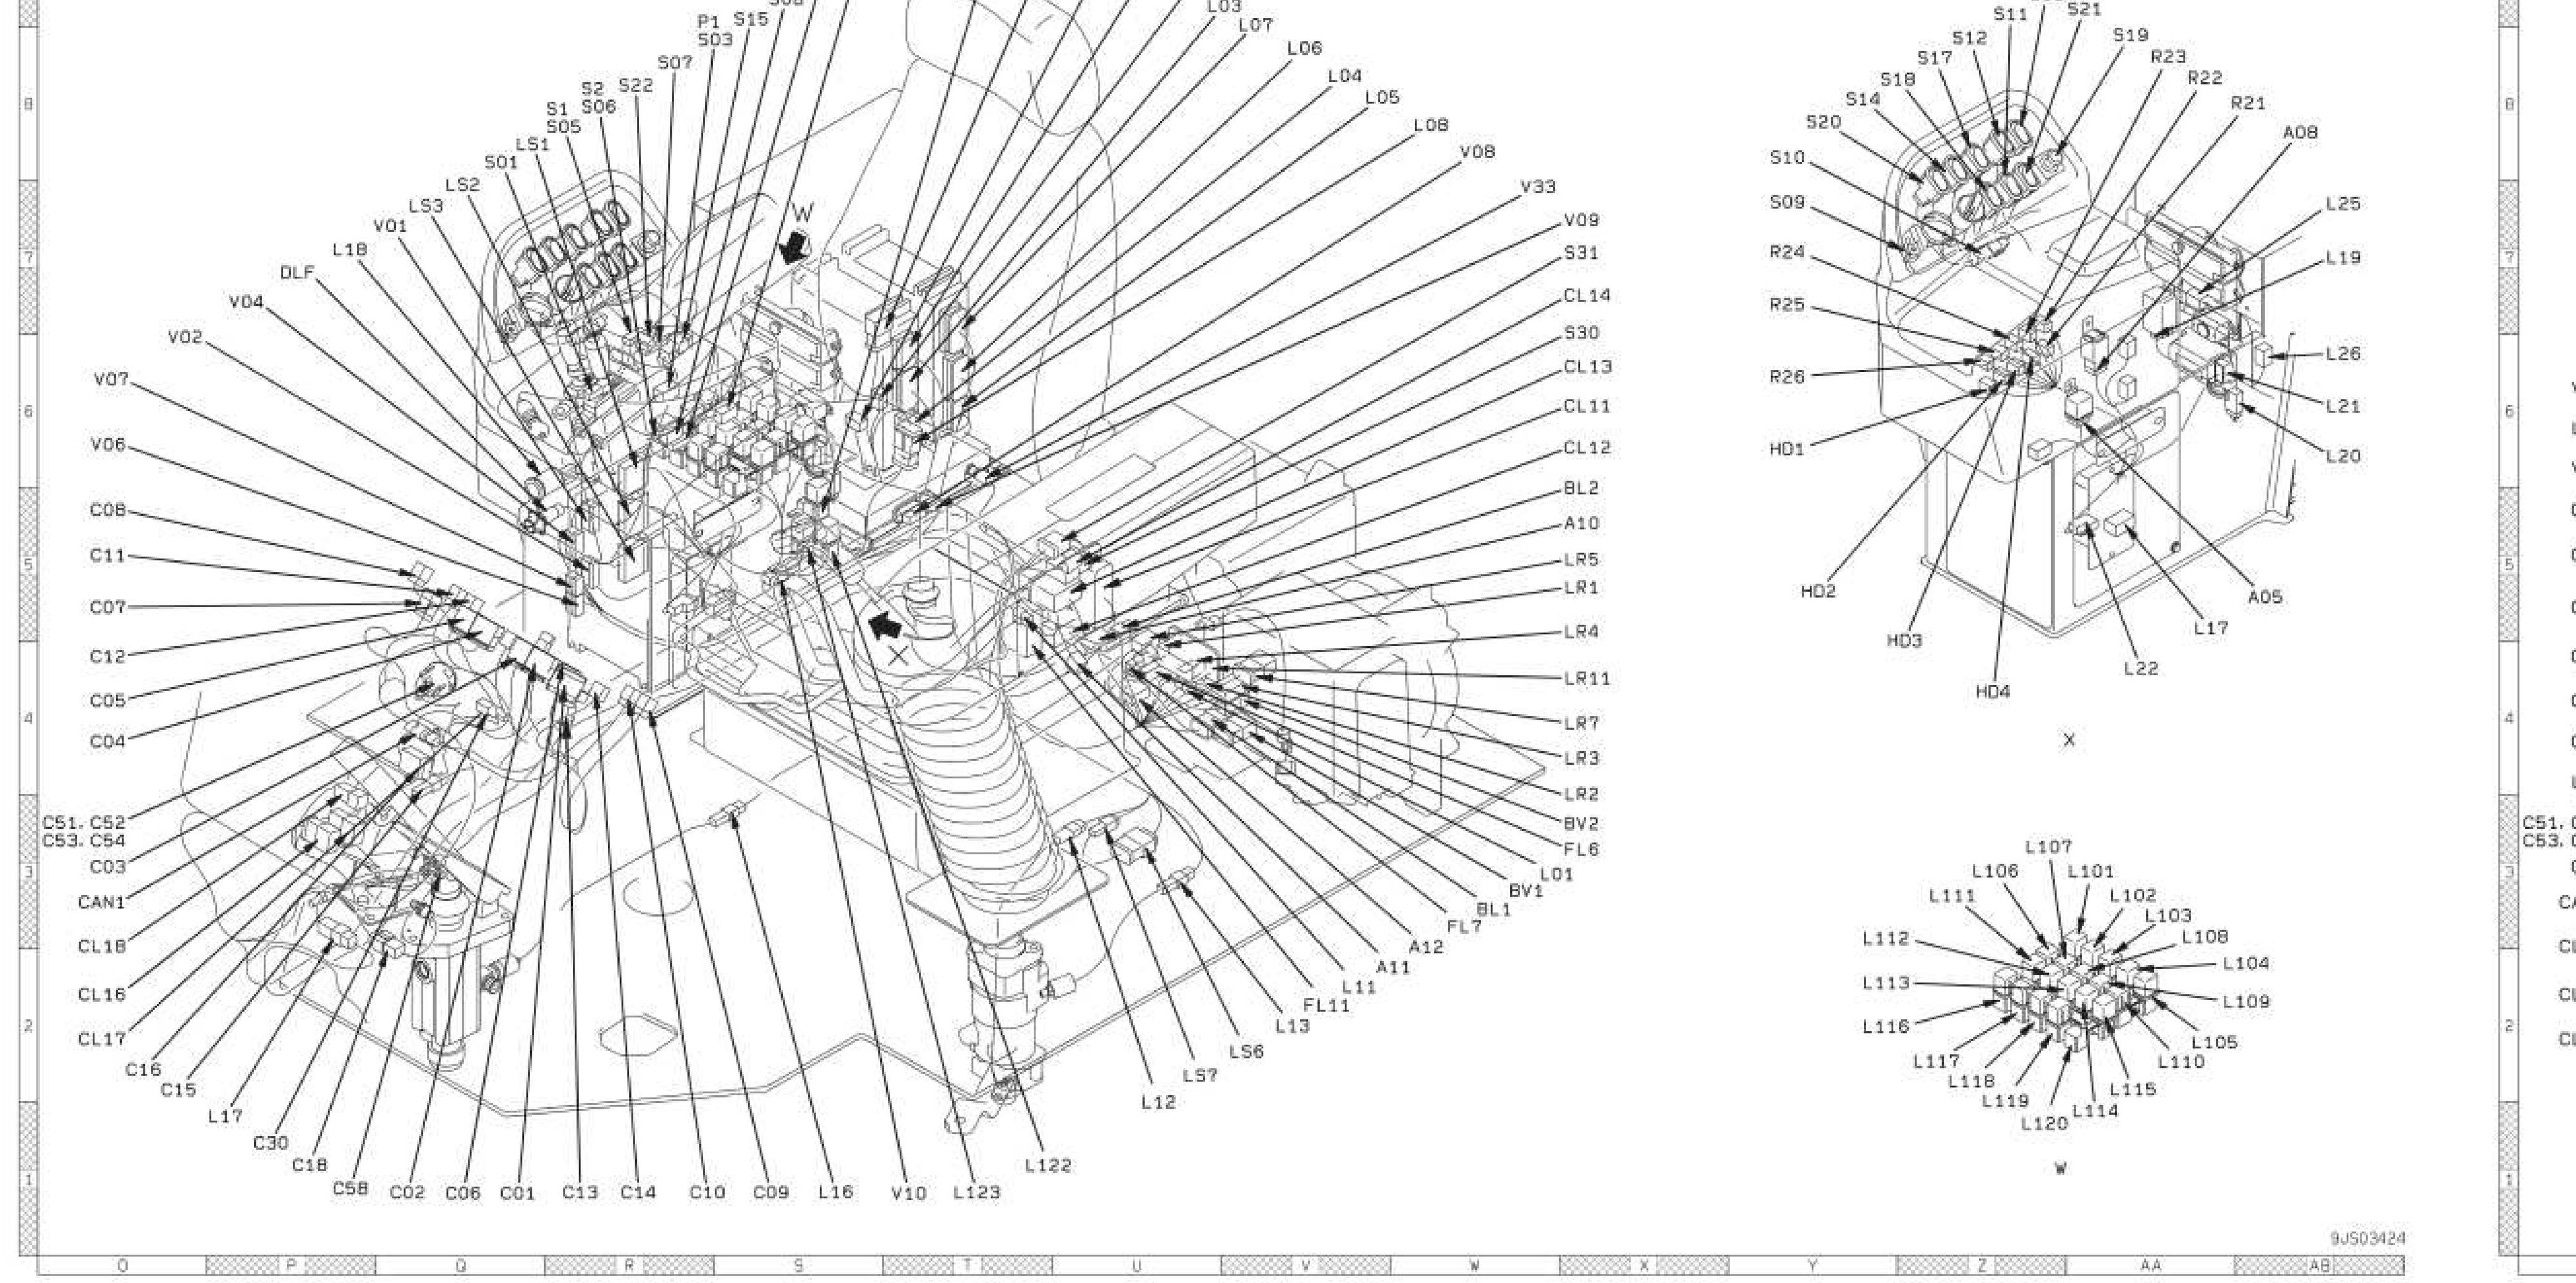

★ Steering wheel specification

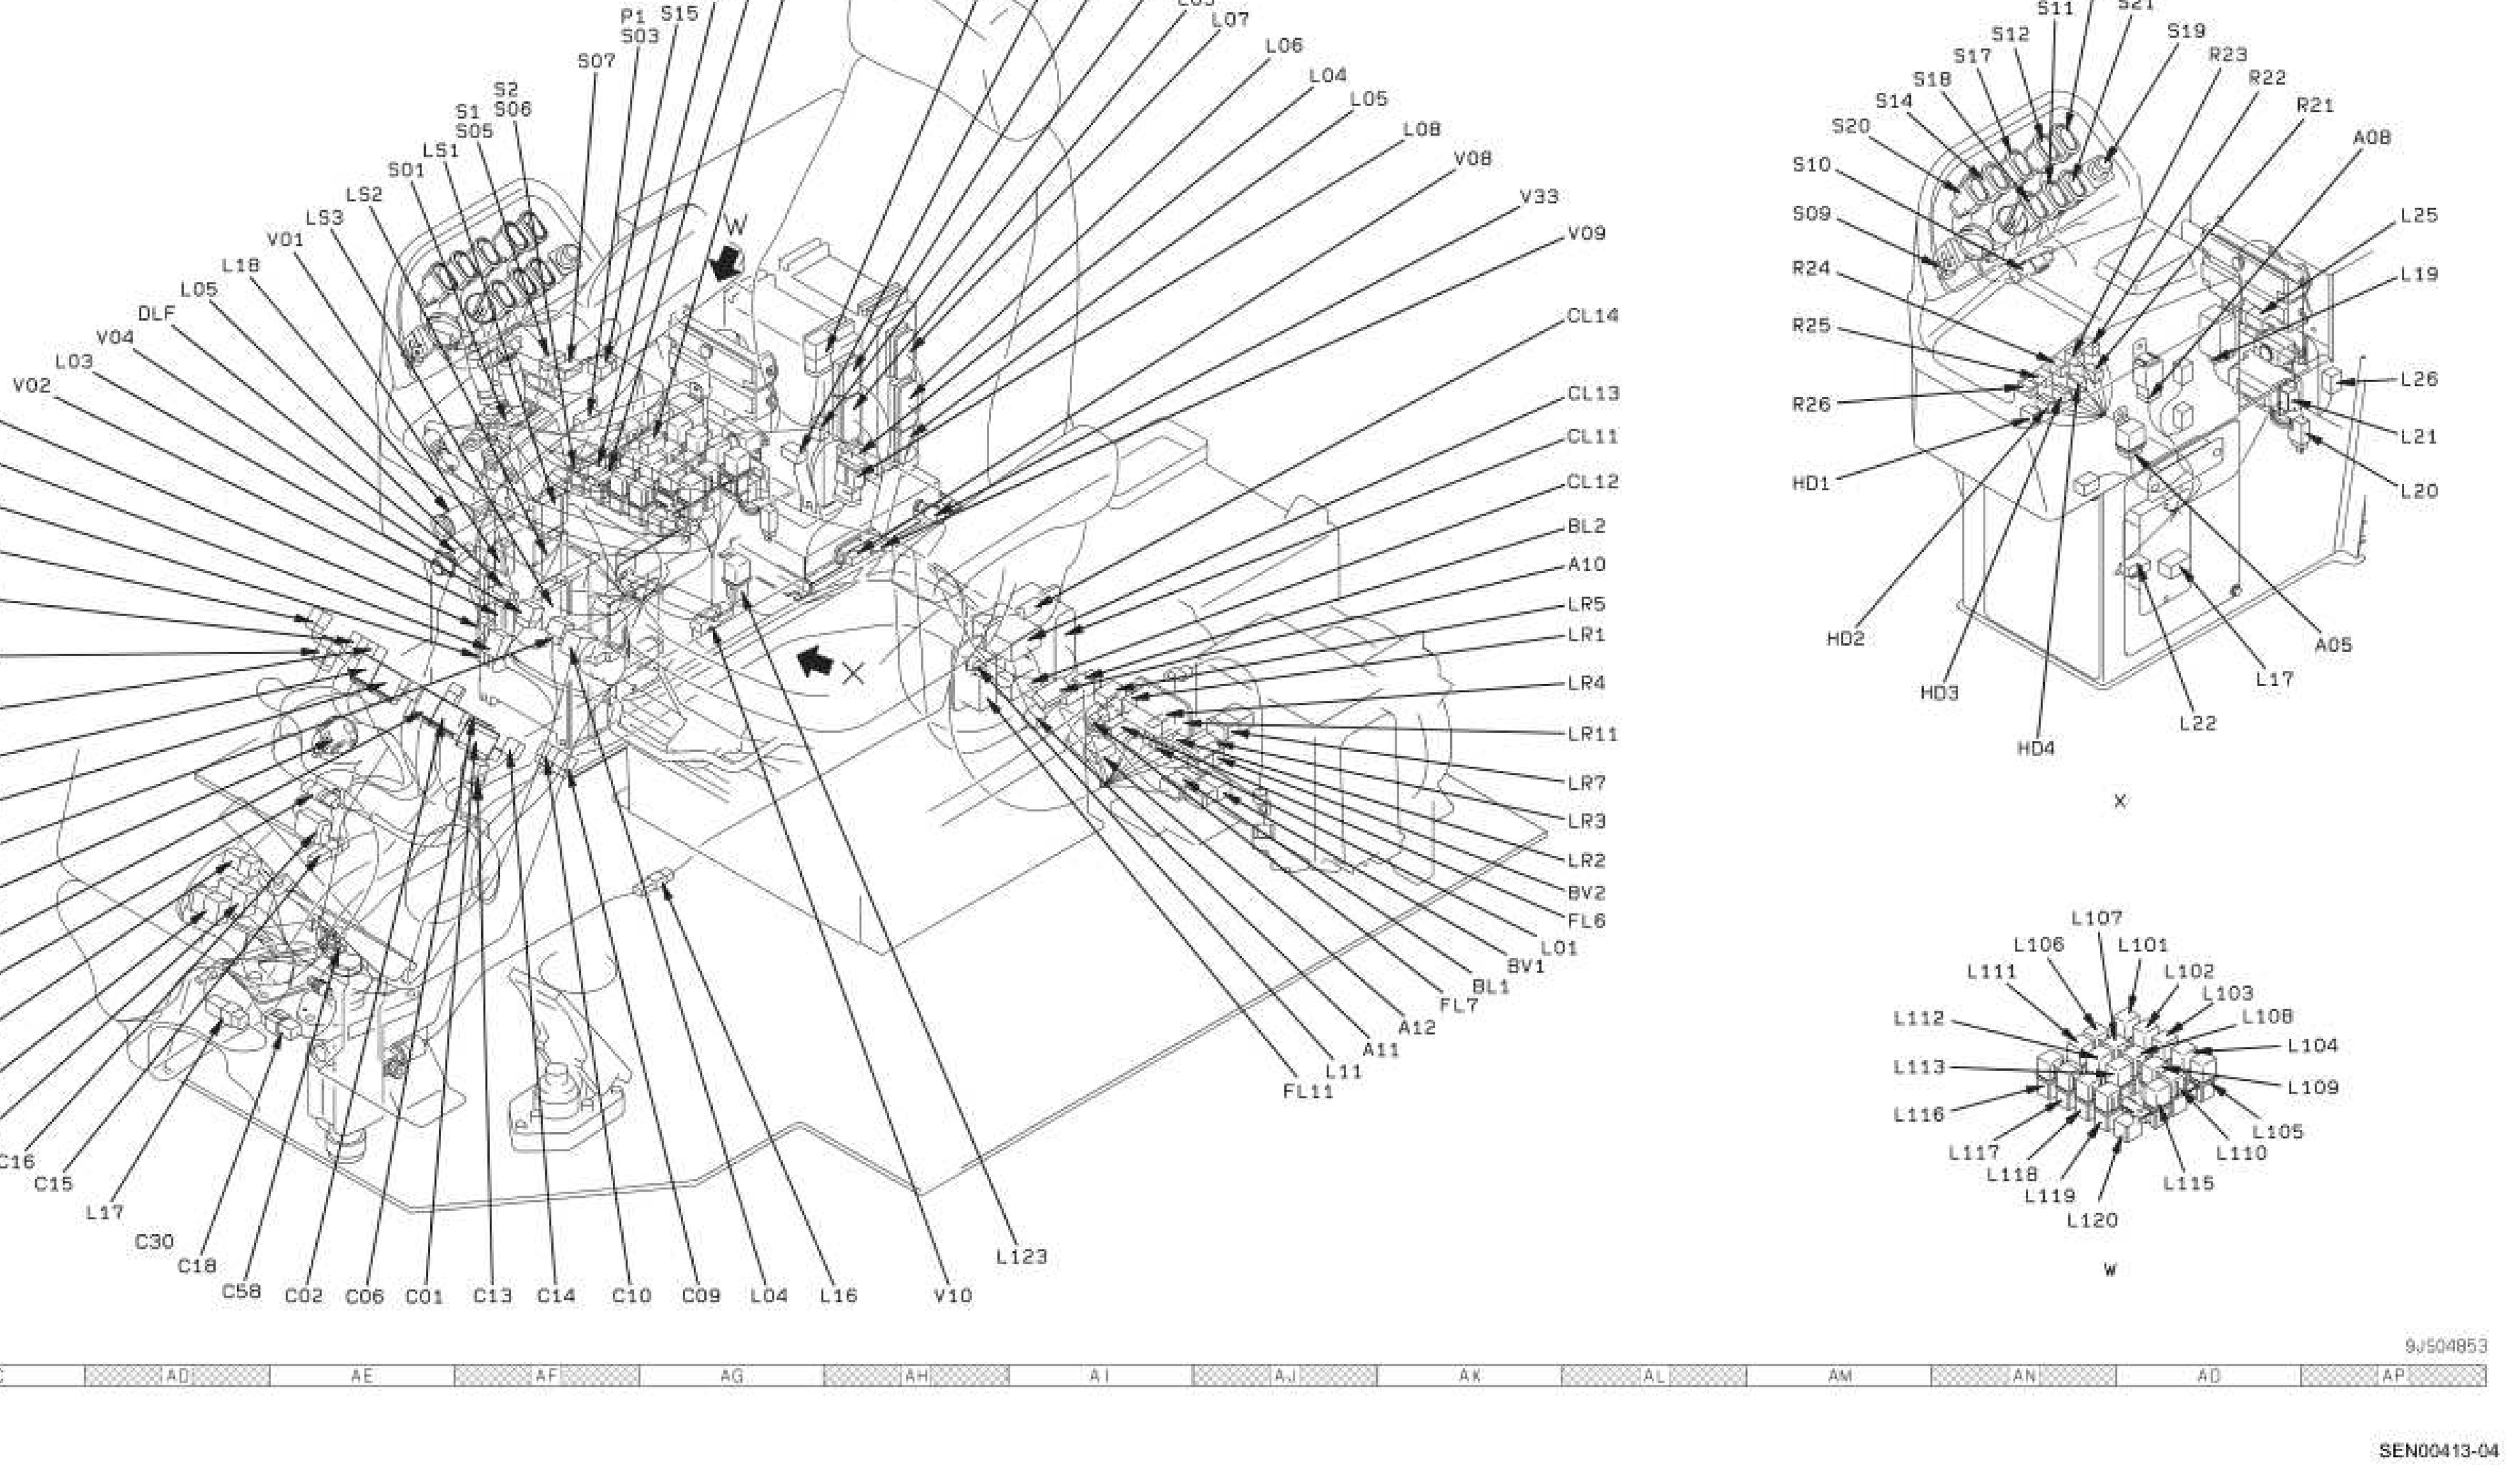

MidWestTech | Komatsu WA600-6 Wheel Loader Service Manual | Publication SEN00235-18

Order the manual at mid-west-tech.com >