TEREX
LIGHT CONSTRUCTION

SERIES AL4000D1
LIGHT TOWER
OPERATION/SERVICE & PARTS MANUAL

After Serial Number:

FKF-13923

PART NUMBER SFMAL4D1
REVISION B
SEPTEMBER 2006

MidWestTech | Terex AL4000D1 Light Tower Parts Manual | Publication SFMAL4D1
Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

Receiving and Set-up

Safety Alert Symbols 3
General Safety 4-8
Check Out on Receipt/Delivery 11
Serial Number Regoster 12
TEREX Amida Light Tower Model Coding System 13
Recommended Engine Oil and Fuel 14

Operating Instructions

Light Tower Operating Instructions 15-19
Engine (see manufacturer's handbook)
Generator (see manufacturer's handbook)

Parts Identification Drawings

Trailer and Fuel Tank 41-42
Axle and Wheels 43
Cabinet and Attachments 44-46
Tower and Related Parts 47-56
Engine and Generator 57-61
Electrical Box 62
Floodlight Fixtures / Ballasts 63-64
Hitches 65
Options 66-77

Wiring Diagrams

Fixture with Joy Connector (MH or TH) 33
Metal Halide Ballast with Connector 34
High Pressure Sodium Ballast with Connector 35
Wiring 36-40


Troubleshooting Guide

Specifications, Routine Maintenance, Wind Loading, Torque Specs 24-27
Criteria for Replacement of Wire Rope 28
Broken Cable Replacement Procedure 29-32
Light Fixture Troubleshooting 20-22
TEREX Amida Numbered Wiring System 23
Engine (refer to manufacturer's handbook)
Generator (refer to manufacturer's handbook)


Warranty Information

Warranty Procedure 10
Warranty 9


MidWestTech | Terex AL4000D1 Light Tower Parts Manual | Publication SFMAL4D1 Order the manual at mid-west-tech.com >

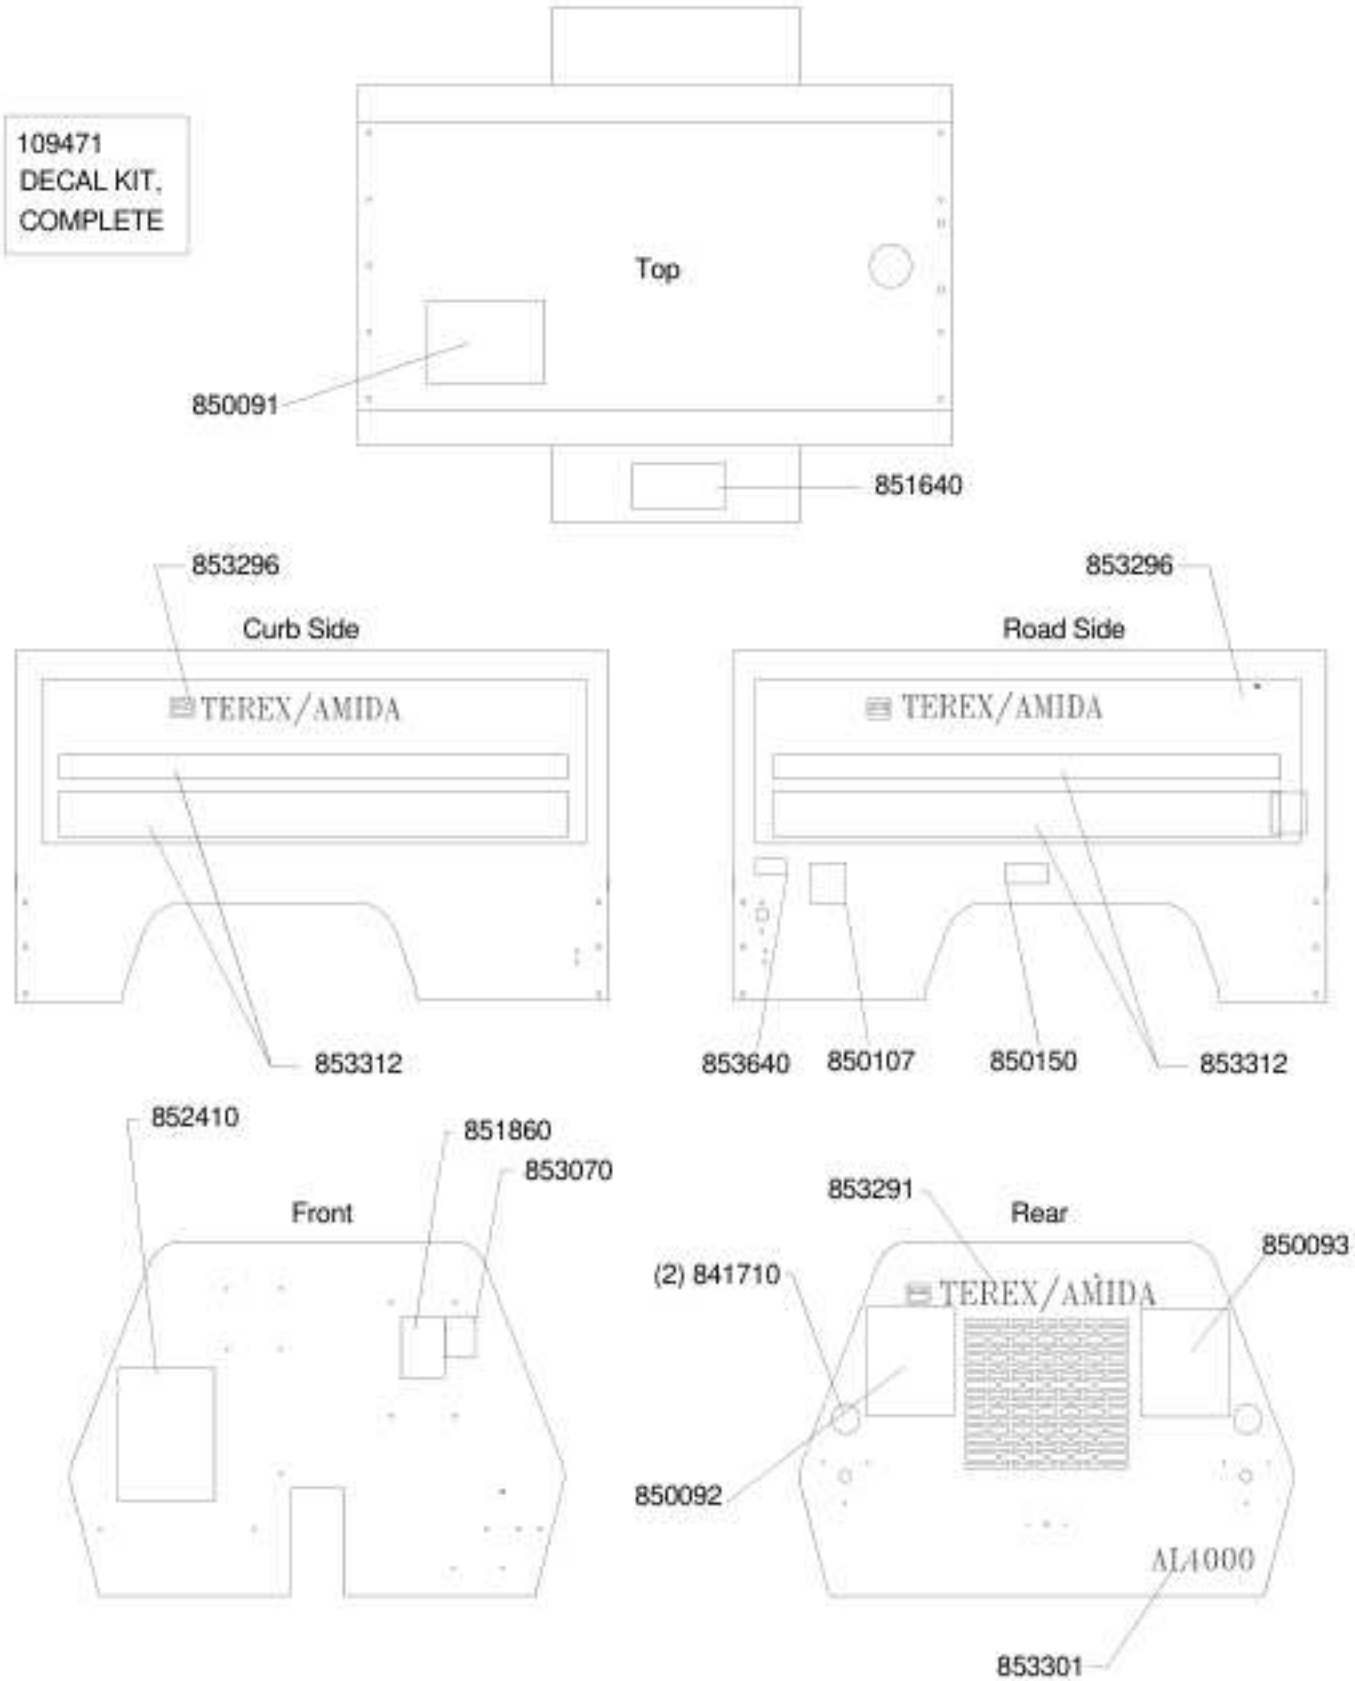

MidWestTech | Terex AL4000D1 Light Tower Parts Manual | Publication SFMAL4D1 Order the manual at mid-west-tech.com >

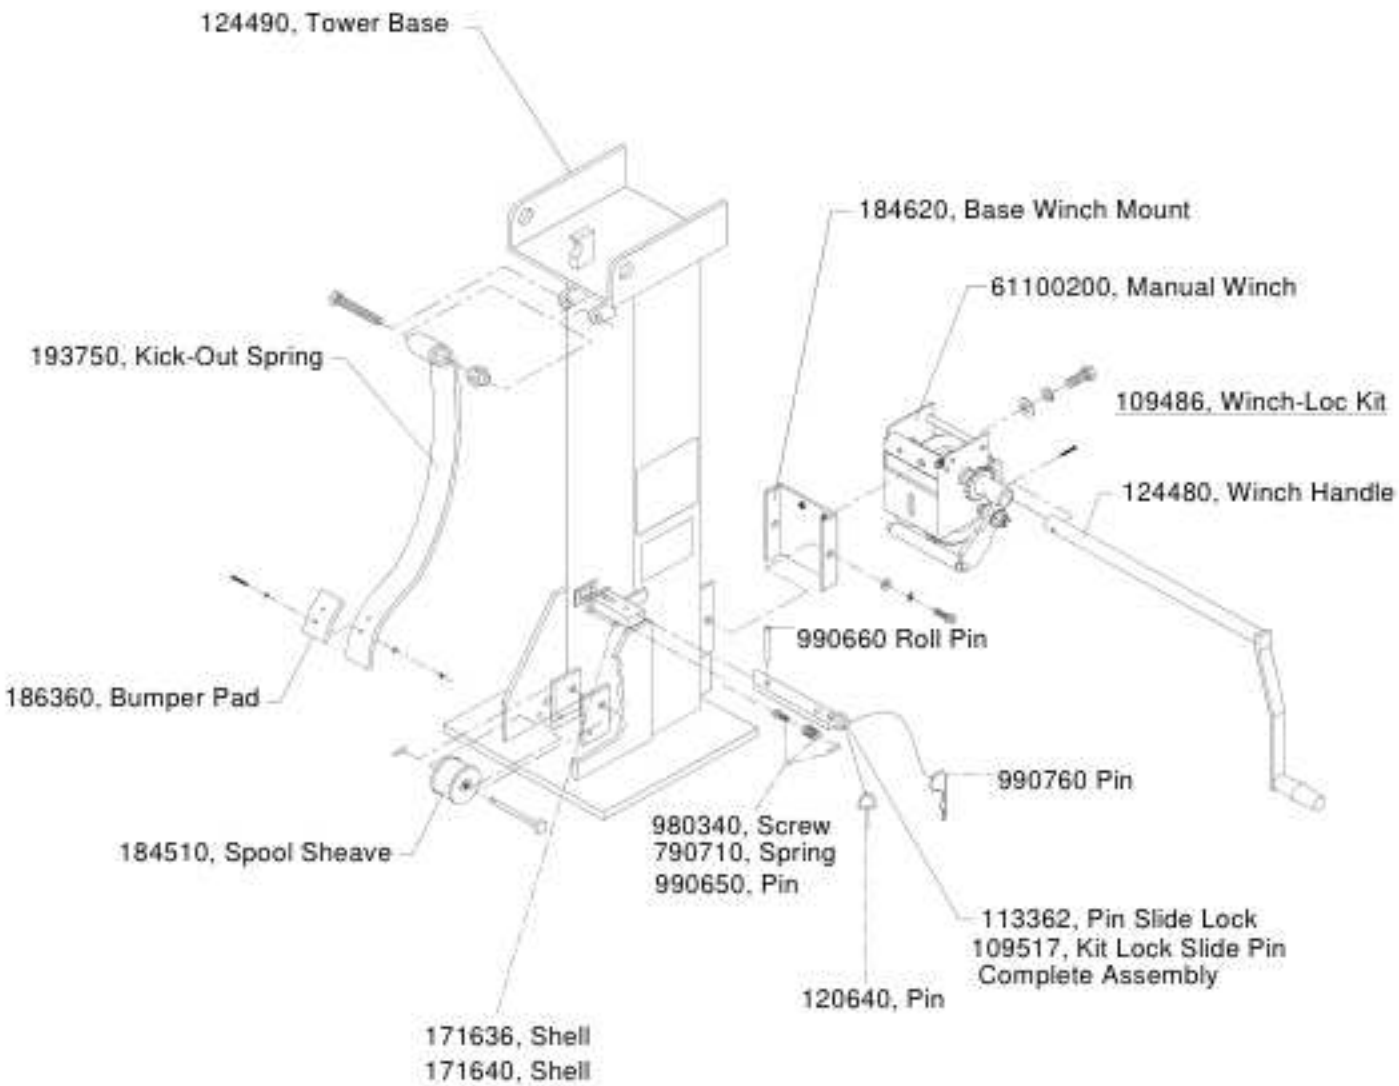

MidWestTech | Terex AL4000D1 Light Tower Parts Manual | Publication SFMAL4D1 Order the manual at mid-west-tech.com >

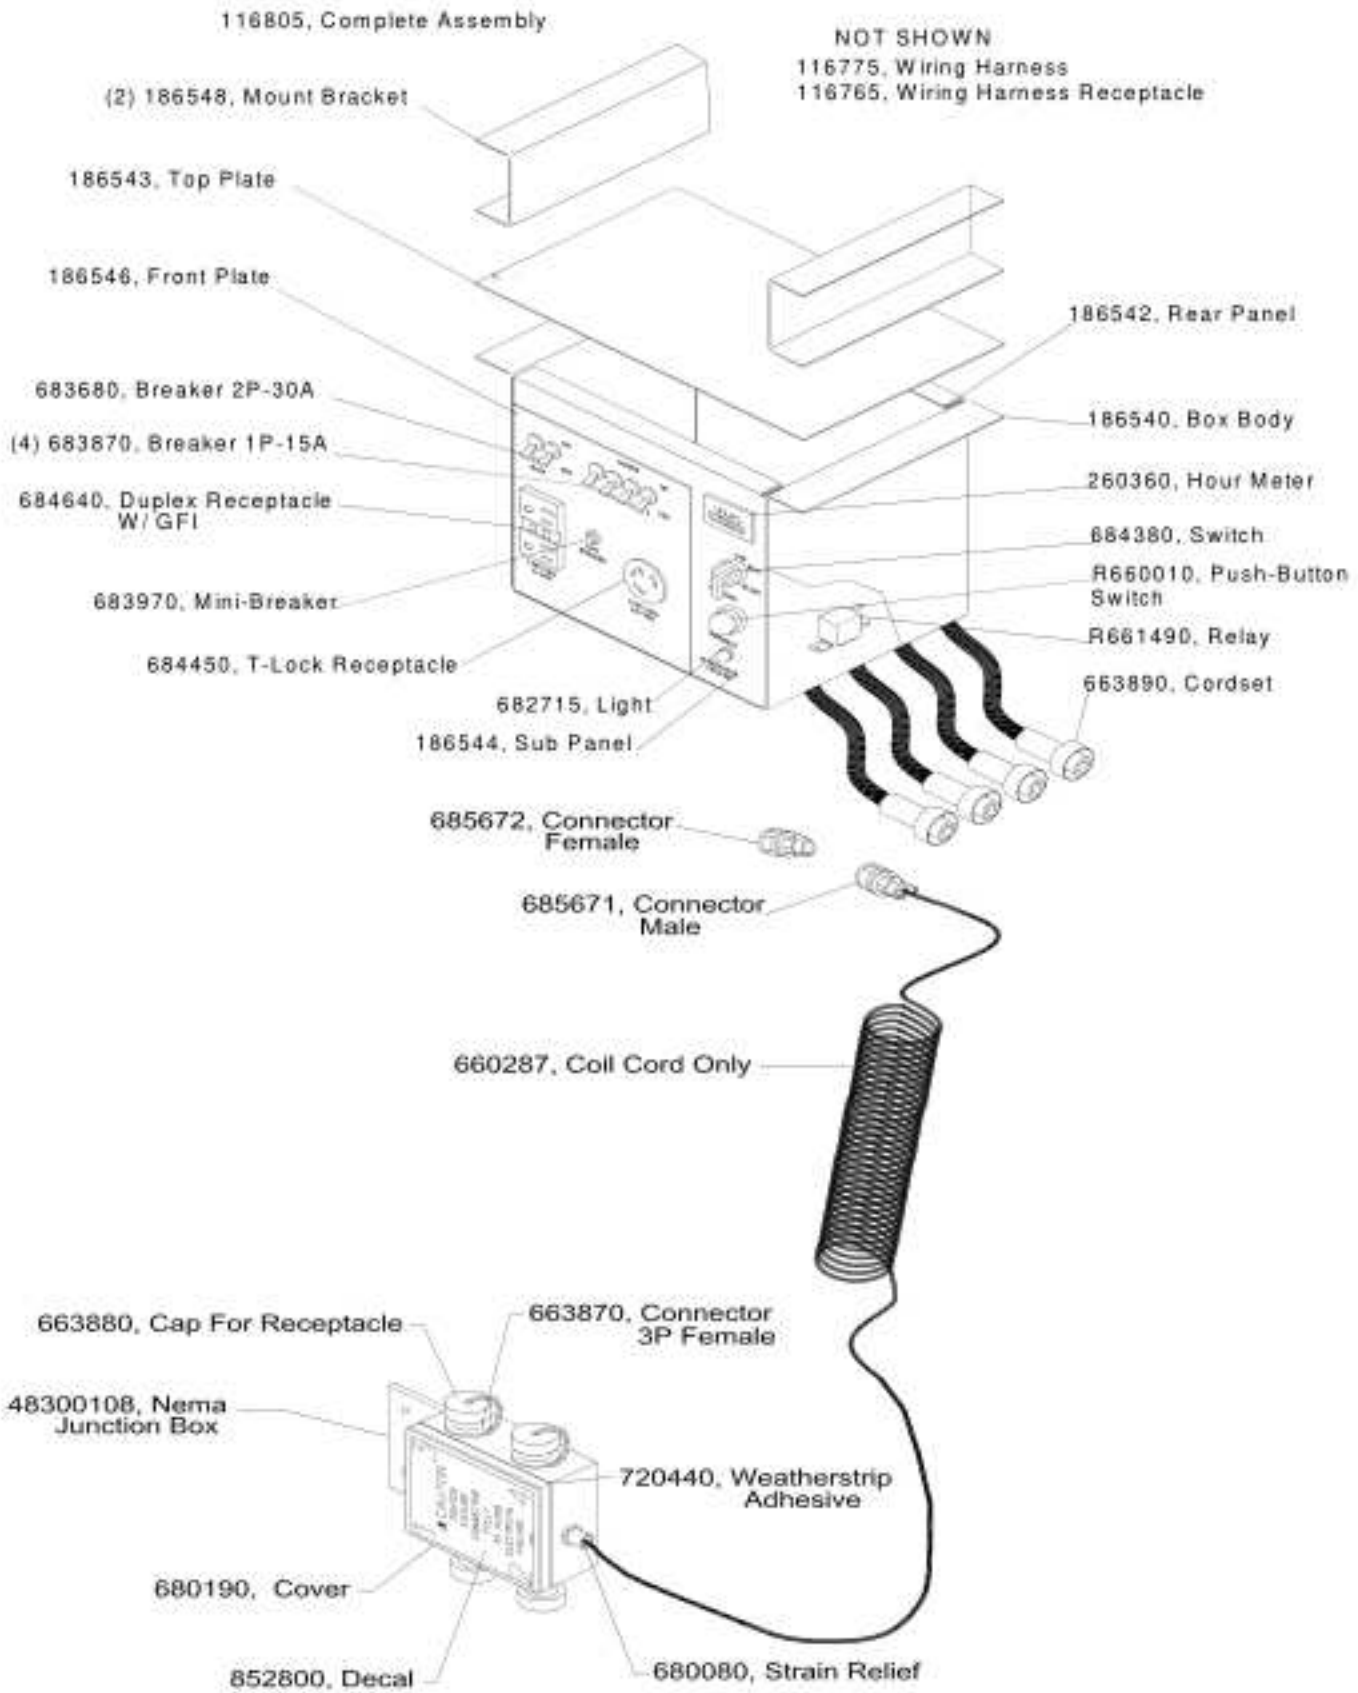

MidWestTech | Terex AL4000D1 Light Tower Parts Manual | Publication SFMAL4D1 Order the manual at mid-west-tech.com >