



Maintenance and Service Manual

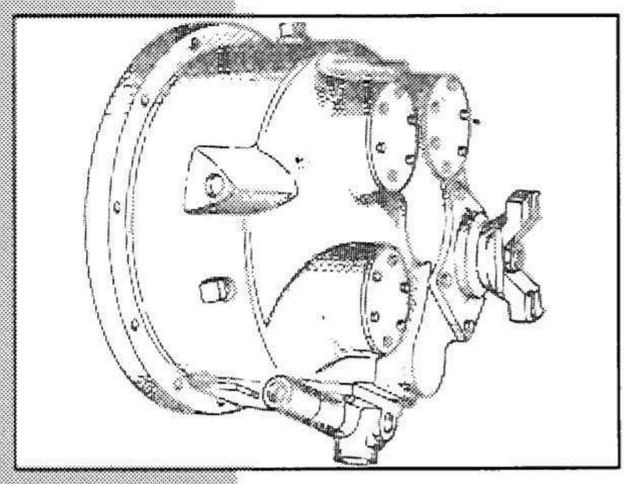

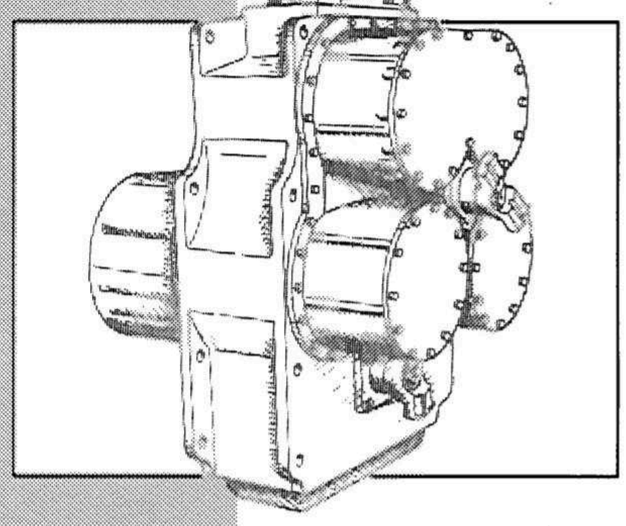

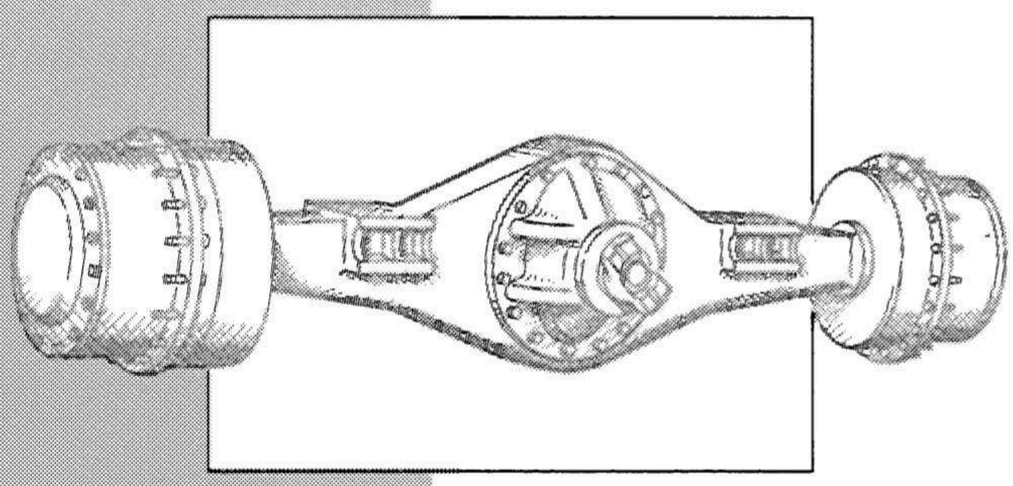

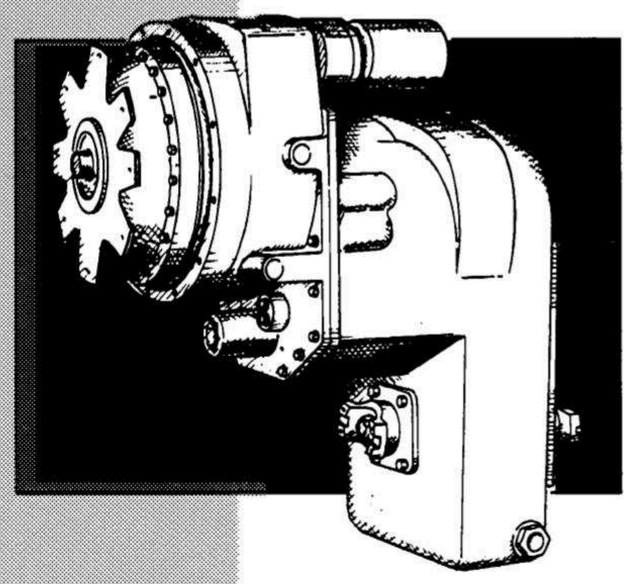

T 12000

Powershift Transmission

3, 4, & 6 SPEED INTERMEDIATE DROP

DANA

SPICER OFF-HIGHWAY PRODUCTS DIVISION

SM T12-3,4,6 ID (REV. 5-97)

MidWestTech | New Holland Dana T 12000 Powershift 3, 4, 6 Speed Intermediate Drop Transmission Service Manual | Publication SMT12346ID

Order the manual at mid-west-tech.com >

TABLE OF CONTENTS

T12000 TRANSMISSION ASSEMBLY

HOW THE UNITS OPERATE

SECTIONAL VIEWS AND PARTS IDENTIFICATION

- Transmission Case and Plate Group ..... Fig. A
- Converter Group ..... Fig. B
- Forward - Reverse and 1st - 2nd Clutch Group ..... Fig. C
- High - 3rd and Output Shaft Group ..... Fig. D
- 3rd and Output Shaft Group with Disconnect ..... Fig. E
- Control Valve Group—Dual Modulation ..... Fig. F
- Control Valve Group—Single Modulation, Mechanical Inching ..... Fig. G
- Assembly Instruction ..... Fig. H, I, J, K, L, M

DISASSEMBLY OF TRANSMISSION 1

REASSEMBLY OF TRANSMISSION 65

CLUTCH ENGAGEMENT (POWER FLOW) 4 AND 6 SPEED 90

CLUTCH ENGAGEMENT (POWER FLOW) 3 SPEED 91

DRIVE PLATE INSTALLATION 92

TRANSMISSION TO ENGINE INSTALLATION PROCEDURE 93

SPECIFICATIONS AND SERVICE DATA 94

SERVICING MACHINE AFTER TRANSMISSION OVERHAUL 95

EXTERNAL PLUMBING AND PRESSURE CHECK POINTS 96, 97

CLEANING AND INSPECTION 98

PARKING BRAKE SERVICE 99

TROUBLESHOOTING GUIDE 100

CONVERTER STALL PROCEDURE 101

ELECTRIC SOLENOID CONTROL WIRING DIAGRAM 102, 103

NOTE: Metric Dimensions Shown in Brackets [ ].

MidWestTech | New Holland Dana T 12000 Powershift 3, 4, 6 Speed Intermediate Drop Tran... Order the manual at mid-west-tech.com >