TEN00022-01

Operation & Maintenance Manual

MOBILE CRUSHER **BR550JG-1**

SERIAL NUMBERS 1067 and up

WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept near the machine for reference and periodically reviewed by all personnel who will come into contact with it.

NOTICE

Komatsu has Operation & Maintenance Manuals written in some other languages. If a foreign language manual is necessary, contact your local distributor for availability.

KOMATSU®

MidWestTech | Komatsu BR550JG-1 Mobile Crusher Operation & Maintenance Manual | P... Order the manual at mid-west-tech.com >

CONTENTS

FOREWORD ---- 1- 1
FOREWORD ---- 1- 2
SAFETY INFORMATION ---- 1- 5
INTRODUCTION ---- 1- 7
FRONT/REAR, LEFT/RIGHT DIRECTIONS OF MACHINE ---- 1- 7
NECESSARY INFORMATION ---- 1- 8
PRODUCT IDENTIFICATION NUMBER (PIN)/MACHINE SERIAL NO. PLATE ---- 1- 8
ENGINE SERIAL NO. PLATE AND POSITION ---- 1- 8
POSITION OF SERVICE METER ---- 1- 9
TABLE OF ENTER SERIAL NO. AND DISTRIBUTOR ---- 1- 9
SAFETY ---- 2- 1
SAFETY ---- 2- 2
SAFETY LABELS ---- 2- 5
POSITIONS OF SAFETY PICTOGRAMS ---- 2- 6
SAFETY LABELS ---- 2- 7
GENERAL PRECAUTIONS ---- 2- 15
PRECAUTIONS FOR OPERATION ---- 2- 23
STARTING ENGINE ---- 2- 23
OPERATION ---- 2- 25
CRUSHING OPERATION ---- 2- 28
TRANSPORTATION ---- 2- 30
BATTERY ---- 2- 31
TOWING ---- 2- 33
PRECAUTIONS FOR MAINTENANCE ---- 2- 34
OPERATION ---- 3- 1
GENERAL VIEW ---- 3- 2
GENERAL VIEW OF MACHINE ---- 3- 2
GENERAL VIEW OF CONTROLS AND GAUGES ---- 3- 3
EXPLANATION OF COMPONENTS ---- 3- 6
MACHINE MONITOR ---- 3- 6
SWITCHES ---- 3- 18
CONTROL LEVERS ---- 3- 28
OPTION-RELATED SWITCHES ---- 3- 29
CAP, COVER WITH LOCK ---- 3- 30
REVOLVING WARNING LAMP ---- 3- 32
ADDITIONAL WORKING LAMP ---- 3- 33
FUSIBLE LINK ---- 3- 33
CONTROLLERS ---- 3- 34
FUSE ---- 3- 34
TOOL BOX ---- 3- 35
OPERATION ---- 3- 36
CHECK BEFORE STARTING ENGINE ---- 3- 36
STARTING ENGINE ---- 3- 53
OPERATIONS AND CHECKS AFTER STARTING ENGINE ---- 3- 56
STOPPING ENGINE ---- 3- 58
CHECK AFTER STOPPING ENGINE ---- 3- 58
MACHINE OPERATION ---- 3- 59
STEERING MACHINE ---- 3- 63
OPERATION OF WORK EQUIPMENT ---- 3- 65

MidWestTech | Komatsu BR550JG-1 Mobile Crusher Operation & Maintenance Manual... Order the manual at mid-west-tech.com >

WATER SPRINKLER ---- 3- 71
FOLDING HOPPER ---- 3- 72
CHECK AND CONFIRMATION OF JAW CRUSHER AFTER WORK ---- 3- 80
CHECK AFTER FINISHING WORK ---- 3- 80
LOCKING ---- 3- 80
RUN-IN OPERATION OF JAW CRUSHER ---- 3- 81
PRECAUTIONS WHEN OPERATING JAW CRUSHER ---- 3- 84
EFFICIENT USE OF JAW CRUSHER ---- 3- 86
SCOPE OF WORKS USING MOBILE CRUSHER ---- 3- 91
PROHIBITIONS FOR OPERATION ---- 3- 97
PRECAUTIONS WHEN TRAVELING UP OR DOWN HILLS ---- 3- 99
TRANSPORTATION ---- 3-100
TRANSPORTATION PROCEDURE ---- 3-100
PROCEDURE FOR DISASSEMBLY AND FOLDING ---- 3-102
LOADING, UNLOADING WORK ---- 3-103
LIFTING MACHINE ---- 3-110
COLD WEATHER OPERATION ---- 3-111
PRECAUTIONS FOR LOW TEMPERATURE ---- 3-111
AFTER COMPLETION OF WORK ---- 3-113
AFTER COLD WEATHER ---- 3-113
LONG-TERM STORAGE ---- 3-114
BEFORE STORAGE ---- 3-114
DURING STORAGE ---- 3-114
AFTER STORAGE ---- 3-114
STARTING MACHINE AFTER LONG-TERM STORAGE ---- 3-114
TROUBLESHOOTING ---- 3-115
PHENOMENA THAT ARE NOT FAILURES ---- 3-115
METHOD OF TOWING MACHINE ---- 3-115
IF BATTERY IS DISCHARGED ---- 3-116
OTHER TROUBLE ---- 3-119
MAINTENANCE ---- 4- 1
GUIDE TO MAINTENANCE ---- 4- 2
OUTLINE OF SERVICE ---- 4- 4
HANDLING AND PERFORMANCE OF OIL CLINIC FOR OIL, FUEL, COOLANT ---- 4- 4
RELATING TO ELECTRIC SYSTEM ---- 4- 7
OUTLINE OF HYDRAULIC EQUIPMENT ---- 4- 8
AIR-BLEEDING FROM HYDRAULIC CIRCUIT ---- 4- 9
WEAR PARTS ---- 4- 10
WEAR PARTS LIST ---- 4- 10
JAW CRUSHER RELATED PARTS ---- 4- 11
PRIMARY CONVEYOR RELATED PARTS ---- 4- 13
USE OF FUEL, COOLANT AND LUBRICANTS ACCORDING TO AMBIENT TEMPERATURE ---- 4- 15
STANDARD TIGHTENING TORQUES FOR BOLTS AND NUTS ---- 4- 17
CRUSHER ACCESSORY TOOLS ---- 4- 17
TORQUE LIST ---- 4- 19
PERIODIC REPLACEMENT OF SAFETY CRITICAL PARTS ---- 4- 20
SAFETY CRITICAL PARTS ---- 4- 20
MAINTENANCE SCHEDULE CHART ---- 4- 21
MAINTENANCE SCHEDULE CHART ---- 4- 21


MidWestTech | Komatsu BR550JG-1 Mobile Crusher Operation & Maintenance Manual... Order the manual at mid-west-tech.com >

SERVICE PROCEDURE ---- 4- 23
INITIAL 250 HOURS MAINTENANCE (ONLY AFTER THE FIRST 250 HOURS) ---- 4- 23
WHEN REQUIRED ---- 4- 24
CHECK BEFORE STARTING ---- 4- 59
EVERY 100 HOURS SERVICE ---- 4- 60
EVERY 250 HOURS SERVICE ---- 4- 62
EVERY 500 HOURS SERVICE ---- 4- 70
EVERY 1000 HOURS SERVICE ---- 4- 77
EVERY 2000 HOURS SERVICE ---- 4- 82
EVERY 4000 HOURS SERVICE ---- 4- 84
EVERY 5000 HOURS SERVICE ---- 4- 85
SPECIFICATIONS ---- 5- 1
SPECIFICATIONS ---- 5- 2
ATTACHMENTS, OPTIONS ---- 6- 1
GENERAL PRECAUTIONS ---- 6- 2
PRECAUTIONS RELATED TO SAFETY ---- 6- 2
MAGNETIC SEPARATOR ---- 6- 3
SAFETY PRECAUTIONS ---- 6- 3
PROCEDURES FOR CONNECTION WITH CRUSHER ---- 6- 3
PRECAUTIONS IN USE ---- 6- 3
CHECK AND ADJUSTMENT ---- 6- 4
FAILURES AND CORRECTIVE ACTIONS ---- 6- 5
LIST OF CHECKPOINT ---- 6- 5
SPECIFICATIONS ---- 6- 6
WEARING PARTS ---- 6- 7
MUCK DISCHARGE CONVEYOR ---- 6- 8
LIFTING PROCEDURES ---- 6- 8
ASSEMBLING PROCEDURES ---- 6- 9
PROCEDURES FOR FOLDING DEBRIS DISCHARGING CONVEYOR ---- 6- 11
GREASING MUCK DISCHARGE CONVEYOR ---- 6- 12
CHECK AND ADJUSTMENT OF MUCK DISCHARGE CONVEYOR ---- 6- 12
FAILURES AND CORRECTIVE ACTIONS ---- 6- 15
WEARING PARTS ---- 6- 17
SPECIFICATIONS ---- 6- 19
RADIO CONTROL UNIT ---- 6- 20
DIRECTIONS FOR USE ---- 6- 20
OVERVIEW ---- 6- 22
ON USE OF RADIO CONTROL UNIT ---- 6- 23
BELT CONVEYOR PROTECTIVE PLATE ---- 6- 28
PROCEDURES FOR CONNECTING OPTIONAL ATTACHMENTS ---- 6- 29
LOCATION OF PORTS FOR CONNECTING OPTIONAL ATTACHMENTS ---- 6- 29
PROCEDURES FOR CONNECTING OPTIONAL ATTACHMENTS ---- 6- 30
INDEX ---- 7- 1

MidWestTech | Komatsu BR550JG-1 Mobile Crusher Operation & Maintenance Manual... Order the manual at mid-west-tech.com >


• Hopper support [front 222 kg (49 lb) in 2 pieces]

Dimensions	Unit [mm (ft in)]
A	250 (0' 10")
B	545 (1' 9")
C	940 (3' 1")
D	250 (0' 10")
E	240 (0' 9")

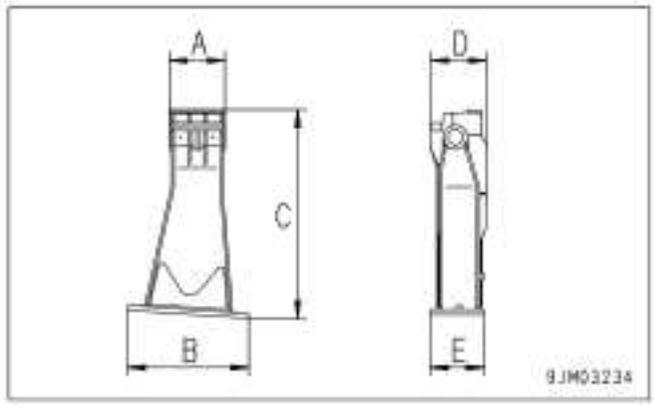


• Hopper support [rear and weight 198 kg (437 lb) in 2 pieces]

Dimensions	Unit [mm (ft in)]
A	250 (0' 10")
B	545 (1' 9")
C	940 (3' 1")
D	250 (0' 10")
E	240 (0' 9")

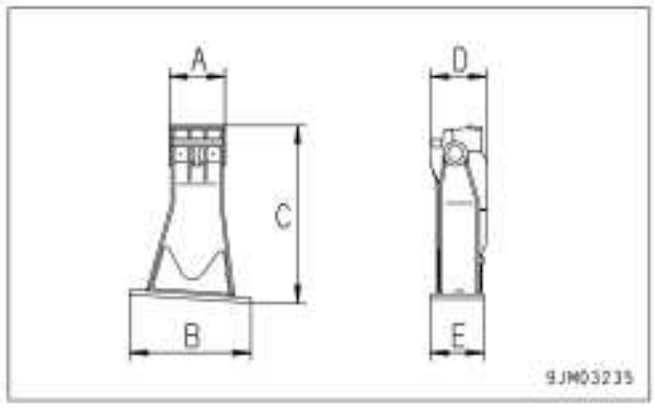


MidWestTech | Komatsu BR550JG-1 Mobile Crusher Operation & Maintenance Manual... Order the manual at mid-west-tech.com >


7. Release the travel lever lock.

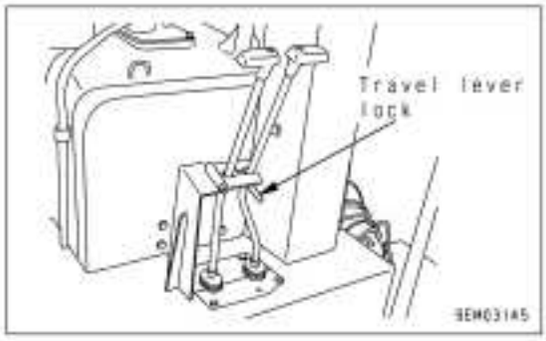

8. Pull travel control lever (4) backward slowly for starting the machine.
9. Turn the machine toward the ramps and travel to them slowly. Never operate any other lever than the travel control levers on the ramps.

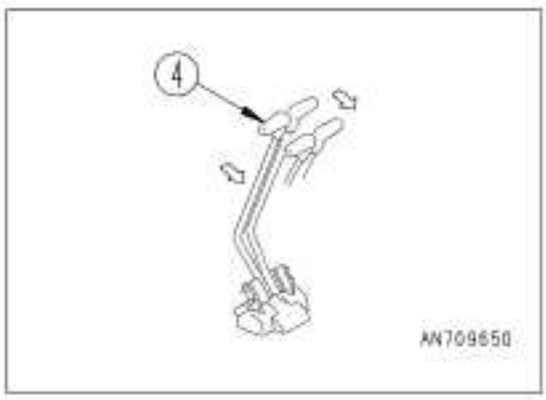

10. Stop the machine, when it takes a level posture right above the rear wheels on the trailer.

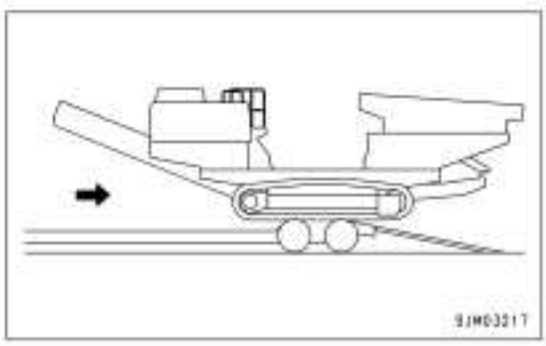

11. When climbing down the ramps, travel slowly, operating the travel control lever gently, until after the machine gets clear of the ramps completely.

MidWestTech | Komatsu BR550JG-1 Mobile Crusher Operation & Maintenance Manual... Order the manual at mid-west-tech.com >

SERVICE PROCEDURE

INITIAL 250 HOURS MAINTENANCE (ONLY AFTER THE FIRST 250 HOURS)

Carry out the following maintenance only for once after the initial 250 hours of operation.

- Replace fuel filter cartridge
- Replacement of oil in engine oil pan and engine oil filter cartridge
- Change of oil in grizzly feeder vibrator case
- Check engine valve clearance, adjust

For details of the method of replacing or maintaining, see EVERY 500 HOURS, EVERY 1000 HOURS and EVERY 2000 HOURS SERVICE.

MidWestTech | Komatsu BR550JG-1 Mobile Crusher Operation & Maintenance Manual... Order the manual at mid-west-tech.com >