TEN00036-02

Operation & Maintenance Manual

BULLDOZER

GALEO

D275A-5

SERIAL NUMBERS 25178 and up

WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept near the machine for reference and periodically reviewed by all personnel who will come into contact with it.

NOTICE

Komatsu has Operation & Maintenance Manuals written in some other languages. If a foreign language manual is necessary, contact your local distributor for availability.

KOMATSU®

MidWestTech | Komatsu Galeo D275A-5 Bulldozer Operation & Maintenance Manual | Publ... Order the manual at mid-west-tech.com >

CONTENTS

FOREWORD 1- 1
FOREWORD 1- 2
SAFETY INFORMATION 1- 5
INTRODUCTION 1- 7
FRONT/REAR, LEFT/RIGHT DIRECTIONS OF MACHINE 1- 7
NECESSARY INFORMATION 1- 8
MACHINE SERIAL NO. PLATE AND POSITION 1- 8
ENGINE SERIAL NO. PLATE AND POSITION 1- 8
BLADE SERIAL NO. PLATE POSITION 1- 9
RIPPER SERIAL NO. PLATE POSITION 1- 9
POSITION OF SERVICE METER 1- 9
TABLE TO ENTER SERIAL NO. AND DISTRIBUTOR 1- 10
SAFETY 2- 1
SAFETY 2- 2
SAFETY LABELS 2- 4
POSITIONS OF SAFETY PICTOGRAMS 2- 4
SAFETY LABELS 2- 5
GENERAL PRECAUTIONS 2- 9
PRECAUTIONS FOR OPERATION 2- 18
BEFORE STARTING ENGINE 2- 18
OPERATION 2- 20
TRANSPORTATION 2- 24
BATTERY 2- 25
TOWING 2- 27
PRECAUTIONS FOR MAINTENANCE 2- 28
OPERATION 3- 1
GENERAL VIEW 3- 2
GENERAL VIEW OF MACHINE 3- 2
GENERAL VIEW OF CONTROLS AND GAUGES 3- 3
EXPLANATION OF COMPONENTS 3- 5
FRONT PANEL 3- 5
SWITCHES 3- 32
CONTROL LEVERS, PEDALS 3- 36
DUST INDICATOR 3- 45
POWER SOURCE 3- 45
FUSE BOX 3- 46
FUSIBLE LINK 3- 49
DOOR OPEN LOCK 3- 50
SASH GLASS INTERMEDIATE LOCK 3- 51
DOOR POCKET 3- 51
ASHTRAY 3- 51
TOOL BOX 3- 52
CAR STEREO, HANDLING 3- 53
AIR CONDITIONER, HANDLING 3- 61
ACCUMULATOR, HANDLING 3- 67
OPERATION 3- 68
CHECK BEFORE STARTING ENGINE, ADJUST 3- 68
STARTING ENGINE 3- 89
OPERATIONS AND CHECKS AFTER STARTING ENGINE 3- 92

MidWestTech | Komatsu Galeo D275A-5 Bulldozer Operation & Maintenance Manual |... Order the manual at mid-west-tech.com >

STOPPING ENGINE ---- 3- 95
CHECK AFTER STOPPING ENGINE ---- 3- 95
MOVING MACHINE ---- 3- 96
STOPPING MACHINE ---- 3- 98
SHIFTING GEAR ---- 3- 99
SHIFTING BETWEEN FORWARD AND REVERSE ---- 3-103
STEERING MACHINE ---- 3-105
PRECAUTIONS FOR OPERATION ---- 3-107
PARKING MACHINE ---- 3-109
CHECK AFTER FINISHING WORK ---- 3-111
LOCKING ---- 3-111
WORK POSSIBLE USING BULLDOZER ---- 3-112
RIPPER OPERATION ---- 3-114
OPERATING METHOD FOR RIPPING OPERATIONS ---- 3-117
ADJUSTING POSTURE OF WORK EQUIPMENT ---- 3-122
TIPS FOR LONGER UNDERCARRIAGE LIFE ---- 3-125
TRANSPORTATION ---- 3-127
TRANSPORTATION PROCEDURE ---- 3-127
LOADING, UNLOADING WORK ---- 3-127
PRECAUTIONS FOR LOADING ---- 3-128
METHOD OF LIFTING MACHINE ---- 3-128
PRECAUTIONS FOR TRANSPORTATION ---- 3-129
TRAVELING ON ROADS ---- 3-129
REMOVAL OF CAB ---- 3-130
INSTALLATION OF CAB ---- 3-130
COLD WEATHER OPERATION ---- 3-131
PRECAUTIONS FOR LOW TEMPERATURE ---- 3-131
AFTER COMPLETION OF WORK ---- 3-132
AFTER COLD WEATHER ---- 3-132
LONG-TERM STORAGE ---- 3-133
BEFORE STORAGE ---- 3-133
DURING STORAGE ---- 3-133
AFTER STORAGE ---- 3-133
STARTING MACHINE AFTER LONG-TERM STORAGE ---- 3-133
TROUBLESHOOTING ---- 3-134
AFTER RUNNING OUT OF FUEL ---- 3-134
METHOD OF TOWING MACHINE ---- 3-135
IF BATTERY IS DISCHARGED ---- 3-136
OTHER TROUBLE ---- 3-139
MAINTENANCE ---- 4- 1
GUIDES TO MAINTENANCE ---- 4- 2
OUTLINES OF SERVICE ---- 4- 5
HANDLING OIL, FUEL, COOLANT, AND PERFORMING OIL CLINIC ---- 4- 5
OUTLINE OF ELECTRIC SYSTEM ---- 4- 8
WEAR PARTS ---- 4- 9
WEAR PARTS LIST ---- 4- 9
RECOMMENDED FUEL, COOLANT, AND LUBRICANT ---- 4- 10
USE OF FUEL, COOLANT AND LUBRICANTS ACCORDING TO AMBIENT TEMPERATURE ---- 4- 11
RECOMMENDED BRANDS, RECOMMENDED QUALITY FOR PRODUCTS OTHER THAN KOMATSU GENUINE OIL ---- 4- 12


MidWestTech | Komatsu Galeo D275A-5 Bulldozer Operation & Maintenance Manual |... Order the manual at mid-west-tech.com >

STANDARD TIGHTENING TORQUES FOR BOLTS AND NUTS ---- 4- 13
TORQUE LIST ---- 4- 13
PERIODIC REPLACEMENT OF SAFETY CRITICAL PARTS ---- 4- 14
SAFETY CRITICAL PARTS ---- 4- 15
MAINTENANCE SCHEDULE CHART ---- 4- 16
MAINTENANCE SCHEDULE CHART ---- 4- 16
SERVICE PROCEDURE ---- 4- 18
INITIAL 250 HOURS SERVICE (ONLY AFTER THE FIRST 250 HOURS) ---- 4- 18
WHEN REQUIRED ---- 4- 19
CHECK BEFORE STARTING ---- 4- 46
EVERY 250 HOURS SERVICE ---- 4- 47
EVERY 500 HOURS SERVICE ---- 4- 55
EVERY 1000 HOURS SERVICE ---- 4- 63
EVERY 2000 HOURS SERVICE ---- 4- 69
EVERY 4000 HOURS SERVICE ---- 4- 76
EVERY 8000 HOURS SERVICE ---- 4- 80
SPECIFICATIONS ---- 5- 1
SPECIFICATIONS ---- 5- 2
ATTACHMENTS, OPTIONS ---- 6- 1
GENERAL PRECAUTIONS ---- 6- 2
PRECAUTIONS RELATED TO SAFETY ---- 6- 2
SELECTION OF TRACK SHOE ---- 6- 3
SELECTION OF TRACK SHOES ---- 6- 3
PROCEDURE FOR SELECTING RIPPER POINT ---- 6- 4
PROCEDURE FOR SELECTING RIPPER POINT ---- 6- 4
CAP WITH LOCK, HANDLING ---- 6- 5
METHOD OF OPENING AND CLOSING CAP WITH LOCK ---- 6- 5
EFFECTIVE METHOD OF OPERATION FOR DUAL TILT DOZER ---- 6- 6
BLADE CONDITION ---- 6- 6
DOZING WORK ---- 6- 8
LEVELING (SPREADING) OPERATION ---- 6- 11
DITCHING OPERATION ---- 6- 11
BOULDER RAISING OPERATION ---- 6- 11
SIDE-CUTTING OPERATIONS ---- 6- 12
HORIZONTAL DOZING OPERATIONS FROM SIDE SLOPE (ROUGH GROUND) ---- 6- 12
SHOE SLIP CONTROL ---- 6- 13
MODE SELECTION SWITCH PANEL (SHOE SLIP CONTROL) ---- 6- 13
EFFECTIVE USE OF MODE SELECTION SYSTEM ---- 6- 14
IF MODE SELECTION SYSTEM FLASHES ---- 6- 20
HANDLING MACHINES EQUIPPED WITH KOMTRAX ---- 6- 21
BASIC PRECAUTIONS ---- 6- 21
INDEX ---- 7- 1

MidWestTech | Komatsu Galeo D275A-5 Bulldozer Operation & Maintenance Manual |... Order the manual at mid-west-tech.com >

AIR CONDITIONER, HANDLING


GENERAL LOCATIONS OF CONTROL PANEL

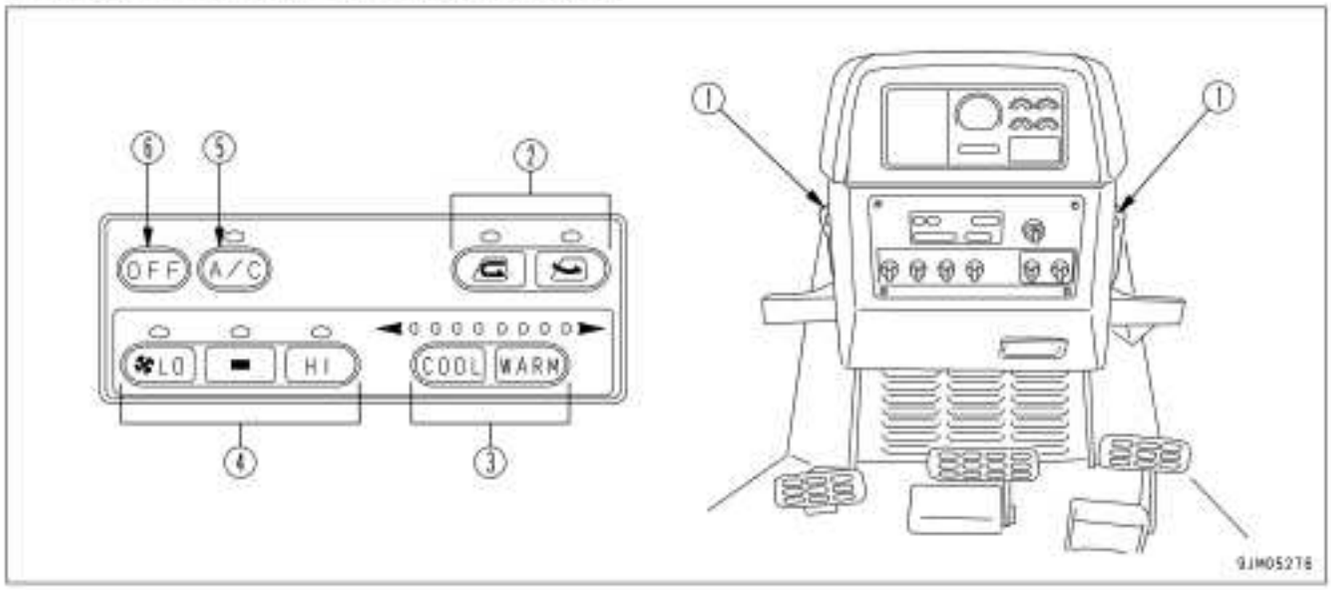

(1) Vent selector lever
(2) FRESH/RECIRC selector switch
(3) Temperature control switch
(4) Air flow selector switch
(5) Air conditioner switch
(6) OFF switch


VENT SELECTOR SWITCH (sending air to upper half of cab)

If lever (1) is pulled to position (b), the air from the air conditioner is all directed to the upper half of the cab.
This can be used when sending a cool breeze during hot weather.

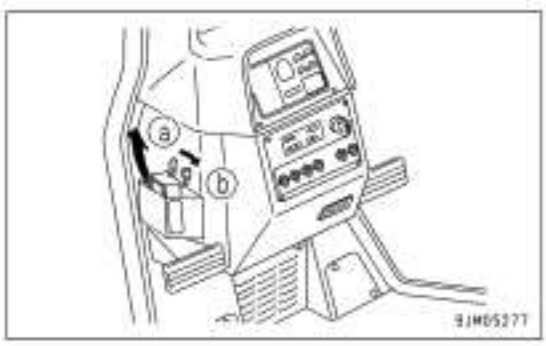

VENT SELECTOR SWITCH (sending air to feet)

If lever (1) is pushed to position (a), the air from the air conditioner is all directed to the feet.
This can be used to send warm air to the feet during cold weather.

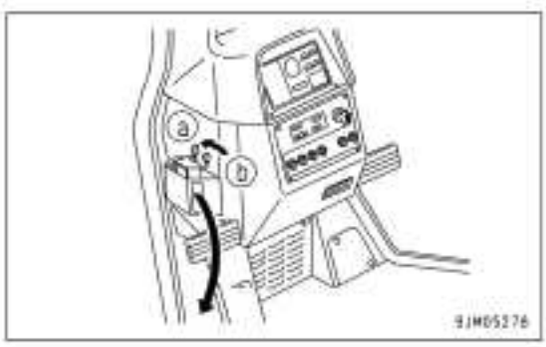


MidWestTech | Komatsu Galeo D275A-5 Bulldozer Operation & Maintenance Manual |... Order the manual at mid-west-tech.com >


PRECAUTIONS FOR TRANSPORTATION

WARNING

Determine the route for transporting the machine by taking into account the width, height and weight of the machine.

Obey all state and local laws governing the weight, width and length of a load. Observe all regulations governing wide loads.

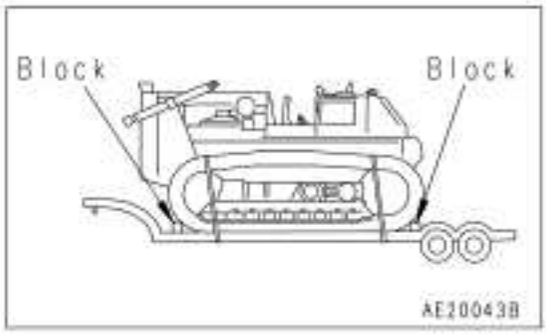

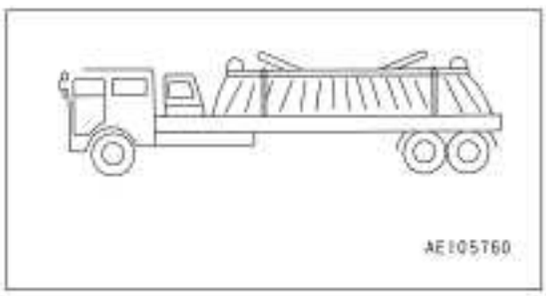

TRAVELING ON ROADS

- When traveling on paved roads, use flat shoes to protect their surface.
  Even when travelling a short distance, always place boards to protect the road surface.

REMARK
Note that the asphalt road becomes soft in summer.

MidWestTech | Komatsu Galeo D275A-5 Bulldozer Operation & Maintenance Manual |... Order the manual at mid-west-tech.com >

EVERY 500 HOURS SERVICE

CHANGE OIL IN ENGINE OIL PAN, REPLACE ENGINE OIL FILTER CARTRIDGE AND BYPASS FILTER CARTRIDGE 4- 55
REPLACE FUEL FILTER CARTRIDGE (MACHINES EQUIPPED WITHOUT ADDITIONAL FUEL FILTER CARTRIDGE) 4- 57
REPLACE POWER TRAIN OIL FILTER ELEMENT, STEERING LUBRICATING OIL FILTER ELEMENT 4- 59
CHECK OIL LEVEL IN FINAL DRIVE CASE, ADD OIL 4- 60
REPLACE HYDRAULIC TANK BREATHER ELEMENT 4- 60
REPLACE ADDITIONAL FUEL FILTER CARTRIDGE (IF EQUIPPED WITH MACHINES) 4- 61

EVERY 1000 HOURS SERVICE

REPLACE FUEL FILTER CARTRIDGE (MACHINES EQUIPPED WITH ADDITIONAL FUEL FILTER CARTRIDGE) 4- 63
CHANGE OIL IN POWER TRAIN CASE, WASH STRAINERS (POWER TRAIN PUMP STRAINER, SCAVENGING PUMP STRAINER) 4- 65
CHECK, CLEAN FUEL STRAINER 4- 67
CHECK FOR LOOSE ROPS MOUNT BOLTS 4- 67
REPLACE MAIN CORROSION RESISTOR CARTRIDGE AND SUB CORROSION RESISTOR CARTRIDGE 4- 68
CHECK TIGHTENING PARTS OF TURBOCHARGER 4- 68

EVERY 2000 HOURS SERVICE

CHANGE OIL IN HYDRAULIC TANK, REPLACE HYDRAULIC OIL FILTER ELEMENT, CLEAN HYDRAULIC TANK STRAINER 4- 69
CHANGE OIL IN FINAL DRIVE CASE 4- 71
CHANGE OIL IN DAMPER CASE, CLEAN DAMPER BREATHER 4- 72
CHECK PIVOT BEARING OIL LEVEL, ADD OIL 4- 73
CHECK OIL LEVEL IN RECOIL SPRING, ASSIST CYLINDER CASE, ADD OIL 4- 74
CLEAN ENGINE BREATHER ELEMENT 4- 74
CHECK ALTERNATOR, STARTING MOTOR 4- 75
CHECK INJECTOR 4- 75

EVERY 4000 HOURS SERVICE

CHECK WATER PUMP 4- 76
CHECK VIBRATION DAMPER 4- 76
CLEAN, CHECK TURBOCHARGER 4- 76
CHECK PLAY OF TURBOCHARGER ROTOR 4- 76
CHECK ENGINE VALVE CLEARANCE, ADJUST 4- 76
CHECKING FOR LOOSENESS OF HIGH-PRESSURE CLAMP, HARDENING OF RUBBER 4- 77
CHECKING FOR MISSING FUEL SPRAY PREVENTION CAP, HARDENING OF RUBBER 4- 78
REPLACE INJECTOR ASSEMBLY 4- 78
CHECK MAIN FRAME, WORK EQUIPMENT (BLADE, RIPPER) 4- 79

EVERY 8000 HOURS SERVICE

REPLACE HIGH-PRESSURE PIPING CLAMP 4- 80
REPLACE FUEL SPRAY PREVENTION CAP 4- 80

MidWestTech | Komatsu Galeo D275A-5 Bulldozer Operation & Maintenance Manual |... Order the manual at mid-west-tech.com >