TEN00069-02

Operation & Maintenance Manual

WHEEL LOADER GALEO

WA1200-3

SERIAL NUMBERS 50001 and up

WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept near the machine for reference and periodically reviewed by all personnel who will come into contact with it.

NOTICE

Komatsu has Operation & Maintenance Manuals written in some other languages. If a foreign language manual is necessary, contact your local distributor for availability.

KOMATSU®

MidWestTech | Komatsu Galeo WA1200-3 Wheel Loader Operation & Maintenance Manual... Order the manual at mid-west-tech.com >

5. CONTENTS

1. **Foreword** 0- 1

2. **Safety information** 0- 4

3. **Introduction** 0- 6

4. **Location of plates, table to enter serial No. and distributor** 0- 7

SAFETY

6. **General precautions** 1- 2

7. **Precautions for operation** 1-11
   - 7.1 Before starting engine 1-11
   - 7.2 After starting engine 1-12
   - 7.3 Transportation 1-17
   - 7.4 Battery 1-18
   - 7.5 Towing 1-20

8. **Precautions for maintenance** 1-21
   - 8.1 Before carrying out maintenance 1-21
   - 8.2 During maintenance 1-23
   - 8.3 Precautions with tires 1-27

9. **Position for attaching safety labels** 1-28

OPERATION

10. **General view** 2- 2
   - 10.1 General view of machine 2- 2
   - 10.2 General view of controls and gauges 2- 3

11. **Explanation of components** 2- 6
   - 11.1 Machine monitor 2- 6
   - 11.2 Switches 2-25
   - 11.3 Control levers, pedals, knobs 2-42
   - 11.4 Cap with lock 2-47
   - 11.5 Safety bar 2-48
   - 11.6 Towing pin 2-48
   - 11.7 Fuel stop knob 2-48
   - 11.8 Backup alarm 2-49
   - 11.9 Door-open lock 2-49
   - 11.10 Tool box 2-49
   - 11.11 Fuse box 2-49
   - 11.12 Slow-blow fuse 2-51
   - 11.13 Lunch box tray 2-51
   - 11.14 Taking OFF power 2-51
   - 11.15 AM/FM radio 2-52
   - 11.16 Air conditioner 2-59
   - 11.17 Precautions when handling accumulator 2-62

MidWestTech | Komatsu Galeo WA1200-3 Wheel Loader Operation & Maintenance Ma... Order the manual at mid-west-tech.com >

12. Operation 2-63
12.1 Check before starting engine 2-63
12.2 Starting engine 2-76
12.3 Operations and checks after starting engine 2-78
12.4 Stopping engine 2-80
12.5 Check after stopping engine 2-80
12.6 Moving machine off (directional speed), stopping machine 2-81
12.7 Steering machine 2-90
12.8 Operation of work equipment 2-91
12.9 Work possible using wheel loader 2-92
12.10 Precautions for operation 2-98
12.11 Adjusting work equipment posture 2-100
12.12 Parking machine 2-101
12.13 Checks after completion of operation 2-103
12.14 Locking 2-103
12.15 Handling the tires 2-104
12.16 Operation of CGC monitor 2-106
12.17 Operation of auto-greasing system 2-123

13. Transportation 2-128
13.1 Transportation procedure 2-128
13.2 Loading, unloading work 2-128
13.3 Method of securing machine 2-128

14. Cold weather operation 2-130
14.1 Precautions for low temperature 2-130
14.2 Precautions after completion of work 2-131
14.3 After cold weather 2-131
14.4 Warming-up operation 2-132

15. Long-term storage 2-133
15.1 Before storage 2-133
15.2 During storage 2-133
15.3 After storage 2-133

16. Troubleshooting 2-134
16.1 When machine runs out of fuel 2-134
16.2 Method of towing machine 2-135
16.3 If battery is discharged 2-139
16.4 Other trouble 2-143

MidWestTech | Komatsu Galeo WA1200-3 Wheel Loader Operation & Maintenance Ma... Order the manual at mid-west-tech.com >

MAINTENANCE

17. Guides to maintenance 3- 2

18. Outlines of service 3- 4
18.1 Handling oil, fuel, coolant, and performing oil clinic 3- 4
18.2 Outline of electric system 3- 7

19. Wear parts list 3- 8

20. Recommended fuel, coolant, and lubricant 3- 9
20.1 Use of fuel, coolant and lubricants according to ambient temperature 3-10
20.2 Recommended brands, recommended quality for products other than komatsu genuine oil 3-11

21. Standard tightening torques for bolts and nuts 3-12
21.1 Torque list 3-12

22. Periodic replacement of safety critical parts 3-13

23. Maintenance schedule chart 3-15
23.1 Maintenance schedule chart 3-15

24. Service Procedure 3-19
24.1 Initial 250 hours service 3-19
24.2 When required 3-20
24.3 Check before starting 3-39
24.4 Every 50 hours service 3-40
24.5 Every 100 hours service 3-41
24.6 Every 250 hours service 3-43
24.7 Every 500 hours service 3-54
24.8 Every 1000 hours service 3-59
24.9 Every 1500 hours service 3-64
24.10 Every 2000 hours service 3-65
24.11 Every 10000 hours service 3-75

SPECIFICATIONS

25. Specifications 4- 2

OPTIONS, ATTACHMENTS

26. Selecting buckets and tires 5- 2

27. Starting in cold areas 5- 3
27.1 Electric heater 5- 3

28. Service center 5- 7
28.1 Size of screws used in service center 5- 8
28.2 Location of switching valves for refilling with oil and coolant and draining 5-10


29. Emergency engine stop switch 5-12

30. Centralized breather 5-13

31. Hydraulic oil level warning display 5-14

MidWestTech | Komatsu Galeo WA1200-3 Wheel Loader Operation & Maintenance Ma... Order the manual at mid-west-tech.com >

11.2.1 SWITCHES (CGC MONITOR)

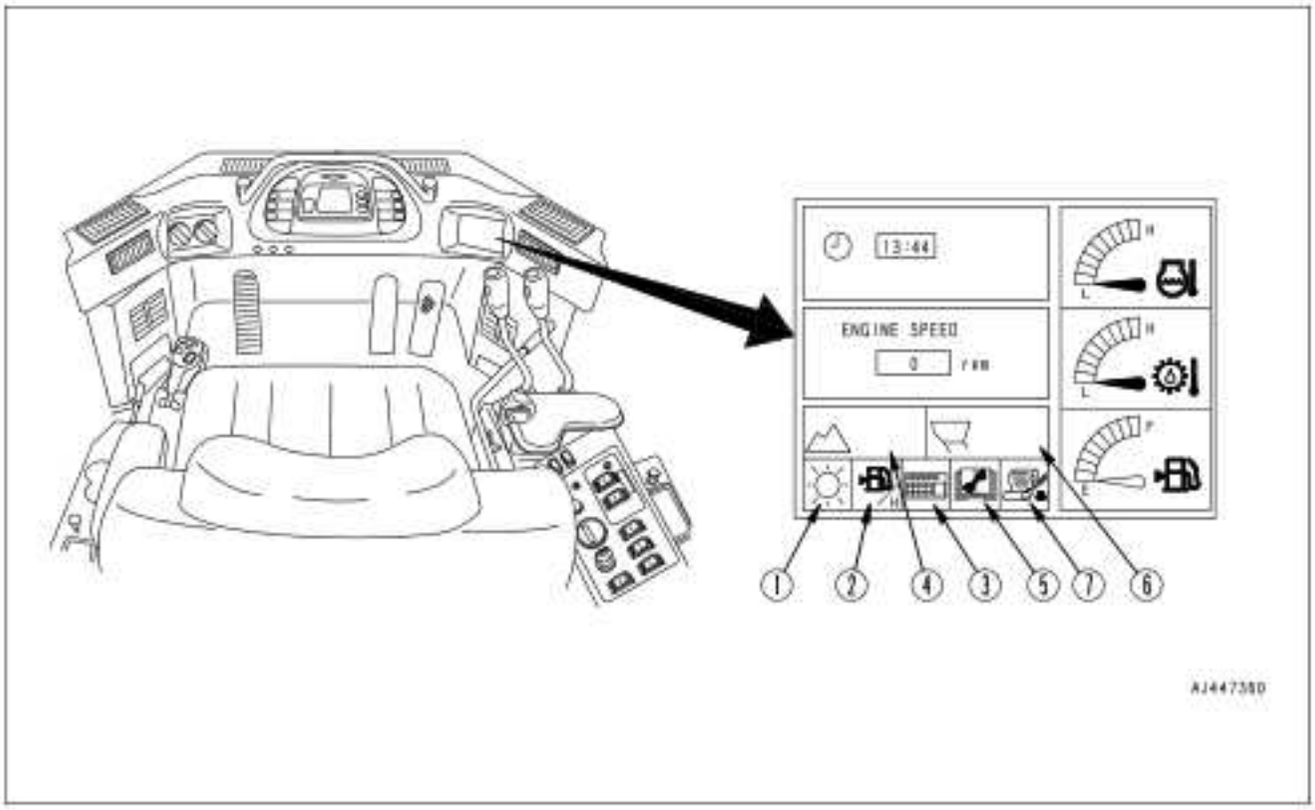


1. Brightness adjustment pop-up display switch
2. Productivity screen selection switch
3. Setting screen selection switch
4. Load meter screen selection switch
5. Maintenance screen selection switch
6. Positioner screen selection switch
7. Failure list screen selection switch

1. BRIGHTNESS ADJUSTMENT POP-UP DISPLAY SWITCH

This switch can be used to adjust the brightness and contrast of the screen.


For details of the adjustment procedure, see "12.16.1 OPERATION OF SCREEN".

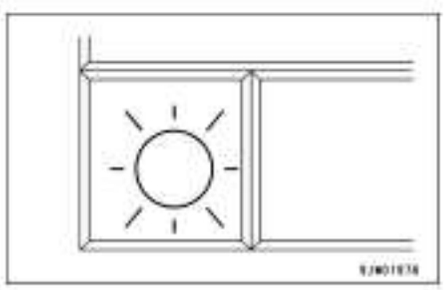

2. PRODUCTIVITY SCREEN SELECTION SWITCH

This switch is used to display the measurement interval used for calculating the present productivity, the productivity (ton/hour), and the fuel consumption (L/hour) for each operator.

For details of the operation of the productivity screen, see "12.16.1 OPERATION OF SCREEN".

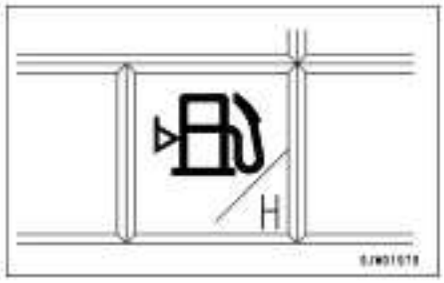

MidWestTech | Komatsu Galeo WA1200-3 Wheel Loader Operation & Maintenance Ma... Order the manual at mid-west-tech.com >

13. TRANSPORTATION

Always obey the traffic regulations when transporting the machine by road.

13.1 TRANSPORTATION PROCEDURE

As a basic rule, always transport the machine on a trailer.

When selecting the trailer, see the weights and dimensions given in Section "25. SPECIFICATIONS".

Note that the specifications for the weights and dimensions for transportation differ according to the type of tires and type of bucket.

13.2 LOADING, UNLOADING WORK


⚠ WARNING

This machine must be disassembled for transportation. When transporting the machine, please consult your Komatsu distributor.


13.3 METHOD OF SECURING MACHINE

Load the machine onto a trailer as follows:


1. Lower the work equipment slowly.
2. Apply the safety lock lever to lock work equipment control levers securely.

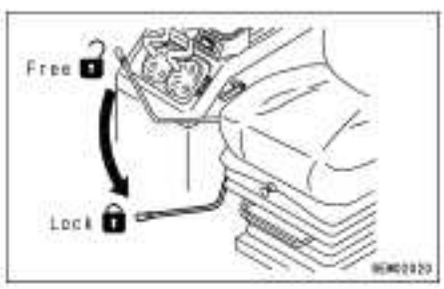

3. Set the joystick steering lever to the Neutral position, then lock the joystick steering lever with safety lock lever.

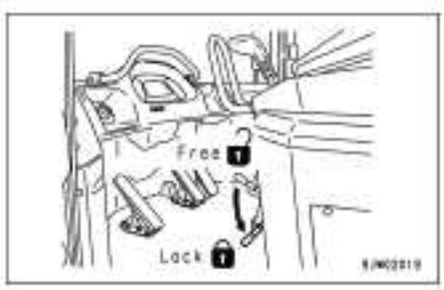

4. Turn the parking brake switch to the ON position to apply the parking brake.
5. Turn the starting switch to the OFF position to stop the engine, and pull out the starting switch key.

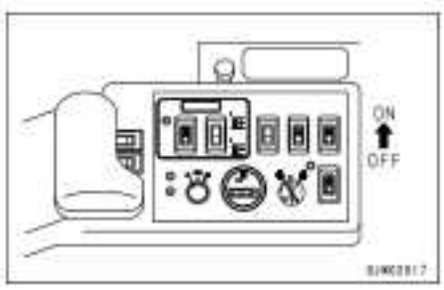

MidWestTech | Komatsu Galeo WA1200-3 Wheel Loader Operation & Maintenance Ma... Order the manual at mid-west-tech.com >

SERVICE ITEM	PAGE
EVERY 50 HOURS SERVICE	
Drain water, sediment from fuel tank	3-40
EVERY 100 HOURS SERVICE	
Check oil level in hydraulic tank, add oil	3-41
Clean element in air conditioner fresh air filter	3-42
EVERY 250 HOURS SERVICE	
Check battery electrolyte level	3-43
Check parking brake	3-44
Change oil in engine oil pan, replace engine oil filter cartridge	3-45
Replace fuel filter cartridge	3-46
Check, adjust density of cooling water additive	3-48
Replace corrosion resistor cartridge	3-49
Check, adjust fan belt	3-49
Check alternator drive belt	3-50
Check engine breather hose	3-50
Check engine hoses	3-50
Check fan	3-50
Check, adjust air conditioner compressor belt tension	3-51
Check for loose wheel hub nuts, tighten	3-52
Clean element in air conditioner recirculation filter (if equipped)	3-52
Check frame and lift arm	3-52
Check remaining amount of grease in auto-greasing tank, add grease	3-53
EVERY 500 HOURS SERVICE	
Replace transmission oil filter element	3-54
Replace brake oil filter element	3-56
Lubricate center drive shaft (3 points)	3-58

MidWestTech | Komatsu Galeo WA1200-3 Wheel Loader Operation & Maintenance Ma... Order the manual at mid-west-tech.com >