Operation & Maintenance Manual

TEN00086-00

GALEO WA250PTL-5

WHEEL LOADER

SERIAL NUMBERS WA250PTL-70025 and up

WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept near the machine for reference and periodically reviewed by all personnel who will come into contact with it.

NOTICE

Komatsu has Operation & Maintenance Manuals written in some other languages. If a foreign language manual is necessary, contact your local distributor for availability.

KOMATSU®

MidWestTech | Komatsu Galeo WA250PTL-5 Wheel Loader Operation & Maintenance Manu... Order the manual at mid-west-tech.com >

CONTENTS

FOREWORD ---- 1- 1
FOREWORD ---- 1- 2
SAFETY INFORMATION ---- 1- 5
INTRODUCTION ---- 1- 7
FRONT/REAR, LEFT/RIGHT DIRECTIONS OF MACHINE ---- 1- 7
NECESSARY INFORMATION ---- 1- 8
PRODUCT IDENTIFICATION NUMBER (PIN)/MACHINE SERIAL NO. PLATE ---- 1- 8
ENGINE SERIAL NO. PLATE ---- 1- 8
POSITION OF SERVICE METER ---- 1- 9
TABLE TO ENTER SERIAL NO. AND DISTRIBUTOR ---- 1- 9
SAFETY ---- 2- 1
SAFETY ---- 2- 2
SAFETY LABELS ---- 2- 5
LOCATION OF SAFETY LABELS ---- 2- 5
SAFETY LABELS ---- 2- 6
GENERAL PRECAUTIONS ---- 2- 11
PRECAUTIONS FOR OPERATION ---- 2- 20
STARTING ENGINE ---- 2- 20
OPERATION ---- 2- 22
TRANSPORTATION ---- 2- 28
BATTERY ---- 2- 29
TOWING ---- 2- 31
PRECAUTIONS FOR MAINTENANCE ---- 2- 32
PRECAUTIONS WITH TIRES ---- 2- 39
OPERATION ---- 3- 1
GENERAL VIEW ---- 3- 2
GENERAL VIEW OF MACHINE ---- 3- 2
GENERAL VIEW OF CONTROLS AND GAUGES ---- 3- 3
EXPLANATION OF COMPONENTS ---- 3- 5
MACHINE MONITOR ---- 3- 5
SWITCHES ---- 3- 31
CONTROL LEVERS, PEDALS ---- 3- 41
STEERING TILT LOCK LEVER ---- 3- 45
CAP AND COVER WITH LOCK ---- 3- 45
FRAME LOCK BAR ---- 3- 46
TOWING PIN ---- 3- 47
GREASE PUMP ---- 3- 47
CAB DOOR INNER LOCK ---- 3- 47
CAB DOOR OPEN LOCK ---- 3- 48
CAB WINDOW OPEN LOCK CANCEL KNOB ---- 3- 48
FUSE ---- 3- 48
SLOW BLOW FUSE ---- 3- 50
POWER OUTLET ---- 3- 50
STORAGE BOX ---- 3- 50
AM/FM RADIO-CASSETTE STEREO ---- 3- 51
AIR CONDITIONER ---- 3- 59
HANDLING CAB WIPER ---- 3- 64
OPERATION ---- 3- 65
CHECK BEFORE STARTING ENGINE, ADJUST ---- 3- 65

MidWestTech | Komatsu Galeo WA250PTL-5 Wheel Loader Operation & Maintenance... Order the manual at mid-west-tech.com >


STARTING ENGINE ---- 3- 80
OPERATIONS AND CHECKS AFTER STARTING ENGINE ---- 3- 82
STOPPING ENGINE ---- 3- 84
MOVING THE MACHINE (DIRECTIONAL, SPEED), STOPPING THE MACHINE ---- 3- 85
TURNING ---- 3- 90
OPERATION OF WORK EQUIPMENT ---- 3- 92
HANDLING HYDRAULIC QUICK COUPLER ---- 3- 94
WORK POSSIBLE USING WHEEL LOADER ---- 3- 98
PRECAUTIONS FOR OPERATION ---- 3-103
ADJUSTING WORK EQUIPMENT POSTURE ---- 3-105
PARKING MACHINE ---- 3-109
CHECKS AFTER COMPLETION OF OPERATION ---- 3-111
LOCKING ---- 3-111
HANDLING THE TIRES ---- 3-112
TRANSPORTATION ---- 3-114
TRANSPORTATION PROCEDURE ---- 3-114
LOADING, UNLOADING WORK WITH TRAILERS ---- 3-114
LIFTING MACHINE ---- 3-118
COLD WEATHER OPERATION ---- 3-120
PRECAUTIONS FOR LOW TEMPERATURE ---- 3-120
PRECAUTIONS AFTER COMPLETION OF WORK ---- 3-121
AFTER COLD WEATHER ---- 3-121
WARMING-UP OPERATION FOR STEERING HYDRAULIC CIRCUIT IN COLD WEATHER ---- 3-122
LONG-TERM STORAGE ---- 3-123
BEFORE STORAGE ---- 3-123
DURING STORAGE ---- 3-123
AFTER STORAGE ---- 3-123
TROUBLESHOOTING ---- 3-124
WHEN MACHINE RUNS OUT OF FUEL ---- 3-124
METHOD OF TOWING MACHINE ---- 3-124
IF BATTERY IS DISCHARGED ---- 3-126
OTHER TROUBLE ---- 3-129
MAINTENANCE ---- 4- 1
GUIDES TO MAINTENANCE ---- 4- 2
OUTLINES OF SERVICE ---- 4- 4
HANDLING OIL, FUEL, COOLANT, AND PERFORMING OIL CLINIC ---- 4- 4
OUTLINE OF ELECTRIC SYSTEM ---- 4- 7
WEAR PARTS ---- 4- 8
WEAR PARTS LIST ---- 4- 8
RECOMMENDED FUEL, COOLANT, AND LUBRICANT ---- 4- 9
USE OF FUEL, COOLANT AND LUBRICANTS ACCORDING TO AMBIENT TEMPERATURE ---- 4- 10
RECOMMENDED BRANDS, RECOMMENDED QUALITY FOR PRODUCTS OTHER THAN KOMATSU GENUINE OIL ---- 4- 11
STANDARD TIGHTENING TORQUES FOR BOLTS AND NUTS ---- 4- 12
TORQUE LIST ---- 4- 12
PERIODIC REPLACEMENT OF SAFETY CRITICAL PARTS ---- 4- 13
MAINTENANCE SCHEDULE CHART ---- 4- 14
MAINTENANCE SCHEDULE CHART ---- 4- 14
SERVICE PROCEDURE ---- 4- 16
INITIAL 250 HOURS SERVICE ---- 4- 16

MidWestTech | Komatsu Galeo WA250PTL-5 Wheel Loader Operation & Maintenance... Order the manual at mid-west-tech.com >

WHEN REQUIRED ---- 4- 17
CHECK BEFORE STARTING ---- 4- 35
EVERY 50 HOURS SERVICE ---- 4- 36
EVERY 100 HOURS SERVICE ---- 4- 37
EVERY 250 HOURS SERVICE ---- 4- 39
EVERY 500 HOURS SERVICE ---- 4- 45
EVERY 1000 HOURS SERVICE ---- 4- 48
EVERY 2000 HOURS SERVICE ---- 4- 52
EVERY 4000 HOURS SERVICE ---- 4- 58
SPECIFICATIONS ---- 5- 1
SPECIFICATIONS ---- 5- 2
ATTACHMENTS, OPTIONS ---- 6- 1
SELECTING BUCKET AND TIRES ---- 6- 2
HANDLING FORK TOOL ---- 6- 3
EXPLANATION OF COMPONENTS ---- 6- 3
OPERATION ---- 6- 4
INDEX ---- 7- 1

MidWestTech | Komatsu Galeo WA250PTL-5 Wheel Loader Operation & Maintenance... Order the manual at mid-west-tech.com >


CONTROL LEVERS, PEDALS

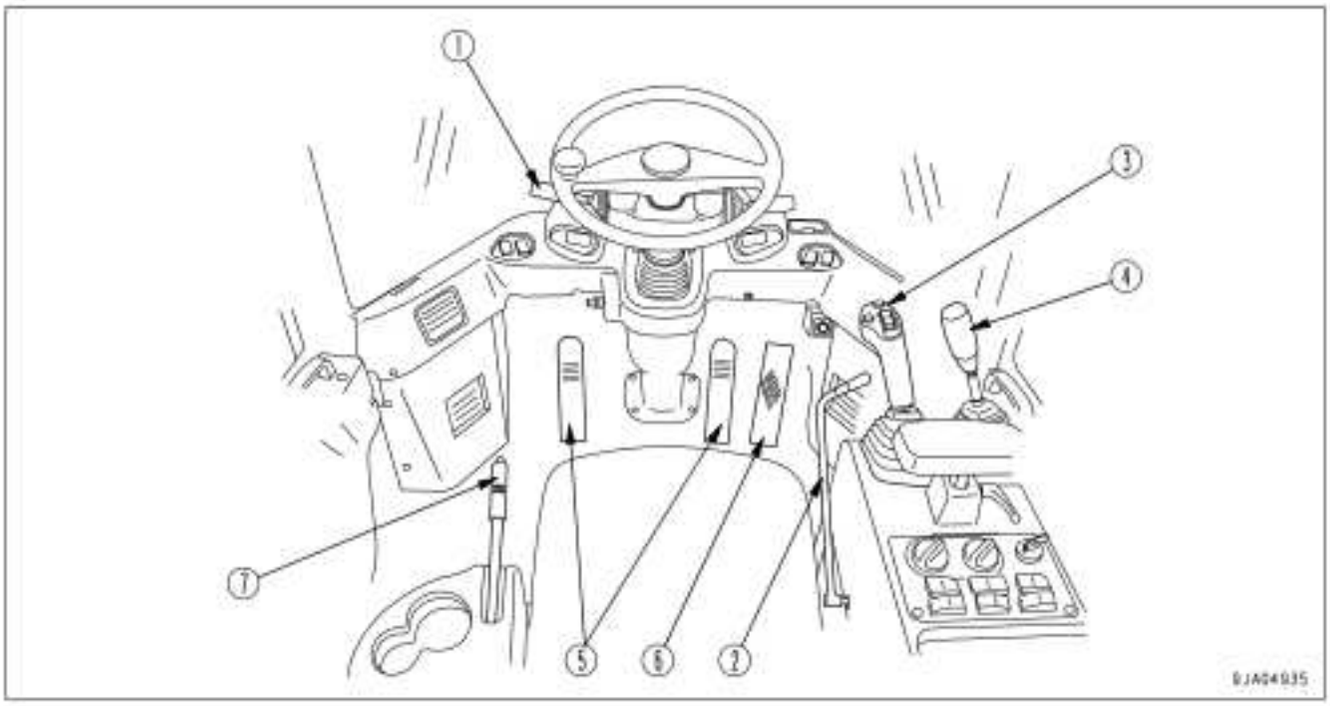

(1) Directional lever
(2) work equipment lock lever
(3) Work equipment lever
(4) Auxiliary control lever
(5) Brake pedal
(6) Accelerator pedal
(7) Parking brake lever

DIRECTIONAL LEVER

This lever (1) is used to switch the direction of travel of the machine between forward and reverse.
When starting the engine, if the directional lever is not at the N position, the engine will not start.
Position (a): FORWARD
Position N: NEUTRAL
Position (b): REVERSE

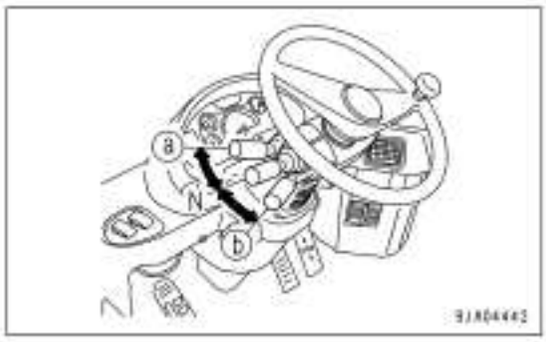

REMARK

When the starting switch is turned to the ON position, if the directional lever is not at the N position, the central warning lamp lights up and the alarm buzzer sounds intermittently.
When the directional lever is set to the N position, the central warning lamp goes out and the alarm buzzer stops.

MidWestTech | Komatsu Galeo WA250PTL-5 Wheel Loader Operation & Maintenance... Order the manual at mid-west-tech.com >

ADJUSTMENT


SEAT ADJUSTMENT

WARNING

When adjusting the position of the operator's seat, always set the work equipment lock lever to the LOCK position to prevent any accidental contact with the control levers.

- Always adjust the operator's seat before starting each operation or when the operators change shift.
- When adjusting the seat, put your back against the backrest and adjust to a position where the brake pedal can be fully depressed.

STANDARD TYPE SEAT

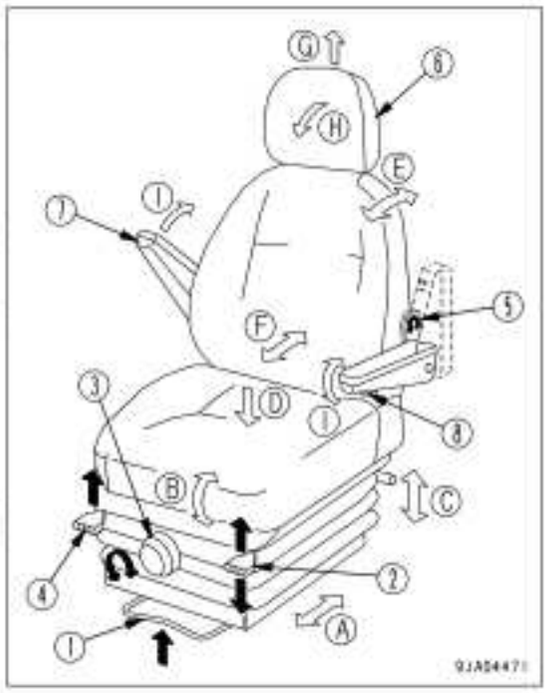

(A) Fore-and-aft adjustment
Pull lever (1) up, set the seat to the desired position, then release the lever.
Fore-and-aft adjustment: 120 mm (4.7 in)

(B) Adjusting seat angle
Move lever (2) up and push down on the rear of the seat to tilt it backward.
Move lever (2) down and push down on the front of the seat to tilt it forward.
Adjustment range: 13 degrees (Tilt forward/tilt back angle)

(C) Adjusting height of seat
Move lever (2) up or down to move the seat up or down. This lever is also used to adjust the seat angle. Adjust the seat angle and height.
Amount of adjustment: 50 mm (2.0 in)

(D) Setting seat for weight
Turn grip (3) to adjust the strength of the suspension.
Adjustment range: (Target) 50 to 120 kg (110 to 265 lb)

(E) Adjusting reclining angle
Move lever (4) up and move the backrest to the front or rear.
Adjustment range: Front 24 degrees , Rear 3 degrees \i

(F) Lumbar support
Turn grip (5) to adjust the tension applied to the lower back.

(G) Adjusting headrest height
Move the headrest (6) up or down.
Amount of adjustment: 50 mm (2.0 in)

MidWestTech | Komatsu Galeo WA250PTL-5 Wheel Loader Operation & Maintenance... Order the manual at mid-west-tech.com >


EVERY 100 HOURS SERVICE

Maintenance for every 50 hours service should be carried out at the same time.

LUBRICATE REAR AXLE PIVOT PIN

(2 places)

1. Using a grease pump, pump in grease through the grease fittings marked by the arrows.
2. After greasing, wipe off any old grease that was pushed out.

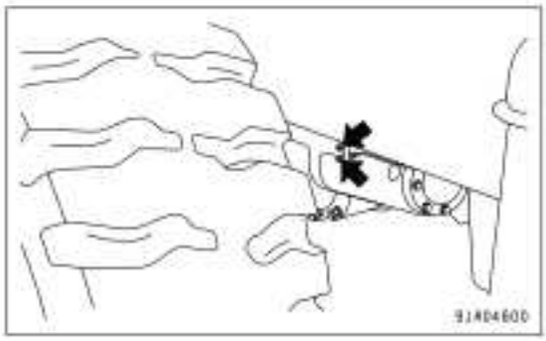


CLEAN ELEMENT IN AIR CONDITIONER FRESH AIR FILTER

⚠ WARNING

If compressed air is used, there is danger that dirt may fly and cause personal injury.
Always wear protective glasses, dust mask, and other protective equipment.

If the air conditioner has been used, the air filter should be cleaned.
Stop the air conditioner before cleaning the element.

1. Open cover (1).
2. Remove bracket (2) and filter (3) as one unit.
3. Direct dry compressed air (less than 0.69 MPa (7 kgf/ cm^2, 99.4 PSI)) to the element from inside along its folds, then direct it from outside along its folds and again from inside.
4. When installing, fit filter (3) into bracket (2), then install.

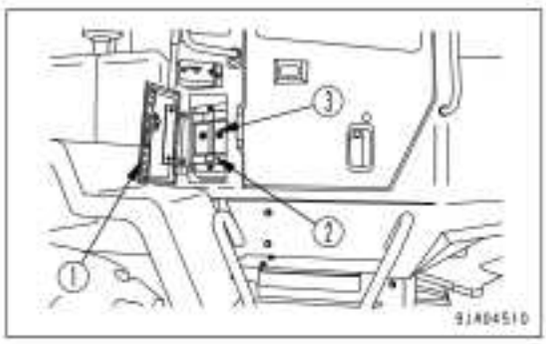

MidWestTech | Komatsu Galeo WA250PTL-5 Wheel Loader Operation & Maintenance... Order the manual at mid-west-tech.com >