Operation & Maintenance Manual

TEN00101-02

GALEO PC20MR-2

HYDRAULIC EXCAVATOR

SERIAL NUMBERS 15001 and up

WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept near the machine for reference and periodically reviewed by all personnel who will come into contact with it.

NOTICE

Komatsu has Operation & Maintenance Manuals written in some other languages. If a foreign language manual is necessary, contact your local distributor for availability.

KOMATSU®

MidWestTech | Komatsu Galeo PC20MR-2 Hydraulic Excavator Operation & Maintenance M... Order the manual at mid-west-tech.com >

CONTENTS

FOREWORD 1- 1
FOREWORD 1- 2
SAFETY INFORMATION 1- 5
INTRODUCTION 1- 7
DIRECTIONS OF MACHINE 1- 7
PRODUCT INFORMATION 1- 8
PRODUCT IDENTIFICATION NUMBER (PIN)/MACHINE SERIAL NO. PLATE 1- 8
ENGINE SERIAL NUMBER PLATE AND ITS LOCATION 1- 8
EPA NAMEPLATE 1- 9
SERVICE METER LOCATION 1- 9
YOUR MACHINE SERIAL NUMBERS AND DISTRIBUTOR 1- 10
SAFETY 2- 1
SAFETY INFORMATION 2- 2
SAFETY LABELS 2- 4
LOCATION OF SAFETY LABELS 2- 4
SAFETY LABELS 2- 5
SAFETY INFORMATION 2- 10
SAFETY MACHINE OPERATION 2- 19
STARTING ENGINE 2- 19
OPERATION 2- 21
TRANSPORTATION 2- 27
BATTERY 2- 28
TOWING 2- 30
LIFTING OBJECTS WITH BUCKET 2- 31
SAFETY MAINTENANCE INFORMATION 2- 32
OPERATION 3- 1
MACHINE VIEW ILLUSTRATIONS 3- 2
OVERALL MACHINE VIEW 3- 2
CONTROLS AND GAUGES 3- 3
DETAILED CONTROLS AND GAUGES 3- 4
MONITORING SYSTEM 3- 4
SWITCHES 3- 12
CONTROL LEVERS AND PEDALS 3- 16
WINDSHIELD 3- 22
SLIDING DOOR 3- 26
SLIDING WINDOW 3- 26
EMERGENCY ESCAPE HAMMER 3- 27
CAP WITH LOCK 3- 28
ENGINE REAR COVER 3- 29
COOLING COVER 3- 29
FRONT RIGHT COVER 3- 30
METHOD OF OPENING (TILTING) FLOOR 3- 31
FUSE 3- 36
BLOCK FUSE 3- 37
OPERATION MANUAL STORAGE 3- 37
TOOL BOX 3- 37
GREASE GUN HOLDER 3- 38
ASHTRAY 3- 38
MACHINE OPERATIONS AND CONTROLS 3- 39

MidWestTech | Komatsu Galeo PC20MR-2 Hydraulic Excavator Operation & Maintenan... Order the manual at mid-west-tech.com >


BEFORE STARTING ENGINE ---- 3- 39
STARTING ENGINE ---- 3- 54
AFTER STARTING ENGINE ---- 3- 58
STOPPING THE ENGINE ---- 3- 61
MACHINE OPERATION ---- 3- 62
STEERING THE MACHINE ---- 3- 67
SWINGING ---- 3- 69
WORK EQUIPMENT CONTROLS AND OPERATIONS ---- 3- 70
PROHIBITED OPERATIONS ---- 3- 72
GENERAL OPERATION INFORMATION ---- 3- 74
TRAVELING ON SLOPES ---- 3- 76
ESCAPE FROM MUD ---- 3- 78
WORK POSSIBLE USING COMPACT HYDRAULIC EXCAVATOR ---- 3- 79
BUCKET REPLACEMENT ---- 3- 81
PARKING MACHINE ---- 3- 82
MACHINE INSPECTION AFTER DAILY WORK ---- 3- 83
LOCKING ---- 3- 84
RUBBER SHOES (MACHINE WITH RUBBER SHOES ONLY) ---- 3- 85
TRANSPORTATION ---- 3- 90
TRANSPORTATION PROCEDURE ---- 3- 90
LOADING AND UNLOADING WITH TRAILER ---- 3- 91
LIFTING MACHINE ---- 3- 97
COLD WEATHER OPERATION ---- 3-100
COLD WEATHER OPERATION INFORMATION ---- 3-100
CAB HEATER IN COLD WEATHER ---- 3-101
AFTER DAILY WORK COMPLETION ---- 3-102
AFTER COLD WEATHER SEASON ---- 3-102
LONG TERM STORAGE ---- 3-103
BEFORE STORAGE ---- 3-103
DURING STORAGE ---- 3-103
AFTER STORAGE ---- 3-103
TROUBLES AND ACTIONS ---- 3-104
RUNNING OUT OF FUEL ---- 3-104
PHENOMENA THAT ARE NOT FAILURES ---- 3-104
TOWING THE MACHINE ---- 3-105
SEVERE JOB CONDITION ---- 3-105
DISCHARGED BATTERY ---- 3-106
OTHER TROUBLE ---- 3-110
MAINTENANCE ---- 4- 1
MAINTENANCE INFORMATION ---- 4- 2
OUTLINE OF SERVICE ---- 4- 4
HANDLING OIL, FUEL, COOLANT, AND PERFORMING OIL CLINIC ---- 4- 4
ELECTRIC SYSTEM MAINTENANCE ---- 4- 7
HANDLING HYDRAULIC SYSTEM ---- 4- 7
WEAR PARTS ---- 4- 8
WEAR PARTS LIST ---- 4- 8
RECOMMENDED FUEL, COOLANT, AND LUBRICANT ---- 4- 9
RECOMMENDED BRANDS, RECOMMENDED QUALITY FOR PRODUCTS OTHTHAN KOMATSU GENUINE OIL ---- 4- 11
TIGHTENING TORQUE SPECIFICATIONS ---- 4- 12

MidWestTech | Komatsu Galeo PC20MR-2 Hydraulic Excavator Operation & Maintenan... Order the manual at mid-west-tech.com >

TIGHTENING TORQUE LIST ---- 4- 12
SAFETY CRITICAL PARTS ---- 4- 13
SAFETY CRITICAL PARTS LIST ---- 4- 13
MAINTENANCE SCHEDULE ---- 4- 14
MAINTENANCE SCHEDULE CHART ---- 4- 14
MAINTENANCE INTERVAL FOR HYDRAULIC BREAKER ---- 4- 15
MAINTENANCE PROCEDURE ---- 4- 16
WHEN REQUIRED ---- 4- 16
CHECK BEFORE STARTING ---- 4- 40
EVERY 500 HOURS MAINTENANCE ---- 4- 41
EVERY 1000 HOURS MAINTENANCE ---- 4- 49
EVERY 2000 HOURS MAINTENANCE ---- 4- 52
SPECIFICATIONS ---- 5- 1
SPECIFICATIONS ---- 5- 2
ATTACHMENTS AND OPTIONS ---- 6- 1
ATTACHMENTS AND OPTIONS - GENERAL INFORMATION ---- 6- 2
SAFETY FIRST ---- 6- 2
ATTACHMENT INSTALLATION ---- 6- 3
BUCKET WITH HOOK ---- 6- 4
PROHIBITED OPERATIONS ---- 6- 4
WINDSHIELD WASHER ---- 6- 5
WINDSHIELD WASHER OPERATION ---- 6- 5
CHECK WINDOW WASHER FLUID LEVEL, ADD FLUID ---- 6- 5
MACHINE READY FOR ATTACHMENT ---- 6- 6
LOCATIONS ---- 6- 6
HYDRAULIC CIRCUIT ---- 6- 8
ATTACHMENT OPERATIONS ---- 6- 10
LONG TERM STORAGE ---- 6- 11
SPECIFICATIONS ---- 6- 11
CHANGING MACHINE CONTROL PATTERN (IF PATTERN CHANGE VALVE EQUIPPED) ---- 6- 12
CONTROL PATTERN CHANGE PROCEDURE ---- 6- 12
MACHINE CONTROL PATTERNS ---- 6- 13
ATTACHMENT GUIDE ---- 6- 14
ATTACHMENT COMBINATIONS ---- 6- 14
RECOMMENDED ATTACHMENT OPERATIONS ---- 6- 15
HYDRAULIC BREAKER ---- 6- 15
INDEX ---- 7- 1

MidWestTech | Komatsu Galeo PC20MR-2 Hydraulic Excavator Operation & Maintenan... Order the manual at mid-west-tech.com >

CONTROL LEVERS AND PEDALS

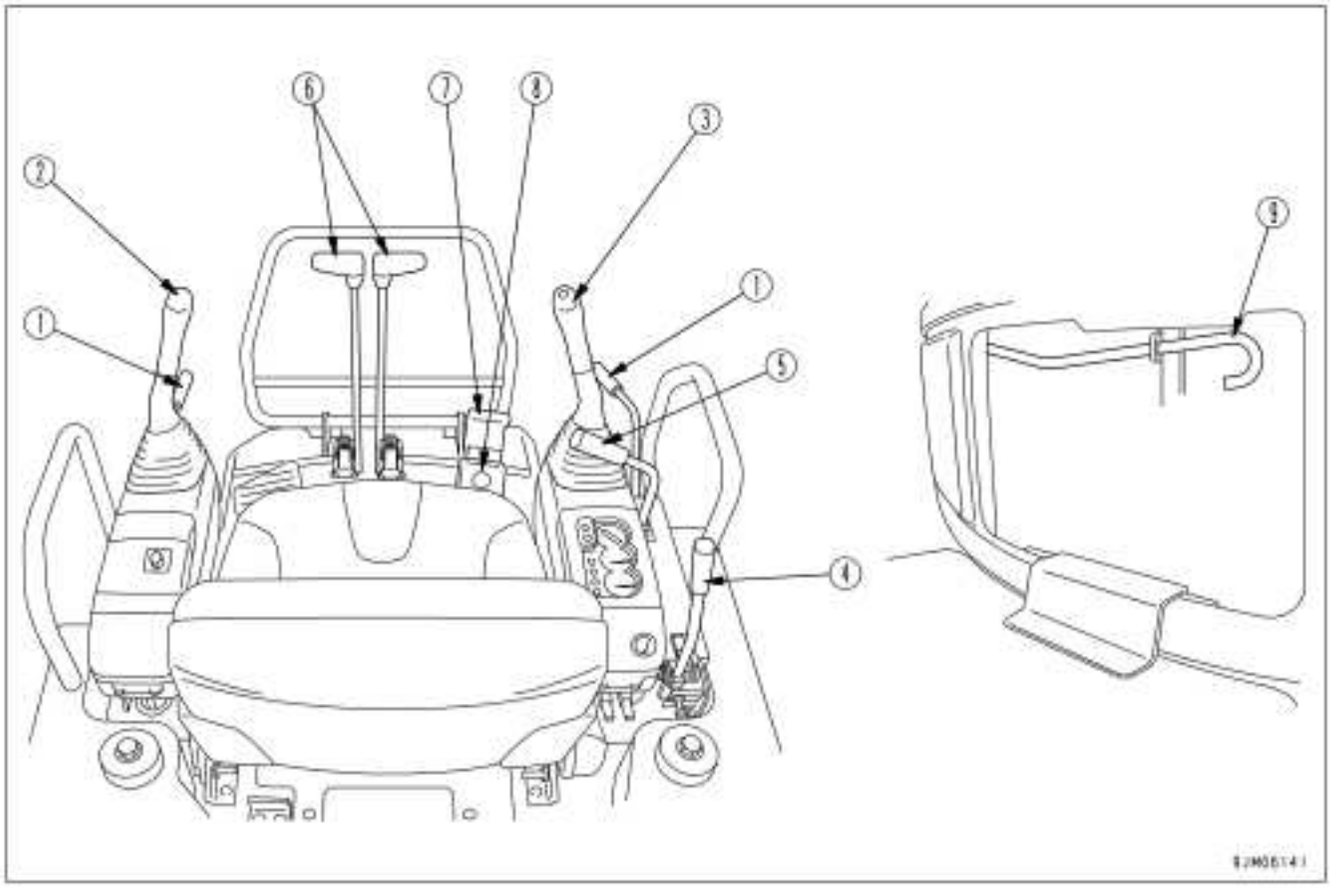

(1) Lock lever
(Machine equipped with cab: left side only)
(2) Left work equipment control lever
(3) Right work equipment control lever
(4) Fuel control lever
(5) Blade control lever
(6) Travel levers (with pedals)
(7) Swing lock cover
(8) Boom swing control pedal
(9) Floor lock cancel lever

MidWestTech | Komatsu Galeo PC20MR-2 Hydraulic Excavator Operation & Maintenan... Order the manual at mid-west-tech.com >


Lubricating Work Equipment

NOTICE


- **When breaking in a new machine, carry out lubrication every 10 hours for the first 100 hours of operation.**
- **If any abnormal sound comes from the greasing point, carry out greasing regardless of the inspection and maintenance interval.**
- **After carrying out digging work in water, always lubricate the pins that were under water.**

- Prepare a grease gun


1. Set the machine to the greasing posture shown on the right diagram, lower the work equipment to the ground, then stop the engine.
2. Using a grease pump, pump in grease through the grease fittings shown by arrows.
3. After greasing, wipe off any old grease that was pushed out.

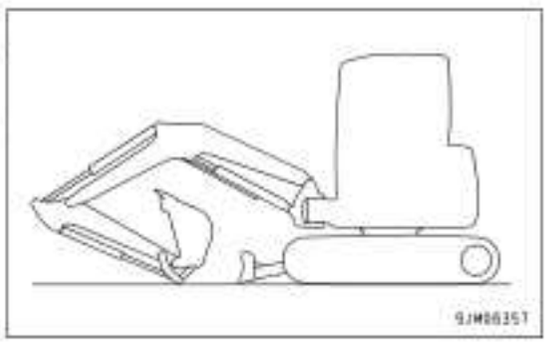


(1) Bucket - Link connecting pins (1 place)
(2) Arm - Bucket connection pin (1 place)
(3) Arm - Link coupling pin (1 place)
(4) Bucket cylinder rod end (1 place)
(5) Link coupling pin (1 place)

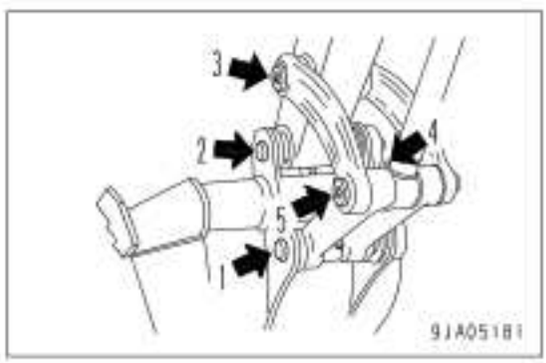

(6) Blade cylinder foot pin (1 place)
(7) Blade cylinder rod end (1 place)
(8) Blade foot pin (2 places)

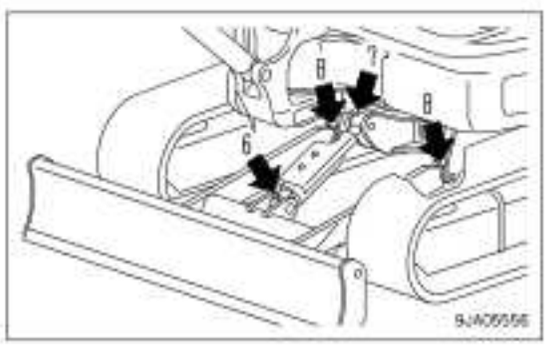


(9) Boom swing bracket pin (2 places)
(10) Boom swing cylinder rod end pin (1 place)
(11) Boom foot pin (1 place)
(12) Boom cylinder foot pin (1 place)

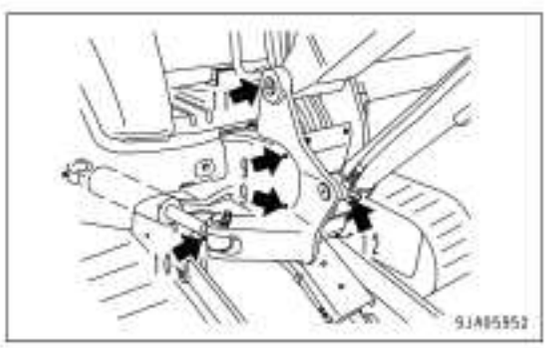

MidWestTech | Komatsu Galeo PC20MR-2 Hydraulic Excavator Operation & Maintenan... Order the manual at mid-west-tech.com >

	Working ranges		Unit	PC20MR-2
A	Max. digging reach		mm (ft in)	4,300 (13' 10")
B	Max. digging depth		mm (ft in)	2,350 (7' 9")
C	Max. digging height	Canopy specified	mm (ft in)	4,100 (13' 5")
		Cab specified	mm (ft in)	4,100 (13' 5")
D	Max. vertical wall depth		mm (ft in)	1,950 (6' 5")
E	Max. dumping height	Canopy specified	mm (ft in)	3,450 (11' 4")
		Cab specified	mm (ft in)	2,820 (9' 3")
F	Minimum swing radius of work equipment		mm (ft in)	2,820 (9' 3")
	Minimum swing radius of work equipment (at boom swing)		mm (ft in)	1,790 (5' 11")
G	Max. reach at ground level		mm (ft in)	1,450 (4' 8")
H	Max. blade lifting height		mm (ft in)	340 (1' 1")
I	Max. blade lowering depth		mm (ft in)	230 (9.1")

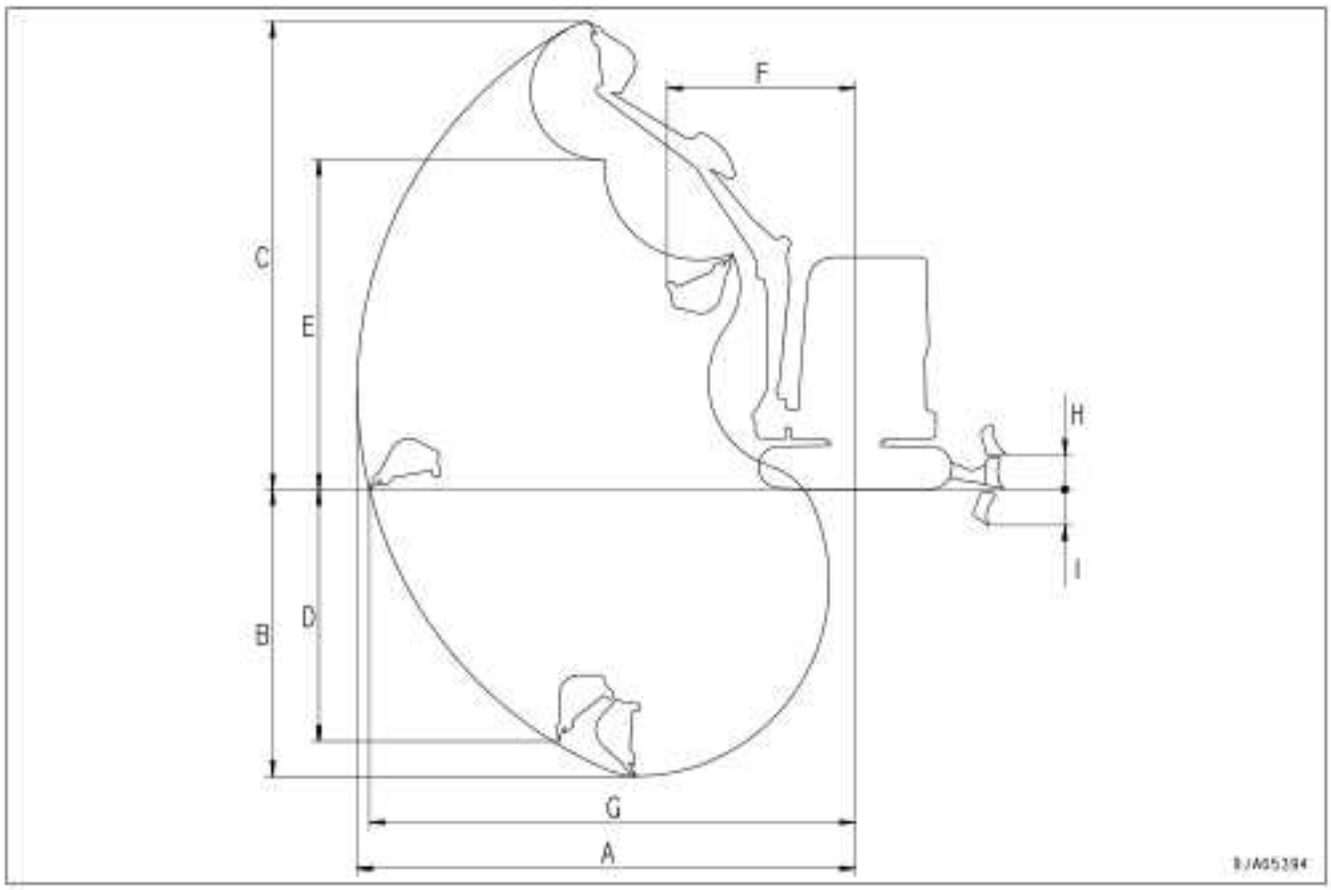

MidWestTech | Komatsu Galeo PC20MR-2 Hydraulic Excavator Operation & Maintenan... Order the manual at mid-west-tech.com >