Operation & Maintenance Manual

TEN00115-00

[redacted]

GALEO PC27MR-2 PC35MR-2

HYDRAULIC EXCAVATOR

SERIAL NUMBERS PC27MR-15001 and up
PC35MR- 6736

WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept near the machine for reference and periodically reviewed by all personnel who will come into contact with it.

NOTICE

Komatsu has Operation & Maintenance Manuals written in some other languages. If a foreign language manual is necessary, contact your local distributor for availability.

KOMATSU®

MidWestTech | Komatsu Galeo PC27MR-2, PC35MR-2 Hydraulic Excavator Operation & Ma... Order the manual at mid-west-tech.com >

CONTENTS

FOREWORD 1- 1
FOREWORD 1- 2
SAFETY INFORMATION 1- 5
INTRODUCTION 1- 7
DIRECTIONS OF MACHINE 1- 7
PRODUCT INFORMATION 1- 8
PRODUCT IDENTIFICATION NUMBER (PIN)/MACHINE SERIAL NO. PLATE 1- 8
ENGINE SERIAL NUMBER PLATE AND ITS LOCATION 1- 8
EMISSION CONTROL INFORMATION LABEL AND ITS LOCATION 1- 9
SERVICE METER LOCATION 1- 9
YOUR MACHINE SERIAL NUMBERS AND DISTRIBUTOR 1- 10
SAFETY 2- 1
SAFETY INFORMATION 2- 2
SAFETY LABELS 2- 4
LOCATION OF SAFETY LABELS 2- 4
SAFETY LABELS 2- 5
SAFETY INFORMATION 2- 10
SAFETY MACHINE OPERATION 2- 19
STARTING ENGINE 2- 19
OPERATION 2- 21
TRANSPORTATION 2- 27
BATTERY 2- 28
TOWING 2- 30
LIFTING OBJECTS WITH BUCKET 2- 31
SAFETY MAINTENANCE INFORMATION 2- 32
OPERATION 3- 1
MACHINE VIEW ILLUSTRATIONS 3- 2
OVERALL MACHINE VIEW 3- 2
CONTROLS AND GAUGES 3- 3
DETAILED CONTROLS AND GAUGES 3- 4
MONITORING SYSTEM 3- 4
SWITCHES 3- 12
CONTROL LEVERS AND PEDALS 3- 16
WINDSHIELD 3- 22
SLIDING DOOR 3- 26
SLIDING WINDOW 3- 26
EMERGENCY ESCAPE HAMMER 3- 27
COVER WITH LOCK 3- 28
ENGINE REAR COVER 3- 29
COOLING COVER 3- 29
MUD COVER 3- 30
METHOD OF OPENING (TILTING) FLOOR 3- 31
FUSE 3- 36
BLOCK FUSE 3- 37
OPERATION MANUAL STORAGE 3- 38
TOOL BOX 3- 38
GREASE GUN HOLDER 3- 38
ASHTRAY 3- 38
MACHINE OPERATIONS AND CONTROLS 3- 39

MidWestTech | Komatsu Galeo PC27MR-2, PC35MR-2 Hydraulic Excavator Operation... Order the manual at mid-west-tech.com >


BEFORE STARTING ENGINE ---- 3- 39
STARTING ENGINE ---- 3- 54
AFTER STARTING ENGINE ---- 3- 58
STOPPING THE ENGINE ---- 3- 61
MACHINE OPERATION ---- 3- 62
STEERING THE MACHINE ---- 3- 67
SWINGING ---- 3- 69
WORK EQUIPMENT CONTROLS AND OPERATIONS ---- 3- 70
PROHIBITED OPERATIONS ---- 3- 72
GENERAL OPERATION INFORMATION ---- 3- 74
TRAVELING ON SLOPES ---- 3- 76
ESCAPE FROM MUD ---- 3- 78
WORK POSSIBLE USING COMPACT HYDRAULIC EXCAVATOR ---- 3- 79
BUCKET REPLACEMENT ---- 3- 81
PARKING MACHINE ---- 3- 82
MACHINE INSPECTION AFTER DAILY WORK ---- 3- 83
LOCKING ---- 3- 84
RUBBER SHOES AND ROAD LINERS ---- 3- 85
TRANSPORTATION ---- 3- 90
TRANSPORTATION PROCEDURE ---- 3- 90
LOADING AND UNLOADING WITH TRAILER ---- 3- 91
LIFTING MACHINE ---- 3- 97
COLD WEATHER OPERATION ---- 3-100
COLD WEATHER OPERATION INFORMATION ---- 3-100
CAB HEATER IN COLD WEATHER ---- 3-101
AFTER DAILY WORK COMPLETION ---- 3-102
AFTER COLD WEATHER SEASON ---- 3-102
LONG TERM STORAGE ---- 3-103
BEFORE STORAGE ---- 3-103
DURING STORAGE ---- 3-104
AFTER STORAGE ---- 3-104
TROUBLES AND ACTIONS ---- 3-105
RUNNING OUT OF FUEL ---- 3-105
PHENOMENA THAT ARE NOT FAILURES ---- 3-105
TOWING THE MACHINE ---- 3-106
SEVERE JOB CONDITION ---- 3-106
DISCHARGED BATTERY ---- 3-107
OTHER TROUBLE ---- 3-111
MAINTENANCE ---- 4- 1
MAINTENANCE INFORMATION ---- 4- 2
OUTLINE OF SERVICE ---- 4- 4
HANDLING OIL, FUEL, COOLANT, AND PERFORMING OIL CLINIC ---- 4- 4
ELECTRIC SYSTEM MAINTENANCE ---- 4- 7
HANDLING HYDRAULIC SYSTEM ---- 4- 7
WEAR PARTS ---- 4- 8
WEAR PARTS LIST ---- 4- 8
LUBRICANTS, FUEL AND COOLANT SPECIFICATIONS ---- 4- 9
TIGHTENING TORQUE SPECIFICATIONS ---- 4- 13
TIGHTENING TORQUE LIST ---- 4- 13
SAFETY CRITICAL PARTS ---- 4- 14

MidWestTech | Komatsu Galeo PC27MR-2, PC35MR-2 Hydraulic Excavator Operation... Order the manual at mid-west-tech.com >

SAFETY CRITICAL PARTS LIST ---- 4- 14
MAINTENANCE SCHEDULE ---- 4- 15
MAINTENANCE SCHEDULE CHART ---- 4- 15
MAINTENANCE INTERVAL FOR HYDRAULIC BREAKER ---- 4- 16
MAINTENANCE PROCEDURE ---- 4- 17
WHEN REQUIRED ---- 4- 17
CHECK BEFORE STARTING ---- 4- 44
EVERY 500 HOURS MAINTENANCE ---- 4- 45
EVERY 1000 HOURS MAINTENANCE ---- 4- 54
EVERY 2000 HOURS MAINTENANCE ---- 4- 56
SPECIFICATIONS ---- 5- 1
SPECIFICATIONS ---- 5- 2
ATTACHMENTS AND OPTIONS ---- 6- 1
ATTACHMENTS AND OPTIONS - GENERAL INFORMATION ---- 6- 2
SAFETY FIRST ---- 6- 2
ATTACHMENT INSTALLATION ---- 6- 3
BUCKET WITH HOOK ---- 6- 4
PROHIBITED OPERATIONS ---- 6- 4
AIR CONDITIONER ---- 6- 5
CONTROL PANEL AND COMPONENTS ---- 6- 5
AIR CONDITIONER CONTROLS ---- 6- 6
AIR CONDITIONER MAINTENANCE ---- 6- 7
WINDSHIELD WASHER ---- 6- 11
WINDSHIELD WASHER OPERATION ---- 6- 11
CHECK WINDOW WASHER FLUID LEVEL, ADD FLUID ---- 6- 11
MACHINE READY FOR ATTACHMENT ---- 6- 12
LOCATIONS ---- 6- 12
HYDRAULIC CIRCUIT ---- 6- 14
ATTACHMENT OPERATIONS ---- 6- 16
LONG TERM STORAGE ---- 6- 17
SPECIFICATIONS ---- 6- 17
CHANGING MACHINE CONTROL PATTERN (IF PATTERN CHANGE VALVE EQUIPPED) ---- 6- 18
CONTROL PATTERN CHANGE PROCEDURE ---- 6- 18
MACHINE CONTROL PATTERNS ---- 6- 19
POWER ANGLE BLADE ---- 6- 20
BLADE CONTROL LEVER ---- 6- 20
WHEN REQUIRED ---- 6- 21
EVERY 500 HOURS SERVICE ---- 6- 21
WEAR PARTS LIST ---- 6- 22
SPECIFICATIONS ---- 6- 22
ATTACHMENT GUIDE ---- 6- 23
ATTACHMENT COMBINATIONS ---- 6- 23
RECOMMENDED ATTACHMENT OPERATIONS ---- 6- 24
HYDRAULIC BREAKER ---- 6- 24
HIGH-ALTITUDE SPECIFICATION MACHINE ---- 7- 1
LOCATIONS ---- 7- 2
MAINTENANCE PROCEDURE ---- 7- 3
EVERY 2000 HOURS MAINTENANCE ---- 7- 3
SPECIFICATIONS ---- 7- 4
INDEX ---- 8- 1

MidWestTech | Komatsu Galeo PC27MR-2, PC35MR-2 Hydraulic Excavator Operation... Order the manual at mid-west-tech.com >

CONTROL LEVERS AND PEDALS

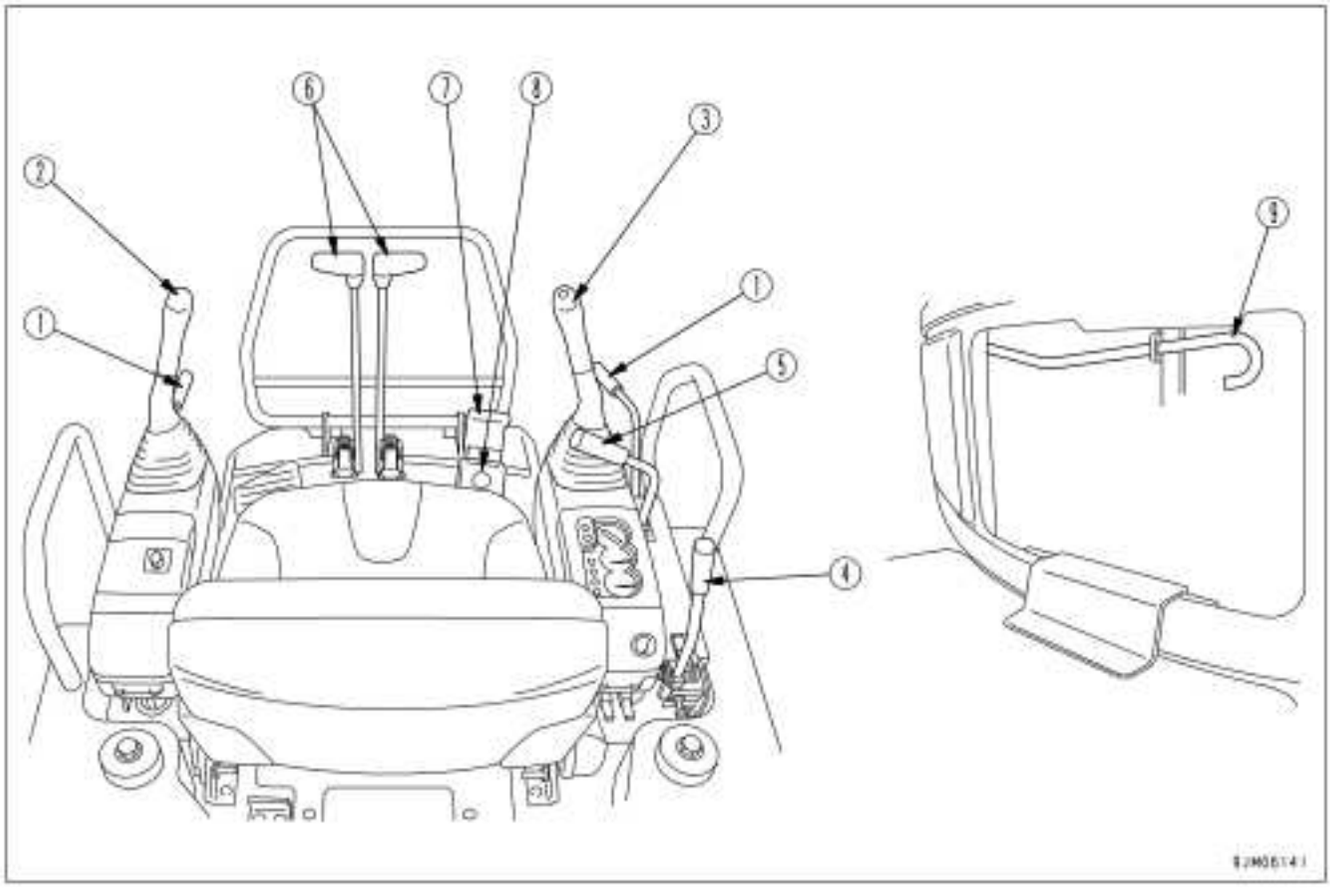

(1) Lock lever
(Machine equipped with cab: left side only)
(2) Left work equipment control lever
(3) Right work equipment control lever
(4) Fuel control lever
(5) Blade control lever
(6) Travel levers (with pedals)
(7) Swing lock cover
(8) Boom swing control pedal
(9) Floor lock cancel lever

MidWestTech | Komatsu Galeo PC27MR-2, PC35MR-2 Hydraulic Excavator Operation... Order the manual at mid-west-tech.com >

MAINTENANCE SCHEDULE

If the machine is equipped with a hydraulic breaker, the maintenance schedule for some parts will be different. For details, see "MAINTENANCE INTERVAL FOR HYDRAULIC BREAKER (PAGE 4-16)" to confirm the correct maintenance schedule when carrying out maintenance.

MAINTENANCE SCHEDULE CHART

WHEN REQUIRED
CHECK, CLEAN AND REPLACE AIR CLEANER ELEMENT ---- 4- 17
CLEAN INSIDE OF COOLING SYSTEM ---- 4- 20
CHECK LEVEL OF BATTERY ELECTROLYTE ---- 4- 24
CLEAN WATER SEPARATOR ELEMENT ---- 4- 26
DRAIN WATER AND SEDIMENT FROM FUEL TANK ---- 4- 26
CHECK AND TIGHTEN TRACK SHOE BOLTS (Machine equipped with road liner, steel shoe) ---- 4- 27
CHECK AND ADJUST TRACK TENSION (Machine equipped with road liner, steel shoe) ---- 4- 28
CHECK, RUBBER SHOES OR ROAD LINERS (Machine equipped with rubber shoes, road liner) ---- 4- 30
CHECK AND ADJUST RUBBER SHOE TENSION (Machine equipped with rubber shoes) ---- 4- 32
REPLACE RUBBER SHOES (Machine equipped with rubber shoes) ---- 4- 34
REPLACE ROAD LINERS (Machine equipped with road liner) ---- 4- 36
REPLACE BUCKET TEETH ---- 4- 37
CHECK WINDOW WASHER FLUID LEVEL, ADD FLUID ---- 4- 40
CHECK, CLEAN AND LUBRICATE CAB SLIDE DOOR RAIL AND ROLLER ---- 4- 41
LUBRICATING ---- 4- 41
BLEEDING AIR FROM HYDRAULIC SYSTEM ---- 4- 42

CHECKS BEFORE STARTING

EVERY 500 HOURS MAINTENANCE
LUBRICATING ---- 4- 45
CHANGE OIL IN ENGINE OIL PAN, REPLACE ENGINE OIL FILTER CARTRIDGE ---- 4- 48
REPLACE FUEL FILTER CARTRIDGE ---- 4- 49
CHECK OIL LEVEL IN FINAL DRIVE CASE, ADD OIL ---- 4- 51
CLEAN AND INSPECT RADIATOR FINS AND OIL COOLER FINS ---- 4- 52
CHECK AND ADJUST COOLING FAN BELT TENSION ---- 4- 53

EVERY 1000 HOURS MAINTENANCE
REPLACE HYDRAULIC OIL FILTER ELEMENT ---- 4- 54
CHANGE OIL IN FINAL DRIVE CASE ---- 4- 55
CHECK ENGINE VALVE CLEARANCE, ADJUST ---- 4- 55

EVERY 2000 HOURS MAINTENANCE
CHANGE OIL IN HYDRAULIC TANK, CLEAN STRAINER ---- 4- 56
CHECK ALTERNATOR, STARTING MOTOR ---- 4- 58

MidWestTech | Komatsu Galeo PC27MR-2, PC35MR-2 Hydraulic Excavator Operation... Order the manual at mid-west-tech.com >

WEAR PARTS LIST

Part No.	Part Name	Q'ty
20S-910-3131	Cutting edge	1
(02090-10840)	(Bolt)	(7)
(02290-10813)	(Nut)	(7)
20U-910-1980	End bit	2
(02090-10840)	(Bolt)	(6)
(02090-10813)	(Nut)	(6)

SPECIFICATIONS

Blade (width x height)		1770 mm x 380 mm (69.7 in x 15.0 in)
RAISE amount	Rubber shoes	390 mm (15.4 in)
	Steel shoes	382 mm (15.1 in)
LOWER amount	Rubber shoes	405 mm (16.0 in)
	Steel shoes	413 mm (16.3 in)
Amount of angle		Left and right each 20°

MidWestTech | Komatsu Galeo PC27MR-2, PC35MR-2 Hydraulic Excavator Operation... Order the manual at mid-west-tech.com >