TEN00139-07

Operation & Maintenance Manual

BULLDOZER

D155AX-6

SERIAL NUMBERS 80001 and up

ecot3

WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept near the machine for reference and periodically reviewed by all personnel who will come into contact with it.

NOTICE

Komatsu has Operation & Maintenance Manuals written in some other languages. If a foreign language manual is necessary, contact your local distributor for availability.


KOMATSU®

MidWestTech | Komatsu D155AX-6 Bulldozer Operation & Maintenance Manual | Publicati... Order the manual at mid-west-tech.com >

DOOR POCKET ---- 3- 67
ASHTRAY ---- 3- 67
CAR RADIO, HANDLING ---- 3- 68
CAR STEREO, HANDLING ---- 3- 73
HANDLING AIR CONDITIONER ---- 3- 80
OPERATION ---- 3- 94
CHECK BEFORE STARTING ENGINE, ADJUST ---- 3- 94
STARTING ENGINE ---- 3-117
OPERATIONS AND CHECKS AFTER STARTING ENGINE ---- 3-121
STOPPING ENGINE ---- 3-125
MOVING MACHINE ---- 3-126
STOPPING MACHINE ---- 3-128
SHIFTING GEAR ---- 3-129
SHIFTING BETWEEN FORWARD AND REVERSE ---- 3-135
STEERING MACHINE ---- 3-137
PRECAUTIONS FOR OPERATION ---- 3-139
PARKING MACHINE ---- 3-141
CHECK AFTER STOPPING ENGINE ---- 3-142
CHECK AFTER FINISHING WORK ---- 3-143
LOCKING ---- 3-143
RIPPER OPERATION ---- 3-144
OPERATING METHOD FOR RIPPING OPERATIONS ---- 3-146
WORK POSSIBLE USING BULLDOZER ---- 3-151
ADJUSTING POSTURE OF WORK EQUIPMENT ---- 3-153
TIPS FOR LONGER UNDERCARRIAGE LIFE ---- 3-162
TRANSPORTATION ---- 3-165
LOADING, UNLOADING WORK ---- 3-165
METHOD OF LIFTING MACHINE ---- 3-168
PRECAUTIONS FOR TRANSPORTATION ---- 3-170
TRAVELING ON ROADS ---- 3-170
REMOVAL OF CAB ---- 3-171
COLD WEATHER OPERATION ---- 3-173
PRECAUTIONS FOR LOW TEMPERATURE ---- 3-173
AFTER COMPLETION OF WORK ---- 3-175
AFTER COLD WEATHER ---- 3-175
LONG-TERM STORAGE ---- 3-176
BEFORE STORAGE ---- 3-176
DURING STORAGE ---- 3-176
AFTER STORAGE ---- 3-176
STARTING MACHINE AFTER LONG-TERM STORAGE ---- 3-176
TROUBLESHOOTING ---- 3-177
AFTER RUNNING OUT OF FUEL ---- 3-177
METHOD OF TOWING MACHINE ---- 3-179
IF BATTERY IS DISCHARGED ---- 3-180
OTHER TROUBLE ---- 3-183
MAINTENANCE ---- 4- 1
GUIDES TO MAINTENANCE ---- 4- 2
OUTLINES OF SERVICE ---- 4- 5
HANDLING OIL, FUEL, COOLANT, AND PERFORMING OIL CLINIC ---- 4- 5
OUTLINE OF ELECTRIC SYSTEM ---- 4- 8

MidWestTech | Komatsu D155AX-6 Bulldozer Operation & Maintenance Manual | Publ... Order the manual at mid-west-tech.com >

MONITOR SWITCHES PORTION

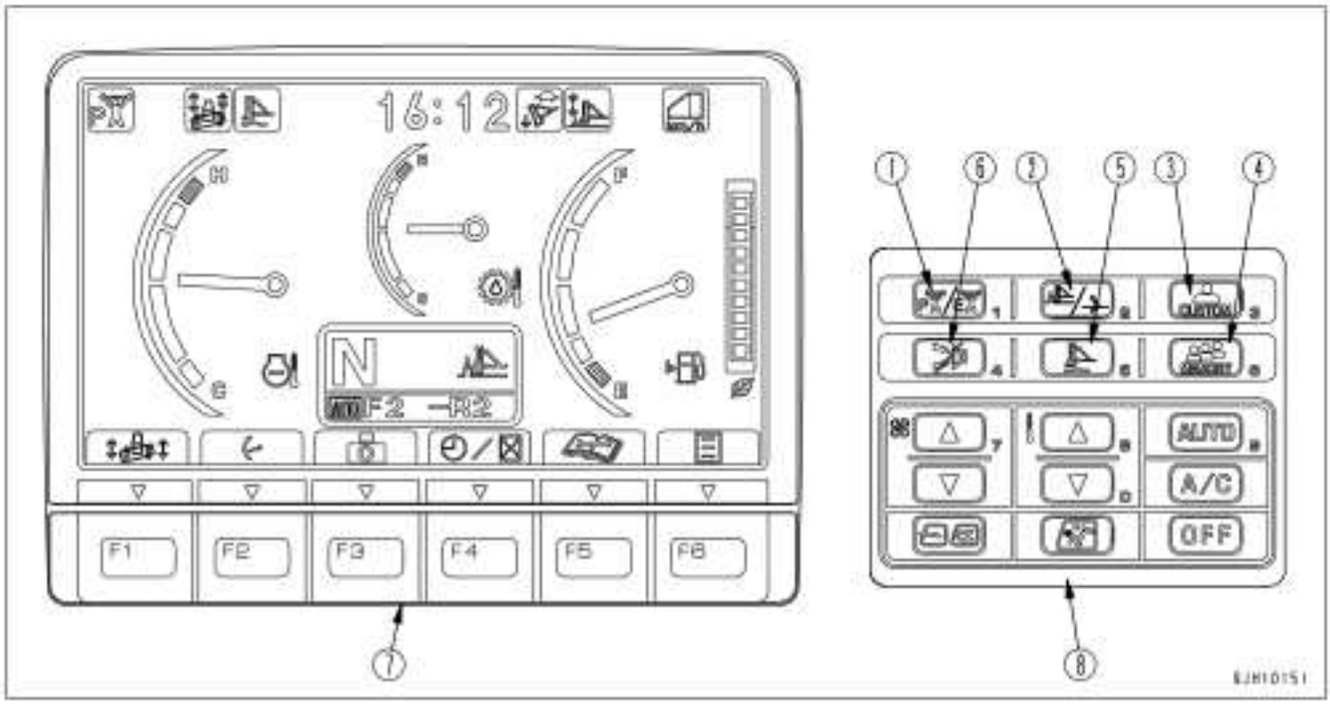

(1) Operating mode switch
(2) Gear shift mode selector switch
(3) Customize switch
(4) Customize memory switch
(5) Float mode switch
(6) Buzzer cancel switch
(7) Function switches
(8) Air conditioner switch

OPERATING MODE SELECTOR SWITCH

This switch (1) selects an engine operation mode.
P mode is the normal working mode.
E mode is a less fuel- consuming mode compared with P mode. It is suitable for the work on a rocky terrain where a shoe slip is likely to happen and the work on the soil that causes only light load.
With the engine starting key in the ON position, P mode is automatically selected. Which mode is currently selected is displayed on the upper portion of the screen.



MidWestTech | Komatsu D155AX-6 Bulldozer Operation & Maintenance Manual | Publ... Order the manual at mid-west-tech.com >

SERVICE PROCEDURE

INITIAL 250 HOURS SERVICE (ONLY AFTER THE FIRST 250 HOURS)

Perform the following maintenance only after the first 250 hours.

- Replace power train oil filter element
- Change oil in power train case, wash strainers (power train pump strainer, scavenging pump strainer)
- Change oil in final drive case
- CHANGE OIL IN HYDRAULIC TANK, REPLACE HYDRAULIC OIL FILTER ELEMENT

For details of the method of replacing or maintaining, see EVERY 500 HOURS, EVERY 1000 HOURS and EVERY 2000 HOURS SERVICE.

MidWestTech | Komatsu D155AX-6 Bulldozer Operation & Maintenance Manual | Publ... Order the manual at mid-west-tech.com >

EVERY 2000 HOURS SERVICE

Maintenance for every 250, 500 and 1000 hours service should be carried out at the same time.

CHANGE OIL IN HYDRAULIC TANK, REPLACE HYDRAULIC OIL FILTER ELEMENT

⚠ WARNING


The oil is at high temperature immediately after the machine has been operated. Wait for the oil to cool down before changing the oil.

When removing the oil filler cap, turn it slowly to release the internal pressure, then remove it carefully.

- Oil replacement amount: 85 liters (22.46 US gal)

1. Park the machine on the flat ground, hold it in the following posture suitable for an oil check and then stop the engine.

(Sigmadozer)
Lower the blade on the ground so that angle (a) of its backside is 6°.
Lower ripper (b) on the ground vertically so that the pin is at the lowest position.

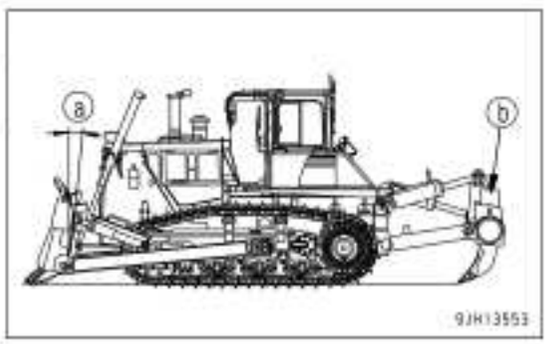

<Reference>

Item		Dimension	Item		Dimension
Blade (DUAL)	Tilt Cylinder length	1,292mm (50.9in)	Blade (SINGLE)	Tilt Cylinder length	1,292mm (50.9in)
				Brace	1,292mm (50.9in)
Ripper (VGR,VMR)	Lift Cylinder length	1,543mm (60.8in)	Ripper (VGR,VMR)	Lift Cylinder length	1,543mm (60.8in)
	Tilt Cylinder length	1,607mm (63.3in)		Tilt Cylinder length	1,607mm (63.3in)

MidWestTech | Komatsu D155AX-6 Bulldozer Operation & Maintenance Manual | Publ... Order the manual at mid-west-tech.com >