TEN00212-00

Operation & Maintenance Manual

WHEEL LOADER

GALEO

WA200L-5

SERIAL NUMBERS 68582 and up

WARNING

Unsafe use of this machine may cause serious injury or death. Operators and maintenance personnel must read this manual before operating or maintaining this machine. This manual should be kept near the machine for reference and periodically reviewed by all personnel who will come into contact with it.

NOTICE

Komatsu has Operation & Maintenance Manuals written in some other languages. If a foreign language manual is necessary, contact your local distributor for availability.

KOMATSU®

MidWestTech | Komatsu Galeo WA200L-5 Wheel Loader Operation & Maintenance Manual... Order the manual at mid-west-tech.com >

CONTENTS

FOREWORD ---- 1- 1
FOREWORD ---- 1- 2
SAFETY INFORMATION ---- 1- 5
INTRODUCTION ---- 1- 7
FRONT/REAR, LEFT/RIGHT DIRECTIONS OF MACHINE ---- 1- 7
NECESSARY INFORMATION ---- 1- 8
PRODUCT IDENTIFICATION NUMBER (PIN)/MACHINE SERIAL NO. PLATE ---- 1- 8
ENGINE SERIAL NO. PLATE ---- 1- 8
POSITION OF SERVICE METER ---- 1- 9
TABLE TO ENTER SERIAL NO. AND DISTRIBUTOR ---- 1- 9
SAFETY ---- 2- 1
SAFETY ---- 2- 2
SAFETY LABELS ---- 2- 5
LOCATION OF SAFETY LABELS ---- 2- 5
SAFETY LABELS ---- 2- 6
GENERAL PRECAUTIONS ---- 2- 11
PRECAUTIONS FOR OPERATION ---- 2- 20
STARTING ENGINE ---- 2- 20
OPERATION ---- 2- 22
TRANSPORTATION ---- 2- 28
BATTERY ---- 2- 29
TOWING ---- 2- 31
PRECAUTIONS FOR MAINTENANCE ---- 2- 32
PRECAUTIONS WITH TIRES ---- 2- 39
OPERATION ---- 3- 1
GENERAL VIEW ---- 3- 2
GENERAL VIEW OF MACHINE ---- 3- 2
GENERAL VIEW OF CONTROLS AND GAUGES ---- 3- 3
EXPLANATION OF COMPONENTS ---- 3- 5
MACHINE MONITOR ---- 3- 5
SWITCHES ---- 3- 31
CONTROL LEVERS, PEDALS ---- 3- 40
STEERING TILT LOCK LEVER ---- 3- 44
CAP AND COVER WITH LOCK ---- 3- 44
FRAME LOCK BAR ---- 3- 45
TOWING PIN ---- 3- 46
GREASE PUMP ---- 3- 46
CAB DOOR INNER LOCK ---- 3- 46
CAB DOOR OPEN LOCK ---- 3- 47
CAB WINDOW OPEN LOCK CANCEL KNOB ---- 3- 47
FUSE ---- 3- 47
SLOW BLOW FUSE ---- 3- 49
POWER OUTLET ---- 3- 49
STORAGE BOX ---- 3- 49
AM/FM RADIO-CASSETTE STEREO ---- 3- 50
AIR CONDITIONER ---- 3- 58
HANDLING CAB WIPER ---- 3- 63
HANDLING MACHINES EQUIPPED WITH KOMTRAX ---- 3- 64
OPERATION ---- 3- 65

MidWestTech | Komatsu Galeo WA200L-5 Wheel Loader Operation & Maintenance Ma... Order the manual at mid-west-tech.com >


CHECK BEFORE STARTING ENGINE, ADJUST ---- 3- 65
STARTING ENGINE ---- 3- 80
OPERATIONS AND CHECKS AFTER STARTING ENGINE ---- 3- 82
STOPPING ENGINE ---- 3- 84
MOVING THE MACHINE (DIRECTIONAL, SPEED), STOPPING THE MACHINE ---- 3- 85
TURNING ---- 3- 90
OPERATION OF WORK EQUIPMENT ---- 3- 92
WORK POSSIBLE USING WHEEL LOADER ---- 3- 94
PRECAUTIONS FOR OPERATION ---- 3- 99
ADJUSTING WORK EQUIPMENT POSTURE ---- 3-101
PARKING MACHINE ---- 3-103
CHECKS AFTER COMPLETION OF OPERATION ---- 3-105
LOCKING ---- 3-105
HANDLING THE TIRES ---- 3-106
TRANSPORTATION ---- 3-108
TRANSPORTATION PROCEDURE ---- 3-108
LOADING, UNLOADING WORK WITH TRAILERS ---- 3-108
LIFTING MACHINE ---- 3-112
COLD WEATHER OPERATION ---- 3-114
PRECAUTIONS FOR LOW TEMPERATURE ---- 3-114
PRECAUTIONS AFTER COMPLETION OF WORK ---- 3-115
AFTER COLD WEATHER ---- 3-115
WARMING-UP OPERATION FOR STEERING HYDRAULIC CIRCUIT IN COLD WEATHER ---- 3-116
LONG-TERM STORAGE ---- 3-117
BEFORE STORAGE ---- 3-117
DURING STORAGE ---- 3-117
AFTER STORAGE ---- 3-117
TROUBLESHOOTING ---- 3-118
WHEN MACHINE RUNS OUT OF FUEL ---- 3-118
METHOD OF TOWING MACHINE ---- 3-118
IF BATTERY IS DISCHARGED ---- 3-120
OTHER TROUBLE ---- 3-123
MAINTENANCE ---- 4- 1
GUIDES TO MAINTENANCE ---- 4- 2
OUTLINES OF SERVICE ---- 4- 4
HANDLING OIL, FUEL, COOLANT, AND PERFORMING OIL CLINIC ---- 4- 4
OUTLINE OF ELECTRIC SYSTEM ---- 4- 7
WEAR PARTS ---- 4- 8
WEAR PARTS LIST ---- 4- 8
RECOMMENDED FUEL, COOLANT, AND LUBRICANT ---- 4- 9
USE OF FUEL, COOLANT AND LUBRICANTS ACCORDING TO AMBIENT TEMPERATURE ---- 4- 10
RECOMMENDED BRANDS, RECOMMENDED QUALITY FOR PRODUCTS OTHTHAN KOMATSU GENUINE OIL ---- 4- 11
STANDARD TIGHTENING TORQUES FOR BOLTS AND NUTS ---- 4- 12
TORQUE LIST ---- 4- 12
PERIODIC REPLACEMENT OF SAFETY CRITICAL PARTS ---- 4- 13
MAINTENANCE SCHEDULE CHART ---- 4- 14
MAINTENANCE SCHEDULE CHART ---- 4- 14
SERVICE PROCEDURE ---- 4- 16
INITIAL 250 HOURS SERVICE ---- 4- 16

MidWestTech | Komatsu Galeo WA200L-5 Wheel Loader Operation & Maintenance Ma... Order the manual at mid-west-tech.com >

WHEN REQUIRED ---- 4- 17
CHECK BEFORE STARTING ---- 4- 37
EVERY 50 HOURS SERVICE ---- 4- 38
EVERY 100 HOURS SERVICE ---- 4- 39
EVERY 250 HOURS SERVICE ---- 4- 41
EVERY 500 HOURS SERVICE ---- 4- 47
EVERY 1000 HOURS SERVICE ---- 4- 50
EVERY 2000 HOURS SERVICE ---- 4- 54
EVERY 4000 HOURS SERVICE ---- 4- 60
SPECIFICATIONS ---- 5- 1
SPECIFICATIONS ---- 5- 2
ATTACHMENTS, OPTIONS ---- 6- 1
SELECTING BUCKET AND TIRES ---- 6- 2
INDEX ---- 7- 1

MidWestTech | Komatsu Galeo WA200L-5 Wheel Loader Operation & Maintenance Ma... Order the manual at mid-west-tech.com >


CONTROL LEVERS, PEDALS

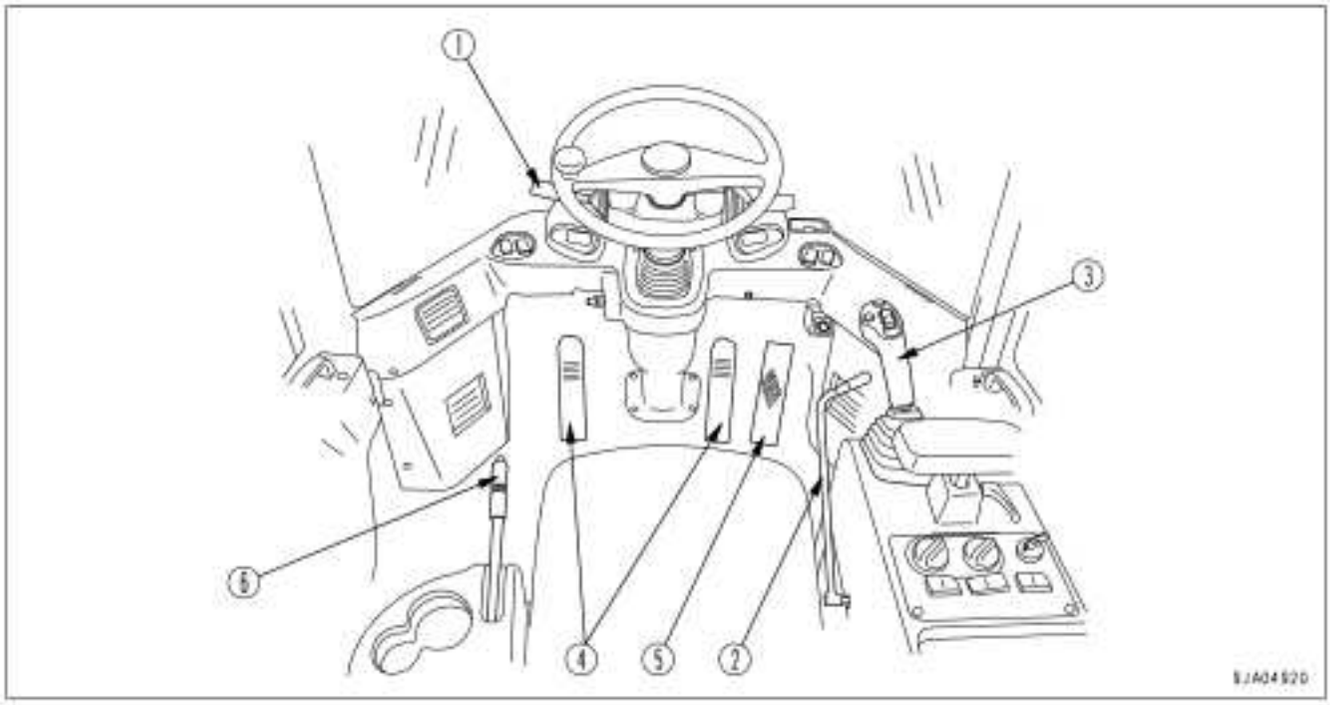

(1) Directional lever
(2) Work equipment lock lever
(3) Work equipment lever
(4) Brake pedal
(5) Accelerator pedal
(6) Parking brake lever

DIRECTIONAL LEVER

This lever (1) is used to switch the direction of travel of the machine between forward and reverse.
When starting the engine, if the directional lever is not at the N position, the engine will not start.
Position (a): FORWARD
Position N: NEUTRAL
Position (b): REVERSE

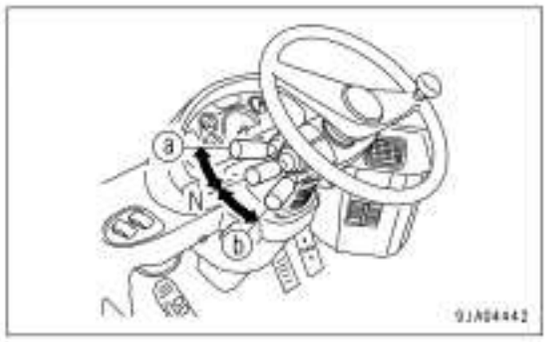

REMARK
When the starting switch is turned to the ON position, if the directional lever is not at the N position, the central warning lamp lights up and the alarm buzzer sounds intermittently.
When the directional lever is set to the N position, the central warning lamp goes out and the alarm buzzer stops.

MidWestTech | Komatsu Galeo WA200L-5 Wheel Loader Operation & Maintenance Ma... Order the manual at mid-west-tech.com >

MAINTENANCE SCHEDULE CHART

MAINTENANCE SCHEDULE CHART

INITIAL 250 HOURS SERVICE (ONLY AFTER THE FIRST 250 HOURS)
REPLACE HST OIL FILTER ELEMENT ---- 4- 52
REPLACE HYDRAULIC TANK FILTER ELEMENT ---- 4- 54

WHEN REQUIRED
CHECK, CLEAN, OR REPLACE AIR CLEANER ELEMENT ---- 4- 17
CLEAN INSIDE OF COOLING SYSTEM ---- 4- 20
CHECK OIL LEVEL IN TRANSFER CASE, ADD OIL ---- 4- 23
CHECK AXLE OIL LEVEL, ADD OIL ---- 4- 25
CLEAN AXLE CASE BREATHER ---- 4- 26
CLEAN AIR CONDITIONER CONDENSER ---- 4- 27
CHECK WINDOW WASHING FLUID LEVEL, ADD FLUID ---- 4- 27
CLEAN RADIATOR FINS AND COOLER FINS ---- 4- 28
CHECK ELECTRICAL INTAKE AIR HEATER ---- 4- 28
TURN, REPLACE BOLT-ON CUTTING EDGE ---- 4- 29
REPLACE BUCKET TEETH ---- 4- 30
CHECK AIR CONDITIONER ---- 4- 32
REPLACE SLOW BLOW FUSE ---- 4- 33
CHECKING FUNCTION OF ACCUMULATOR ---- 4- 34
SELECTION AND INSPECTION OF TIRES ---- 4- 35

CHECK BEFORE STARTING

EVERY 50 HOURS SERVICE
DRAIN WATER, SEDIMENT FROM FUEL TANK ---- 4- 38

EVERY 100 HOURS SERVICE
LUBRICATE REAR AXLE PIVOT PIN ---- 4- 39
CLEAN ELEMENT IN AIR CONDITIONER FRESH AIR FILTER ---- 4- 39
CHECK OIL LEVEL IN HYDRAULIC TANK, ADD OIL ---- 4- 40

EVERY 250 HOURS SERVICE
CHECK BATTERY ELECTROLYTE LEVEL ---- 4- 41
CHECK PARKING BRAKE ---- 4- 43
CHECK AIR CONDITIONER COMPRESSOR BELT TENSION, ADJUST ---- 4- 43
CHECK FOR LOOSE WHEEL HUB BOLTS, TIGHTEN ---- 4- 44
CLEAN ELEMENT IN AIR CONDITIONER RECIRCULATION FILTER ---- 4- 45
CHECKING FUNCTION OF ACCUMULATOR ---- 4- 45
LUBRICATING ---- 4- 46

EVERY 500 HOURS SERVICE
CHANGE OIL IN ENGINE OIL PAN, REPLACE ENGINE OIL FILTER CARTRIDGE ---- 4- 47
REPLACE FUEL FILTER CARTRIDGE ---- 4- 48
CLEAN WATER SEPARATOR STRAINER ---- 4- 49

MidWestTech | Komatsu Galeo WA200L-5 Wheel Loader Operation & Maintenance Ma... Order the manual at mid-west-tech.com >

SPECIFICATIONS

	Item			Unit	With bolt on cutting edge
	Operating weight (including 1 operator: 75 kg (165 lb).)			kg(lb)	9,960(21,962)
	Normal load			kg(lb)	3,200(7,056)
	Bucket capacity	Heaped		m^3(cu.yd)	2.0(2.6)
	Engine model			-	Komatsu SAA6D102E-2 diesel engine
	Flywheel horsepower			kW(HP)/rpm	92kw(123)/2000
A	Overall length			mm(ft in)	6,895(22'7")
B	Overall height			mm(ft in)	3,110(10'2")
C	Max. dimension when shaking bucket			mm(ft in)	4,885(16')
D	Overall width			mm(ft in)	2,375(7'10")
E	Min. ground clearance			mm(ft in)	425(1'5")
F	Bucket width			mm(ft in)	2,550(8'4")
G	Clearance	BOC tip		mm(ft in)	2,760(9'1")
H	Reach	BOC tip		mm(ft in)	1,000(3'3")
I	Dump angle			degrees	45
	Min. turning radius	Out of chassis		mm(ft in)	5,650(18'6")
		Center of outside tire		mm(ft in)	4,880(16')
	Permissible towing load			kg(N)	7,250(71,100)
	Travel speed	Forward	1st	km/h(MPH)	4.0 - 13.0(2.5 - 8.1)
			2nd	km/h(MPH)	13.0(8.1)
			3rd	km/h(MPH)	20.0(12.4)
			4th	km/h(MPH)	34.5(21.4)
		Reverse	1st	km/h(MPH)	4.0 - 13.0(2.5 - 8.1)
			2nd	km/h(MPH)	13.0(8.1)
			3rd	km/h(MPH)	20.0(12.4)
			4th	km/h(MPH)	34.5(21.4)

MidWestTech | Komatsu Galeo WA200L-5 Wheel Loader Operation & Maintenance Ma... Order the manual at mid-west-tech.com >